




# 2008 Transporter 4 and 6 Illustrated Parts List

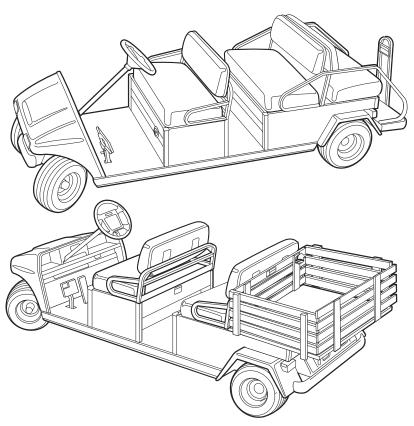

Transporter 4 and 6
Gasoline and Electric Vehicles

Manual Number 103373003 Edition Code 1207F0310E











### **USING THE ILLUSTRATED PARTS LIST**

#### **A** WARNING

• This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.

This manual covers all TransPorter 4 and 6 vehicles built during the 2008 model year.

The manual is divided into sections. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains the letter G or E, signifying that the page pertains to the electric or gasoline vehicles only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indention corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part *is the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

#### **HOW TO ORDER PARTS**

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "Distributor Search" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658

Augusta, Georgia 30917-4658 USA

Telephone 706-863-3000

Service Parts Fax 706-855-7413

www.clubcar.com







**NOTE:** This illustrated parts list represents the most current information at the time of publication. Club Car, Inc. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.

Club Car, Inc. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2007 Club Car, Inc. Club Car and ArmorFlex are registered trademarks of Club Car, Inc. This manual effective August 6, 2007.





SECTION 1 – BODY AND TRIM	
Front Body and Trim	1-3
Dash Pockets and Floormat	1-5
Seat Bottom	1-7
Seat Back Assembly	1-9
Hip Restraints and Seat Back Mounting (Front)	1-11
Hip Restraints and Seat Back Mounting (Rear)	1-13
Rear-Facing Seat Bottom – TransPorter 6	1-15
Rear-Facing Seat Bottom – TransPorter 6, Continued	1-17
Rear-Facing Seat Back and Support Structure – TransPorter 6	1-19
Rear Body Trim	1-21
Battery Insulator – Electric TransPorter Vehicles	1-23
Rear Cargo Bed – TransPorter 4	1-25
Stake Side – TransPorter 4	1-27
Rear Footrest and Handrails – TransPorter 6	1-29
SECTION 2 – WHEELS AND TIRES	
Wheels and Tires	2-3
SECTION 3 – DECALS	
Decals – Electric TransPorter	3-3
Decals – Electric TransPorter, Continued	3-5
Decals – Gasoline TransPorter	3-7
Decals – Gasoline TransPorter, Continued	3-9
Logo Decals	3-11
SECTION 4 – BRAKES, PEDAL, AND CABLES	
Rear Brake Assembly	4-3
Brake Pedal Assembly – Gasoline Vehicles	4-5
Brake Pedal Assembly – IQ Plus Vehicles	4-7
Front Brake Assembly	4-9
Front Brake Cables and Equalizer	4-11
Front Brake Cable Clips and Hardware – Gasoline Vehicles	4-13
Front Brake Cable Clips – IQ Plus Vehicles	4-15
Rear Brake Cables and Equalizer	4-17
Accelerator Pedal Assembly – Gasoline Vehicles	4-19
Accelerator Pedal Assembly – Electric Vehicles with MCOR	4-21



SECTION 5 – STEERING, FRONT AND REAR SUSPENSION	
Steering Column	5-3
Steering Wheel	5-5
Steering Gear Assembly	5-7
Front Suspension, Upper	5-9
Front Suspension, Lower (Style A)	5-11
Front Suspension, Lower (Style B)	5-13
Front Spindles and Hubs	5-15
Rear Suspension – Gasoline Vehicles	5-17
Rear Suspension – IQ Plus Vehicles	5-19
Stabilizer Bar – Gasoline Vehicles	5-21
SECTION 6 – ELECTRICAL SYSTEM – GASOLINE VEHICLES	
Wiring – Gasoline Vehicles	6-5
Headlight and Horn Electrical Components	6-7
Headlights	6-9
Electrical Component Box	6-11
Instrument Panel and Electrical Components	6-13
Horn and Brake Switches	6-15
Starter/Generator Assembly	6-17
FE350 Starter/Generator Mounting	6-19
Battery – Gasoline Vehicle	6-21
Electrical Components, Rear Body	6-23
Operation and Maintenance Switch	6-25
SECTION 7 – FE350 ENGINE WITH ACR	
FE350 Engine with ACR (Automatic Compression Release) – Shrouds and Brackets	7-3
AS11 FE350 Engine – Ignition Components and Flywheel	7-5
FE350 Engine – Oil Circulation	7-7
AS11 FE350 Engine – Cylinder Head	7-9
FE350 Engine with ACR – Crankcase, Camshaft, and Oil Sensor	7-11
AS11 FE350 Engine – Crankcase and Crankshaft	7-13
FE350 Engine Mounting	7-15
SECTION 8 – FUEL, INTAKE, AND GOVERNOR SYSTEMS	
Splash Guard	8-3
Fuel Tank (Non-Clifornia) with Sending Unit	8-5
Fuel System	8-7





Carburetor Assembly – FE350	8-9
Carburetor Installation – FE350	
Governor and Accelerator Cables	
Air Box and Intake Hose	
Intake System	
Fuel Tank (California) with Sending Unit	
SECTION 9 – EXHAUST SYSTEM	
Exhaust System – FE350 Engine	9-:
SECTION 10 – TORQUE CONVERTER	
Drive Clutch	10-3
Drive Belt – FE350	
Driven Clutch	10-7
SECTION 11 – UNITIZED TRANSAXLE AND FORWARD/REVERSE SH	IFTER
Unitized Transaxle – Gear Cases and Brackets	11-3
Transaxle – Gasoline Vehicles, Transmission and Gear Reduction	11-5
Transaxle – Gasoline Vehicles, Differential and Axles	
Forward/Reverse Shifter	11-9
SECTION 12 – GRAZIANO TRANSAXLE – GASOLINE VEHICLE	
Graziano Transaxle – Gasoline Vehicles	12-3
Graziano Transaxle – Gasoline Vehicles	12-5
Graziano Transaxle – Gasoline Vehicles	12-7
SECTION 13 – ELECTRICAL SYSTEM – ELECTRIC VEHICLES	
Headlight and Horn Electrical Components	13-3
Wiring – IQ Plus Electric Vehicles	13-7
Headlights	13-9
Instrument Panel with Electrical Components	13-1
Horn and Brake Switches	13-13
Motor Controller Output Regulator (MCOR)	13-1
Electrical Components – IQ Plus Vehicles	13-12
Electrical Installation	13-19
Taillights	13-2
Rear Reverse Buzzer	13-23
IO Plus Vahicla with T-105 Ratteries	13_2





IQ Plus Vehicle with T-145 Batteries	13-27
SECTION 14 – ELECTRIC MOTOR	
Motor (Model DA5-4006) – IQ Plus	14-3
SECTION 15 – TRANSAXLE – ELECTRIC VEHICLES	
Transaxle – Electric Vehicles	15-3
SECTION 16 – BATTERY CHARGER	
Onboard PowerDrive Battery Charger (Model 17935), Domestic	16-3
Onboard PowerDrive Battery Charger (Model 17790), Export	16-5
IQ Plus Domestic Battery Charger (Model 25730)	16-7
IQ Plus Onboard Battery Charger (Model 25260)	16-9
Onboard Charger (Models 25260 and 25660) and Reel Mounting	16-11
IQ Plus Onboard Charger (Model 25260) Mounting	16-13
IQ Plus Battery Charger (Model 25880), Export and European	16-15
IQ Plus Onboard Battery Charger (Model 25660), Export	16-17
SECTION 17 – MAINTENANCE AND SERVICE TOOLS	
Maintenance and Service Tools	17-3
Maintenance and Service Tools, Continued	17-5
Maintenance and Service Tools, Continued	17-7
Maintenance and Service Tools, Continued	17-9
Maintenance and Service Tools, Continued	17-11
SECTION i – INDEX	





## **BODY AND TRIM**


G

1

F



1 G E

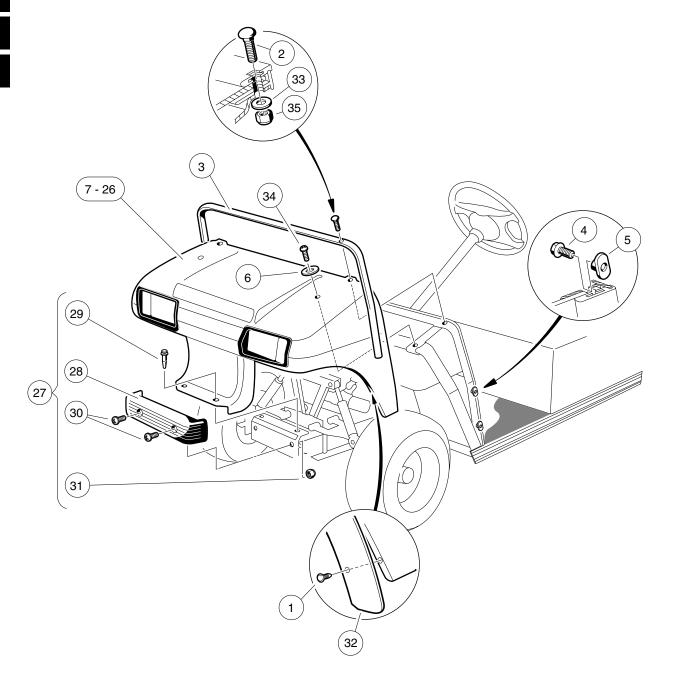

000249-005







## **FRONT BODY AND TRIM**


_	PART NO.	DESCRIPTION
		1 2 3 4
1	1010434	Barrel - Plastic
2	1010435	Bolt, Carriage, 5/16-18 X 1.00
3	1011014	Trim, Cowl
4	1011017	Screw, #8-32 X 0.375
5	1011394	T-Nut Package (Set of 4)
6	1015075	Washer, 5/16 Flat Type A
7	101692501	Cowl, TPO, Beige
8	101692502	Cowl, TPO, White
9	101692506	Cowl, TPO, Red
10	101692509	Cowl, TPO, Pacific Blue (Royal Blue)
11	101692510	Cowl, TPO, Dark Green
12	101692511	Cowl, TPO, Black
13	101692512	Cowl, TPO, Classic Blue (Navy)
14	101692513	Cowl, TPO, Burgundy
15	101692514	Cowl, TPO, Dark Gray
16	N/A	Cowl, TPO, Safety Yellow
17	101693901	Cowl with Headlight Opening, TPO, Beige
18	101693902	Cowl with Headlight Opening, TPO, White
19	101693906	Cowl with Headlight Opening, TPO, Red
20	101693908	Cowl with Headlight Opening, TPO, Pacific Blue (Royal Blue)
21	101693909	Cowl with Headlight Opening, TPO, Dark Green
22	101693910	Cowl with Headlight Opening, TPO, Black
23	101693911	Cowl with Headlight Opening, TPO, Classic Blue (Navy)
24	101693912	Cowl with Headlight Opening, TPO, Burgundy
25	101693913	Cowl with Headlight Opening, TPO, Dark Gray
26	N/A	Cowl with Headlight Opening, TPO, Safety Yellow
27	1017080	Kit, Front Bumper (includes items 28 through 31)
28	1016868	Front Bumper
29	1016967	Blind Rivet, Push Type
30	7251	Screw, 5/16-18 x 1.0 Truss-Head
31	7473	Locknut, 5/16-18 Nylon Insert
32	101870401	Fender Extrusion
33	1241	Washer, 5/16 Type A Flat
34	7251	Screw, 5/16-18 x 1.0 Truss-Head
	7473	Locknut, 5/16-18 Nylon Insert



**DID YOU** 

G

=

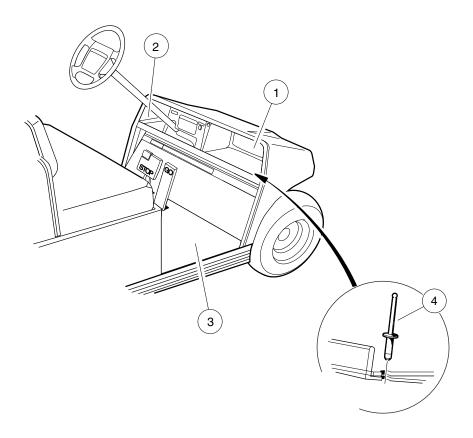

000252-002








## **DASH POCKETS AND FLOORMAT**

		DASH POCKETS AND FEC	г
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1013343	Dash Component, Passenger-Side, Black	1
2	1013344	Dash Component, Driver-Side	
3	101503202	Floormat	
4	7973	Rivet, 3/16 X .400 Blind	
•	7373	(100 Jin 4	

<u>'</u>

E

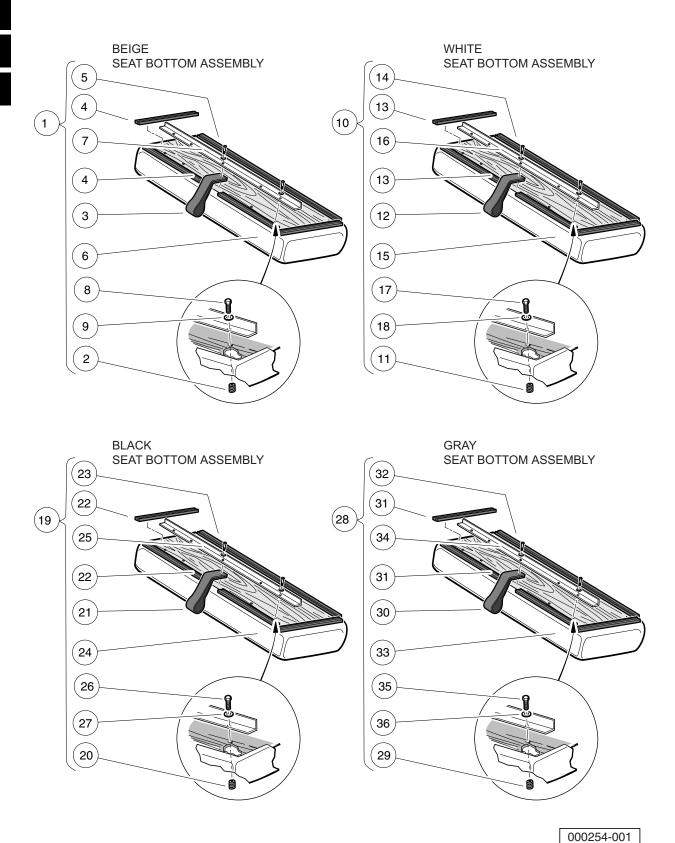






## **SEAT BOTTOM**


	PART NO.	DESCRIPTION
		1 2 3 4
1	101564501	Seat Bottom Assembly, Beige (includes items 2 through 9)
2	1010543	Insert - Wood
3	1013309	Strap, Utility Seat
4	1013311	Bumper, Seat, Short
5	1013312	Bumper, Seat, Long
6	101562711	Vinyl Cover, Seat Bottom, Buff
7	101894303	Stiffener
8	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap
9	332	Washer, 1/4 Type A Narrow Flat
10	101564502	Seat Bottom Assembly, White (includes items 11 through 18)
11	1010543	Insert - Wood
12	1013309	Strap, Utility Seat
13	1013311	Bumper, Seat, Short
14	1013312	Bumper, Seat, Long
15	101562712	Vinyl Cover, Seat Bottom, White
16	101894303	Stiffener
17	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap
18	332	Washer, 1/4 Type A Narrow Flat
19	101564503	Seat Bottom Assembly, Black (includes items 20 through 27)
20	1010543	Insert - Wood
21	1013309	Strap, Utility Seat
22	1013311	Bumper, Seat, Short
23	1013312	Bumper, Seat, Long
24	101562714	Vinyl Cover, Seat Bottom, Black
25	101894303	Stiffener
26	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap
27	332	Washer, 1/4 Type A Narrow Flat
28	101564505	Seat Bottom Assembly, Gray (includes items 29 through 36)
29	1010543	Insert - Wood
30	1013309	Strap, Utility Seat
31	1013311	Bumper, Seat, Short
32	1013312	Bumper, Seat, Long
33	101562715	Vinyl Cover, Seat Bottom, Gray
34	101894303	Stiffener
35	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap
36	332	Washer, 1/4 Type A Narrow Flat








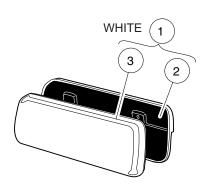

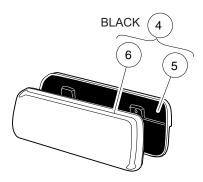

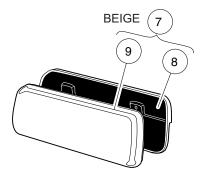



000608-001








## **SEAT BACK ASSEMBLY**

17524	DARTHO	DESCRIPTION	
ITEM	PART NO.	DESCRIPTION	Q
		1 2 3 4	
1	101677701	Seat Back Assembly, White (includes items 2 and 3)	1
2	1016751	Cap, Seat Back	1
3	101675512	Vinyl Seat Back, White	1
4	101677702	Seat Back Assembly, Black (includes items 5 and 6)	1
5	1016751	Cap, Seat Back	1
6	101675514	Vinyl Seat Back, Black	1
7	101677703	Seat Back Assembly, Beige (includes items 8 and 9)	1
8	1016751	Cap, Seat Back	1
9	101675511	Vinyl Seat Back, Beige	1
10	101677705	Seat Back Assembly, Gray (includes items 11 and 12)	1
11	1016751	Cap, Seat Back	1
12	101675515	Vinyl Seat Back-gray Svc	1

**DID YOU** 

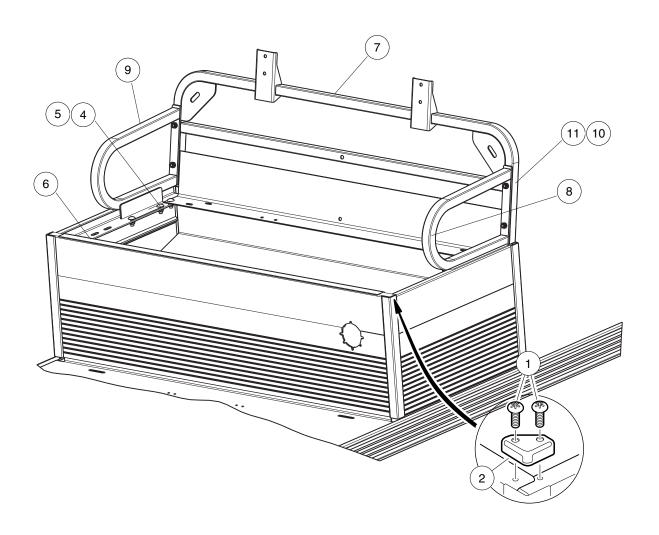

000603-003








## **HIP RESTRAINTS AND SEAT BACK MOUNTING (FRONT)**

TEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1014321	Screw, #10 Truss-Head Torx	4
2	1014387	Cap, Corner	2
3	N/A	Instl, Seat Bk, Hip Restr, Ca4 (includes items 4 through 11)	1
4	101963301	Bolt, 5/16-18 X 0.75 Round-Head	6
5	101963401	Locknut, 5/16-18 Hex Flange	6
6	101964001	Trim, Seat Bottom Front	1
7	102966401	Seat Back, Tube	1
8	102966501	Hip Restraint, Left	1
9	102966502	Hip Restraint, Right	1
10	103245201	Screw, 5/16-18 X 1.5, Tr Tx Hd	4
11	103245301	Nut, Hex, Cp, Mech Def, 5/16-1	4



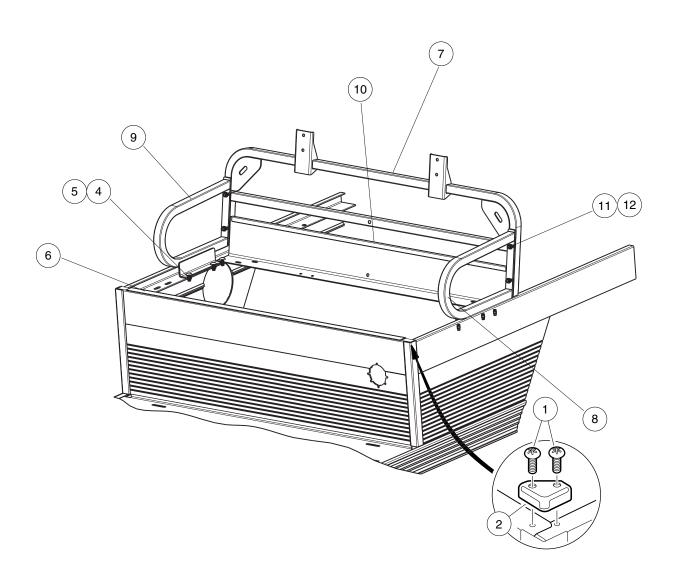

000603-002







## **HIP RESTRAINTS AND SEAT BACK MOUNTING (REAR)**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1014321	Screw, #10 Truss-Head Torx	4
2	1014387	Cap, Corner	2
3	N/A	Instl, Seat Bk, Hip Restr, Ca6 (includes items 4 through 12)	1
4	101963301	Bolt, 5/16-18 X 0.75 Round-Head	6
5	101963401	Locknut, 5/16-18 Hex Flange	6
6	101964001	Trim, Seat Bottom Front	1
7	102966401	Seat Back, Tube	1
8	102966501	Hip Restraint, Left	1
9	102966502	Hip Restraint, Right	1
10	102989501	Seal, Bed, 41-Inch	1
11	103245201	Screw, 5/16-18 X 1.5, Tr Tx Hd	4
12	103245301	Nut, Hex, Cp, Mech Def, 5/16-1	4






**DID YOU** 

#### **TRANSPORTER 6**



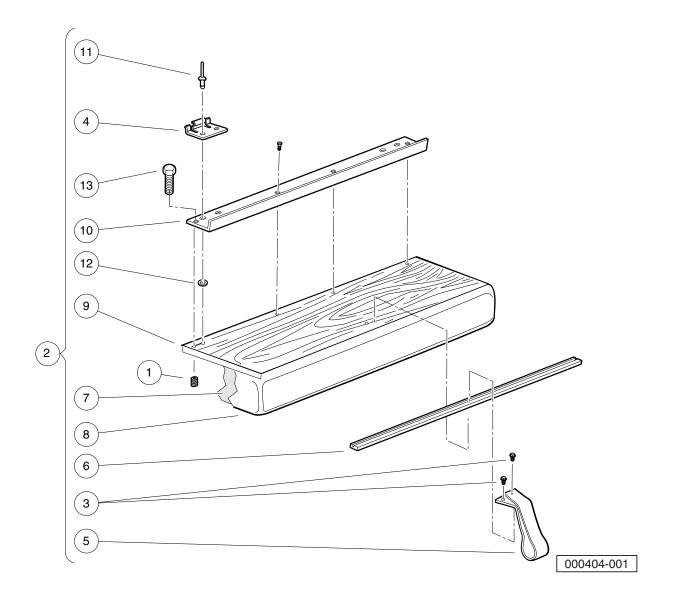





## **REAR-FACING SEAT BOTTOM – TRANSPORTER 6**


ITEM	PART NO.	DESCRIPTION	Q
		1 2 3 4	
1	1010543	Insert - Wood	
2	101684102	Seat Bottom Assembly, Rear, White (includes items 3 through 13)	
3	1010545	Screw, Hex Washer Head 1/4-14 X .75	
4	1011652	Hinge Plate	
5	1013309	Strap, Utility Seat	
6	1013312	Bumper, Seat, Long	
7	N/A	Foam, Seat	
8	101562712	Vinyl Cover, Seat Bottom, White	
9	N/A	Plywood Assy	
10	1016824	Angle Seat Hinge	
11	101880901	Rivet, 3/16, Stainless-Steel, Pop	
12	101881701	Washer, #8 Stainless-Steel Flat	
13	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap	
14	101684103	Seat Bottom Assembly, Rear, Black (includes items 15 through 25)	
15	1010545	Screw, Hex Washer Head 1/4-14 X .75	
16	1011652	Hinge Plate	
17	1013309	Strap, Utility Seat	
18	1013312 N/A	Bumper, Seat, Long	
19 20	101562714	Foam, Seat	
21	N/A	Vinyl Cover, Seat Bottom, Black	
22	1016824	Angle Seat Hinge	
23	101880901	Rivet, 3/16, Stainless-Steel, Pop	
24	101881701	Washer, #8 Stainless-Steel Flat	
25	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap	
		Note: Sub-components contained in item 14 are the same as those shown for item 2, except for the vinyl seat cover.	



1 G E

#### **TRANSPORTER 6**



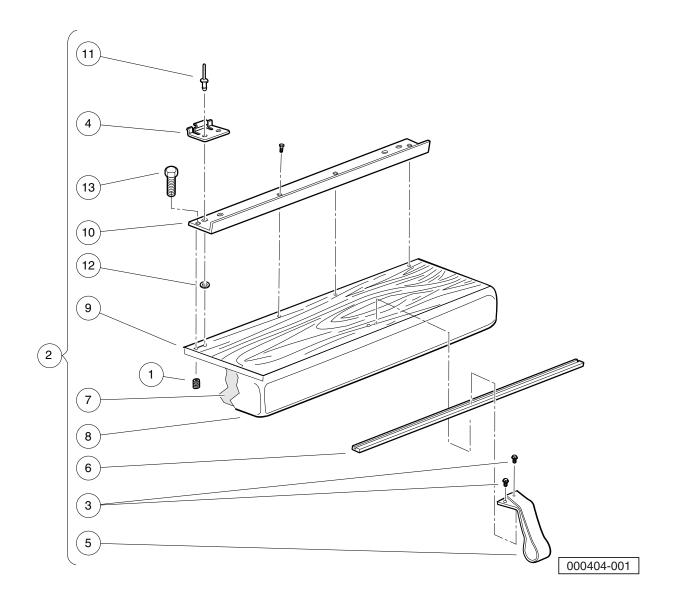






## **REAR-FACING SEAT BOTTOM – TRANSPORTER 6, CONTINUED**

	PART NO.	DESCRIPTION
		1 2 3 4
1	1010543	Insert - Wood
2	101684105	Seat Bottom Assembly, Rear, Gray (includes items 3 through 13)
3	1010545	Screw, Hex Washer Head 1/4-14 X .75
4	1011652	Hinge Plate
5	1013309	Strap, Utility Seat
6	1013312	Bumper, Seat, Long
7	N/A	Foam, Seat
8	101562715	Vinyl Cover, Seat Bottom, Gray
9	N/A	Plywood Assy
10	1016824	Angle Seat Hinge
11	101880901	Rivet, 3/16, Stainless-Steel, Pop
12	101881701	Washer, #8 Stainless-Steel Flat
13	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap
14	***	Seat Bottom Assembly, Rear, Beige (includes items 15 through 25)
15	1010545	Screw, Hex Washer Head 1/4-14 X .75
16	1011652	Hinge Plate
17	1013309	Strap, Utility Seat
18	1013312	Bumper, Seat, Long
19	N/A	Foam, Seat
20	101562711	Vinyl Cover, Seat Bottom, Buff
21	N/A	Plywood Assy
22	1016824	Angle Seat Hinge
23	101880901	Rivet, 3/16, Stainless-Steel, Pop
24	101881701	Washer, #8 Stainless-Steel Flat
25	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap
		**** Special order item available upon request.
		Note: Sub-components contained in item 14 are the same as those shown for item 2, except for the vinyl seat cover.

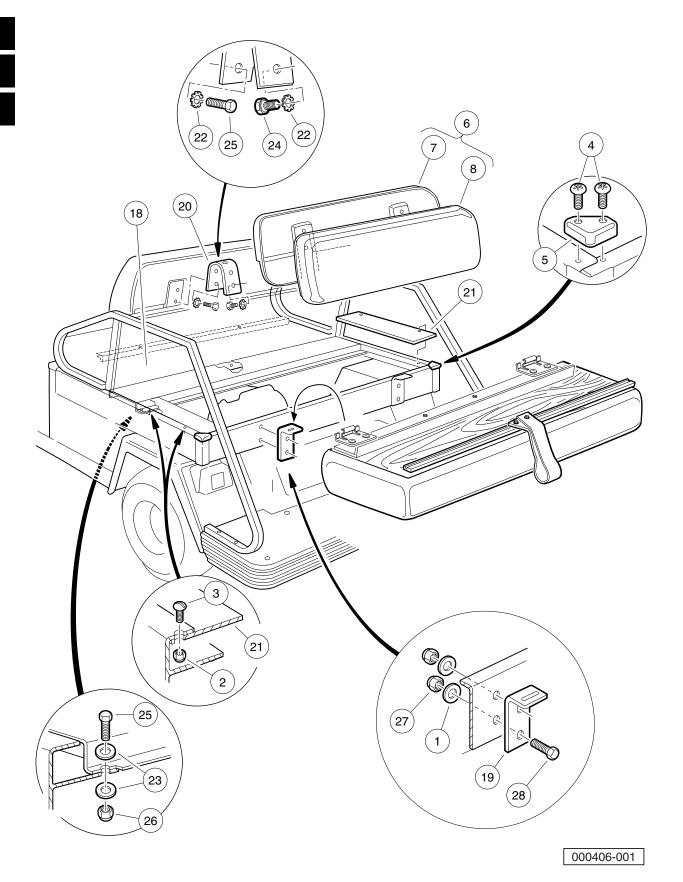





## **GET STARTED**

https://CartPros.com/f.html


# **TRANSPORTER 6**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011990	Washer, 3/8 Flat	4
2	1013061	Locknut, #10-32 Nylon Insert	4
3	1013169	Screw, #10-32 X 0.5 Round-Head	4
4	1014321	Screw, #10 Truss-Head Torx	4
5	1014387	Cap, Corner	2
6	101677701	Seat Back Assembly, White (includes items 7 and 8)	1
7	1016751	Cap, Seat Back	1
8	101675512	Vinyl Seat Back, White	1
9	101677702	Seat Back Assembly, Black (includes items 10 and 11)	1
10	1016751	Cap, Seat Back	1
11	101675514	Vinyl Seat Back, Black	1
12	101677703	Seat Back Assembly, Beige (includes items 13 and 14)	1
13	1016751	Cap, Seat Back	1
14	101675511	Vinyl Seat Back, Beige	1
15	101677705	Seat Back Assembly, Gray (includes items 16 and 17)	1
16	1016751	Cap, Seat Back	1
17	101675515	Vinyl Seat Back-gray Svc	1
18	N/A	Support Rear Seat	1
19	1016819	Seat Hinge Body	2
20	1016839	Bracket Seat Back Mount	2
21	1016930	Frame Panel Rear Seat	2
22	101946201	Washer, Lock, 0.250 External-Tooth	8
23	332	Washer, 1/4 Type A Narrow Flat	6
24	7479	Screw, 1/4-20 X 1.25 Hex-Head Cap	4
25	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	7
26	8233	Locknut, 1/4-20 Nylon Insert	3
27	8754	Locknut, 3/8-16 Hex	4
28	8861	Bolt, 3/8-16 X 1.75 Hex	4
		Note: Sub-components contained in items 9, 12, and 15 are the same as those shown for item 6, except for the vinyl seat covers.	



1 **G** 

E

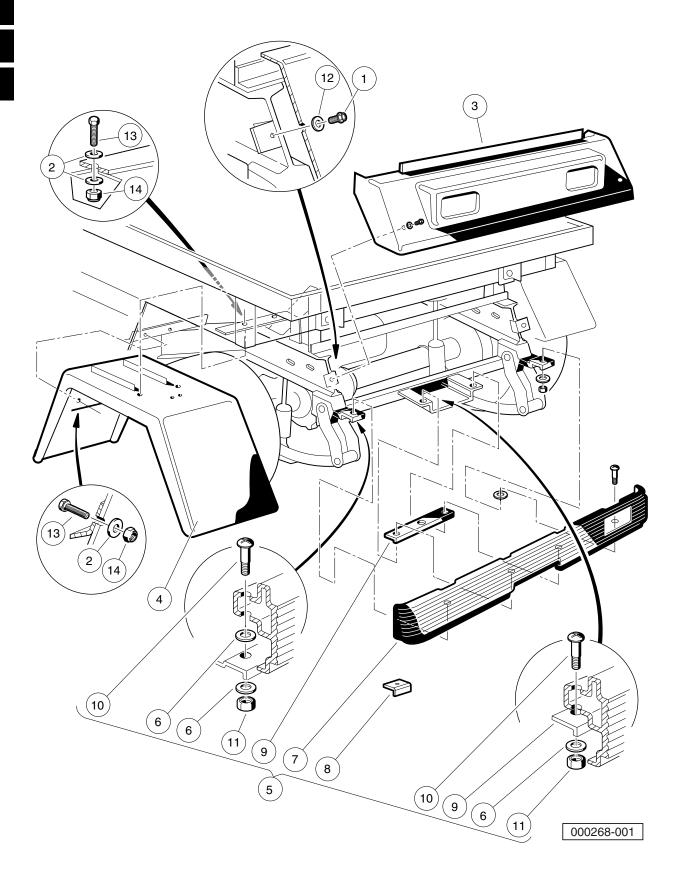





## **REAR BODY TRIM**


PART NO.	DESCRIPTION	QTY
	1 2 3 4	
1012285	Screw, 1/4 X 0.625 Hex-Head	2
1014306	Washer, 1/4" Type B Flat	12
1015530	Tailskirt	1
1016679	Rear Fender	2
1017079	Kit, Rear Bumper (includes items 6 through 11)	1
1011697	Washer, 5/16 Flat	6
1016379	Bumper, Rear	1
1016874	Plate, Bumper Mounting, Short	2
1016875	Plate, Bumper Mounting, Long	1
1016876	Bolt, 3/8 Shoulder	4
7473	Locknut, 5/16-18 Nylon Insert	4
332	Washer, 1/4 Type A Narrow Flat	2
7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	8
8233	Locknut, 1/4-20 Nylon Insert	8
	1012285 1014306 1015530 1016679 1017079 1011697 1016379 1016874 1016875 1016876 7473 332 7847	1 2 3 4  1012285 Screw, 1/4 X 0.625 Hex-Head



**DID YOU** 

G

E

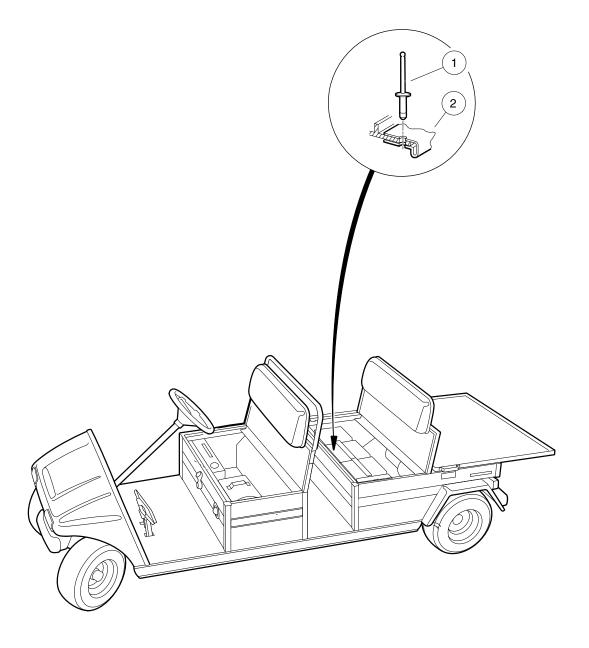

000400-001








## **BATTERY INSULATOR – ELECTRIC TRANSPORTER VEHICLES**

	DATIEN	I INSULATOR - ELECTRIC TRANSPORTER VEHIC	LLJ	
ITEM	PART NO.	DESCRIPTION	QTY	1
		1 2 3 4		(
1 2	1013357 101837001	Rivet, 5/32 Aluminum Pop  Battery Insulator		
			1	

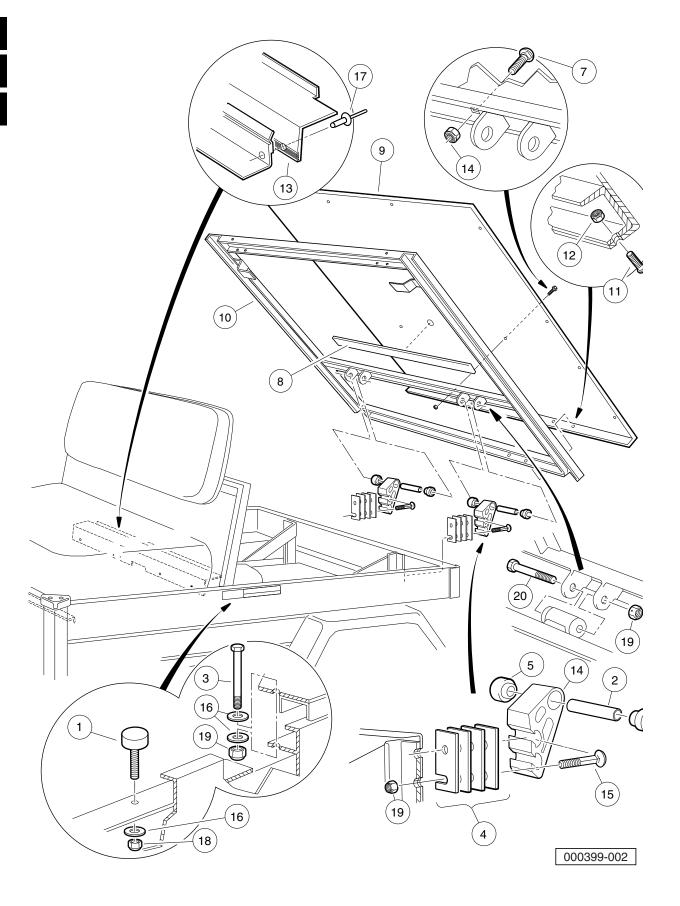








## **REAR CARGO BED – TRANSPORTER 4**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010878	Bumper, Rubber	2
2	1012303	Bushing, Steel	2
3	1013872	Bolt, 1/4-20 X 4.00 Hex Head	2
4	1015507	Shim, Tilt Bed Pivot	A/R
5	1015583	Bushing, Urethane	4
6	1016724	Flat Bed Assembly (includes items 7 through 12)	1
7	1010435	Bolt, Carriage, 5/16-18 X 1.00	2
8	1014471	Tape, Vinyl Foam 1/8" x 3/4" *	A/R
9	N/A	Plate, Floor, Carryall 1 Flat bed	1
10	N/A	Frame Assembly, Tilt Bed	1
11	1015399	Screw, 5/16-18 X 0.88 Torx Truss-Head	4
12	7473	Locknut, 5/16-18 Nylon Insert	6
13	N/A	Bed Seal	1
14	103538701	Extr, Brkt, Hinge, Bed	2
15	103538901	3/8-16 X 3.5 Carr Blt Gr5 Zn	4
16	332	Washer, 1/4 Type A Narrow Flat	6
17	N/A	Rivet, 3/16 X 0.3125, Pop	4
18	8233	Locknut, 1/4-20 Nylon Insert	4
19	8754	Locknut, 3/8-16 Hex	6
20	8755	Screw, 3/8-16 X 3.375 Hex Cap	2

1 G

E

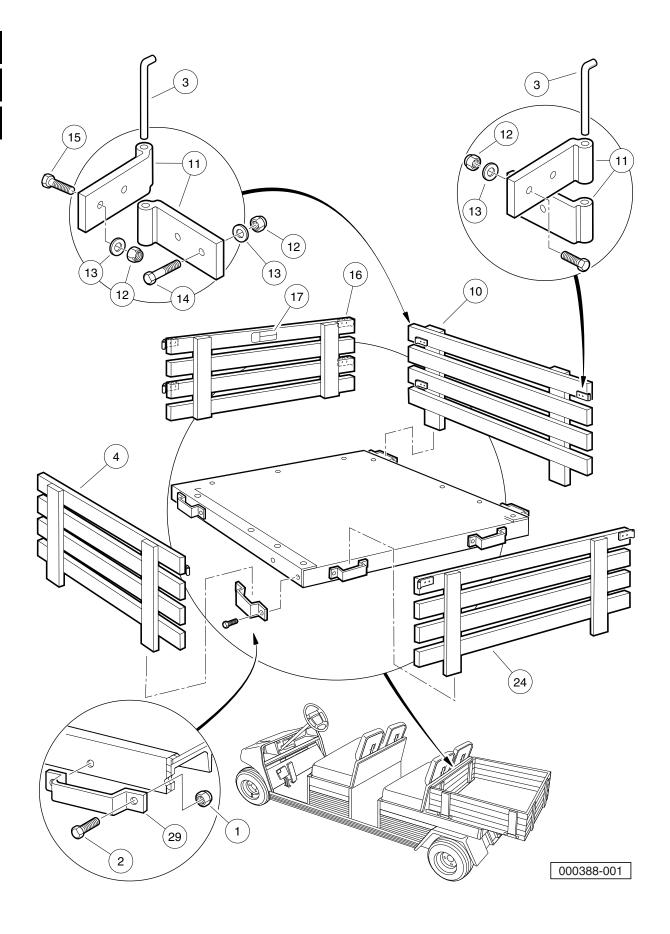






## **STAKE SIDE – TRANSPORTER 4**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1015660	Stake Side Kit (includes items 2 through 29)	1
2	1010934	Screw, 5/16-18 X 1.00 Hex Cap	12
3	1015656	Pin, hinge	6
4	N/A	Stake Side, Driver-Side (includes items 5 through 9)	1
5	1015654	Stake Side Hinge	3
6	1108	Locknut, 1/4-20 Dimpled	6
7	332	Washer, 1/4 Type A Narrow Flat	19
8	7311	Screw, 1/4-20 X 2.00 Hex-Head Cap	3
9	7479	Screw, 1/4-20 X 1.25 Hex-Head Cap	3
10	N/A	Stake Side, Passenger-Side (includes items 11 through 15)	1
11	1015654	Stake Side Hinge	3
12	1108	Locknut, 1/4-20 Dimpled	6
13	332	Washer, 1/4 Type A Narrow Flat	19
14	7311	Screw, 1/4-20 X 2.00 Hex-Head Cap	3
15	7479	Screw, 1/4-20 X 1.25 Hex-Head Cap	3
16	N/A	Stake Side, Front (includes items 17 through 23)	1
17	101553901	Decal, Bed Load Warning	1
18	1015654	Stake Side Hinge	4
19	1016663	Screw, #12-14 X 0.625	2
20	N/A	Plate, Bed Load Decal	1
21	1108	Locknut, 1/4-20 Dimpled	8
22	332	Washer, 1/4 Type A Narrow Flat	24
23	7479	Screw, 1/4-20 X 1.25 Hex-Head Cap	8
24	N/A	Stake Side, Rear (includes items 25 through 28)	1
25	1015654	Stake Side Hinge	2
26	1108	Locknut, 1/4-20 Dimpled	4
27	332	Washer, 1/4 Type A Narrow Flat	20
28	7479	Screw, 1/4-20 X 1.25 Hex-Head Cap	4
29	1016077	Bracket, Stake Side	6
27	1010077	Note: Items 19 and 20 are not shown.	

1 **G** 

E

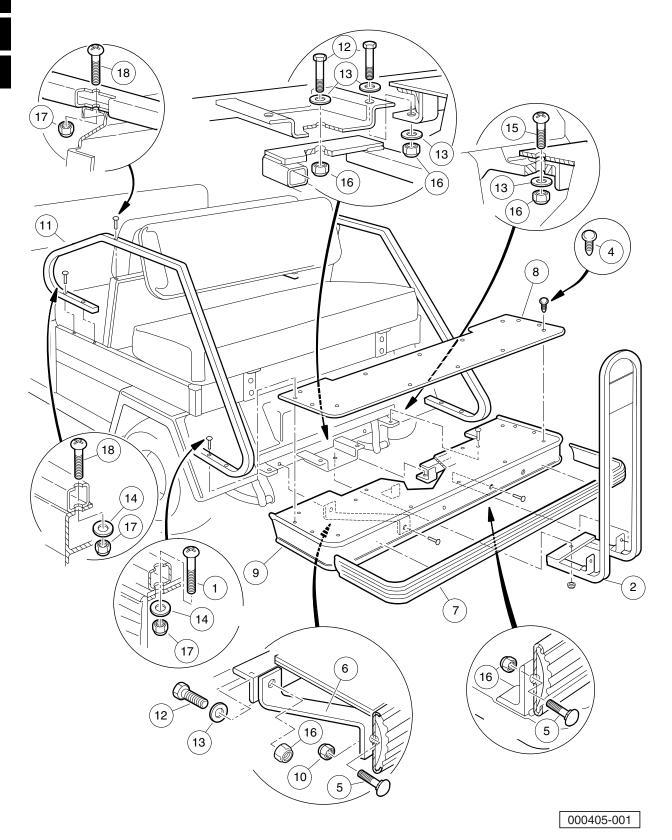







### **REAR FOOTREST AND HANDRAILS – TRANSPORTER 6**

	DESCRIPTION	QTY
	1 2 3 4	
1 1011988	Screw, 1/4-20 X 2.00 Phillips Truss-Head	4
2 1016842	Rear Seat Handrail Weldment	1
3 1016843	Rear Footrest Assembly (includes items 4 through 10)	1
4 1010434	Barrel - Plastic	10
5 1010435	Bolt, Carriage, 5/16-18 X 1.00	4
6 1016668	Connecting Bar	2
7 1016835	Bumper, Side Trim	1
8 ****	Foot Rest Mat	1
9 N/A	Rear Footrest Weldment	1
10 7473	Locknut, 5/16-18 Nylon Insert	2
11 101846301	Rear Seat Armrest/Hip Restraint	2
12 1218	Screw, 5/16-18 X 1.25 Hex-Head Cap	5
13 1241	Washer, 5/16 Type A Flat	9
14 332	Washer, 1/4 Type A Narrow Flat	8
15 7410	Screw, 5/16-18 X 1.25 Truss Hd	2
16 7473	Locknut, 5/16-18 Nylon Insert	8
17 8233	Locknut, 1/4-20 Nylon Insert	9
18 8418	Screw, 1/4-20 X 1.50 Phillips Truss-Head	6



1

G





# **WHEELS AND TIRES**

G

2

E












#### FOR FRONT OR REAR

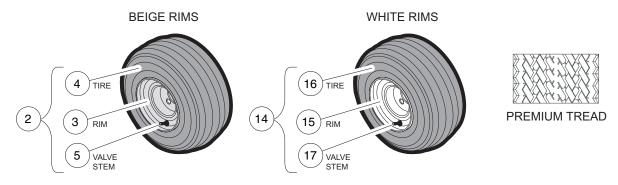

#### FOR REAR ONLY

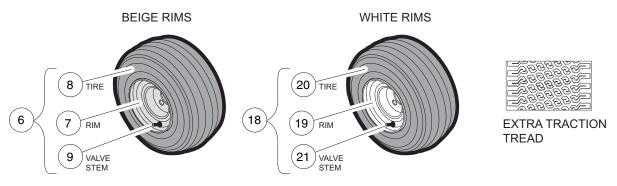

#### FOR FRONT ONLY

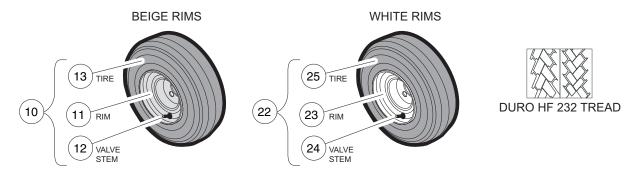







### **WHEELS AND TIRES**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010984	.500-20 Unf Lug Nut	16
2	101570506	Tire/Wheel Asm, Beige, Premium Tread, 6-ply (includes items 3 through 5)	4
3	1015707	Wheel Rim, Beige	1
4	101737002	Tire, Unmounted	1
5	7310	Valve Stem	
6	101570507	Tire/Wheel Asm, Beige, Xtrac Tread, 6-ply (includes items 7 through 9)	2
7	1015707	Wheel Rim, Beige	
8	101769302	Tire, Unmounted Xtrac 18 x 8.50-8	
9	7310	Valve Stem	
10	101570514	Tire/Wheel Asm, Beige, Duro HF 232 Tread (includes items 11 through 13)	
11	1015707	Wheel Rim, Beige	
12	7310	Valve Stem	
13	****	Tire, Unmounted, 6-Ply Rated (18.5 x 8.5 - 8) (Duro)	
14	101651406	Tire/Wheel Asm, White, Premium Tread, 6-Ply (includes items 15 through 17)	
15	1014771	Wheel Rim, White	
16	101737002 7310	Tire, Unmounted	
17 18	101651407	Valve Stem Tire/Wheel Asm, White, Extra-Traction, 6-Ply (includes items 19 through 21)	
19	101031407	Wheel Rim, White	
20	1014771	Tire, Unmounted Xtrac 18 x 8.50-8	-
21	7310	Valve Stem	
22	101651414	Tire/Wheel Asm, White, Duro HF 232 (includes items 23 through 25)	
23	101918402	Wheel Rim, White	
24	7310	Valve Stem	
25	****	Tire, Unmounted, 6-Ply Rated (18.5 x 8.5 - 8) (Duro)	
		, , , , , , , , , , , , , , , , , , , ,	
		**** Special order item available upon request.	



2

G

F





# **DECALS**

3

G

E






3

G

E

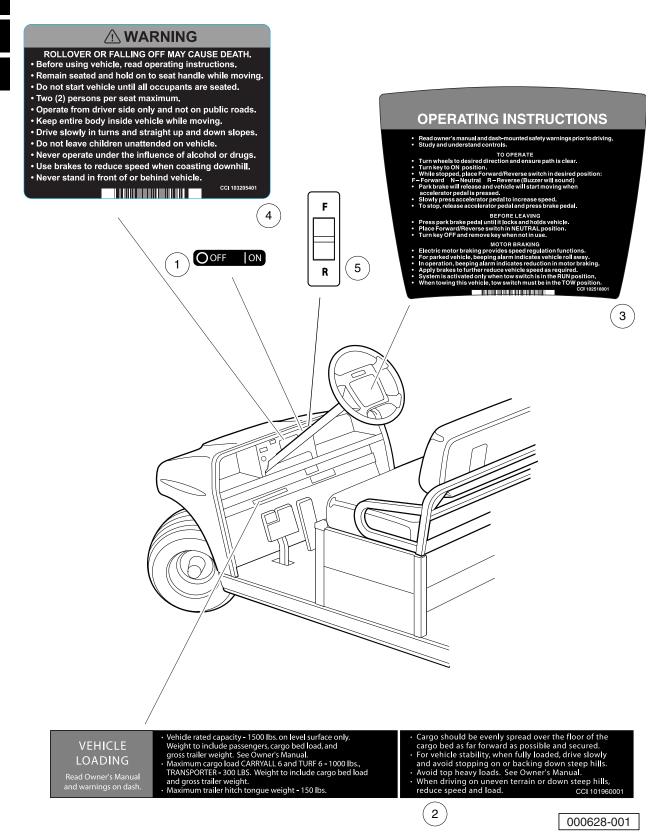








# **DECALS – ELECTRIC TRANSPORTER**

ТЕМ	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	101825101	Decal, Off/On	1
2	101960001	Decal, Vehicle Loading	
3	102518001	Decal, Operating Instr. Elec	
4	103205401		
		Decal, Warning, Rollover, Utl	
5	103210301	Decal, Forward/Reverse, Electric	1



G E

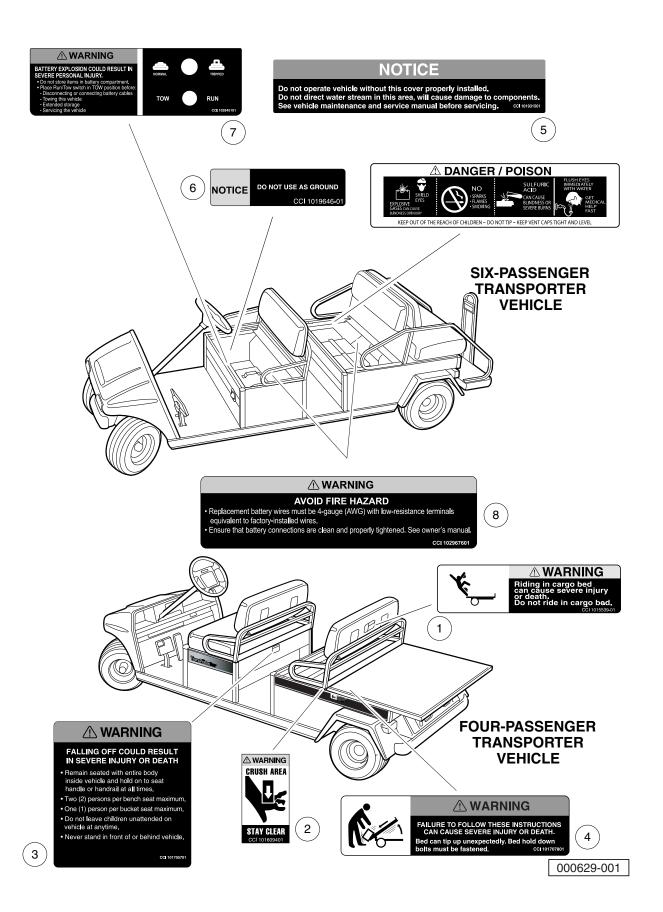








# **DECALS – ELECTRIC TRANSPORTER, CONTINUED**

ITEM	PART NO.	DESCRIPTION	Q
		1 2 3 4	
1	101553901	Decal, Bed Load Warning	1
2	101609401	Decal, Crush Area Warning	
3	101705701	Decal, Warning	
4	N/A	Decal, Bed Hold-Down Bolts	
5	101931501	Decal, Component Cover	
6	101964601	Decal, No Ground Warning	
7	102845101	Decal, Tow Switch	
8	102967601	Decal, Warning, 4 Gauge Wire	

3

**DID YOU** 

G

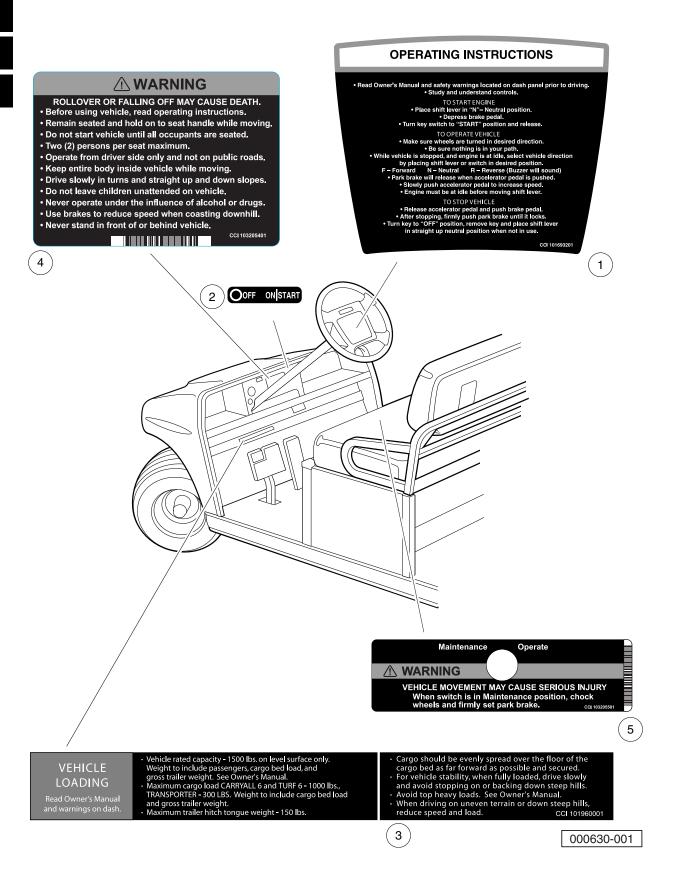








# **DECALS – GASOLINE TRANSPORTER**

ITEM	PART NO.	DESCRIPTION	OTV
1 I EIVI	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101693201	Decal, Operating Instructions, Key-Start	1
2	101825102	Decal, Off/On/Start	1
3	101960001	Decal, Vehicle Loading	1
4	103205401	Decal, Warning, Rollover, Utl	
5	103205501	Decal, Run/Service Switch	1



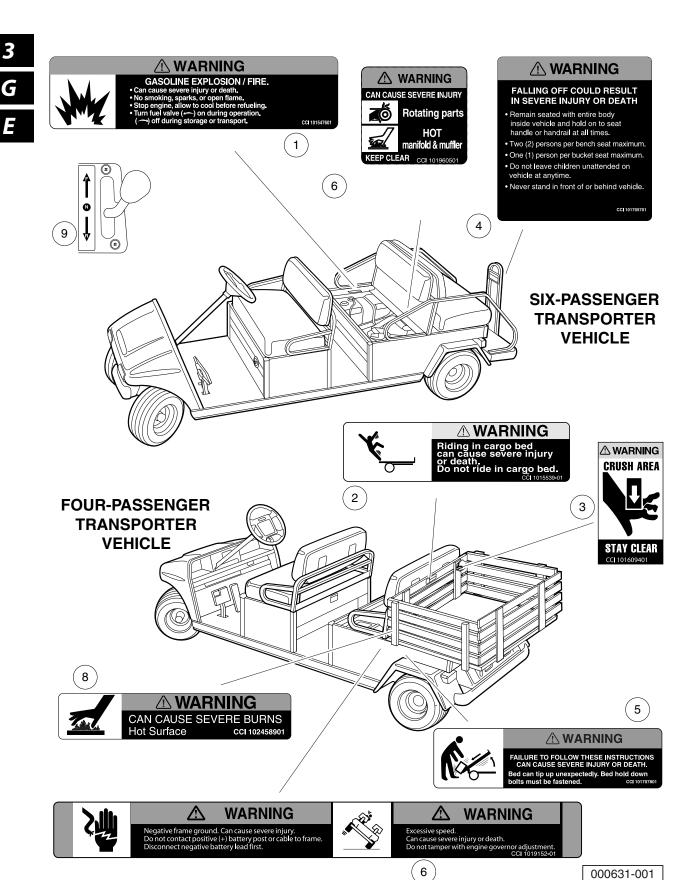








### **DECALS – GASOLINE TRANSPORTER, CONTINUED**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101547601	Decal, Gasoline Explosion/Fire Warning	1
2	101553901	Decal, Bed Load Warning	
3	101609401	Decal, Crush Area Warning	
4	101705701	Decal, Warning	
5	N/A	Decal, Bed Hold-Down Bolts	
6	101915201	Decal, Frame Ground and Governor Warning	
7	101960501	Decal, Rotating Parts/Hot Manifold	
8	102458901	Decal, Hot Surface Warning	
9	103210201	Decal, Forward/Reverse, Gas	
9	103210201	Decal, Forward/Neverse, Gas	'
			1

3 G

E



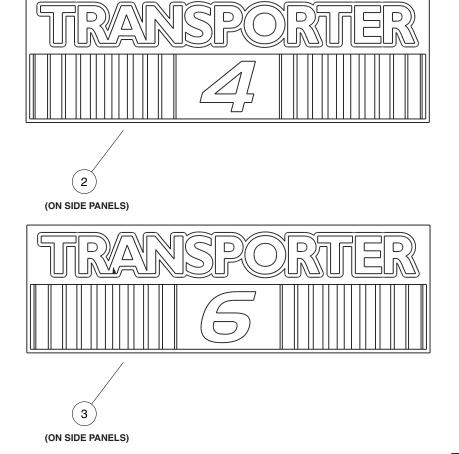







### **LOGO DECALS**

		LOGO DLC	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101670201	Nameplate Kit (silver)	1
2	103261701	Decal Trans 4 Side Panel	2
3	103261801	Decal Trans 6 Side Panel	2
4	103284201	Decal Ca6/tp4/tp6 Bar	2



https://CartPros.com/f.html

3

G







# **BRAKES, PEDAL, AND CABLES**

G

4


E



4 G

**DID YOU** 

E

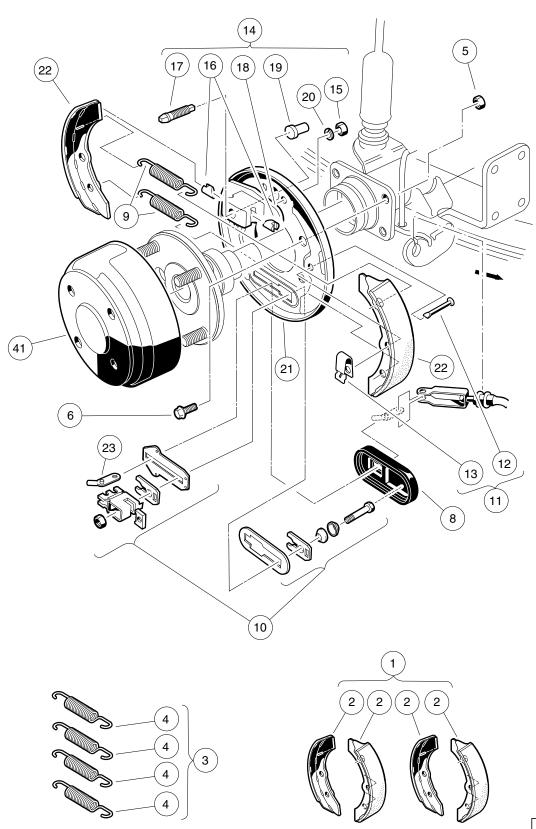








### **REAR BRAKE ASSEMBLY**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101146302	Kit, Non-Asbestos Brake Shoe (includes item 2)	. 1
2	N/A	Shoe Brake Manual Adj	. 4
3	1011464	Package, Brake Spring (includes item 4)	. 1
4	N/A	Brake Spring	. 4
5	1013924	Nut, 5/16-24 Hex Head Cone	. 8
6	1014153	Bolt, Brake Cluster Mounting	. 8
7	1016557	Cluster, Brake, Driver-Side (includes items 8 through 23)	. 1
8	1010850	Dust Cover	. 1
9	N/A	Brake Spring	. 2
10	1011465	Kit, Brake Actuator	. 1
11	1011466	Kit, Shoe Retainer (includes items 12 and 13)	. 1
12	N/A	Pin	. 2
13	N/A	Shoe Clamp Spring	
14	1011467	Kit, Anchor Body (includes items 15 through 20)	
15	1011114	Nut, M6-1.00 Hex	
16	N/A	Anchor Piston	
17	N/A	Adjustment Bolt	. 1
18	N/A	Anchor Body Component	
19	1011303	Adjustment Bolt Cap	
20	451	Lockwasher, 1/4 Helical Split	
21	N/A	Backing Plate, Left-Hand	
22	N/A	Shoe Brake Manual Adj	
23	N/A	Arm, Brake Lever	
24	1016573	Cluster, Brake, Passenger-Side (includes items 25 through 40)	
25	1010850	Dust Cover	
26	N/A	Backing Plate, Right-Hand	
27	N/A	Brake Spring	
28	1011465	Kit, Brake Actuator	
29	1011466	Kit, Shoe Retainer (includes items 30 and 31)	
30	N/A	Pin	_
31	N/A	Shoe Clamp Spring	
32	1011467	Kit, Anchor Body (includes items 33 through 38)	
33	10111407	Nut, M6-1.00 Hex	
34	N/A	Anchor Piston	
35	N/A	Adjustment Bolt	
36	N/A N/A	Anchor Body Component	
37	1011303	Adjustment Bolt Cap	
38	451	Lockwasher, 1/4 Helical Split	
39	451 N/A	Shoe Brake Manual Adj	
39 40	N/A N/A	Arm, Brake Lever	
40	101791101	Drum without Center Hole, Brake	
41	101/91101	Digiti williout Certer noie, diake	2
		Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.	

4 G

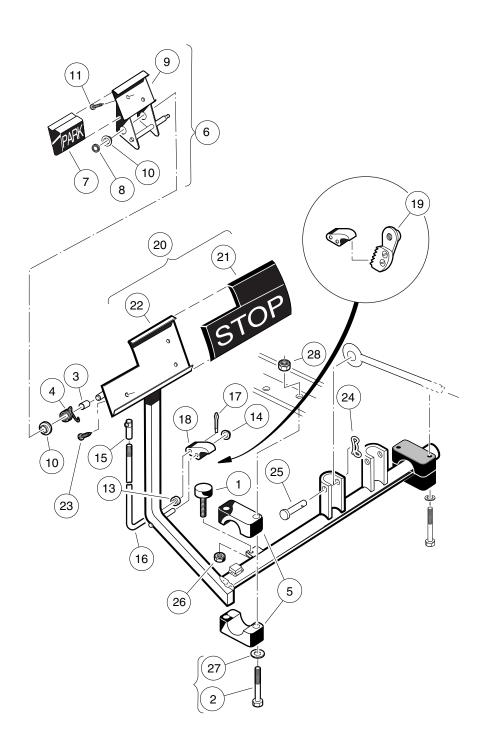








### **BRAKE PEDAL ASSEMBLY – GASOLINE VEHICLES**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010878	Bumper, Rubber	1
2	1010921	Screw, 5/16-18 X 2.50 Hex Cap	4
3	1010927	Hill Brake Spacer	1
4	1010933	Spring, Hill Brake Torsion	1
5	1011402	Package, Brake Mounting Block	
6	1011418	Kit, Hill Brake Pedal (includes items 7 through 11)	
7	1013870	Pad, Hill Brake	
8	1013876	Pushnut, 3/8	
9	N/A	Hill Brake Weld Assembly	
10	1032	Bushing, Nylon	2
11	7716	Screw, #10-16 Type AB, Sheet Metal	
12	101187702	Kit, Hill Brake Latch (includes items 13 through 19)	
13	1010805	Sleeve, Hill Brake Rod	
14 15	1010877	Pushnut, 3/8	
15	1010932	Ball Joint, 1/4-28	1
16	N/A	Rod, Hill Brake	1
17 18	1017029 N/A	Pin, Cotter, 7/64 x 1/2 Stainless-Steel Pawl, Hill Brake	
19	N/A N/A	Ratchet Assembly	
20	101878201	Brake Pedal Kit (includes items 21 through 23)	
21	101070201	Pad, Brake Pedal	1
22	N/A	Weldment, Brake Pedal 4wb Std	
23	7716	Screw, #10-16 Type AB, Sheet Metal	
24	102323101	Pin, Bow Tie Locking	
25	102323201	Pin, 3/8 X 1-5/16 Clevis	2
26	1028	Nut, 1/4-20 Hex	1
27	1241	Washer, 5/16 Type A Flat	4
28	7473	Locknut, 5/16-18 Nylon Insert	4



4 G

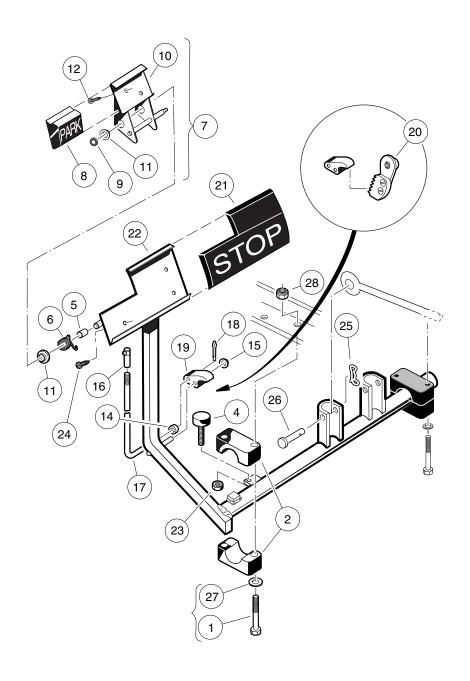









# **BRAKE PEDAL ASSEMBLY – IQ PLUS VEHICLES**

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1010921	Screw, 5/16-18 X 2.50 Hex Cap	4
2	1011402	Package, Brake Mounting Block	1
3	N/A	Subasm, Pedal Group, 4-Wheel Brake (includes items 4 through 24)	1
4	1010878	Bumper, Rubber	1
5	1010927	Hill Brake Spacer	1
6	1010933	Spring, Hill Brake Torsion	1
7	1011418	Kit, Hill Brake Pedal (includes items 8 through 12)	1
8	1013870	Pad, Hill Brake	1
9	1013876	Pushnut, 3/8	1
10	N/A	Hill Brake Weld Assembly	1
11	1032	Bushing, Nylon	2
12	7716	Screw, #10-16 Type AB, Sheet Metal	2
13	101187702	Kit, Hill Brake Latch (includes items 14 through 20)	1
14	1010805	Sleeve, Hill Brake Rod	1
15	1010877	Pushnut, 3/8	1
16	1010932	Ball Joint, 1/4-28	1
17	N/A	Rod, Hill Brake	1
18	1017029	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1
19	N/A	Pawl, Hill Brake	1
20	N/A	Ratchet Assembly	1
21	1013869	Pad, Brake Pedal	
22	N/A	Brake Pedal Weldment	
23	1028	Nut, 1/4-20 Hex	
24	7716	Screw, #10-16 Type AB, Sheet Metal	
25	102323101	Pin, Bow Tie Locking	
26	102323201	Pin, 3/8 X 1-5/16 Clevis	
27	1241	Washer, 5/16 Type A Flat	4
28	7473	Locknut, 5/16-18 Nylon Insert	4

4 G

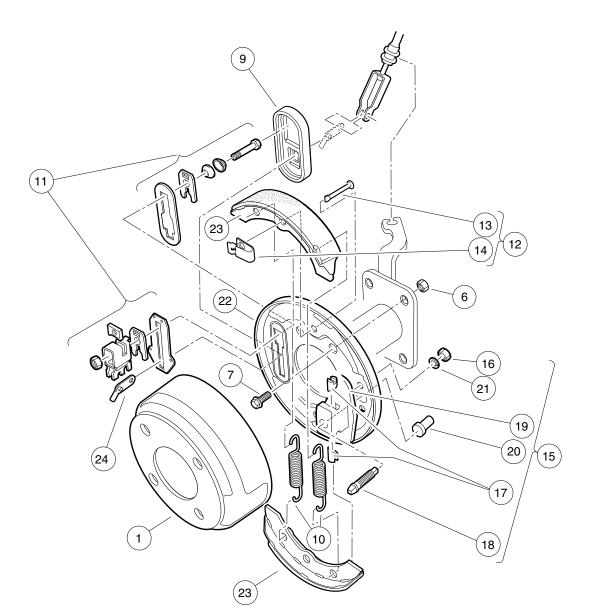

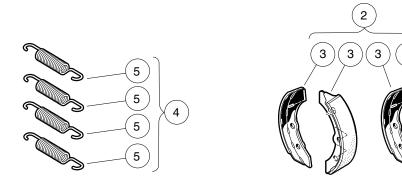

000298-001

3








### **FRONT BRAKE ASSEMBLY**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011137	Drum, Brake	2
2	101146302	Kit, Non-Asbestos Brake Shoe (includes item 3)	1
3	N/A	Shoe Brake Manual Adj	4
4	1011464	Package, Brake Spring (includes item 5)	1
5	N/A	Brake Spring	4
6	1013924	Nut, 5/16-24 Hex Head Cone	8
7	1014153	Bolt, Brake Cluster Mounting	8
8	1016557	Cluster, Brake, Driver-Side (includes items 9 through 24)	1
9	1010850	Dust Cover	1
10	N/A	Brake Spring	2
11	1011465	Kit, Brake Actuator	1
12	1011466	Kit, Shoe Retainer (includes items 13 and 14)	1
13	N/A	Pin	2
14	N/A	Shoe Clamp Spring	2
15	1011467	Kit, Anchor Body (includes items 16 through 21)	1
16	1011114	Nut, M6-1.00 Hex	2
17	N/A	Anchor Piston	2
18	N/A	Adjustment Bolt	1
19	N/A	Anchor Body Component	1
20	1011303	Adjustment Bolt Cap	1
21	451	Lockwasher, 1/4 Helical Split	2
22	N/A	Backing Plate, Left-Hand	1
23	N/A	Shoe Brake Manual Adj	2
24	N/A	Arm, Brake Lever	
25	1016573	Cluster, Brake, Passenger-Side (includes items 26 through 41)	1
26	1010850	Dust Cover	1
27	N/A	Backing Plate, Right-Hand	1
28	N/A	Brake Spring	2
29	1011465	Kit, Brake Actuator	1
30	1011466	Kit, Shoe Retainer (includes items 31 and 32)	1
31	N/A	Pin	2
32	N/A	Shoe Clamp Spring	2
33	1011467	Kit, Anchor Body (includes items 34 through 39)	
34	1011114	Nut, M6-1.00 Hex	2
35	N/A	Anchor Piston	2
36	N/A	Adjustment Bolt	1
37	N/A	Anchor Body Component	1
38	1011303	Adjustment Bolt Cap	1
39	451	Lockwasher, 1/4 Helical Split	
40	N/A	Shoe Brake Manual Adj	2
41	N/A	Arm, Brake Lever	1
		Note: Passenger-side brake cluster not shown. Components have a similar appearance to driver-side brake cluster components.	



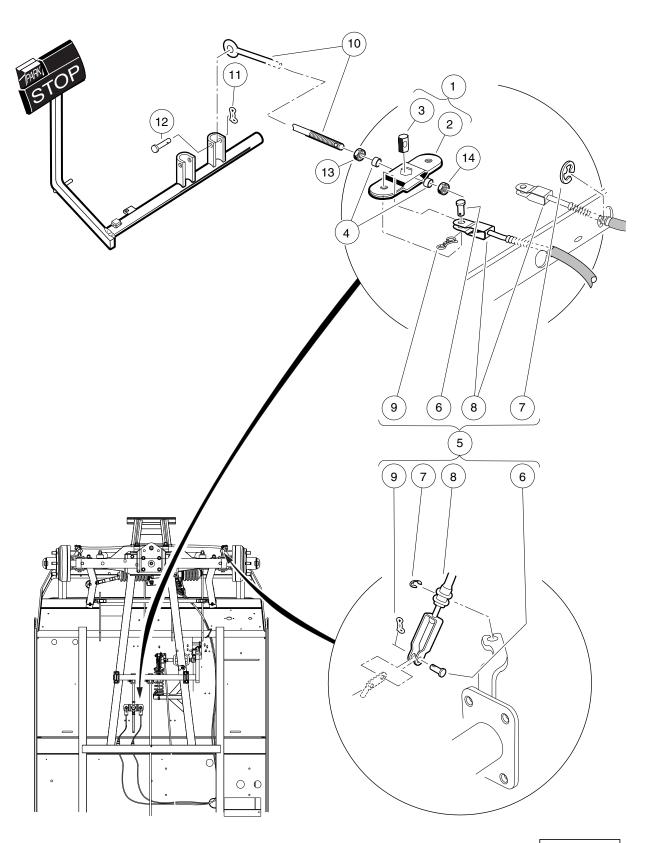







# FRONT BRAKE CABLES AND EQUALIZER


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017211	Kit, Equalizer and Pivot Limiter (includes items 2 and 3)	1
2	N/A	Equalizer Weld Assembly	1
3	N/A	Equalizer, Pivot Limiter	1
4	101865301	Spacer	2
5	101874601	Kit, Brake Cable (includes items 6 through 9)	1
6	1010829	Pin, Clevis, 5/16 X 3/4	4
7	1011779	E-Clip, 1/2	4
8	N/A	Brake Cable	2
9	102292801	Pin, Bow Tie Locking072	4
10	101953106	Rod, Equalizer, 9.75"	1
11	102323101	Pin, Bow Tie Locking	1
12	102323201	Pin, 3/8 X 1-5/16 Clevis	1
13	1242	Nut, 5/16-18 Hex	1
14	7473	Locknut, 5/16-18 Nylon Insert	1



4

G

Ε

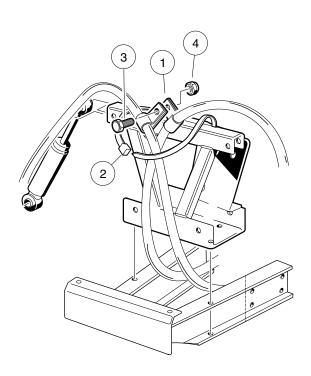








# **GASOLINE VEHICLES**


	OASOLINE VEHICLES				
ITEM	PART NO.	DESCRIPTION	QTY	4	
		1 2 3 4			
1	101935301	Clamp, Brake Cable	2		
2	102025401	Tie Wrap, Heavy Duty			
3	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	1		
4	8754	Locknut, 3/8-16 Hex	1		





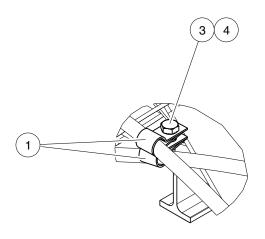

**DETAIL G** 

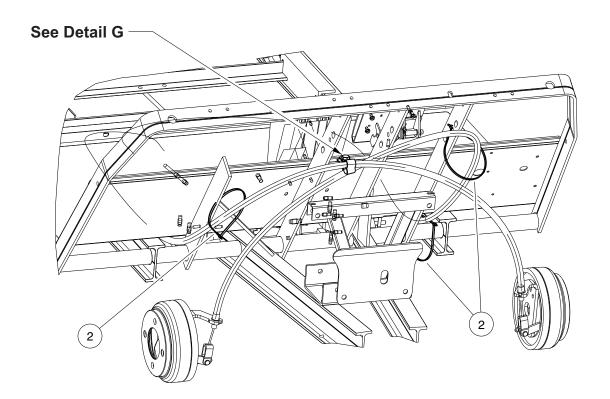








# FRONT BRAKE CABLE CLIPS - IQ PLUS VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101935301	Clamp, Brake Cable	2
2	102025401	Tie Wrap, Heavy Duty	
3	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	
4	8754	Locknut, 3/8-16 Hex	1
4	8734	Lockitut, 3/0-10 Hex	'

4 G

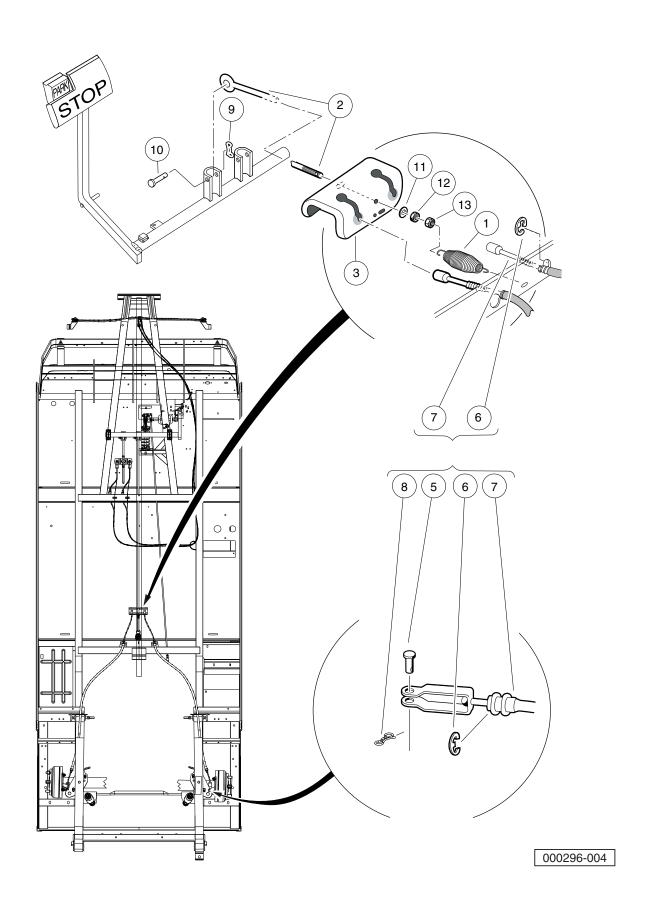






# **REAR BRAKE CABLES AND EQUALIZER**

ITEM	PART NO.	DESCRIPTION	QTY
11 2141	ranino.	DESCRIPTION	ווע
		1 2 3 4	
1	1013531	Spring, Brake Return	1
2	101953103	Rod, Equalizer	1
3	101990801	Equalizer Bracket	1
4	102166901	Kit, Brake Cable Rear (includes items 5 through 8)	1
5	1010829	Pin, Clevis, 5/16 X 3/4	2
6	1011779	E-Clip, 1/2	4 2
7	N/A 102292801	Cable, Brake	2
8	102292801	Pin, Bow Tie Locking072	
10	102323101	Pin, Bow Tie Locking	1
		Pin, 3/8 X 1-5/16 Clevis	-
11 12	1241 1242	Washer, 5/16 Type A Flat	1
13	7473	Locknut, 5/16-18 Nylon Insert	1
13	/4/3	LOCKITAL, 3/ 10-10 NYIOTI III3CIL	'

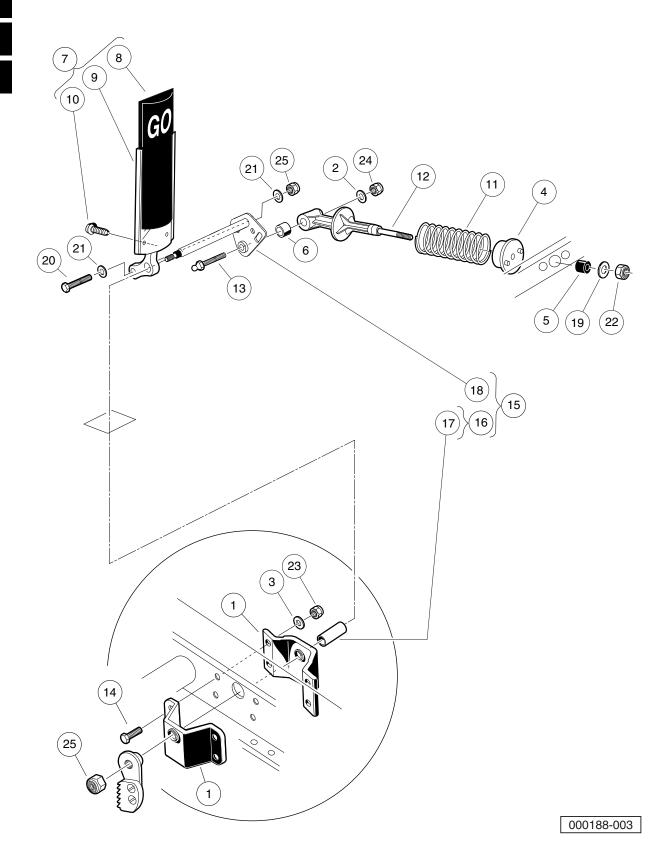






## **ACCELERATOR PEDAL ASSEMBLY – GASOLINE VEHICLES**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011694	Accelerator Bracket and Bearing Assembly	2
2	1011931	Washer, 1/4 Flat	1
3	1014007	Washer, 1/4 Flat	4
4	1017378	Cup, Spring	1
5	1017380	Bumper, Spring Return	1
6	1017424	Bearing, Pivot Support	1
7	1017696	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1
8	1013871	Pad, Accelerator Pedal	
9	N/A	Accelerator Pedal Weldment	1
10	7716	Screw, #10-16 Type AB, Sheet Metal	4
11	101796201	Spring, Accelerator Return	1
12	101817401	Retainer, Spring	1
13	101818801	Stud, 1/4-28 X 1.35 Ball	1
14	101861901	Screw, 1/4-20 X 1.125 Hex Cap	4
15	102026001	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1
16	1011700	Spacer Assembly (includes item 17)	1
17	N/A	Spacer, Accelerator	1
18	N/A	Pivot Rod Weldment	1
19	1241	Washer, 5/16 Type A Flat	1
20	1624	Screw, 3/8-16 X 1.50 Hex-Head Cap	1
21	334	Washer, 3/8 Type A Flat	2
22	7473	Locknut, 5/16-18 Nylon Insert	1
23	8233	Locknut, 1/4-20 Nylon Insert	4
24	8717	Locknut, 1/4-28 Nylon Insert	1
25	8754	Locknut, 3/8-16 Hex	2
			1

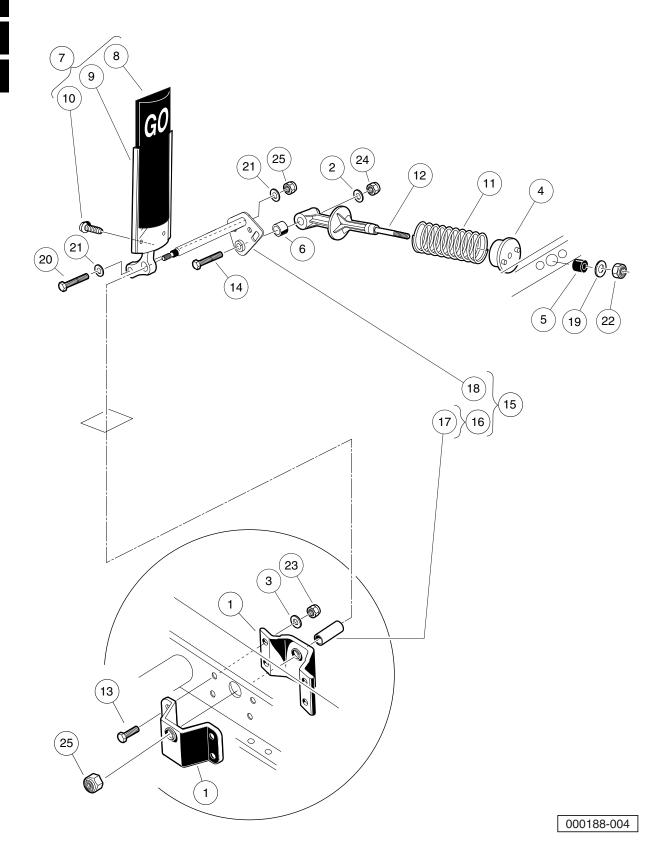











#### T LUAL AJJEMBLY -ELECTRIC VEHICLES WITH MCOR

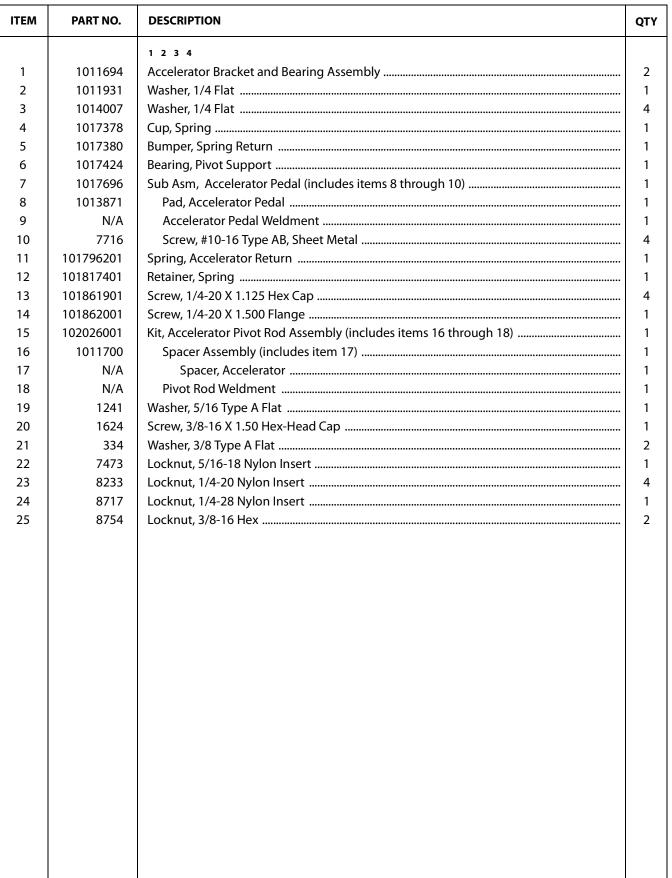





**DID YOU** 

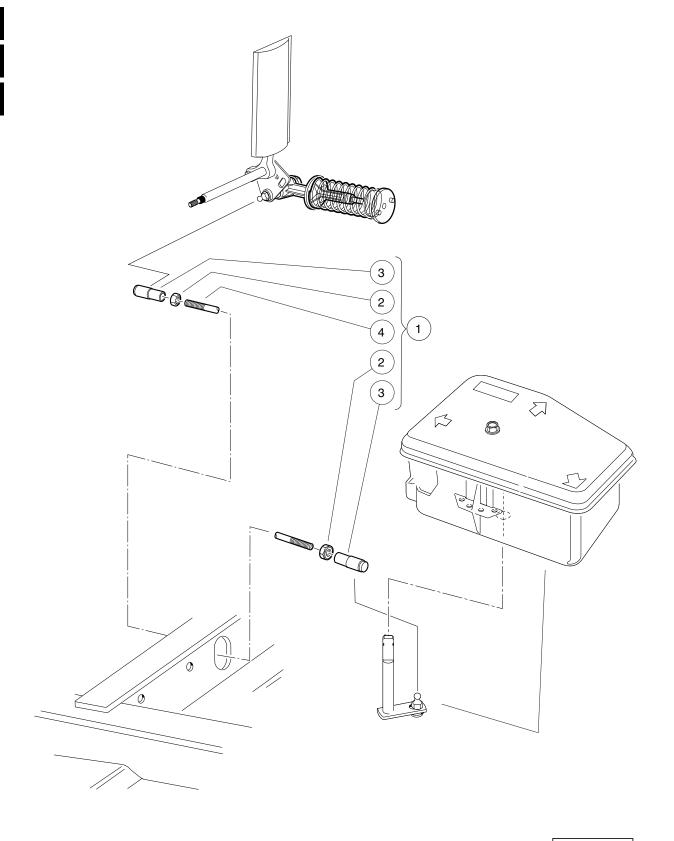







## **ACCELERATOR ROD**

		ACCLLINATION INC		
ITEM	PART NO.	DESCRIPTION	QTY	
1 2	101674702 1011084	1 2 3 4 Rod, Accelerator (includes items 2 through 4) Nut, 1/4-28 Hex Jam	2	
3	1011734 N/A	Joint, BallAccelerator Rod Elec Stretch	1	



https://CartPros.com/f.html

4

G

7=





https://CartPros.com/f.html

# our search box and it will find the part you are looking for. STEERING, FRONT AND REAR SUSPENSION


G

**5** 

E



5 G

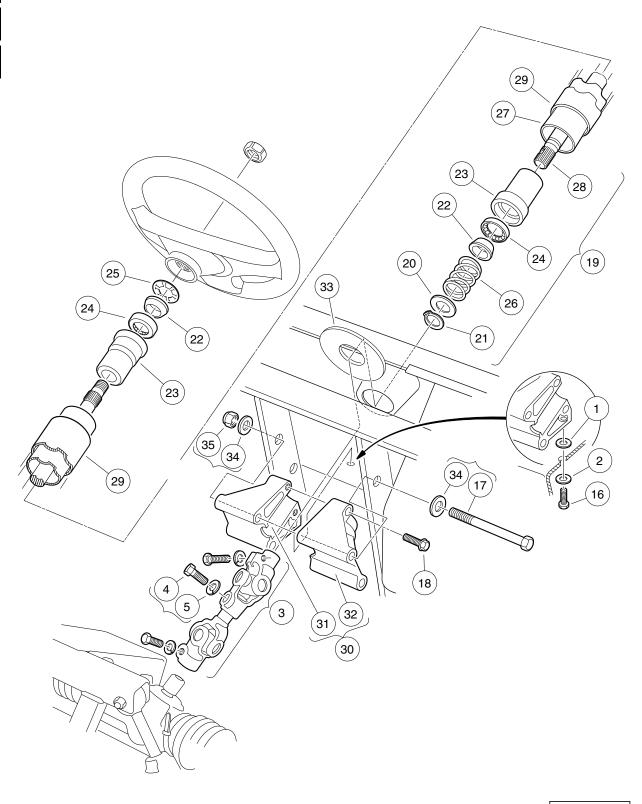








## **STEERING COLUMN**

 ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011578	Washer, 5/16 Type B Flat	1
2	1011697	Washer, 5/16 Flat	
3	1013861	Intermediate Steering Shaft (includes items 4 and 5)	1
4	1017226	Bolt, Hex-Head, 8mm X 1.25 - 30	3
5	7174	Lockwasher, 5/16 Split	3
6	1014216	Steering Column Rebuild Kit (includes items 7 through 15)	A/R
7	1012466	Dust Cover	1
8	1012605	Ring, 0.579 Internal Retaining	
9	1014125	Wedge, Molded	
10	1014126	Seat, Plastic Bearing	
11	1014211	Seal, Bearing	
12	1014212	Spacer, Shaft	
13	1014213	Bearing, Ball	
14	1014214	Ring, Retaining	
15	1014217	Spring, Steering Shaft	
16	1014288	Screw, 5/16-18 X 0.75 Thread-Forming	
17	1016183	Screw, 3/8-16 X 7.00 Hex Cap	
18	1016269	Screw, 5/16-18 Thrd Forming	
19	1017313	Steering Shaft Assembly (includes items 20 through 28)	
20	1012604 1012605	Washer, 0.675 ID X 1.19 OD	
21 22	1012005	Ring, 0.579 Internal Retaining	
23	1014123	Wedge, Molded  Seat, Plastic Bearing	
23	1014120	Bearing, Ball	
25	1014214	Ring, Retaining	
26	1014217	Spring, Steering Shaft	
27	1017314	Column, Aluminum Steering	
28	1017315	Shaft Steering Column	
29	1017317	Tube Cover, Steering Column	
30	101984801	Kit, Steering Column Mounting Bracket (includes items 31 and 32)	
31	N/A	Bracket, RH Steering Column Mount	
32	N/A	Bracket, LH Steering column mount	
33	102278001	Boot, Steering Column Round	1
34	334	Washer, 3/8 Type A Flat	4
35	8754	Locknut, 3/8-16 Hex	2
		Note: Item 6 is not illustrated.	
		Note. Item 0 is not inustrated.	






**DID YOU** 

G

=

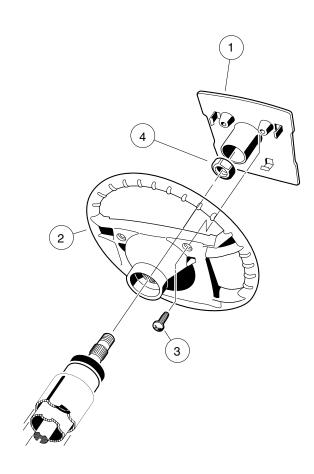








## **STEERING WHEEL**

		STEERING WHEEL			
ITEM	PART NO.	DESCRIPTION	QTY		
		1 2 3 4			
1	101615504	Plate, Scorecard	1		
2	1016156	Wheel, Steering	1		
3	1016663	Screw, #12-14 X 0.625	2		
4	1017273	Nut, 5/8-18 Nylon Insert Jam	1		

G E

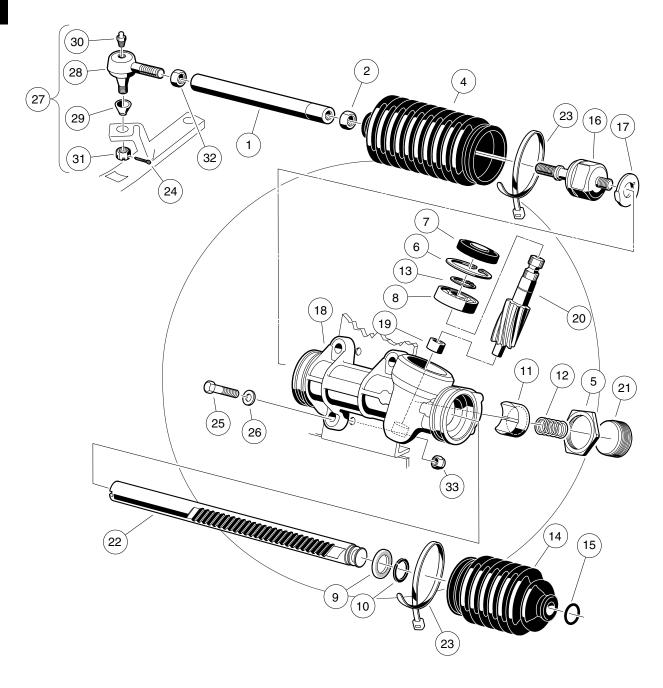








## **STEERING GEAR ASSEMBLY**

4 5 6 7 8 10 10 10 11 10 12 10 13 10 14 10 15 16 16 10	1012467 1013042 01878302 1013035 1013044 1013051 1013052 01879401 01879501 01879601 01879701 01879801 01879901 01880001 01880101 01880201 01880301 N/A	Link, Rack and Pinion Drag
2 3 4 5 6 7 8 10 10 11 12 13 14 16 17 16 17 18 19 20	1013042 01878302 1013035 1013044 1013051 1013052 01879401 01879501 01879601 01879701 01879801 01879901 01880001 01880101 01880201 01880301 N/A	Nut, 12mm Hex  Steering Gear Assembly (without yoke) (includes items 4 through 23)  Bellows, Long  Rack Screw Locknut  Snap Ring  Seal, Steering Pinion Dust  Bearing, Ball  Stop Washer  Stop Ring, C-Type  Support Yoke  Rack Guide Pressure Spring  Ring, Stop, C-Type  Bellows, Short  Dust Seal Retaining Ring  Inner Ball Joint Asm  Washer, Tab
3 10 4 5 6 7 8 10 9 10 10 10 11 10 12 10 13 10 14 10 15 10 16 10 17 10 18 19 20	01878302 1013035 1013044 1013051 1013052 01879401 01879501 01879601 01879701 01879801 01879901 01880001 01880101 01880201 01880301 N/A	Steering Gear Assembly (without yoke) (includes items 4 through 23)
4 5 6 7 8 10 10 10 11 10 12 10 13 10 15 16 10 17 18 19 20	1013035 1013044 1013051 1013052 01879401 01879501 01879601 01879801 01879901 01880001 01880101 01880201 01880301 N/A	Bellows, Long
5 6 7 8 10 9 10 10 10 11 10 12 10 13 10 14 10 15 10 16 10 17 10 18 19 20	1013044 1013051 1013052 01879401 01879501 01879601 01879701 01879801 01879901 01880001 01880101 01880201 01880301 N/A	Rack Screw Locknut Snap Ring Seal, Steering Pinion Dust Bearing, Ball Stop Washer Stop Ring, C-Type Support Yoke Rack Guide Pressure Spring Ring, Stop, C-Type Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab
6 7 8 10 9 10 10 11 11 10 12 10 13 10 14 10 15 16 10 17 18 19 20	1013051 1013052 01879401 01879501 01879601 01879701 01879801 01879901 01880001 01880101 01880201 01880301 N/A	Snap Ring
7 8 10 9 10 10 10 11 10 12 10 13 10 14 10 15 10 16 10 17 10 18 19 20	1013052 01879401 01879501 01879601 01879701 01879801 01879901 01880001 01880101 01880201 01880301 N/A	Seal, Steering Pinion Dust Bearing, Ball Stop Washer Stop Ring, C-Type Support Yoke Rack Guide Pressure Spring Ring, Stop, C-Type Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab
8 10 9 10 10 10 11 10 12 10 13 10 14 10 15 10 16 10 17 10 18 19 20	01879401 01879501 01879601 01879701 01879801 01879901 01880001 01880101 01880201 01880301 N/A	Bearing, Ball
9 10 10 10 11 10 12 10 13 10 14 10 15 10 16 10 17 10 18 19 20	01879501 01879601 01879701 01879801 01879901 01880001 01880101 01880201 01880301 N/A	Stop Washer Stop Ring, C-Type Support Yoke Rack Guide Pressure Spring Ring, Stop, C-Type Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab
10 10 11 10 12 10 13 10 14 10 15 10 16 10 17 10 18 19 20	01879601 01879701 01879801 01879901 01880001 01880101 01880201 01880301 N/A	Stop Ring, C-Type Support Yoke Rack Guide Pressure Spring Ring, Stop, C-Type Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab
11 10 12 10 13 10 14 10 15 10 16 10 17 10 18 19 20	01879701 01879801 01879901 01880001 01880101 01880201 01880301 N/A	Support Yoke
12 10 13 10 14 10 15 10 16 10 17 10 18 19 20	01879801 01879901 01880001 01880101 01880201 01880301 N/A	Rack Guide Pressure Spring
13 10 14 10 15 10 16 10 17 10 18 19 20	01879901 01880001 01880101 01880201 01880301 N/A	Ring, Stop, C-Type  Bellows, Short  Dust Seal Retaining Ring  Inner Ball Joint Asm  Washer, Tab
14 10 15 10 16 10 17 10 18 19 20	01880001 01880101 01880201 01880301 N/A	Bellows, Short  Dust Seal Retaining Ring  Inner Ball Joint Asm  Washer, Tab
15 10 16 10 17 10 18 19 20	01880101 01880201 01880301 N/A	Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab
16 10 17 10 18 19 20	01880201 01880301 N/A	Inner Ball Joint Asm
17 10 18 19 20	01880301 N/A	Washer, Tab
18 19 20	N/A	
19 20	-	
20	NI/A	Box, Steering Gear
	N/A	Bearing, Lower Pinion
21	N/A N/A	Pinion, Steering
22	N/A N/A	Screw, Rack Guide
23	8990	Rack, Steering Tie Wrap, 8" Nylon
24	1035	Cotter Pin, 3/32 x 1
25	1624	Screw, 3/8-16 X 1.50 Hex-Head Cap
26	334	Washer, 3/8 Type A Flat
27	7540	Ball Joint, Left (includes items 28 through 31)
28	N/A	Socket, LH Vertical
29	1011930	Seal, Vertical Socket Dust
30	1015597	Fitting, 1/4-28 Thread-Forming Grease
31	7602	Nut, 3/8-24 UNF Hex
32	7555	Nut, 1/2-20 Hex, Left-Hand Thread
33	8754	Locknut, 3/8-16 Hex

5 G

E

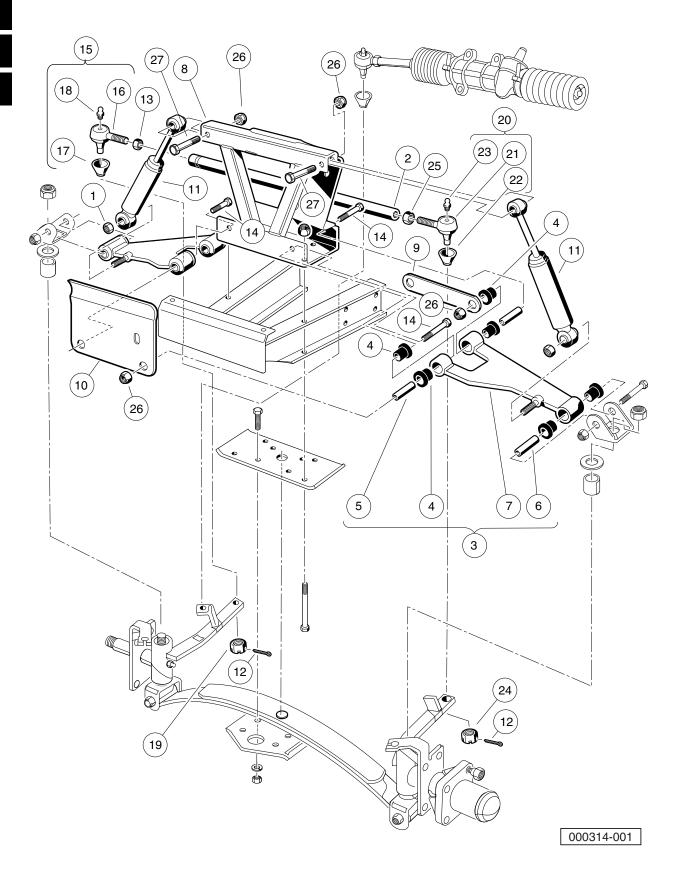






## FRONT SUSPENSION, UPPER

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1010138	Locknut, 3/8-16 Dimpled	2
2	1010219	Tie Rod	1
3	1016353	Sub-Assembly, Delta A-Plate (includes items 4 through 7)	2
4	1016346	Bushing, Urethane	6
5	1016349	Sleeve, Delta Inner	2
6	1016350	Sleeve, Delta Outer	1
7	N/A	Delta A-Plate	1
8	1016385	Delta Shock and Gear Support Assembly	1
9	1017266	A-Plate Strap	1
10	101955001	Bracket, Brake Cable Guide	1
11	103351001	Shock Absorber, Front, Common	2
12	1035	Cotter Pin, 3/32 x 1	2
13	1308	Nut, 1/2-20 Hex	1
14	2402	Screw, 3/8-16 X 2.25 Hx Hd Cap	4
15	7539	Ball Joint, Right-Hand (includes items 16 through 19)	
16	N/A	Socket, RH Vertical	
17	1011930	Seal, Vertical Socket Dust	
18	1015597	Fitting, 1/4-28 Thread-Forming Grease	1
19	7602	Nut, 3/8-24 UNF Hex	
20	7540	Ball Joint, Left (includes items 21 through 24)	
21	N/A	Socket, LH Vertical	1
22	1011930	Seal, Vertical Socket Dust	1
23	1015597	Fitting, 1/4-28 Thread-Forming Grease	
24	7602	Nut, 3/8-24 UNF Hex	1
25	7555	Nut, 1/2-20 Hex, Left-Hand Thread	1
26	8754	Locknut, 3/8-16 Hex	6
27	8861	Bolt, 3/8-16 X 1.75 Hex	2
	333.		

**5** 

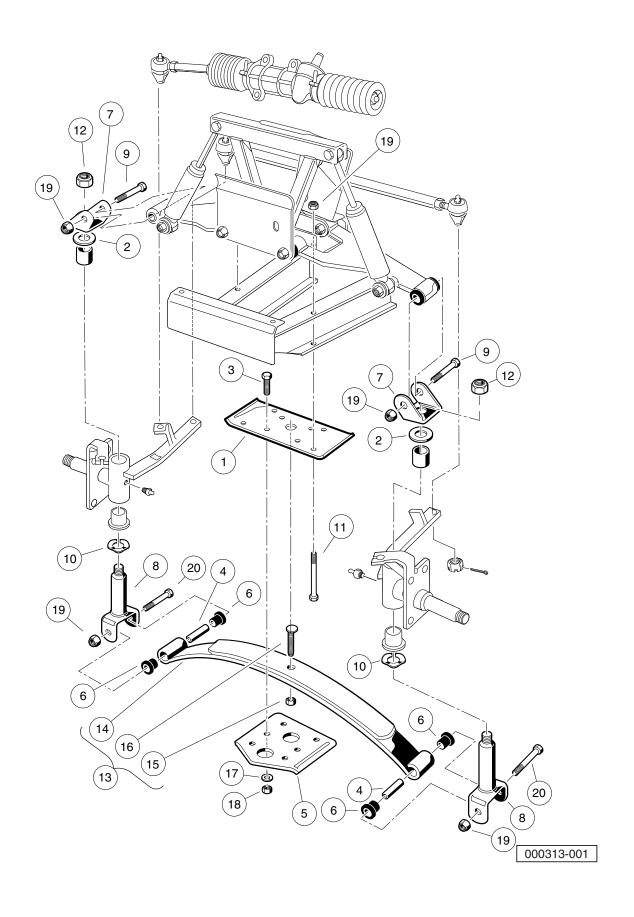








## FRONT SUSPENSION, LOWER (STYLE A)

1 2 3 4  1 1010124 Plate, Spring Mount	
2       1010150       Bearing, Thrust         3       1010177       Bolt, 3/8-16 X 2.00 Hex Head         4       1012303       Bushing, Steel         5       1014276       Plate, Front Spring Retainer         6       1015583       Bushing, Urethane         7       1016384       Clevis, Delta Upper         8       1016386       King Pin Assembly	
3       1010177       Bolt, 3/8-16 X 2.00 Hex Head         4       1012303       Bushing, Steel         5       1014276       Plate, Front Spring Retainer         6       1015583       Bushing, Urethane         7       1016384       Clevis, Delta Upper         8       1016386       King Pin Assembly	4
4       1012303       Bushing, Steel	2
5       1014276       Plate, Front Spring Retainer         6       1015583       Bushing, Urethane         7       1016384       Clevis, Delta Upper         8       1016386       King Pin Assembly	
6 1015583 Bushing, Urethane	
7 1016384 Clevis, Delta Upper	
8 1016386 King Pin Assembly	
9 1016387 Screw, 3/8-16 X 2.75 Hx Hd Cap	
10 1016389 Washer, 1.125 Od Wave	
11 101870501 Screw, 3/8-16 X 4.75 Hx Hd Cap	
12   101903101   Locknut, 1/2-20 Nylon Insert	
13 102004001 Spring, Front (includes items 14 through 16)	
14 N/A Spring, Front Leaf	
15 706 Nut, Hex 3/8-16	
16 8745 Screw, Eccentric Adjustment	
17 357 Washer, Lock, Hel Sp 3/8 Reg	
18 706 Nut, Hex 3/8-16	
19 8754 Locknut, 3/8-16 Hex	



5 G

E

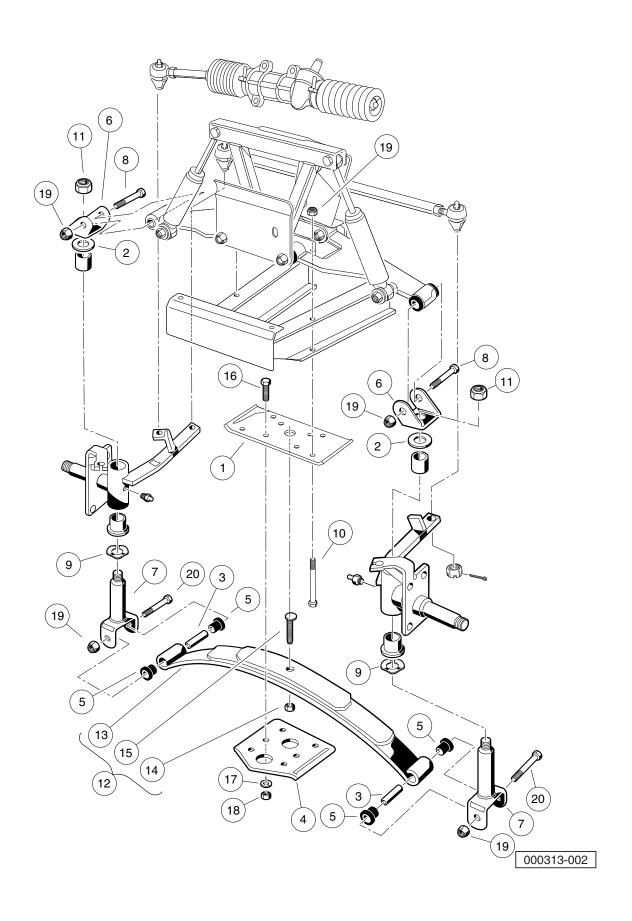






## FRONT SUSPENSION, LOWER (STYLE B)


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010124	Plate, Spring Mount	1
2	1010150	Bearing, Thrust	2
3	1012303	Bushing, Steel	2
4	1014276	Plate, Front Spring Retainer	1
5	1015583	Bushing, Urethane	4
6	1016384	Clevis, Delta Upper	2
7	1016386	King Pin Assembly	2
8	1016387	Screw, 3/8-16 X 2.75 Hx Hd Cap	2
9	1016389	Washer, 1.125 Od Wave	2
10	101870501	Screw, 3/8-16 X 4.75 Hx Hd Cap	4
11	101903101	Locknut, 1/2-20 Nylon Insert	2
12	102197901	Spring, Front Utility (includes items 13 through 15)	1
13	N/A	Spring, 3-Leaf	1
14	706	Nut, Hex 3/8-16	1
15	8745	Screw, Eccentric Adjustment	1
16	2402	Screw, 3/8-16 X 2.25 Hx Hd Cap	4
17	357	Washer, Lock, Hel Sp 3/8 Reg	4
18	706	Nut, Hex 3/8-16	4
19	8754	Locknut, 3/8-16 Hex	8
20	8755	Screw, 3/8-16 X 3.375 Hex Cap	2





5 G

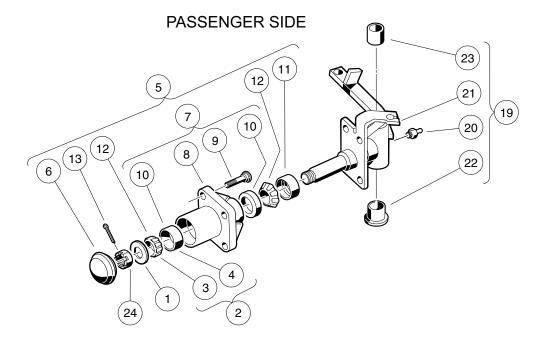

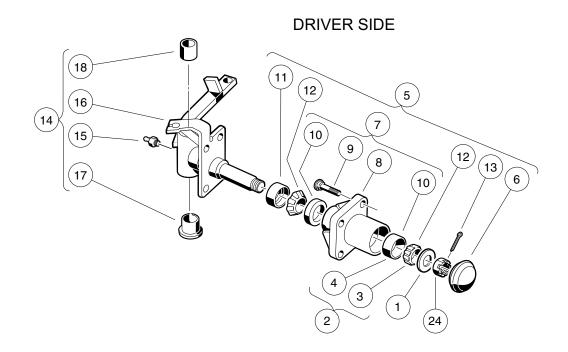








## FRONT SPINDLES AND HUBS

TEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010005	Washer, 3/4 Flat	2
2	1011393	Hub Bearing Package (includes items 3 and 4)	4
3	N/A	Bearing, Front Hub Wheel	1
4	N/A	Race, Front Hub Bearing	1
5	1011892	Hub Assembly (includes items 6 through 13)	
6	1011887	Dust Cover	1
7	N/A	Hub (includes items 8 through 10)	1
8	N/A	Front Hub	
9	N/A	50-20 Lug Stud	
10	N/A	Race, Front Hub Bearing	
11	1013135	Seal, Double Lip	
12	N/A	Bearing, Front Hub Wheel	
13	7910	Pin, 5/32 X 1.00 Cotter	
14	101876901	Spindle Assembly Left (includes items 15 through 18)	
15	1015597	Fitting, 1/4-28 Thread-Forming Grease	
16	N/A	Spindle Assembly, Left	
17	7048	Bushing, Flanged Bronze	
18	8067	Bushing, Bronze Spindle	
19	101877001	Spindle Assembly Right (includes items 20 through 23)	
20	1015597	Fitting, 1/4-28 Thread-Forming Grease	
21	N/A	Spindle Assembly, Right	
22	7048	Bushing, Flanged Bronze	
23	8067	Bushing, Bronze Spindle	
24	7840	Nut, 3/4-16 Hex Slotted	2
24	7040	Nut, 5/4-10 Hex Slotted	_
			1

E

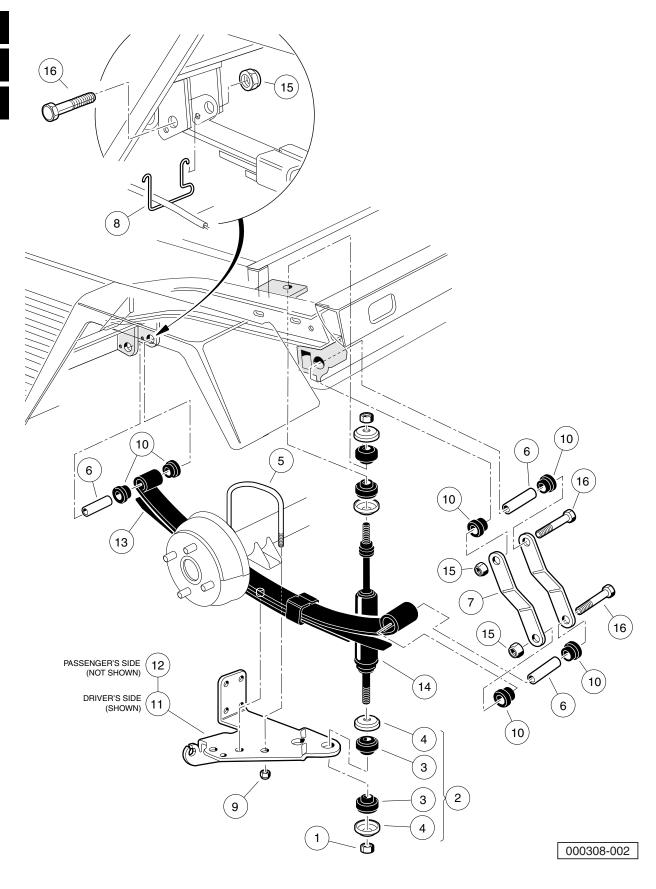






## **REAR SUSPENSION – GASOLINE VEHICLES**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010145	Nut, 3/8-24 Hex	4
2	1011415	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	N/A	Cushion, Shock Absorber	2
4	N/A	Retainer, Shock Absorber Cushion	2
5	1012180	U-Bolt	2
6	1012303	Bushing, Steel	6
7	1012304	Shackle, Rear Spring	4
8	1013207	Hanger, Brake Cable	2
9	1014555	Locknut, 7/16-14 Nylon Insert	4
10	1015583	Bushing, Urethane	12
11	101926501	Bracket, Left-Hand	1
12	101929401	Bracket, Right	1
13	102871801	Spring, Multi Leaf	2
14	103350901	Shock Absorber, Rear, Utility	2
15	8754	Locknut, 3/8-16 Hex	6
16	8755	Screw, 3/8-16 X 3.375 Hex Cap	6
		side rear suspension are identical except for the leaf spring/shock mounting plate.	

5

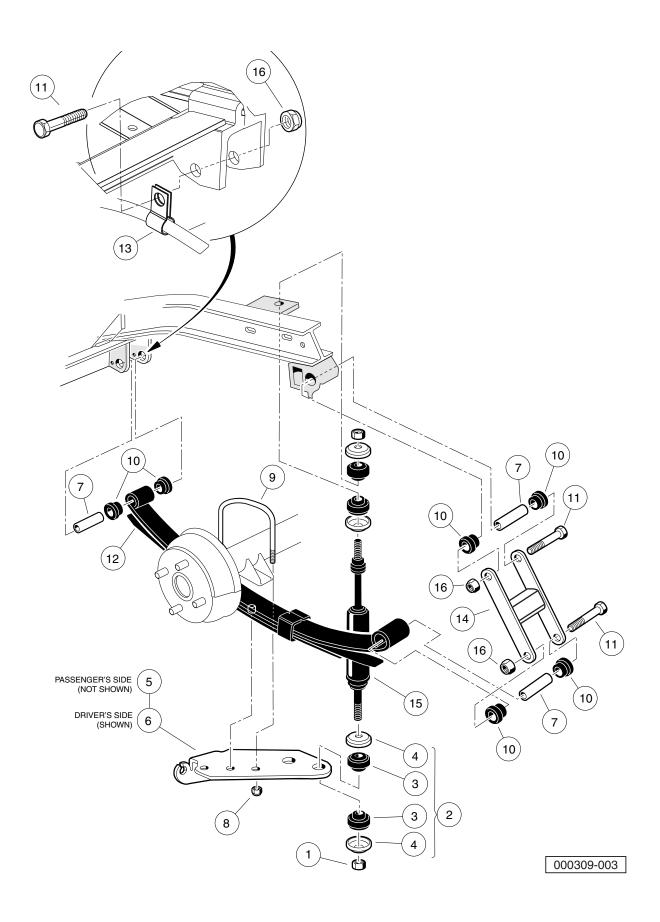








## **REAR SUSPENSION – IQ PLUS VEHICLES**

1	ITEM	PART NO.	DESCRIPTION	QTY	
2       1011415       Kit, Shock Absorber Cushion (includes items 3 and 4)         3       N/A       Cushion, Shock Absorber         4       N/A       Retainer, Shock Absorber Cushion         5       1012181       Bracket, Shock Mounting, Right (Passenger)         6       1012182       Bracket, Shock Mounting, Left (Driver)         7       1012303       Bushing, Steel         8       1014555       Locknut, 7/16-14 Nylon Insert         9       1014902       U-Bolt         10       1015583       Bushing, Urethane         11       102066201       Screw, 3/8-16 X 3.50 Hex Cap         12       102871801       Spring, Multi Leaf         13       102891101       Clamp, Cable, Brake, Sym         14       102917101       Weldment, Shackle         15       103351101       Shock, Absorber, Utility         16       8754       Locknut, 3/8-16 Hex     Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock			1 2 3 4		
3         N/A         Cushion, Shock Absorber           4         N/A         Retainer, Shock Absorber Cushion           5         1012181         Bracket, Shock Mounting, Right (Passenger)           6         1012182         Bracket, Shock Mounting, Left (Driver)           7         1012303         Bushing, Steel           8         1014555         Locknut, 7/16-14 Nylon Insert           9         1014902         U-Bolt           10         1015583         Bushing, Urethane           11         102066201         Screw, 3/8-16 X 3.50 Hex Cap           12         102871801         Spring, Multi Leaf           13         102891101         Clamp, Cable, Brake, Sym           14         102917101         Weldment, Shackle           15         103351101         Shock, Absorber, Utility           16         8754         Locknut, 3/8-16 Hex    Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock	1	1010145		4	
4         N/A         Retainer, Shock Absorber Cushion           5         1012181         Bracket, Shock Mounting, Right (Passenger)           6         1012182         Bracket, Shock Mounting, Left (Driver)           7         1012303         Bushing, Steel           8         1014555         Locknut, 7/16-14 Nylon Insert           9         1014902         U-Bolt           10         1015583         Bushing, Urethane           11         102066201         Screw, 3/8-16 X 3.50 Hex Cap           12         102871801         Spring, Multi Leaf           13         102891101         Clamp, Cable, Brake, Sym           14         102917101         Weldment, Shackle           15         103351101         Shock, Absorber, Utility           16         8754         Locknut, 3/8-16 Hex    Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock	2	1011415	Kit, Shock Absorber Cushion (includes items 3 and 4)	4	
5       1012181       Bracket, Shock Mounting, Right (Passenger)         6       1012182       Bracket, Shock Mounting, Left (Driver)         7       1012303       Bushing, Steel         8       1014555       Locknut, 7/16-14 Nylon Insert         9       1014902       U-Bolt         10       1015583       Bushing, Urethane         11       102066201       Screw, 3/8-16 X 3.50 Hex Cap         12       102871801       Spring, Multi Leaf         13       102891101       Clamp, Cable, Brake, Sym         14       102917101       Weldment, Shackle         15       103351101       Shock, Absorber, Utility         16       8754       Locknut, 3/8-16 Hex     Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock	3	N/A	Cushion, Shock Absorber	2	
6       1012182       Bracket, Shock Mounting, Left (Driver)	4	N/A	Retainer, Shock Absorber Cushion	2	
7       1012303       Bushing, Steel	5	1012181	Bracket, Shock Mounting, Right (Passenger)	1	
8       1014555       Locknut, 7/16-14 Nylon Insert	6	1012182		1	
9       1014902       U-Bolt	7	1012303		6	
10       1015583       Bushing, Urethane	8	1014555	, and the second	4	
11 102066201 Screw, 3/8-16 X 3.50 Hex Cap	9	1014902	U-Bolt	2	
12 102871801 Spring, Multi Leaf	10	1015583		12	
13 102891101 Clamp, Cable, Brake, Sym	11		Screw, 3/8-16 X 3.50 Hex Cap	6	
14 102917101 Weldment, Shackle	12	102871801	Spring, Multi Leaf	2	
15 103351101 Shock, Absorber, Utility	13	102891101		2	
16 8754 Locknut, 3/8-16 Hex	14	102917101	Weldment, Shackle	2	
Note: Only the driver-side rear suspension is shown. Parts for the passenger-side rear suspension are identical except for the leaf spring/shock	15	103351101	Shock, Absorber, Utility	2	
side rear suspension are identical except for the leaf spring/shock	16	8754	Locknut, 3/8-16 Hex	6	



5 G

E

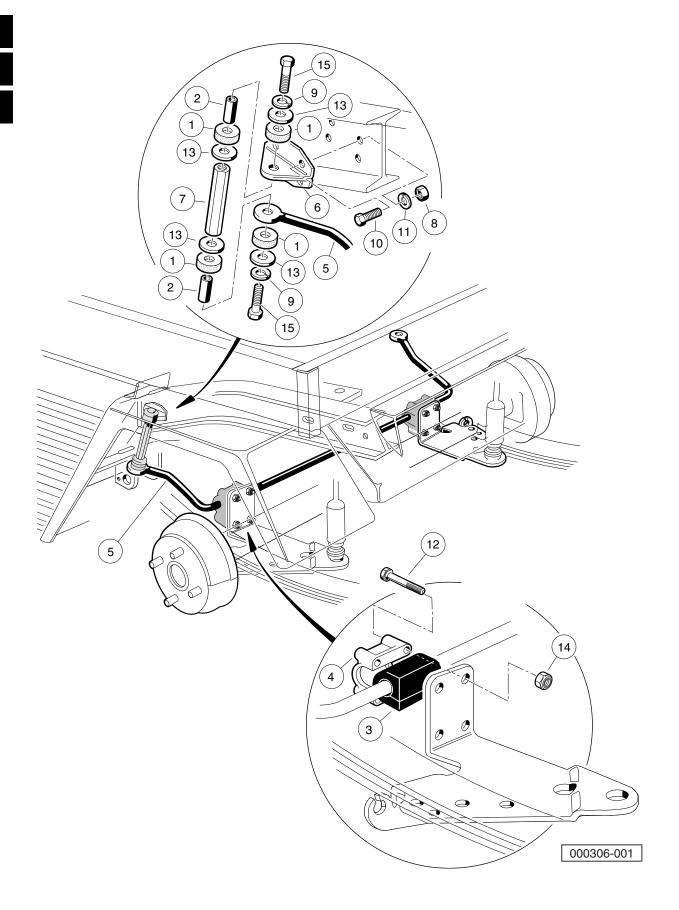





## **STABILIZER BAR – GASOLINE VEHICLES**

2       1015457       Spacer, 0.720"	ITEM	PART NO.	DESCRIPTION	QTY	
2       1015457       Spacer, 0.720"			1 2 3 4		1
3       1015613       Bushing, Stabilizer Bar	1	1015453	Compression Mount	. 8	$\  \ $
4       1015614       Support, Bushing	2	1015457	Spacer, 0.720"	. 4	
5       1015760       Stabilizer Bar	3	1015613	Bushing, Stabilizer Bar	. 2	
6       1016813       Mounting Bracket, Stabilizer Bar         7       1016814       Link, Stabilizer Bar         8       1242       Nut, 5/16-18 Hex         9       357       Washer, Lock, Hel Sp 3/8 Reg         10       7173       Screw, 5/16-18 X 0.75 Hex-Head Cap         11       7174       Lockwasher, 5/16 Split         12       7311       Screw, 1/4-20 X 2.00 Hex-Head Cap         13       808       Washer, 3/8 Type B Flat         14       8233       Locknut, 1/4-20 Nylon Insert         15       8861       Bolt, 3/8-16 X 1.75 Hex         Note: Only the driver side of the stabilizer bar is shown. Parts for the	4	1015614	Support, Bushing	. 2	
7       1016814       Link, Stabilizer Bar         8       1242       Nut, 5/16-18 Hex         9       357       Washer, Lock, Hel Sp 3/8 Reg         10       7173       Screw, 5/16-18 X 0.75 Hex-Head Cap         11       7174       Lockwasher, 5/16 Split         12       7311       Screw, 1/4-20 X 2.00 Hex-Head Cap         13       808       Washer, 3/8 Type B Flat         14       8233       Locknut, 1/4-20 Nylon Insert         15       8861       Bolt, 3/8-16 X 1.75 Hex         Note: Only the driver side of the stabilizer bar is shown. Parts for the	5	1015760	Stabilizer Bar	. 1	
8       1242       Nut, 5/16-18 Hex	6	1016813	Mounting Bracket, Stabilizer Bar	. 2	
9 357 Washer, Lock, Hel Sp 3/8 Reg	7	1016814	Link, Stabilizer Bar	. 2	
10 7173 Screw, 5/16-18 X 0.75 Hex-Head Cap	8				
11       7174       Lockwasher, 5/16 Split	9	357			
12       7311       Screw, 1/4-20 X 2.00 Hex-Head Cap         13       808       Washer, 3/8 Type B Flat         14       8233       Locknut, 1/4-20 Nylon Insert         15       8861       Bolt, 3/8-16 X 1.75 Hex         Note: Only the driver side of the stabilizer bar is shown. Parts for the	10	7173			
13	11	7174			
14 8233 Locknut, 1/4-20 Nylon Insert	12		·		
15 Bolt, 3/8-16 X 1.75 Hex	13				
Note: Only the driver side of the stabilizer bar is shown. Parts for the			·		
	15	8861	Bolt, 3/8-16 X 1.75 Hex	. 4	



HERE https://CartPros.com/f.html

5





GET STARTED


https://CartPros.com/f.html


# our search box and it will find the part you are looking for. ELECTRICAL SYSTEM – GASOLINE VEHICLES

6



6

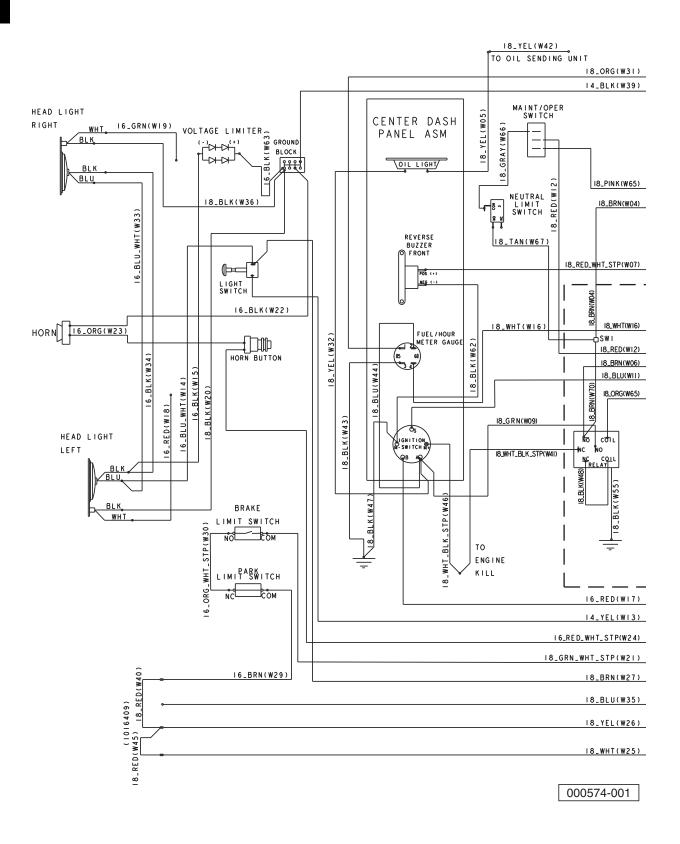

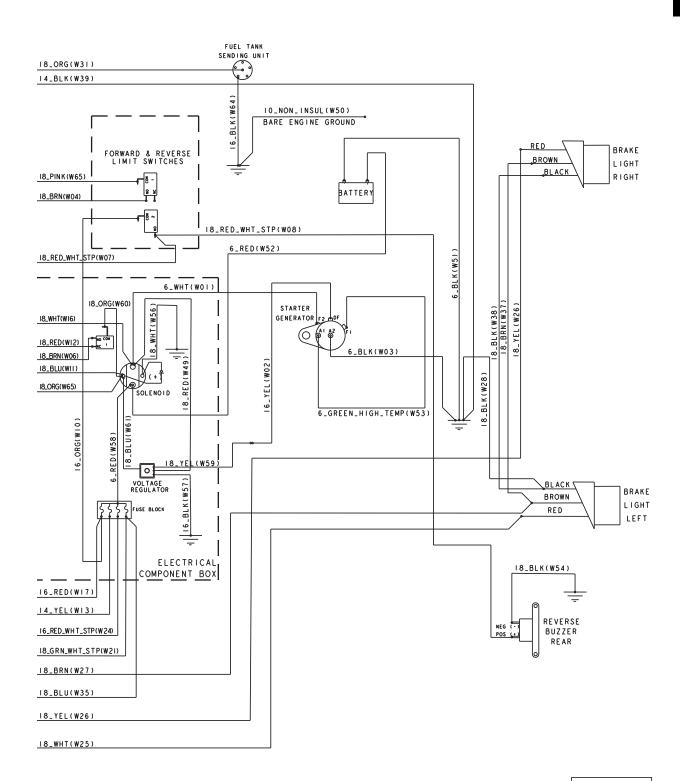



6

G

See previous two pages for illustration.








## **WIRING – GASOLINE VEHICLES**

ITEM	PART NO.	DESCRIPTION	QTY
	17		ייק
		1 2 3 4	
1	103197301	Asm, Wire Harness, Stretch, Gas	
2	103255601	Wire Harness, Hd Lght, Ca, Gas	1

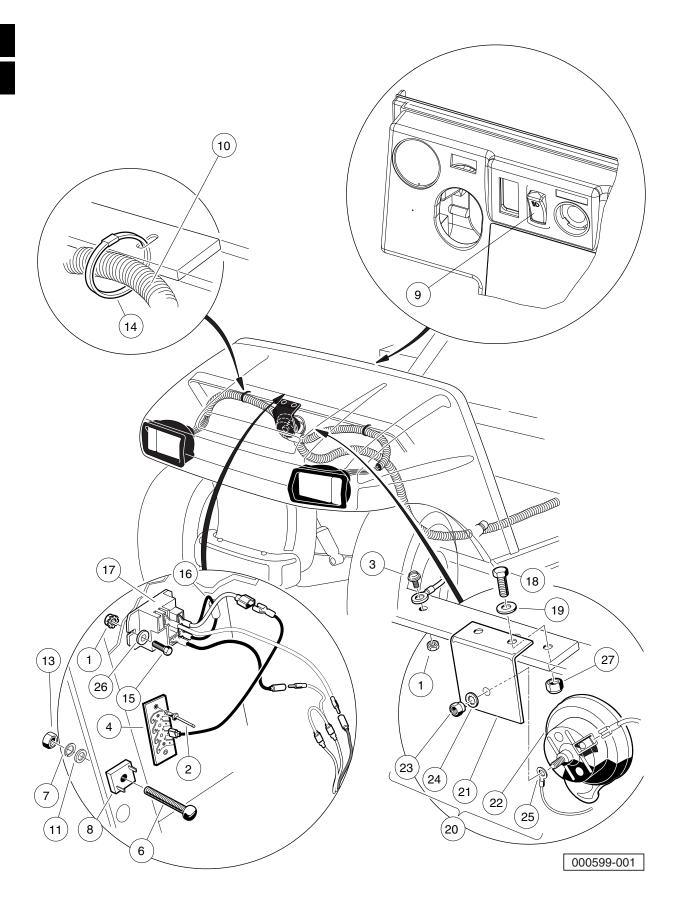








## **HEADLIGHT AND HORN ELECTRICAL COMPONENTS**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011229	Locknut, #6-32 Whiz	3
2	1013357	Rivet, 5/32 Aluminum Pop	2
3	N/A	Screw, #6-32 X 1/2 Hex Washer-Head	1
4	1016356	Terminal Block with Insulator	1
5	N/A	Headlight Instl-gas Golf (includes items 6 through 14)	1
6	1010909	Screw, #10-32 X 1.25 Rd Hd Mch	1
7	1016	Washer, #10 Split Lock	1
8	1017721	Limiter, Voltage	1
9	102869401	Switch, Rocker, Light	1
10	103255601	Wire Harness, Hd Lght, Ca, Gas	1
11	183	Washer, #10 Type A Flat	1
12	7473	Locknut, 5/16-18 Nylon Insert	1
13	7893	Nut, #10-32 Hex	1
14	8990	Tie Wrap, 8" Nylon	12
15	1017853	Screw, #6-32 X 0.75 Hex-Head Machine	2
16	101914401	Assembly, Voltage Suppressor	1
17	102199001	Relay, 12-Volt	1
18	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
19	332	Washer, 1/4 Type A Narrow Flat	2
20	4029	Horn (includes items 21 through 25)	1
21	1011825	Horn Bracket	1
22	N/A	Horn, 12-VDC	1
23	101955101	Nut, M6 Hex	1
24	7820	Washer, 5/16 Internal-Tooth	1
25	N/A	5/16 Ring Term	1
26	7591	Washer, #6 Flat	2
27	8233	Locknut, 1/4-20 Nylon Insert	2
2,	0233	Lockital, 1, 1 20 Tylott Inscre	_



6

G

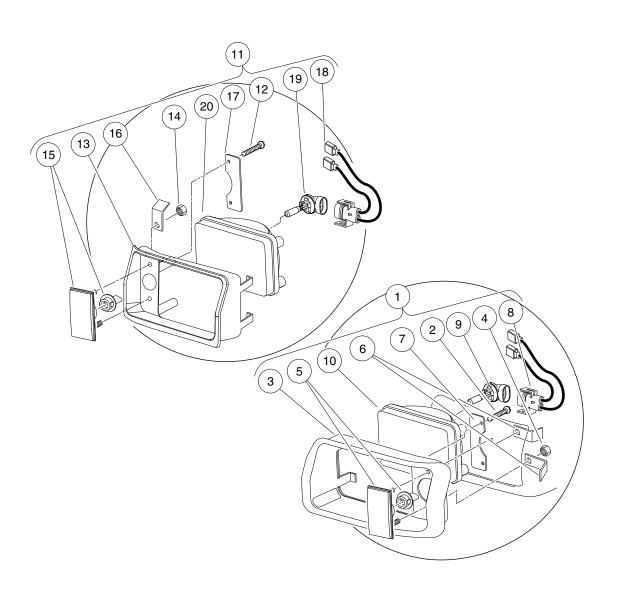








# **HEADLIGHTS**

		IILAULK	••••
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101988001	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	. 1
2	1013461	Screw, #10-16 Hex-Head Hi-Lo	. 2
3	1016880	Headlight Bezel, Left	. 1
4	1017	Nut, #10-24 Stainless-Steel Hex Machine	. 2
5	1017062	Turn Signal Lens Assy	. 1
6	1017064	Mounting Bracket	. 2
7	1017065	Retainer, Headlight	. 1
8	101987901	Connector Harness Assembly, Headlight	. 1
9	101988101	Bulb, Headlight	
10	101988201	Lens, Headlight	
11	101988002	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	
12	1013461	Screw, #10-16 Hex-Head Hi-Lo	
13	1016879	Headlight Bezel, Right	
14	1017	Nut, #10-24 Stainless-Steel Hex Machine	
15	1017062	Turn Signal Lens Assy	
16	1017064	Mounting Bracket	
17	1017065	Retainer, Headlight	
18	101987901	Connector Harness Assembly, Headlight	
19	101988101	Bulb, Headlight	
20	101988201	Lens, Headlight	



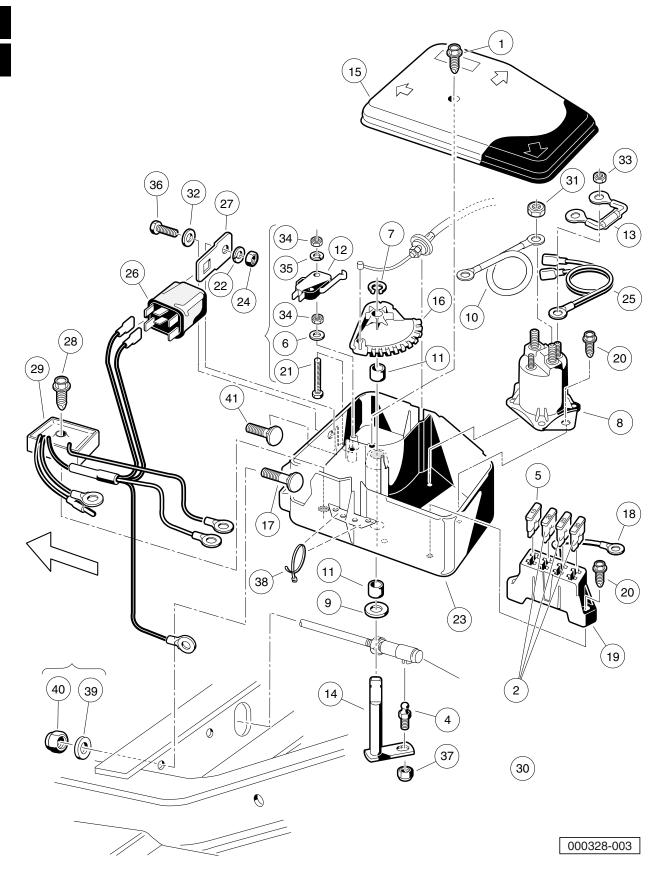






# **ELECTRICAL COMPONENT BOX**

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1015752	Screw, #12-16 X 0.625 Hi-Lo	1
2	1016423	Fuse, 20-Amp	3
3	N/A	Asm, Electrical Component Box (includes items 4 through 38)	1
4	1010954	Stud, 1/4-28 X 0.560 Ball	1
5	1012295	Fuse, 10-Amp	1
6	1012431	Washer, #4 Flat	2
7	1013589	Ring, 0.338" Internal Retaining	1
8	1013609	Solenoid, 12-Volt	1
9	1014065	Washer, 0.38" ID Delrin Flat	1
10	1014119	Wire Assembly #6 Red	1
11	1014145	Bushing, Secondary Weight, Split	2
12	1014807	Switch, Limit	1
13	1014948	Diode	1
14	1015345	Bell Crank and Shaft Assembly	1
15	1015372	Cover, Electric Box	1
16	1015373	Cam, Electric Box	1
17	1015405	Bolt, Carriage, 5/16-18 X 2.0	1
18	1015737	Wire Assy, #10 Red	1
19	1015741	Fuse Block	1
20	1015752	Screw, #12-16 X 0.625 Hi-Lo	
21	1015878	Screw, #4-40 Hex Head Machine	2
22	1016	Washer, #10 Split Lock	1
23	1016997	Electrical Component Box	1
24	1017	Nut, #10-24 Stainless-Steel Hex Machine	1
25	N/A	Wire Assembly Orange #18	1
26	1017239	Relay	1
27	1017243	Mounting Bracket, Relay	1
28	101856102	Screw, 1/4-15 X 1.50 Hi-lo Hex	1
29	102803401	Asm, Voltage Regulator Key Sta	1
30	103197301	Asm, Wire Harness, Stretch, Gas	1
31	1242	Nut, 5/16-18 Hex	2
32	183	Washer, #10 Type A Flat	1
33	7893	Nut, #10-32 Hex	2
34	8057	Nut, #4-40 Hex Machine	
35	8058	Lockwasher, #4 Helical Split	2
36	8450	Screw, #10-24 X 0.50 Hex-Head	1
37	8717	Locknut, 1/4-28 Nylon Insert	1
38	8990	Tie Wrap, 8" Nylon	3
39	1241	Washer, 5/16 Type A Flat	
40	7473	Locknut, 5/16-18 Nylon Insert	2
41	7818	Bolt, Carriage, 5/16-18 X 1.5	1





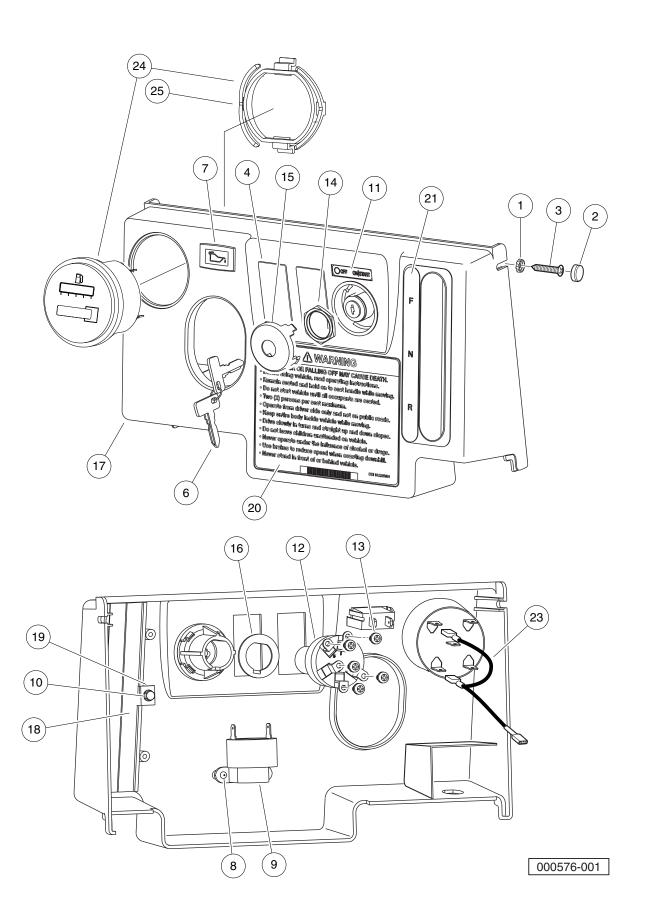






# **INSTRUMENT PANEL AND ELECTRICAL COMPONENTS**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Washer, #10 Pan-Head Screw	2
2	1013494	Cover, Screw Head	2
3	1015528	Screw, #10 x 1-1/4 Phillips Head	2
4	103180101	Cover, Hole, Switch, Rocker	2
5	N/A	Asm, Dash, Gas, Key Start (Instrument Panel) (includes items 6 through 22)	1
6	1012505	Keys (set of 2)	1
7	1016630	Light, Oil	1
8	1016849	Screw, #4-24 X 0.33 Pan-Head Machine	2
9	1016851	Buzzer, Reverse (9-48 VDC)	1
10	101804301	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
11	101825102	Decal, Off/On/Start	1
12	101826401	Key Switch, 12-Volt, Off/On/Start	1
13	101830601	Screw and Washer Assembly	5
14	101830701	Nut, Key Switch	
15	101834502	Cap, Black Key Switch	1
16	101851101	Washer, Key Switch	1
17	102977001	Panel, Dash, Center, Gas (Instrument Panel)	
18	103199001	Brush, Closeout, FNR	2
19	103199101	Washer, Retaining, Brush, FNR	
20	103205401	Decal, Warning, Rollover, Utl	
21	103210201	Decal, Forward/Reverse, Gas	
22	103390801	Kit, F-h Replmnt Utl Pre2007 (includes items 23 through 26)	
23	103348501	Asm Wire Meter F-h Jumper	
24	103348601	Gauge, Fuel-hour, sep Gnd, utl (includes item 25)	
25	103348201	Clip, Meter, Round	
26	N/A	Instr, F-h Replmnt Pre2007	1







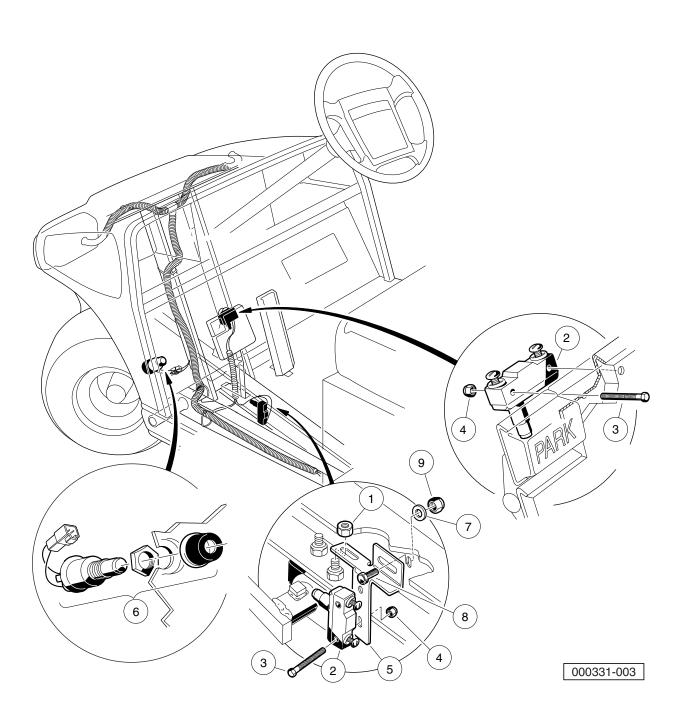








# **HORN AND BRAKE SWITCHES**

		HORN AND BRAKE SWITC	
ITEM	PART NO.	DESCRIPTION	Q
		1 2 3 4	
1	1011280	Locknut, 5/16-18	
2	1011439	Switch, Limit	
3	1011557	Screw, #6-32 X 1.00 Hex-Head Machine	4
4	101932201	Locknut, #6-32 Nylon	
5	101957101	Bracket, Brake Light Switch	
6	101969701	Horn Button and Wire Assembly	
7	1241	Washer, 5/16 Type A Flat	
8	7173	Screw, 5/16-18 X 0.75 Hex-Head Cap	
9	7473	Locknut, 5/16-18 Nylon Insert	



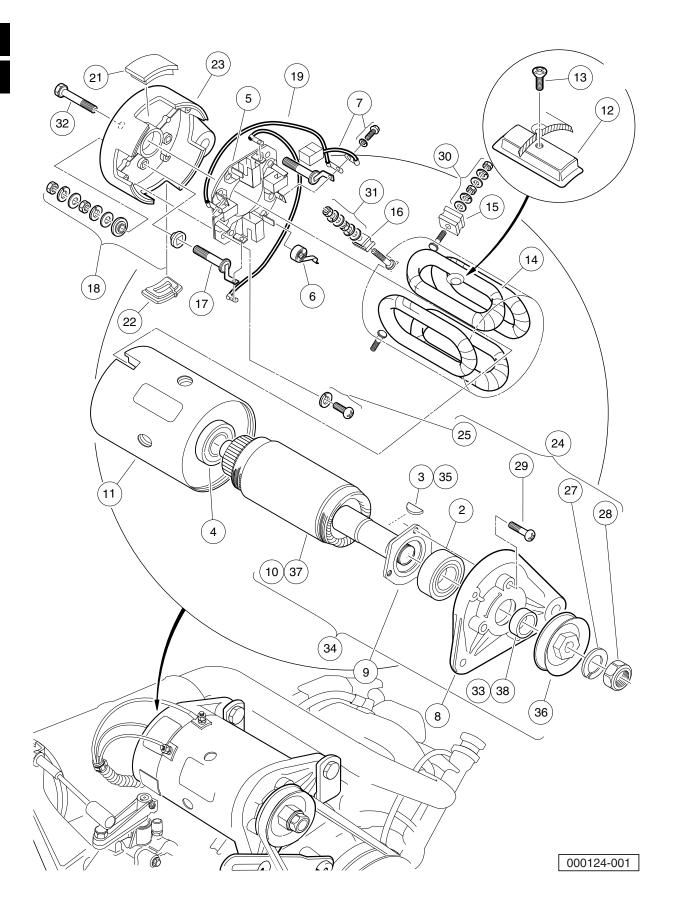






# STARTER/GENERATOR ASSEMBLY

ITEM	PART NO.	DESCRIPTION	(
		1 2 3 4	
1	101833701	Starter/Generator (cw) (includes items 2 through 33)	
2	1013001	Bearing, Output Shaft Ball	
3	1013003	Key, Starter/Generator	
4	1013005	Bearing, Ball	
5	101301102	Brush Holder Assembly (cw) (includes item 6)	
6	101878101	Brush Spring Set	
7	101869302	Brush and Screw Set (cw)	
8	101874901	Front Bracket	
9	101875001	Retainer	
10	N/A	Armature	
11	101875201	Field Coil Housing	
12	101875301	Pole Set	
13	101875401	Screw Set	
14	101875501	Field Stator Coil Assembly	
15	101875601	F Insulator Set	
16	101875701	DF Insulator	
17	101875802	A Connector (cw)	
18	101876001	Screw and Mold Assembly	
19	101876202	Brush Connector Assembly (cw)	
20	101876301	Cover Set (includes items 21 and 22)	
21	N/A	Brush Inspection Port Cover	
22	N/A	Brush Port Cover w/Drain	
23	101876402	Rear Bracket (cw)	
24	101876501	Nut and Screw Set (includes items 25 through 29)	
25	101896501	Brush Holder Asm Screw	
26	N/A	Washer, M5 Flat	
27	N/A	Washer, M14 Lock	
28	N/A	Nut, Hex, M14 x 2	
29	N/A	Screw, M5 x 0.8 x 18mm	
30	101877601	Nut and Washer Set	
31	101877701	Nut and Washer Set	
32	101879001	Through Bolt Set	
33	101939901	Spacer	
34	101875102	Armature Asm Conversion Kit (includes items 35 through 38)	
35	1013003	Key, Starter/Generator	
36	1014289	Pulley, Starter/Generator	
37	N/A	Armature	
38	101939901	Spacer	
		Note: Item 36 will ONLY fit Model G425419 Starter/Generator.	





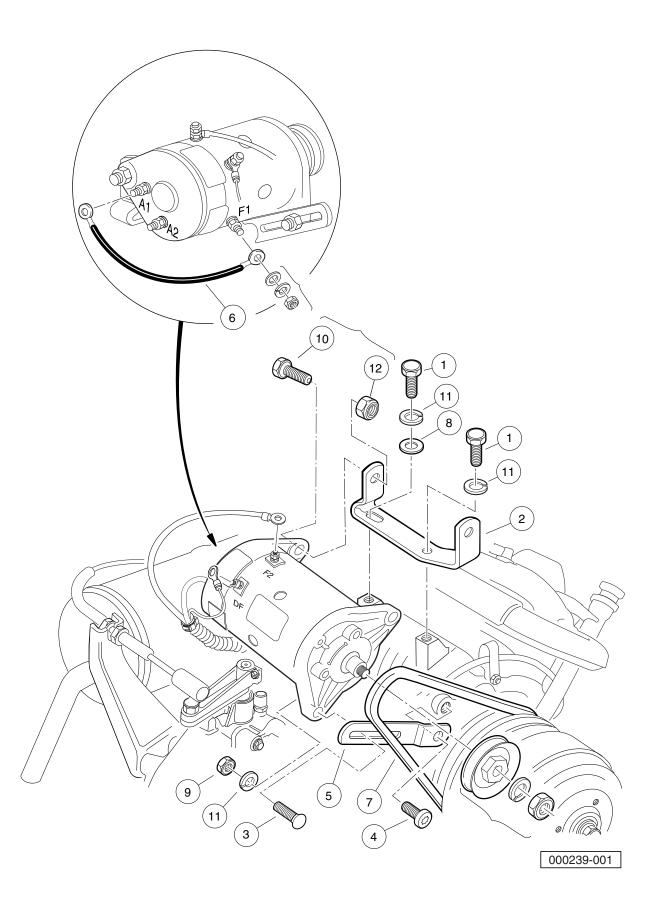








# **FE350 STARTER/GENERATOR MOUNTING**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012830	Screw, M8-125 X 22 Hex-Head	2
2	101524002	Bracket, Starter/Generator Mounting	1
3	1015932	Bolt, Carriage, 5/16-18	1
4	1016074	Screw, M8-1.25 X 18mm Torx	1
5	1016883	Bracket, Starter/Generator Adjustment	1
6	101837301	Wire Assy, #6 Green	1
7	101916701	V-Belt	1
8	1241	Washer, 5/16 Type A Flat	1
9	1242	Nut, 5/16-18 Hex	1
10	705	Screw, Cap-hex Hd 3/8-16x1.25	2
11	7174	Lockwasher, 5/16 Split	3
12	8754	Locknut, 3/8-16 Hex	2





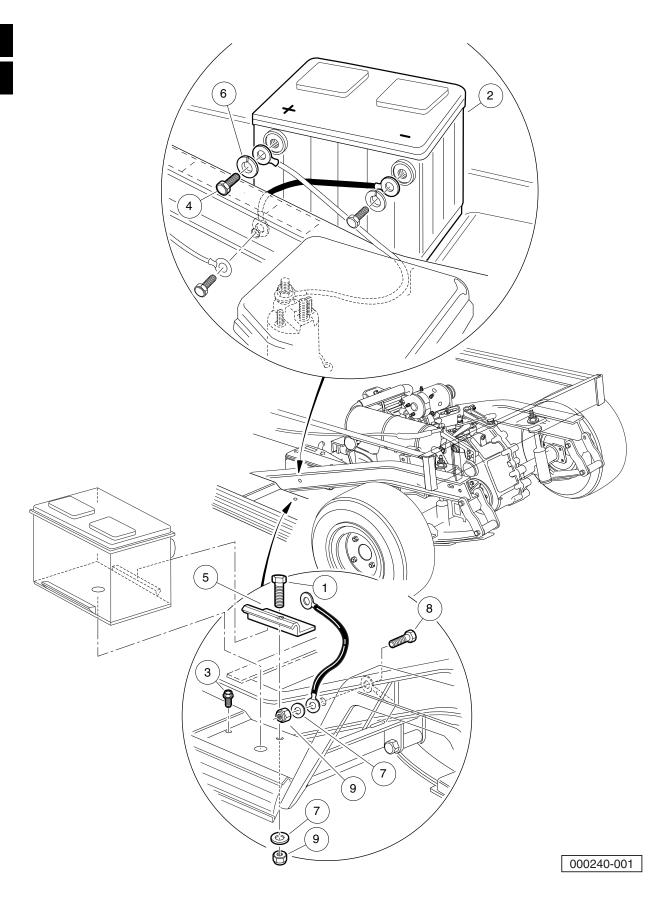






# **BATTERY – GASOLINE VEHICLE**

		DATTENT - GASOLINE VEHI	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010934	Screw, 5/16-18 X 1.00 Hex Cap	1
2	1012328	Battery, 12-Volt	
3	1014288	Screw, 5/16-18 X 0.75 Thread-Forming	
4	1014375	Screw, 3/8-16 X 0.50 Stainless Steel Hex-Head	
5	101898001	Clamp, Battery	
6	102355301	Lockwasher, 3/8 Stainless Stl	
7	1241	Washer, 5/16 Type A Flat	2
8	7173	Screw, 5/16-18 X 0.75 Hex-Head Cap	
9	7473	Locknut, 5/16-18 Nylon Insert	
1	I		1



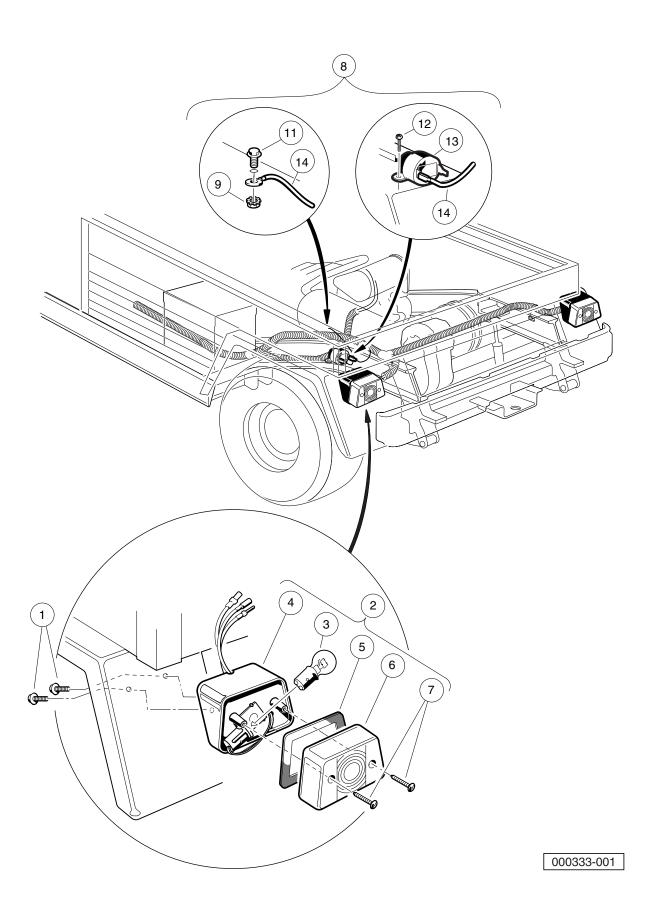








# **ELECTRICAL COMPONENTS, REAR BODY**

J	PART NO.	DESCRIPTION
		1 2 3 4
ı	1015752	Screw, #12-16 X 0.625 Hi-Lo
2	1016717	Light Assembly, Stop/Taillight (includes items 3 through 7)
;	1011582	Taillight Bulb
1	N/A	Housing, Taillight
5	N/A	Gasket, Taillight
5	N/A	Lens, Taillight
7	N/A	Screw, Taillight Lens
3	1016859	Kit, Reverse Buzzer (includes items 9 through 17)
9	1011229	Locknut, #6-32 Whiz
0	1012431	Washer, #4 Flat
1	N/A	Screw, #6-32 X 1/2 Hex Washer-Head
2	1016849	Screw, #4-24 X 0.33 Pan-Head Machine
3	1016851	Buzzer, Reverse (9-48 VDC)
4	N/A	Wire Assembly Black #18
5	8056	Screw, #4-40 X 0.75 Round-Head Machine
6	8057	Nut, #4-40 Hex Machine
7	8058	Lockwasher, #4 Helical Split



6

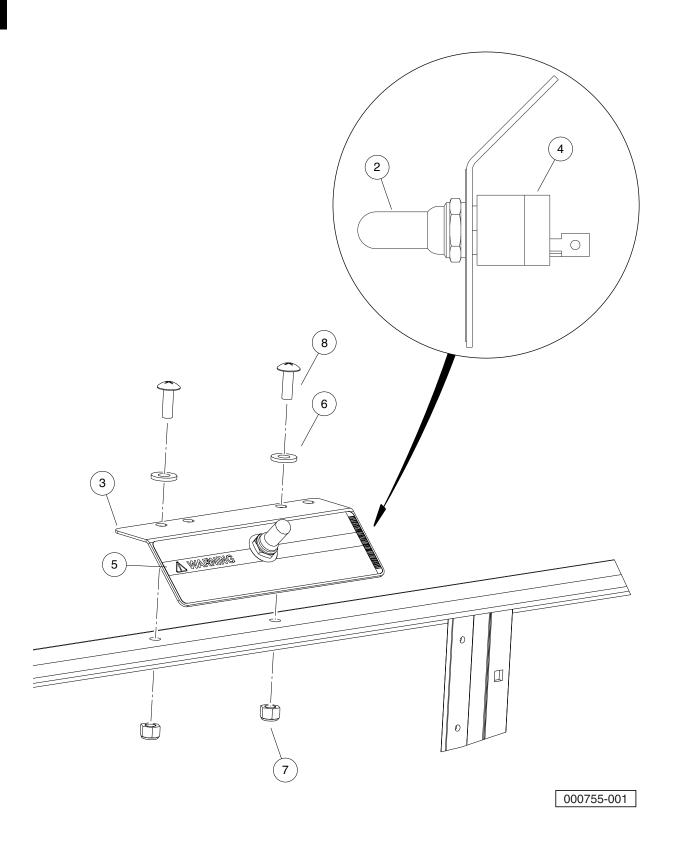







# **OPERATION AND MAINTENANCE SWITCH**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Switch, Operation/Maintenance (includes items 2 through 5)	1
2	101908401	Boot, Switch	1
3	101922501	Bracket, Tow/Run Switch Mounting	
4	103198401	Switch, Toggle, SPDT	
5	103205501	Decal, Run/Service Switch	
6	332	Washer, 1/4 Type A Narrow Flat	
7	8233	Locknut, 1/4-20 Nylon Insert	2
8	8248	Screw, 1/4-20 X 0.75 Truss-Head Machine	2





6








# **FE350 ENGINE WITH ACR**





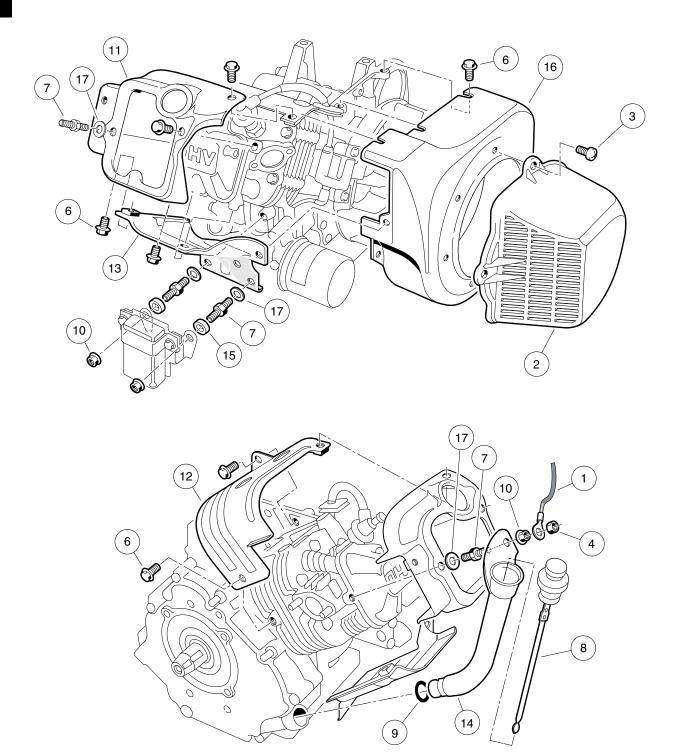







CartPros directs you to the right part using the part numbers from this manual. Enter the part number into

https://CartPros.com/f.html

### our search box and it will find the part you are looking for. WITH I CONTRESSION RELEASE) – SHROUDS AND BRACKETS

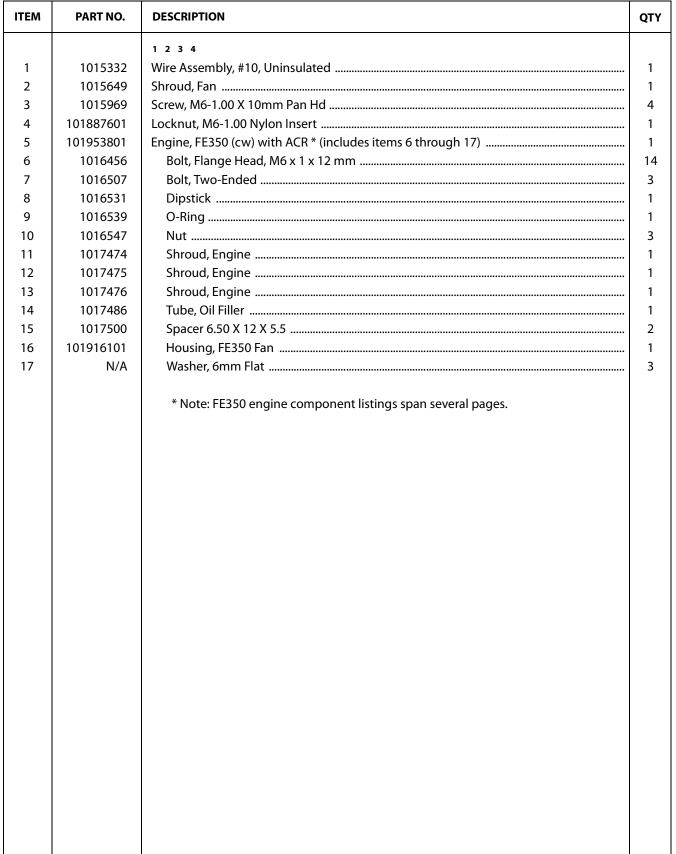



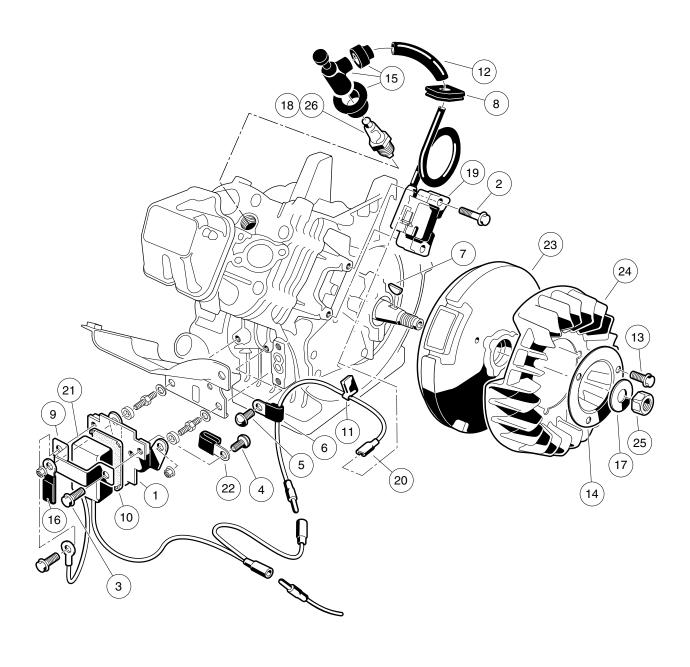








# **AS11 FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL**

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1016445	Bracket, RPM Limiter	1
2	1016455	Bolt, Flange Head	2
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2
4	1016497	Screw, Pan WP Cross	1
5	1016544	Screw	1
6	1016561	Clamp	1
7	1016562	Key	1
8	1016578	Grommet	1
9	1016579	Band, RPM Limiter Mount	1
10	1016586	Damper, RPM Limiter	1
11	1016587	Clamp	1
12	1016588	Tube, 7mm X 10mm X 70mm	1
13	1017448	Bolt, Flanged	3
14	1017455	Plate, Flywheel Fan	1
15	1017463	Cap Asm Plug	1
16	1017468	Clamp	1
17	1017490	Washer, Flat	1
18	101881101	Spark Plug, OHV (Autolite)	1
19	101909201	Coil, Ignition	1
20	101909301	Lead Wire Assy	1
21	101909401	Limiter, RPM	1
22	N/A	Clamp, Steel	1
23	101916201	Flywheel	1
24	101916301	Fan (cw)	1
25	N/A	Nut, Hex, 18 mm Fine	1
26	AM10724	Spark Plug, OHV (NGK)	1

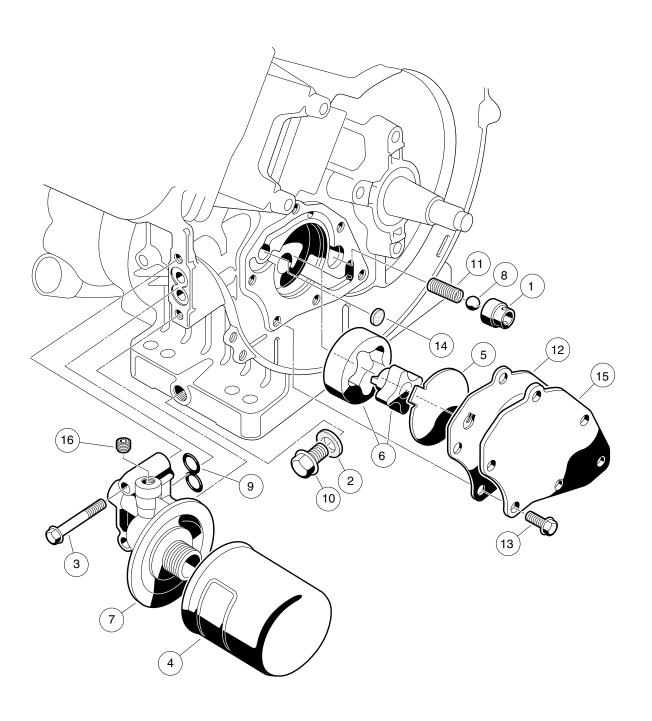








# **FE350 ENGINE - OIL CIRCULATION**

	<del></del>	1		<b>-</b>
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	1016429	Seat, Value Oil Press Relief	1	
2	1016432	Gasket, Drain Plug	1	
3	1016457	Bolt, Flange Head	2	
4	1016467	Filter, Oil	1	
5	1016473	Plate, Oil Pump	1	
6	101648203	Oil Pump And Rotor	1	
7	1016502	Bracket, Oil Filter Mount	1	
8	1016537	Ball, Steel, Press, Relief	1	
9	1016570	O-Ring	1	
10	1016576	Plug, Drain	1	
11	1016581	Spring	1	
12	1017442	Gasket	1	
13	1017456	Bolt, Flanged	6	
14	1017458	Filter	1	
15	1017460	Cover, Pump	1	
16	1017507	Plug	2	
1			Ī	1



7

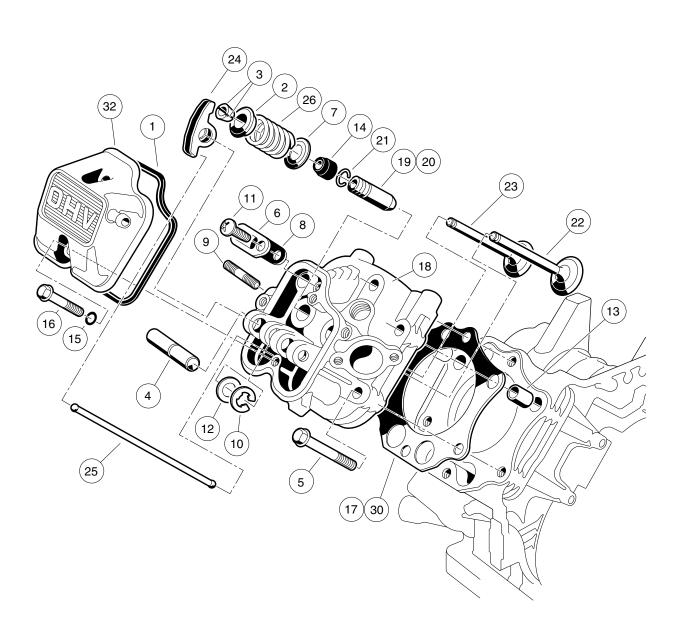








# **AS11 FE350 ENGINE – CYLINDER HEAD**

1 2 3 4  1 1016436 Gasket, Rocker Case
2     1016449     Retainer, Valve Spring       3     1016450     Collet       4     1016452     Shaft, Rocker       5     1016458     Bolt, Flange Head, M8 x 1.25 x 45 mm       6     1016474     Plate       7     1016479     Seat, Spring       8     1016483     Valve       9     1016489     Stud, Two-Ended, M8-1.25       10     1016517     Circlip, Type-E       11     1016544     Screw       12     1016549     Washer, 12.1x19x1.8       13     1016563     Pin       14     1016566     Seal, Oil       15     1016569     O-Ring       16     1016583     Bolt, 6x35       17     1017434     Gasket, Head       18     1017435     Assembly, Cylinder Head, FE350 (includes items 19 through 21)       19     1016518     Guide, Valve, Exhaust       20     1016519     Guide, Valve, Exhaust       21     1016560     Snap Ring       22     1017444     Valve, Exhaust       24     1017445     Arm, Rocker       25     1017454     Arm, Rocker       26     1017473     Spring, Engine Valve       27     102304801     Kit, Gasket, FE350 (includes items 28 throug
3       1016450       Collet         4       1016452       Shaft, Rocker         5       1016458       Bolt, Flange Head, M8 x 1.25 x 45 mm         6       1016474       Plate         7       1016479       Seat, Spring         8       1016483       Valve         9       1016489       Stud, Two-Ended, M8-1.25         10       1016517       Circlip, Type-E         5       Screw       Screw         12       1016549       Washer, 12.1x19x1.8         13       1016563       Pin         14       1016566       Seal, Oil         15       1016569       O-Ring         16       1016583       Bolt, 6x35         17       1017434       Gasket, Head         18       1017435       Assembly, Cylinder Head, FE350 (includes items 19 through 21)         19       1016518       Guide, Valve, Exhaust         20       1016519       Guide, Valve, Exhaust         21       1016560       Sap Ring         22       1017444       Valve, Intake         23       1017445       Nacker         24       1017445       Arm, Rocker         25       1017473
4       1016452       Shaft, Rocker         5       1016458       Bolt, Flange Head, M8 x 1.25 x 45 mm         6       1016474       Plate         7       1016479       Seat, Spring         8       1016483       Valve         9       1016489       Stud, Two-Ended, M8-1.25         10       1016517       Circlip, Type-E         11       1016544       Screw         12       1016549       Washer, 12.1x19x1.8         13       1016563       Pin         14       1016566       Seal, Oil         15       1016569       O-Ring         16       1016583       Bolt, 6x35         17       1017434       Gasket, Head         18       1017435       Assembly, Cylinder Head, FE350 (includes items 19 through 21)         19       1016518       Guide, Valve, Exhaust         20       1016519       Guide, Valve         21       1016560       Snap Ring         22       1017444       Valve, Intake         23       1017445       Valve, Exhaust         24       1017446       Arm, Rocker         25       1017473       Spring, Engline Valve         26
5     1016458     Bolt, Flange Head, M8 x 1.25 x 45 mm       6     1016474     Plate       7     1016479     Seat, Spring       8     1016483     Valve       9     1016489     Stud, Two-Ended, M8-1.25       10     1016517     Circlip, Type-E       11     1016544     Screw       12     1016549     Washer, 12.1x19x1.8       13     1016563     Pin       14     1016566     Seal, Oil       15     1016569     O-Ring       16     1016583     Bolt, 6x35       17     1017434     Gasket, Head       18     1017435     Assembly, Cylinder Head, FE350 (includes items 19 through 21)       19     1016518     Guide, Valve, Exhaust       20     1016519     Guide, Valve       21     1016500     Snap Ring       22     1017444     Valve, Intake       23     1017445     Valve, Exhaust       24     1017446     Arm, Rocker       25     1017447     Spring, Engine Valve       26     1017473     Spring, Engine Valve       27     102304801     Kit, Gasket, FE350 (includes items 28 through 31)       28     1016440     Gasket, Engine to Insulator
6       1016474       Plate         7       1016479       Seat, Spring         8       1016483       Valve         9       1016489       Stud, Two-Ended, M8-1.25         10       1016517       Circlip, Type-E         11       1016544       Screw         12       1016549       Washer, 12.1x19x1.8         13       1016563       Pin         14       1016566       Seal, Oil         15       1016569       O-Ring         16       1016583       Bolt, 6x35         17       1017434       Gasket, Head         18       1017435       Assembly, Cylinder Head, FE350 (includes items 19 through 21)         19       1016518       Guide, Valve, Exhaust         20       1016519       Guide, Valve         21       1016560       Snap Ring         22       1017444       Valve, Intake         23       1017445       Valve, Exhaust         24       1017446       Arm, Rocker         25       1017454       Rod, Push         26       1017473       Spring, Engine Valve         27       102304801       Kit, Gasket, Engine to Insulator
7       1016479       Seat, Spring         8       1016483       Valve         9       1016489       Stud, Two-Ended, M8-1.25         10       1016517       Circlip, Type-E         11       1016544       Screw         12       1016549       Washer, 12.1x19x1.8         13       1016563       Pin         14       1016566       Seal, Oil         15       1016569       O-Ring         16       1016583       Bolt, 6x35         17       1017434       Gasket, Head         18       1017435       Assembly, Cylinder Head, FE350 (includes items 19 through 21)         19       1016518       Guide, Valve, Exhaust         20       1016519       Guide, Valve, Exhaust         21       1016560       Snap Ring         22       1017444       Valve, Intake         23       1017445       Valve, Exhaust         24       1017446       Arm, Rocker         25       1017454       Rod, Push         26       1017473       Spring, Engine Valve         27       102304801       Kit, Gasket, FE350 (includes items 28 through 31)         28       1016440       Gasket, Engine to Insulator
8       1016483       Valve         9       1016489       Stud, Two-Ended, M8-1.25         10       1016517       Circlip, Type-E         11       1016544       Screw         12       1016549       Washer, 12.1x19x1.8         13       1016563       Pin         14       1016566       Seal, Oil         15       1016569       O-Ring         16       1016583       Bolt, 6x35         17       1017434       Gasket, Head         18       1017435       Assembly, Cylinder Head, FE350 (includes items 19 through 21)         19       1016518       Guide, Valve, Exhaust         20       1016519       Guide, Valve         21       1016560       Snap Ring         22       1017444       Valve, Intake         23       1017445       Valve, Exhaust         24       1017446       Arm, Rocker         25       1017454       Rod, Push         26       1017473       Spring, Engine Valve         27       102304801       Kit, Gasket, FE350 (includes items 28 through 31)         28       1016440       Gasket, Engine to Insulator
9
10       1016517       Circlip, Type-E         11       1016544       Screw         12       1016549       Washer, 12.1x19x1.8         13       1016563       Pin         14       1016566       Seal, Oil         15       1016569       O-Ring         16       1016583       Bolt, 6x35         17       1017434       Gasket, Head         18       1017435       Assembly, Cylinder Head, FE350 (includes items 19 through 21)         19       1016518       Guide, Valve, Exhaust         20       1016519       Guide, Valve         21       1016560       Snap Ring         22       1017444       Valve, Intake         23       1017445       Valve, Exhaust         24       1017446       Arm, Rocker         25       1017454       Rod, Push         26       1017473       Spring, Engine Valve         27       102304801       Kit, Gasket, FE350 (includes items 28 through 31)         28       1016440       Gasket, Engine to Insulator
11       1016544       Screw         12       1016549       Washer, 12.1x19x1.8         13       1016563       Pin         14       1016566       Seal, Oil         15       1016569       O-Ring         16       1016583       Bolt, 6x35         17       1017434       Gasket, Head         18       1017435       Assembly, Cylinder Head, FE350 (includes items 19 through 21)         19       1016518       Guide, Valve, Exhaust         20       1016519       Guide, Valve         21       1016560       Snap Ring         22       1017444       Valve, Intake         23       1017445       Valve, Exhaust         24       1017446       Arm, Rocker         25       1017454       Rod, Push         26       1017473       Spring, Engine Valve         27       102304801       Kit, Gasket, FE350 (includes items 28 through 31)         28       1016440       Gasket, Engine to Insulator
12     1016549     Washer, 12.1x19x1.8       13     1016563     Pin       14     1016566     Seal, Oil       15     1016569     O-Ring       16     1016583     Bolt, 6x35       17     1017434     Gasket, Head       18     1017435     Assembly, Cylinder Head, FE350 (includes items 19 through 21)       19     1016518     Guide, Valve, Exhaust       20     1016519     Guide, Valve       21     1016560     Snap Ring       22     1017444     Valve, Intake       23     1017445     Valve, Exhaust       24     1017446     Arm, Rocker       25     1017454     Rod, Push       26     1017473     Spring, Engine Valve       27     102304801     Kit, Gasket, FE350 (includes items 28 through 31)       28     1016440     Gasket, Engine to Insulator
13       1016563       Pin
14       1016566       Seal, Oil
15       1016569       O-Ring
16       1016583       Bolt, 6x35
17       1017434       Gasket, Head
18       1017435       Assembly, Cylinder Head, FE350 (includes items 19 through 21)         19       1016518       Guide, Valve, Exhaust         20       1016519       Guide, Valve         21       1016560       Snap Ring         22       1017444       Valve, Intake         23       1017445       Valve, Exhaust         24       1017446       Arm, Rocker         25       1017454       Rod, Push         26       1017473       Spring, Engine Valve         27       102304801       Kit, Gasket, FE350 (includes items 28 through 31)         28       1016440       Gasket, Engine to Insulator
19       1016518       Guide, Valve, Exhaust         20       1016519       Guide, Valve         21       1016560       Snap Ring         22       1017444       Valve, Intake         23       1017445       Valve, Exhaust         24       1017446       Arm, Rocker         25       1017454       Rod, Push         26       1017473       Spring, Engine Valve         27       102304801       Kit, Gasket, FE350 (includes items 28 through 31)         28       1016440       Gasket, Engine to Insulator
20     1016519     Guide, Valve       21     1016560     Snap Ring       22     1017444     Valve, Intake       23     1017445     Valve, Exhaust       24     1017446     Arm, Rocker       25     1017454     Rod, Push       26     1017473     Spring, Engine Valve       27     102304801     Kit, Gasket, FE350 (includes items 28 through 31)       28     1016440     Gasket, Engine to Insulator
21       1016560       Snap Ring
22       1017444       Valve, Intake
23       1017445       Valve, Exhaust
24       1017446       Arm, Rocker
25       1017454       Rod, Push
26       1017473       Spring, Engine Valve
27       102304801       Kit, Gasket, FE350 (includes items 28 through 31)         28       1016440       Gasket, Engine to Insulator
28 1016440 Gasket, Engine to Insulator
30 1017434 Gasket, Head
31 1017443 Gasket, Crankcase Cover
32 102753401 Case, Rocker -w/o Logo Fe290
Note: Item 28 is not a component of the FE350 engine.



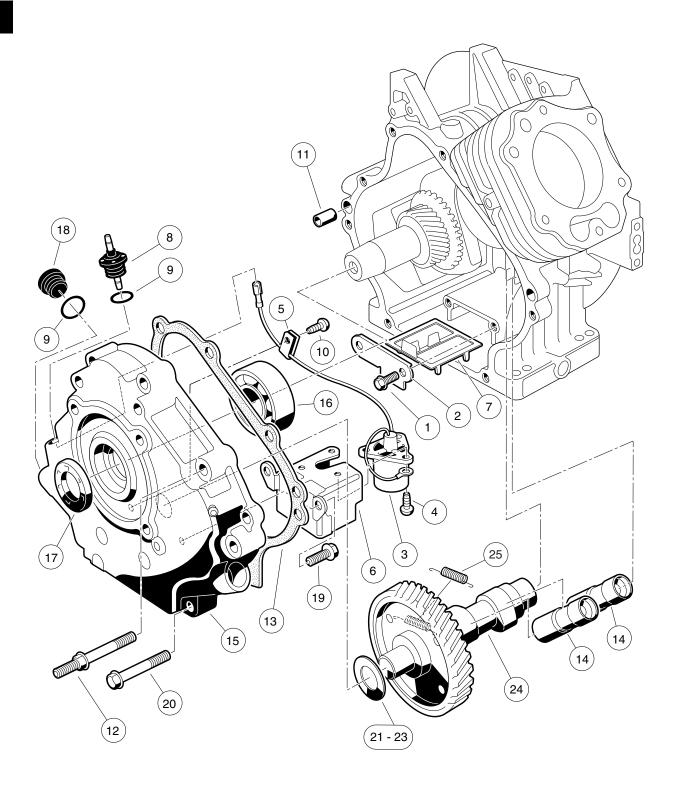




# https://CartPros.com/f.html AIVIJIIAFT, AND OIL SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016454	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
2	1016472	Plate, Oil Filter Screen	1
3	1016494	Sensor, Oil Level	1
4	1016496	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
5	1016506	Clamp	1
6	1016510	Bracket, Switch, Oil Level	1
7	1016521	Screen, Oil Filter	1
8	1016535	Connector, Cord	1
9	1016538	O-Ring	2
10	1016544	Screw	1
11	1016564	Pin	2
12	1016584	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
13	1017443	Gasket, Crankcase Cover	1
14	1017447	Adjuster, Lash	2
15	1017472	Cover Crankcase	1
16	1017487	Bearing, Ball	1
17	1017504	Seal, Oil	1
18	1017508	Plug	1
19	1017513	Bolt	2
20	1017514	Screw, M8-1.25 X 45mm Hex	6
21	101751801	Shim, 0.3	A/R
22	101751802	Shim, 0.4	A/R
23	101751803	Shim, 0.5	A/R
24	102271601	Camshaft, FE350/FE400 with ACR, 44-tooth (includes item 25)	1
25	1017511	Spring	1



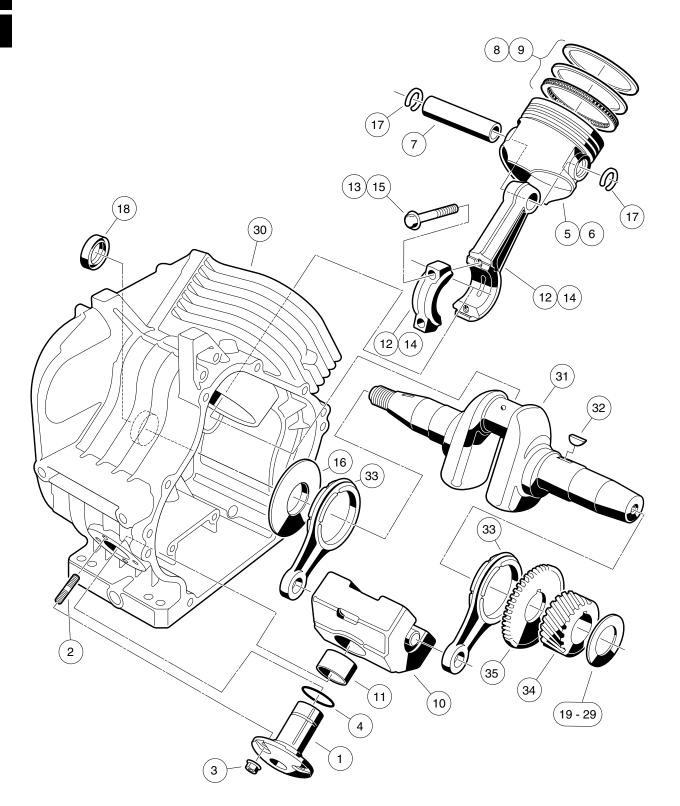








# **AS11 FE350 ENGINE – CRANKCASE AND CRANKSHAFT**

	PART NO.	DESCRIPTION
		1 2 3 4
1	1016470	Shaft, Guide, Counterbalance
2	1016541	Stud, 6x14
3	1016547	Nut
4	1016571	O-Ring
5	101744901	Piston, Standard
6	101744902	Piston, 0.50 mm Oversize
7	1017450	Pin, Piston
8	101745101	Ring Set, Standard Piston
9	101745102	Ring Set, Piston, 0.50 mm Oversize
10	1017453	Weight (includes item 11)
11	1017510	Bearing, Plain
12	101745701	Asm, Con. Rod Std (includes item 13)
13	1017512	Bolt
14	101745702	Rod Assembly Connnecting Rod 0.5mm (includes item 15)
15	1017512	Bolt
16	1017501	Spacer
17	1017502	Snap Ring
18	1017503	Seal, Oil
19	101773301	Shim, Crankshaft, 1.18mm
20	101773302	Shim, Crankshaft, 1.25mm
21	101773303	Shim, Crankshaft, 1.32mm
22	101773304	Shim, Crankshaft, 1.39mm
23	101773305	Shim, Crankshaft, 1.46mm
24	101773306	Shim, Crankshaft, 1.53mm
25	101773307	Shim, Crankshaft, 1.60mm
26	101773308	Shim, Crankshaft, 1.67mm
27	101773309	Shim, Crankshaft, 1.74mm
28	101773310	Shim, Crankshaft, 1.11mm
29	101773311	Shim, Crankshaft, 1.81mm
30	101916001	Crankcase Complete, FE350 (cw)
31	102430901	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 32 through 35)
32	1016562	Key
33	1017471	Rod
34	N/A	Gear, Helical
35	N/A	Gear, Spur



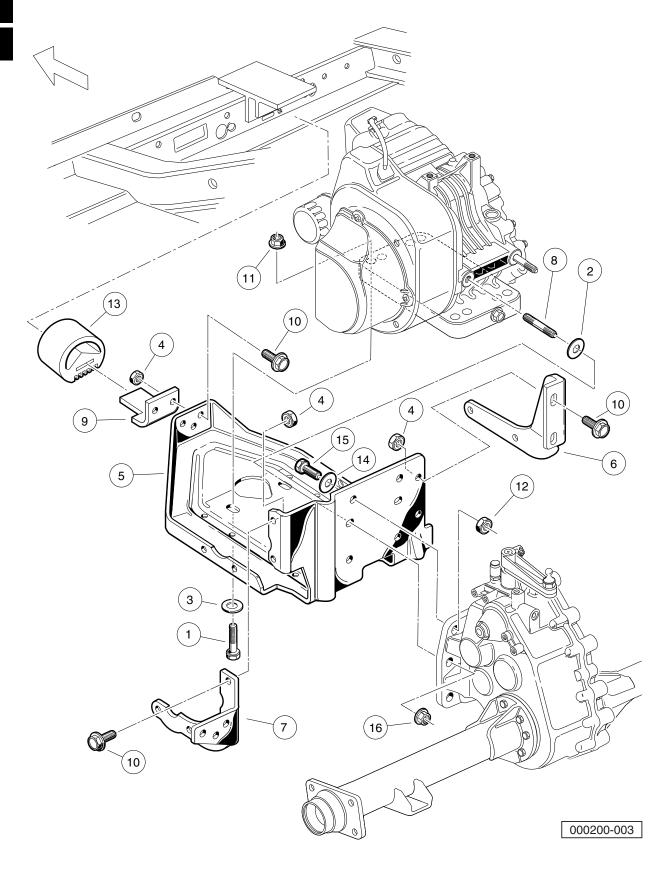







# **FE350 ENGINE MOUNTING**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010577	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	1011697	Washer, 5/16 Flat	2
3	1012571	Washer, 5/16 Extra Thick Flat	4
4	1013924	Nut, 5/16-24 Hex Head Cone	10
5	101827101	Plate, Engine Mounting	1
6	101832601	Stiffener (PTO Side)	1
7	101832701	Stiffener (Flywheel Side)	1
8	101833101	Stud, M8-1.25 X 50 mm Two-Ended	2
9	101834601	Snubber Bracket	1
10	101884801	Screw, 5/16-24 X 0.875 Grade-8	10
11	101963401	Locknut, 5/16-18 Hex Flange	4
12	102065901	Locknut, 3/8-16 Flanged Dimple	4
13	102540301	Inner Frame Snubber	1
14	334	Washer, 3/8 Type A Flat	4
15	705	Screw, Cap-hex Hd 3/8-16x1.25	4
16	96704416	Nut Flg, M8 X 1.25 Serrated	2



7



 


https://CartPros.com/f.html

# FUEL, INTAKE, AND GOVERNOR SYSTEMS


8







G

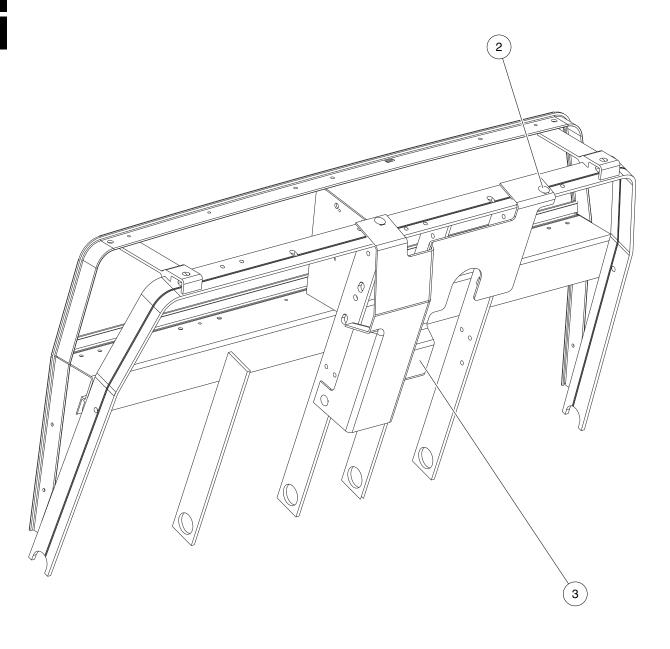








### **SPLASH GUARD**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Splashguard, Ca (includes items 2 and 3)	1
2	1010434	Barrel - Plastic	
3	103174401	Splash Guard	1
			l



G

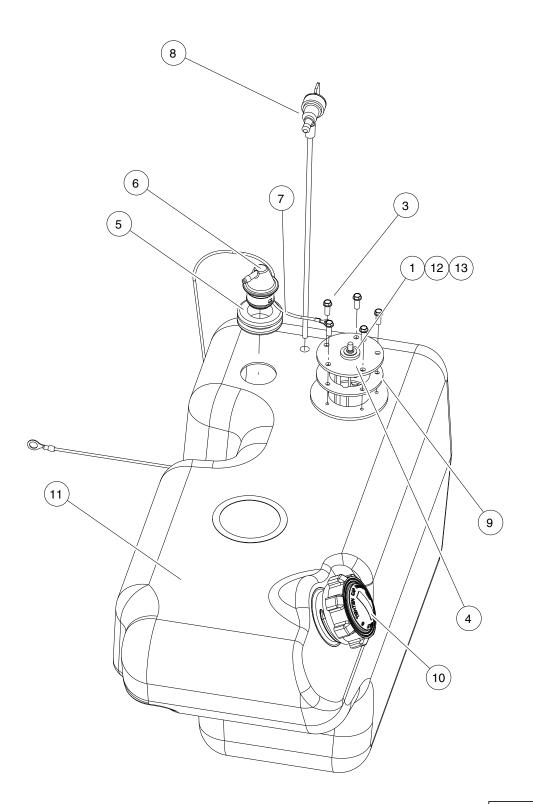








### **FUEL TANK (NON-CLIFORNIA) WITH SENDING UNIT**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016	Washer, #10 Split Lock	1
2	103187601	Asm, Fuel Tank, Side Fill, Su (includes items 3 through 11)	
3	1013461	Screw, #10-16 Hex-Head Hi-Lo	
4	1013462	Sending Unit, Fuel Level *	
5	1015139	Insulation Grommet	
6	1015133	Vent, Fuel Tank	
7	N/A	Wire Assembly #16 Black	
8	102513701	Valve - Fuel Pickup Tube	
9	102513701	Gasket, Rubber	
10	102322001	Cap, Fuel Tank, Gasoline	
11	N/A	Tank, Fuel, Side Fill	
12	183	Washer, #10 Type A Flat	
13	8797	Nut, #10-32 Brass Hex	
		* Note: Must replace fuel sending unit gasket when servicing this component.	



8

G

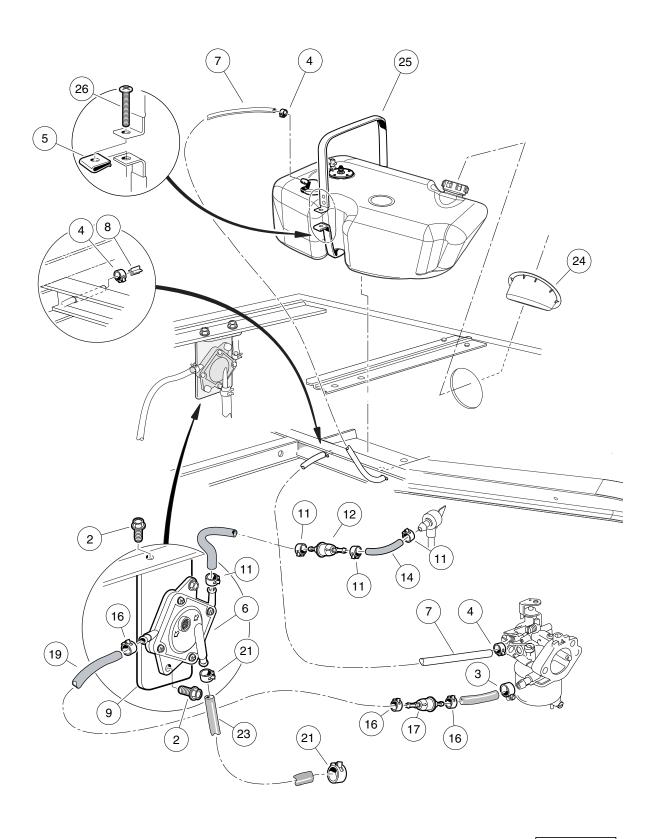








### **FUEL SYSTEM**

1       N/A       Instl, Fuel Sys, Side Fill,ca1 (includes items 2 through 26)       1         2       1012285       Screw, 1/4 X 0.625 Hex-Head       4         3       1013687       Clamp, 3/8" Hose (screw type)       1         4       1013746       Clamp, 0.301 ID Hose       3         5       1014116       Nut, 1/4-20 Speed       1         6       1014523       Pump, Impulse Fuel       1         7       1015137       Fuel Line (available by the foot)       A/         8       101824401       Vent Barb       1         9       101929501       Mount, Fuel Pump       1         10       N/A       Asm, Fuel Filter 14.93" J1737 (includes items 11 through 14)       1         11       1012649       Clamp, 0.460 Red Hose       4         12       102003201       Filter, Fuel, 30 Micron       1         13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1				
1       N/A       Instl, Fuel Sys, Side Fill, ca1 (includes items 2 through 26)       1         2       1012285       Screw, 1/4 X 0.625 Hex-Head       4         3       1013687       Clamp, 3/8" Hose (screw type)       1         4       1013746       Clamp, 0.301 ID Hose       3         5       1014116       Nut, 1/4-20 Speed       1         6       1014523       Pump, Impulse Fuel       1         7       1015137       Fuel Line (available by the foot)       A/         8       101824401       Vent Barb       1         9       101929501       Mount, Fuel Pump       1         10       N/A       Asm, Fuel Filter 14.93" J1737 (includes items 11 through 14)       1         11       1012649       Clamp, 0.460 Red Hose       4         12       102003201       Filter, Fuel, 30 Micron       1         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/	ITEM	PART NO.	DESCRIPTION	QTY
2       1012285       Screw, 1/4 X 0.625 Hex-Head       4         3       1013687       Clamp, 3/8" Hose (screw type)       1         4       1013746       Clamp, 0.301 ID Hose       3         5       1014116       Nut, 1/4-20 Speed       1         6       1014523       Pump, Impulse Fuel       1         7       1015137       Fuel Line (available by the foot)       A/         8       101824401       Vent Barb       1         9       101929501       Mount, Fuel Pump       1         10       N/A       Asm, Fuel Filter 14.93" J1737 (includes items 11 through 14)       1         11       1012649       Clamp, 0.460 Red Hose       4         12       102003201       Filter, Fuel, 30 Micron       1         13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865			1 2 3 4	
3       1013687       Clamp, 3/8" Hose (screw type)       1         4       1013746       Clamp, 0.301 ID Hose       3         5       1014116       Nut, 1/4-20 Speed       1         6       1014523       Pump, Impulse Fuel       1         7       1015137       Fuel Line (available by the foot)       A/         8       101824401       Vent Barb       1         9       101929501       Mount, Fuel Pump       1         10       N/A       Asm, Fuel Filter 14.93" J1737 (includes items 11 through 14)       1         11       1012649       Clamp, 0.460 Red Hose       4         12       102003201       Filter, Fuel, 30 Micron       1         13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       A	1	N/A	Instl, Fuel Sys, Side Fill,ca1 (includes items 2 through 26)	1
4       1013746       Clamp, 0.301 ID Hose       3         5       1014116       Nut, 1/4-20 Speed       1         6       1014523       Pump, Impulse Fuel       1         7       1015137       Fuel Line (available by the foot)       A/         8       101824401       Vent Barb       1         9       101929501       Mount, Fuel Pump       1         10       N/A       Asm, Fuel Filter 14.93" J1737 (includes items 11 through 14)       1         11       1012649       Clamp, 0.460 Red Hose       4         12       102003201       Filter, Fuel, 30 Micron       1         13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       <	2	1012285	Screw, 1/4 X 0.625 Hex-Head	4
4       1013746       Clamp, 0.301 ID Hose       3         5       1014116       Nut, 1/4-20 Speed       1         6       1014523       Pump, Impulse Fuel       1         7       1015137       Fuel Line (available by the foot)       A/         8       101824401       Vent Barb       1         9       101929501       Mount, Fuel Pump       1         10       N/A       Asm, Fuel Filter 14.93" J1737 (includes items 11 through 14)       1         11       1012649       Clamp, 0.460 Red Hose       4         12       102003201       Filter, Fuel, 30 Micron       1         13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       <	3	1013687	Clamp, 3/8" Hose (screw type)	1
5       1014116       Nut, 1/4-20 Speed       1         6       1014523       Pump, Impulse Fuel       1         7       1015137       Fuel Line (available by the foot)       A/         8       101824401       Vent Barb       1         9       101929501       Mount, Fuel Pump       1         10       N/A       Asm, Fuel Filter 14.93" J1737 (includes items 11 through 14)       1         11       1012649       Clamp, 0.460 Red Hose       4         12       102003201       Filter, Fuel, 30 Micron       1         13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22	4	1013746		
7       1015137       Fuel Line (available by the foot)       A/         8       101824401       Vent Barb       1         9       101929501       Mount, Fuel Pump       1         10       N/A       Asm, Fuel Filter 14.93" J1737 (includes items 11 through 14)       1         11       1012649       Clamp, 0.460 Red Hose       4         12       102003201       Filter, Fuel, 30 Micron       1         13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       10	5	1014116		
7       1015137       Fuel Line (available by the foot)       A/         8       101824401       Vent Barb       1         9       101929501       Mount, Fuel Pump       1         10       N/A       Asm, Fuel Filter 14.93" J1737 (includes items 11 through 14)       1         11       1012649       Clamp, 0.460 Red Hose       4         12       102003201       Filter, Fuel, 30 Micron       1         13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       10	6	1014523		
8       101824401       Vent Barb       1         9       101929501       Mount, Fuel Pump       1         10       N/A       Asm, Fuel Filter 14.93" J1737 (includes items 11 through 14)       1         11       1012649       Clamp, 0.460 Red Hose       4         12       102003201       Filter, Fuel, 30 Micron       1         13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       10297800	7	1015137		
9       101929501       Mount, Fuel Pump       1         10       N/A       Asm, Fuel Filter 14.93" J1737 (includes items 11 through 14)       1         11       1012649       Clamp, 0.460 Red Hose       4         12       102003201       Filter, Fuel, 30 Micron       1         13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1	8	101824401		
10       N/A       Asm, Fuel Filter 14.93" J1737 (includes items 11 through 14)       1         11       1012649       Clamp, 0.460 Red Hose       4         12       102003201       Filter, Fuel, 30 Micron       1         13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1	9	101929501		
11       1012649       Clamp, 0.460 Red Hose       4         12       102003201       Filter, Fuel, 30 Micron       1         13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1	10	N/A		
12       102003201       Filter, Fuel, 30 Micron       1         13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1	11	1012649		
13       N/A       Cap, Plug, Plastic       2         14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1	12	102003201		
14       102865101       Fuel Line       A/         15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1				
15       N/A       Asm, Fuel Filter 16.93" J1737 (includes items 16 through 19)       1         16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1				
16       1012649       Clamp, 0.460 Red Hose       3         17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1				
17       102003201       Filter, Fuel, 30 Micron       1         18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1				
18       N/A       Cap, Plug, Plastic       2         19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1				
19       102865101       Fuel Line       A/         20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1				
20       N/A       Asm, Fuel Line 16" J1737 (includes items 21 through 23)       1         21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1				
21       1012649       Clamp, 0.460 Red Hose       2         22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1				
22       N/A       Cap, Plug, Plastic       2         23       102865101       Fuel Line       A/         24       102977901       Bezel, Fuel Fill, 5.0 Dia       1         25       102978001       Strap, Fuel Tank, Side Fill       1			_	
23 102865101 Fuel Line				
24       102977901       Bezel, Fuel Fill, 5.0 Dia				
25 102978001 Strap, Fuel Tank, Side Fill				
, , , , , , , , , , , , , , , , , , , ,				
20 103306301 SCIEW, BIISC, 1/4-20 X 2.0			· · · · · · · · · · · · · · · · · · ·	



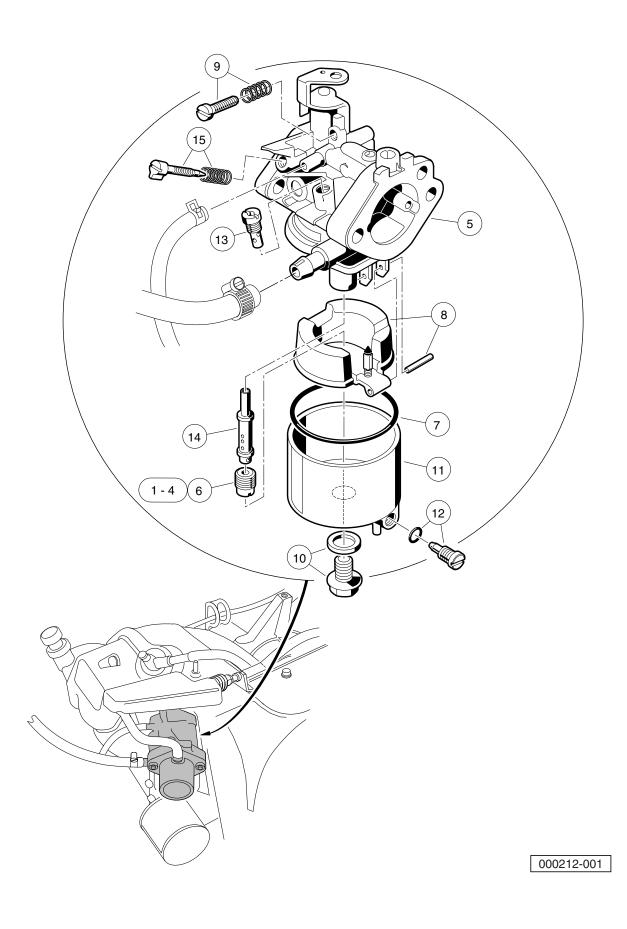








### **CARBURETOR ASSEMBLY – FE350**

ITEM	PART NO.	DESCRIPTION	Q
		1 2 3 4	
1	101642575	Jet, Altitude, # 75	F
2	101642578	Jet, Altitude, # 78	Д
3	101642580	Jet, Altitude, # 80	A
4	101642582	Jet, Altitude, # 82	A
5	101905901	Carburetor, FE350D (includes items 6 through 15)	
6	101642585	Jet, Altitude, # 85	
7	1016437	Gasket, Carburetor Bowl OHV	
8	1016486	Float Assembly	
9	1016501	Screw Assembly	
10	1016585	Bolt	
11	1017461	Chamber Assembly, Float (includes item 12)	
12	1016499	Screw Assembly	
13	101973101	Jet, #40 Pilot	
14	101973301	Nozzle, Main	
15	N/A	Assembly, Pilot Air Screw	

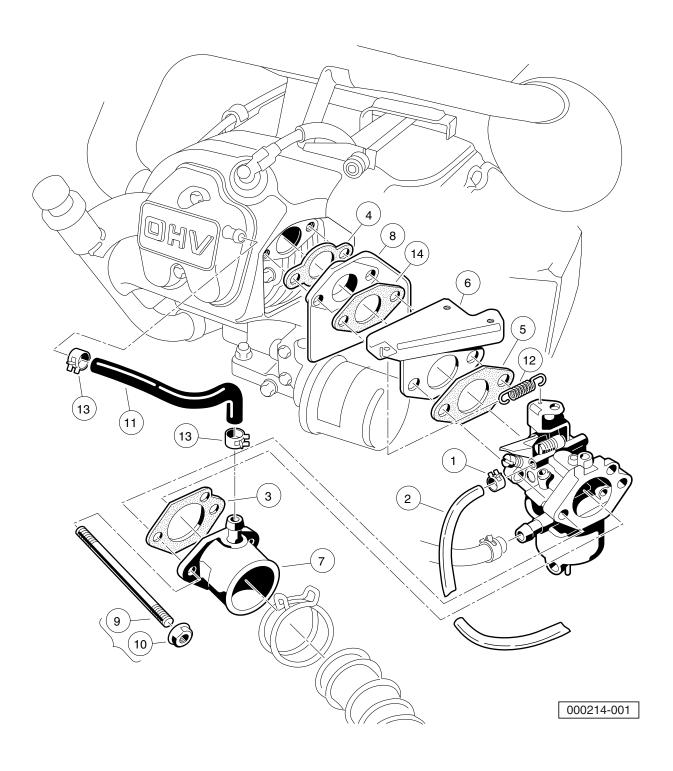








### **CARBURETOR INSTALLATION – FE350**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1013746	Clamp, 0.301 ID Hose	1
2	1015137	Fuel Line (available by the foot)	A/R
3	1016438	Gasket, Carb To Intake Manifold	1
4	1016440	Gasket, Engine to Insulator	1
5	1016441	Gasket, Sprg Brkt To Carb OHV	1
6	1016444	Bracket, Throttle Spring Return	1
7	1016480	Pipe, Intake Manifold	1
8	101648102	Insulator, Carburetor	1
9	101649002	Stud, M6-1.00 Two-Ended	2
10	1016547	Nut	2
11	1016572	Tube, Crankcase Vent	1
12	1016582	Spring, Throttle Return	1
13	1017466	Clamp	2
14	101973401	Gasket, Insulator To Bracket	1



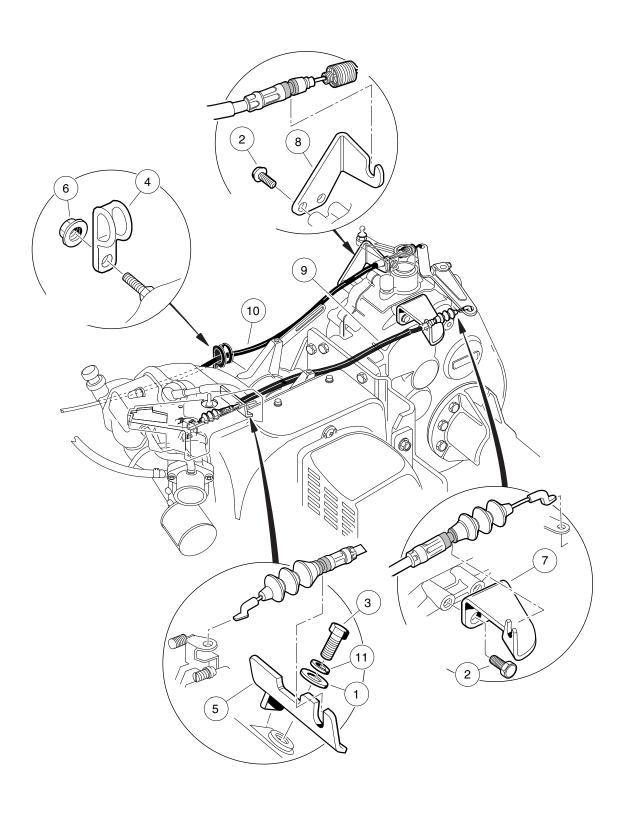








### **GOVERNOR AND ACCELERATOR CABLES**

		GOVERNOR AND ACCELERATOR CAD	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011697	Washer, 5/16 Flat	1
2	1012285	Screw, 1/4 X 0.625 Hex-Head	4
3	1012830	Screw, M8-125 X 22 Hex-Head	1
4	1013700	Clamp	2
5	101584502	Bracket, Governor Cable Snap-In	1
6	1016546	Nut	2
7	101832202	Bracket, Rear Governor Cable Snap-In	1
8	101832302	Bracket, Rear Accelerator Cable Snap-In	1
9	102336001	Cable, Governor, Snap-In	1
10	102336101	Cable, Accelerator, Snap-In	1
11	7174	Lockwasher, 5/16 Split	1



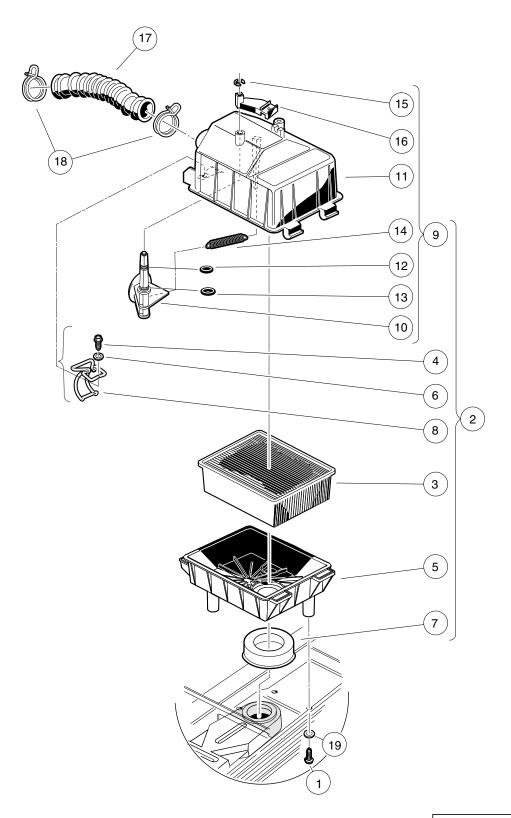








### **AIR BOX AND INTAKE HOSE**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1015752	Screw, #12-16 X 0.625 Hi-Lo	3
2	101821501	Assembly, Air Box (includes items 3 through 9)	1
3	1015426	Filter, Air	1
4	101804301	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
5	101811901	Bottom, Air Box	1
6	101881701	Washer, #8 Stainless-Steel Flat	2
7	101921501	Seal, Intake	1
8	101925701	Latch, Wireform	2
9	101972801	Top Assy, Air Box (includes items 10 through 16)	1
10	N/A	Valve, Choke	1
11	N/A	Top, Air Box	1
12	N/A	O-Ring, 5/16	1
13	N/A	O-Ring, 3/8	1
14	101812301	Spring, Extension Return	1
15	101813001	Retaining Ring 0.25, Shaft	1
16	101917601	Lever, Choke	1
17	101837101	Hose, Air Intake	1
18	101971301	Clamp, 1.58" ID Hose	2
19	332	Washer, 1/4 Type A Narrow Flat	3




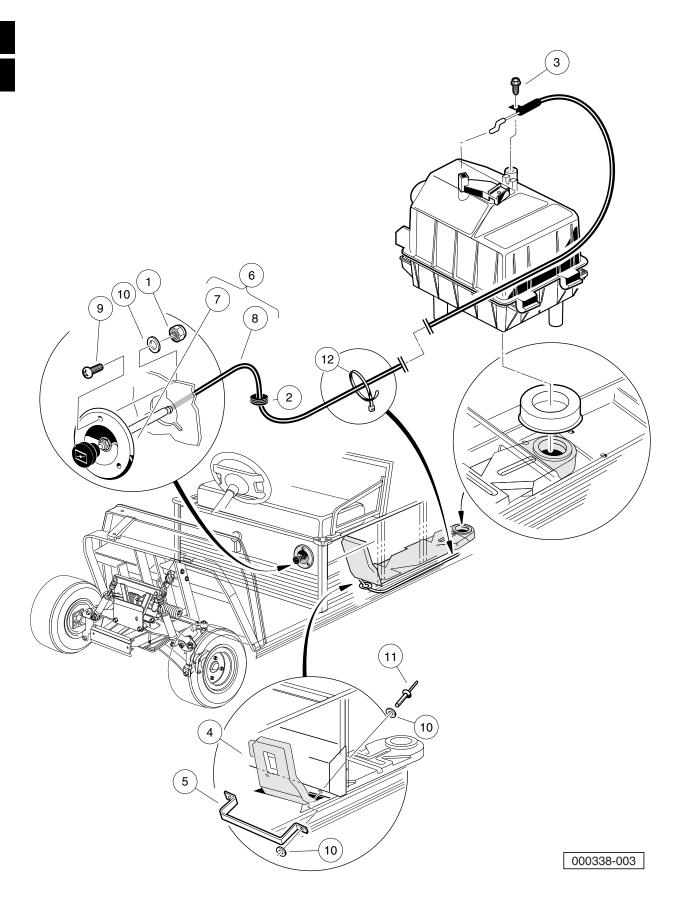





### **INTAKE SYSTEM**

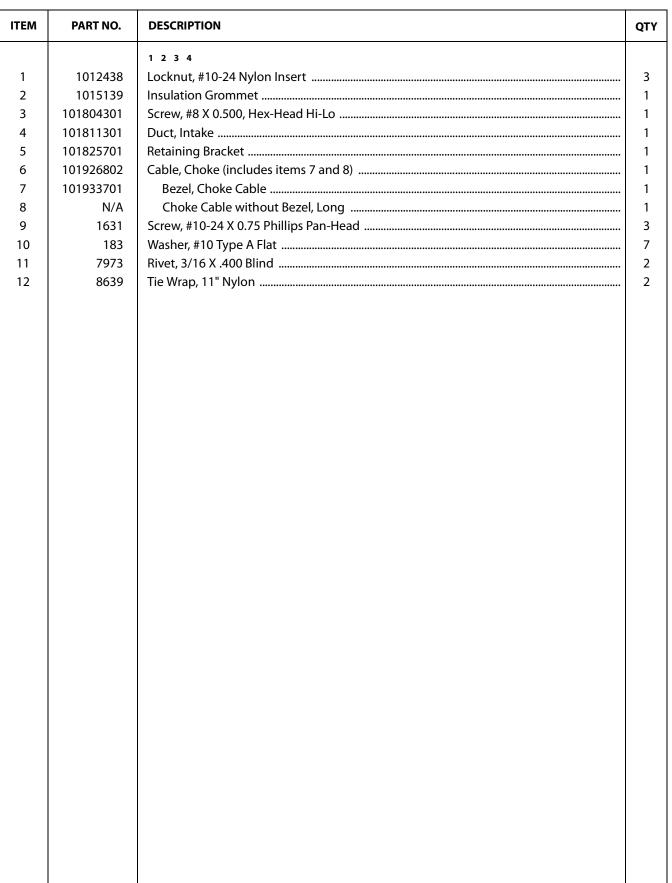






8

G

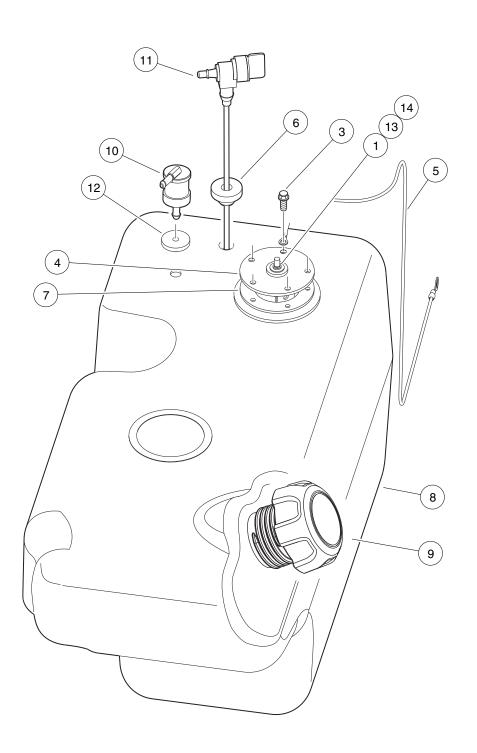







### **FUEL TANK (CALIFORNIA) WITH SENDING UNIT**

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1016	Lockwasher, #10 Split	1
2	103369101	Asm, Fuel Tank, side Fill, nano (includes items 3 through 12)	1
3	1013461	Screw, #10-16 Hex-Head Hi-Lo	5
4	1013462	Sending Unit, Fuel Level *	1
5	N/A	Wire Assembly #16 Black	1
6	102406701	Bushing, Line, Return	1
7	102522001	Gasket, Rubber	1
8	N/A	Tank, Fuel, side Fill, nano	1
9	103372101	Cap, Fuel Tank, Gas, Ratchet	1
10	103372201	Vent, Fuel Tank, W/ Valve	1
11	103372301	Valve, Fuel, Grommet Connect	1
12	103374701	Grommet, Fuel Tank Vent	1
13	183	Washer, #10 Type A Flat	1
14	8797	Nut, #10-32 Brass Hex	1







8






## **EXHAUST SYSTEM**

9



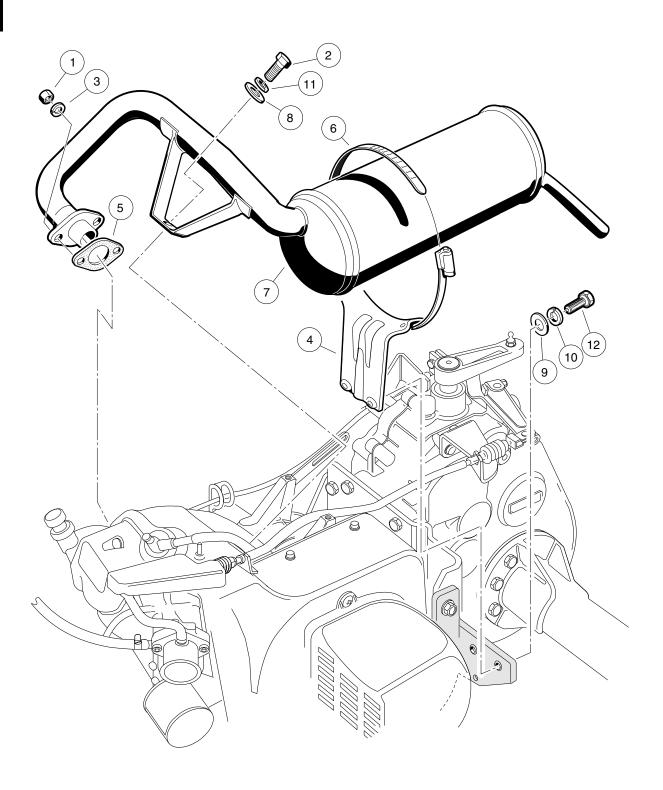







### **EXHAUST SYSTEM - FE350 ENGINE**

		EXTINOST STSTEM - I ESSO EINC	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012528	Nut, M8-1.25 Hex	2
2	1012830	Screw, M8-125 X 22 Hex-Head	1
3	1013734	Lockwasher, 8mm Split	2
4	1015814	Bracket, Muffler Mounting	1
5	1016904	Gasket, Exhaust	1
6	1017689	Clamp, 5" Muffler Hose	1
7	101859401	Exhaust System, FE350	1
8	1241	Washer, 5/16 Type A Flat	1
9	332	Washer, 1/4 Type A Narrow Flat	2
10	451	Lockwasher, 1/4 Helical Split	2
11	7174	Lockwasher, 5/16 Split	1
12	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2



9








# **TORQUE CONVERTER**

10



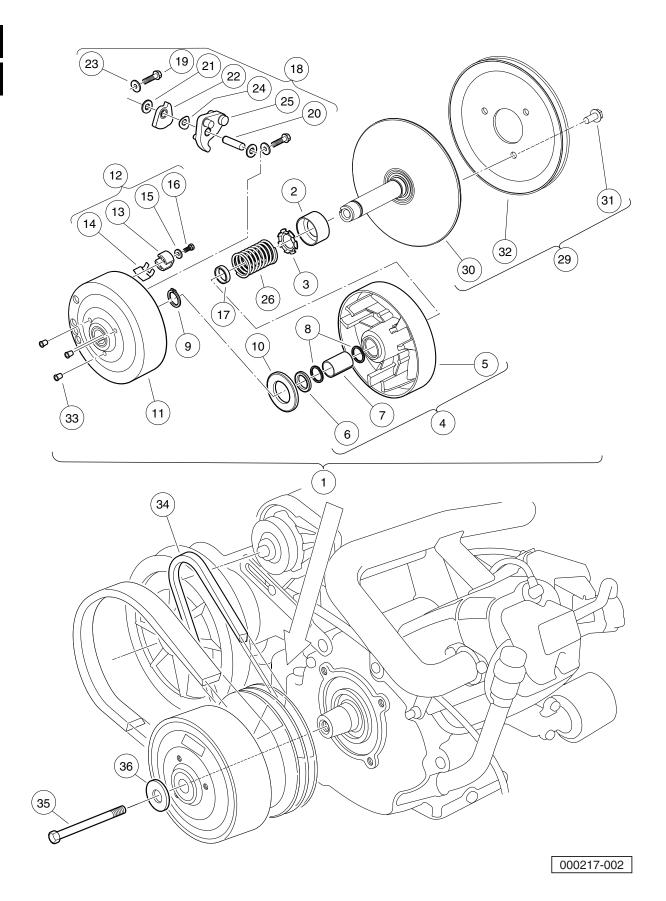








### **DRIVE CLUTCH**

101833904 1014049 1014050 1014052 N/A 1014055 N/A 1014056 1014057 1014058 1014059 1014453 1014062 1014287 183 8450	Assembly, Drive Clutch (includes items 2 through 33)  Bearing, Idler  Retainer, Spring  Movable-Face Assembly (includes items 5 through 7)  Drive Clutch Movable Face  Retainer  Bushing, Split, Drive Clutch  Ring, Spiral Backup  Ring, 0.810" Internal Retaining  Washer, Thrust  Drive Hub Assy, Drive Clutch  Kit, Drive Clutch Button (includes items 13 through 16)  Driver, Drive Clutch  Spring, Drive Button  Washer, #10 Type A Flat
1014049 1014050 1014052 N/A 1014055 N/A 1014056 1014057 1014058 1014059 1014453 1014062 1014287 183 8450	Bearing, Idler
1014050 1014052 N/A 1014055 N/A 1014056 1014057 1014058 1014059 1014453 1014062 1014287 183 8450	Retainer, Spring
1014052 N/A 1014055 N/A 1014056 1014057 1014058 1014059 1014453 1014062 1014287 183 8450	Movable-Face Assembly (includes items 5 through 7)  Drive Clutch Movable Face  Retainer  Bushing, Split, Drive Clutch  Ring, Spiral Backup  Ring, 0.810" Internal Retaining  Washer, Thrust  Drive Hub Assy, Drive Clutch  Kit, Drive Clutch Button (includes items 13 through 16)  Driver, Drive Button  Spring, Drive Button
N/A 1014055 N/A 1014056 1014057 1014058 1014059 1014453 1014062 1014287 183 8450	Drive Clutch Movable Face
1014055 N/A 1014056 1014057 1014058 1014059 1014453 1014062 1014287 183 8450	Retainer
N/A 1014056 1014057 1014058 1014059 1014453 1014062 1014287 183 8450	Bushing, Split, Drive Clutch Ring, Spiral Backup
1014056 1014057 1014058 1014059 1014453 1014062 1014287 183 8450	Ring, Spiral Backup
1014057 1014058 1014059 1014453 1014062 1014287 183 8450	Ring, 0.810" Internal Retaining
1014058 1014059 1014453 1014062 1014287 183 8450	Washer, Thrust  Drive Hub Assy, Drive Clutch  Kit, Drive Clutch Button (includes items 13 through 16)  Driver, Drive Clutch  Spring, Drive Button
1014059 1014453 1014062 1014287 183 8450	Washer, Thrust  Drive Hub Assy, Drive Clutch  Kit, Drive Clutch Button (includes items 13 through 16)  Driver, Drive Clutch  Spring, Drive Button
1014453 1014062 1014287 183 8450	Drive Hub Assy, Drive Clutch
1014062 1014287 183 8450	Driver, Drive Clutch
1014287 183 8450	Driver, Drive Clutch
183 8450	Spring, Drive Button
8450	
0.00	Wastiel, #10 Type A Flat
1016000	Screw, #10-24 X 0.50 Hex-Head
1016289	Spacer, Fixed Face Shaft
1016801	Kit, Drive Clutch Weight (includes items 19 through 25)
1014063	Screw, 1/4-20 X 1.00 Hex Head
N/A	Pin, 0.3752 X 1.50 Dowel
1014065	Washer, 0.38" ID Delrin Flat
	Clutch Weight, Secondary
,	Washer
	Washer, Wave
	Weight, Primary
•	Spring, Drive Clutch
	Kit, Fixed Face - Drive (includes items 28 and 29)
	Desiccant Bag (Not Shown)
-	Fixed Face Drive (includes items 30 through 32)
	Fixed Face Assembly, Drive Clutch
•	Screw, 5/16-18 X 0.75 Thread-Forming
	Pulley, Drive Clutch
•	Cap Plug
•	V-Belt
	Screw 3/8-24x5.5 Hex Loc Ptch
	Washer, 3/8 Type B Flat
000	
	Note: Item 28 not shown.
	N/A N/A 1016201 N/A 1016901 101738302 N/A N/A 1014288 N/A N/A 101916701 103345701 808





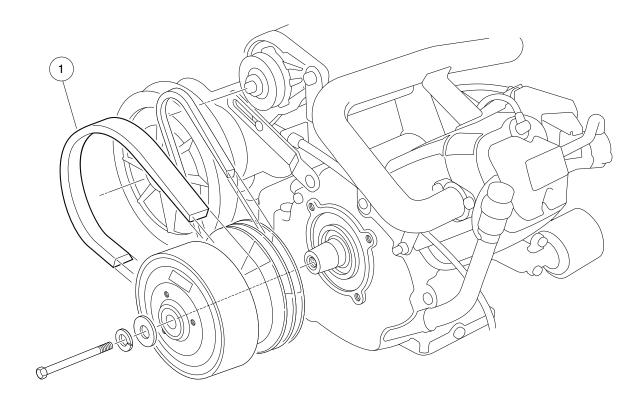








### **DRIVE BELT – FE350**

		DRIVE BELI - FESSO			
ITEM	PART NO.	DESCRIPTION	<b>QTY</b>	1	
1	1017188	1 2 3 4 Belt, Drive (FE350)	1	C	

G

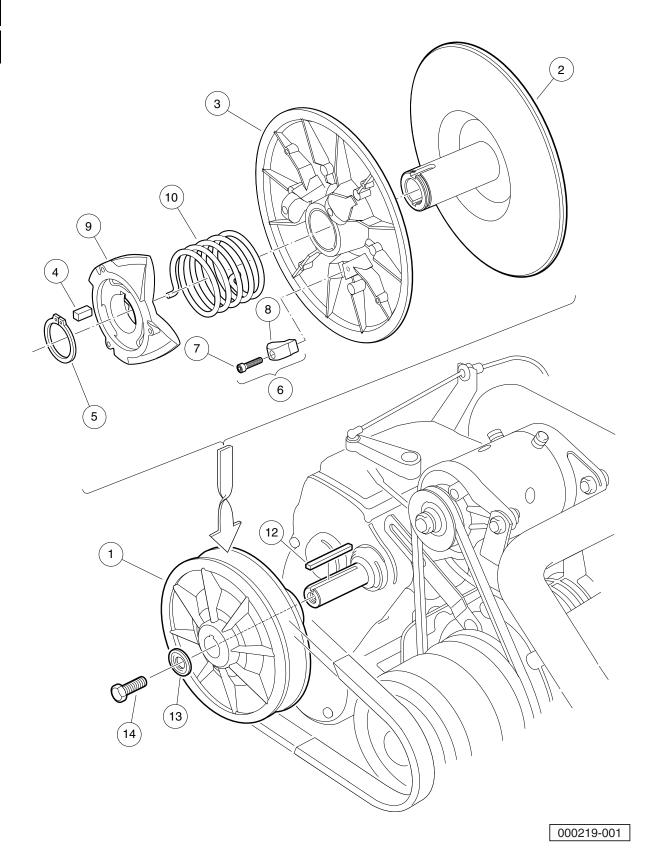

**SACARTPROS** 





### **DRIVEN CLUTCH**

		DRIVEINCLO	
ITEM	PART NO.	DESCRIPTION	Qī
		1 2 3 4	
1	101834001	Assembly, Driven Clutch (includes items 2 through 10)	1
2	1014070	Fixed Face Assy, Driven Clutch	1
3	1014072	Movable-Face Assembly with Bushing	1
4	1014078	Key, Driven Clutch	1
5	1014080	Ring, Retaining	1
6	1014454	Kit, Driven Clutch Button (includes items 7 and 8)	1
7	1012836	Screw, #8-32 X 3/4 Socket-Head Cap	3
8	N/A	Button, Drive	3
9	1017686	Cam, Driven Clutch	
10	101836201	Spring, Driven Clutch, Reversed	1
11	AM10419	Kit, Clutch Repair (includes items 12 through 14)	1
12	101833401	Key, 3/16 Sq X 1.50"	1
13	N/A	Washer, Driven Clutch	
14	102242101	Screw, 5/16-18 X 3/4 Hex-Head with Patch	1





10





GET STARTED

https://CartPros.com/f.html


# UNITIZED TRANSAXLE AND FORWARD/REVERSE SHIFTER

G

11





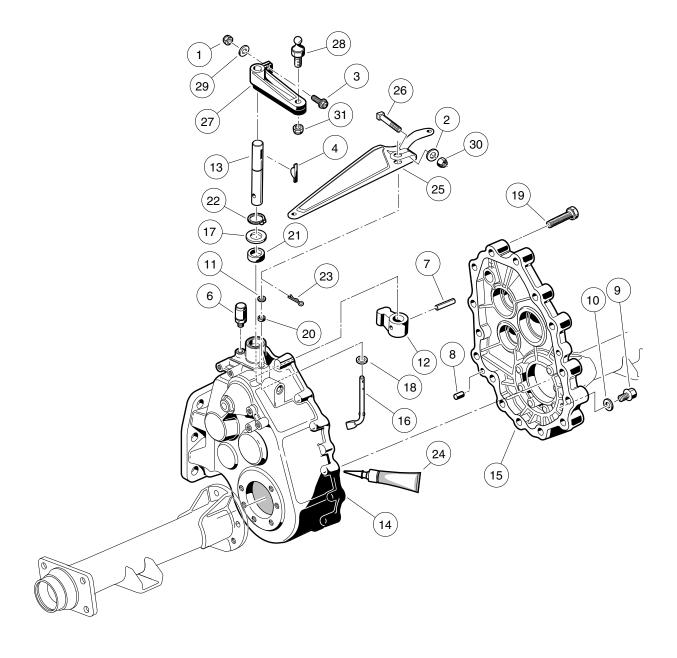








### **UNITIZED TRANSAXLE – GEAR CASES AND BRACKETS**

1013061 1014007 1017082 1017231 1833601 1012711 1012752 1012896 1013760 1016432 1016513 1890101 1890201	1 2 3 4  Locknut, #10-32 Nylon Insert
1014007 1017082 1017231 1833601 1012711 1012752 1012896 1013760 1016432 1016513 1890101 1890201 1890501	Washer, 1/4 Flat Screw, #10-32 X 0.75, Hex-Head Machine Key, Woodruff Transaxle, 11.77 Ratio (includes items 6 through 24) Breather Roll Pin Pin, Dowel Fill Plug Gasket, Drain Plug Washer, M6 Flat Lever, Change
1017082 1017231 1833601 1012711 1012752 1012896 1013760 1016432 1016513 1890101 1890201	Screw, #10-32 X 0.75, Hex-Head Machine
1017231 1833601 1012711 1012752 1012896 1013760 1016432 1016513 1890101 1890201	Key, Woodruff
1833601 1012711 1012752 1012896 1013760 1016432 1016513 1890101 1890201 1890501	Transaxle, 11.77 Ratio (includes items 6 through 24)  Breather  Roll Pin  Pin, Dowel  Fill Plug  Gasket, Drain Plug  Washer, M6 Flat  Lever, Change
1012711 1012752 1012896 1013760 1016432 1016513 1890101 1890201 1890501	Breather
1012752 1012896 1013760 1016432 1016513 1890101 1890201 1890501	Roll Pin Pin, Dowel Fill Plug Gasket, Drain Plug Washer, M6 Flat Lever, Change
1012896 1013760 1016432 1016513 1890101 1890201 1890501	Pin, Dowel
1013760 1016432 1016513 1890101 1890201 1890501	Fill Plug Gasket, Drain Plug Washer, M6 Flat Lever, Change
1016432 1016513 1890101 1890201 1890501	Gasket, Drain Plug
1016513 1890101 1890201 1890501	Washer, M6 FlatLever, Change
1890101 1890201 1890501	Lever, Change
1890201 1890501	
1890501	Shaft - Change
	Gear Case (driver side)
1890601	Gear Case (passenger side)
1891301	Arm Pivot
1892901	Washer
1893801	Washer
1926901	Screw, M8-1.25 X 40mm Hex-Head
1927101	Seal, Oil
1927201	Seal, Oil
1927301	Snap Ring
1928601	Pin, Cotter
1928701	Liquid Gasket (Transaxle case)
1834801	Arm, Governor
1886101	Screw, 1/4-20 X 1.00 Square-Head
2515401	Lever, Transmission Shift
2526201	Stud, Thread, 1/4-28
183	Washer, #10 Type A Flat
8233	Locknut, 1/4-20 Nylon Insert
8717	Locknut, 1/4-28 Nylon Insert
	Note: Unitized transaxle component listings span several pages.
	1892901 1893801 1926901 1927101 1927201 1927301 1928601 1928701 1834801 1886101 2515401 2526201 183 8233

11

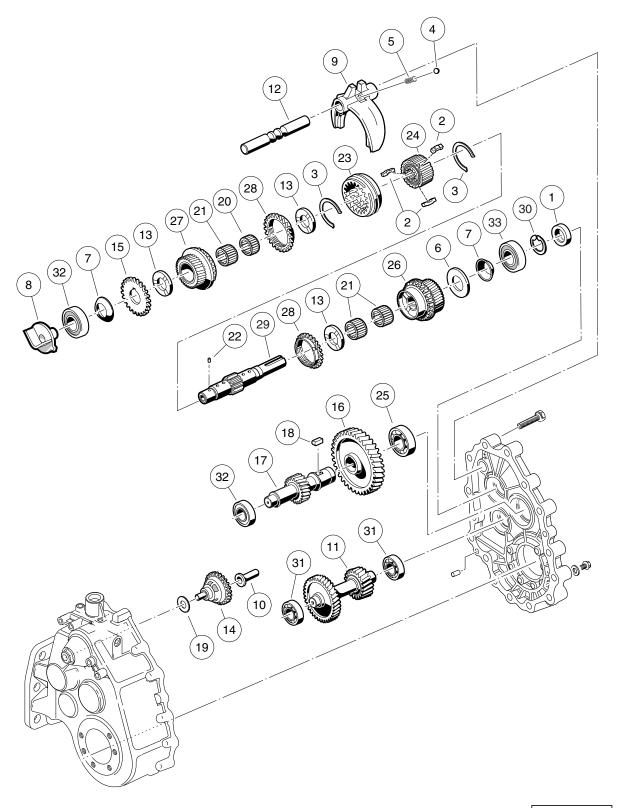








https://CartPros.com/f.html

#### SOLINE VEHICLES, TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY	11
		1 2 3 4		G
1	1012714	Oil Seal	1	J
2	1012740	Synchro Insert	3	
3	1012741	Synchro Spring	2	
4	1012747	Shifter Ball	1	



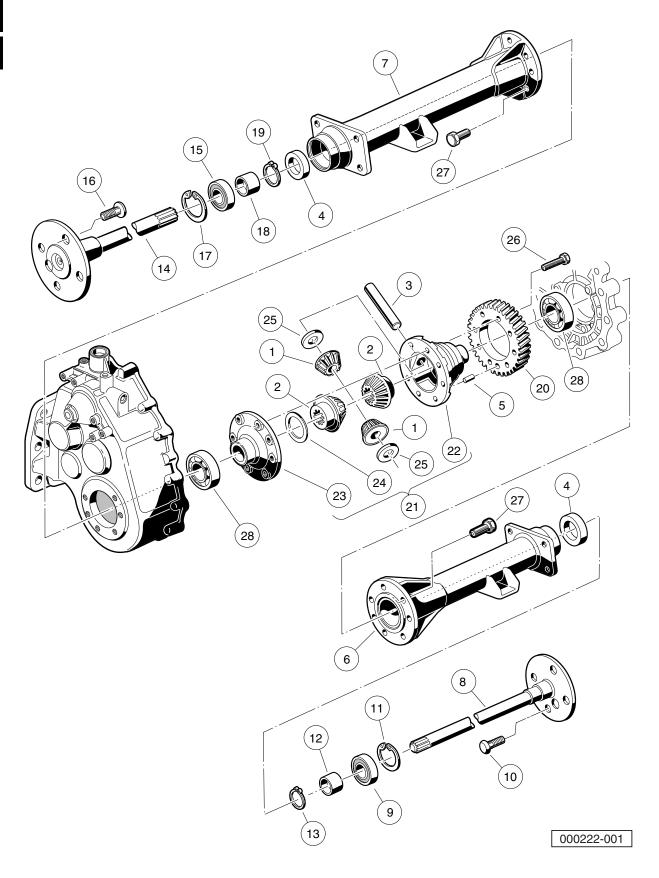






## TRANSAXLE – GASOLINE VEHICLES, DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	Q
		1 2 3 4	
1	1013770	Differential Idler Gear	
2	1013771	Gear, Differential	
3	1013772	Pin, Differential	
4	1013794	Axle Shaft Oil Seal	
5	N/A	Dowel Pin	
6	101890901	Pipe	
7	101891001	Pipe	
8	101891401	Axle Assembly, Passenger Side (includes items 9 through 13)	
9	1011291	Outer Axle, Tube Bearing	
10	1013787	Lug Stud	
11	1013792	Circlip Type C	
12	1014207	Bushing	
13	1016672	Retaining Ring	
14	101891501	Axle Assembly, Driver-Side (includes items 15 through 19)	
15	1011291	Outer Axle, Tube Bearing	
16	1013787	Lug Stud	
17	1013792	Circlip Type C	
18	1014207	Bushing	
19	1016672	Retaining Ring	
20	101892701	Gear, Helical	
21	101910501	Kit, Differential Gear Case (includes items 22 through 25)	
22	1013768	Differential Gear Case, Left-Hand	
23	1013769	Differential Gear Case, Right-Hand	
24	1013773	Plate, Thrust (Differential Gear)	
25	1013774	Plate, Thrust (Idler Gear)	
26	101928301	Screw, M8-1.25 X 35mm Hex Head	
27	102031901	Bolt, M10 X 1.5 X 30mm	
28	7330	Inner Axle Tube Bearing	
		Note: Items listed on this page are components of the unitized transaxle.	



11

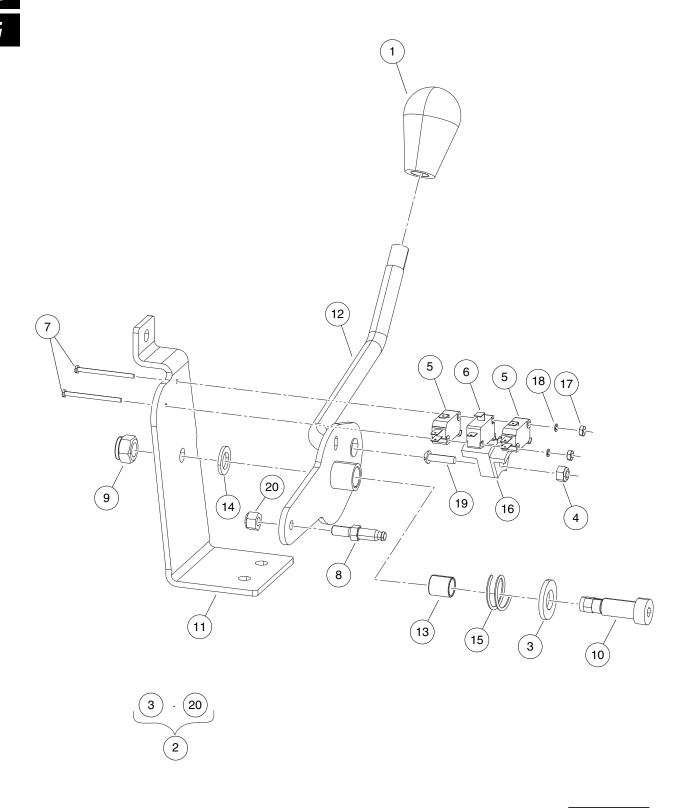







### FORWARD/REVERSE SHIFTER

 
ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	102376001	Knob, Fnr	1
2	102969901	Asm, Shifter, FNR (includes items 3 through 20)	1
3	1010028	Washer, 1/2 Type A Flat	1
4	1013061	Locknut, #10-32 Nylon Insert	1
5	1014807	Switch, Limit	2
6	1014808	Switch, Limit	1
7	1015878	Screw, #4-40 Hex Head Machine	2
8	102526201	Stud, Thread, 1/4-28	1
9	102616701	Locknut, M10x1.5 Nylon Insert	
10	102684602	Shoulder Bolt, M12 X 25.0	1
11	102969401	Bracket, Shifter, FNR	
12	102969801	Weldment, Shift Lever, FNR	
13	103173301	Bushing, Greaseless, 12mm Id	
14	103177401	Washer, Thrust, Shifter, FNR	
15	103192701	Spring, Comp, .97 Od X.75 L	
16	103369501	Cam, Limit Switch, Fnr Shifter	
17	8057	Nut, #4-40 Hex Machine	
8	8058	Lockwasher, #4 Helical Split	
9	8104	Screw, #10-32 X .75 Rd Hd Mach	
20	8717	Locknut, 1/4-28 Nylon Insert	





11








https://CartPros.com/f.html

# our search box and it will find the part you are looking for. GRAZIANO TRANSAXLE – GASOLINE VEHICLE

12



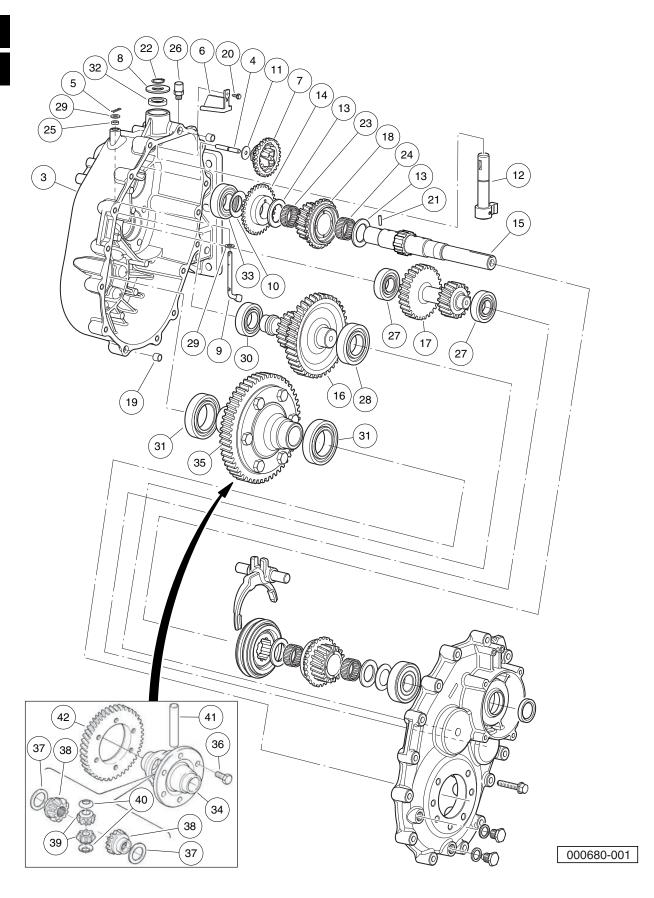






### **GRAZIANO TRANSAXLE – GASOLINE VEHICLES**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102896801	Transaxle, Unitized, Graziano (includes items 2 through 35)	
2	102896901	Gear Box, Complete (includes items 3 and 4)	1
3	N/A	Gear Box	1
4	N/A	Pin, Speed Governor	1
5	102897401	Pin, Split	1
6	102897601	Conveyor, Oil	1
7	102897701	Assembly, Speed Governor	1
8	102897801	Washer, Thrust	1
9	102897901	Lever, Speed Governor	1
10	102898001	Washer, Belleville	1
11	102898101	Bearing, Thrust	1
12	102898201	Unit, Drive Selector	1
13	102898301	Bearing, Thrust	2
14	102898501	Gear, Speed Governor	1
15	102898601	Shaft, Main	1
16	102898701	Shaft, Secondary	1
17	102898801	Shaft, Reverse Gear	1
18	102899001	Gear, Complete, 28t	1
19	102899101	Dowel	2
20	102899201	Screw	1
21	102899301	Pin	1
22	102899401	Ring, Snap	1
23	102899501	Cage, Roller	1
24	102899601	Cage, Roller	1
25	102899701	Grommet	1
26	102899801	Bleeder	1
27	102900401	Bearing	2
28	102900501	Bearing	1
29	102900601	Washer	2
30	102900701	Bearing	
31	102900701	Bearing	
32	102900901	Grommet	1
33	102900901	Bearing	1 1
34	102901001	Box, Differential	
35	102901201	Assembly, Differential (includes items 36 through 42)	
36	102902001	Screw, M10 X 25	6
30 37	102901301	Ring, Sleeve	
38	102901401	Gear, Sun	2
39	102901301	Gear, Planetary	2
40	102901001	Ring, Sleeve	2
40	102901701	Pin	1
			1
42	102901901	Gear	'

12

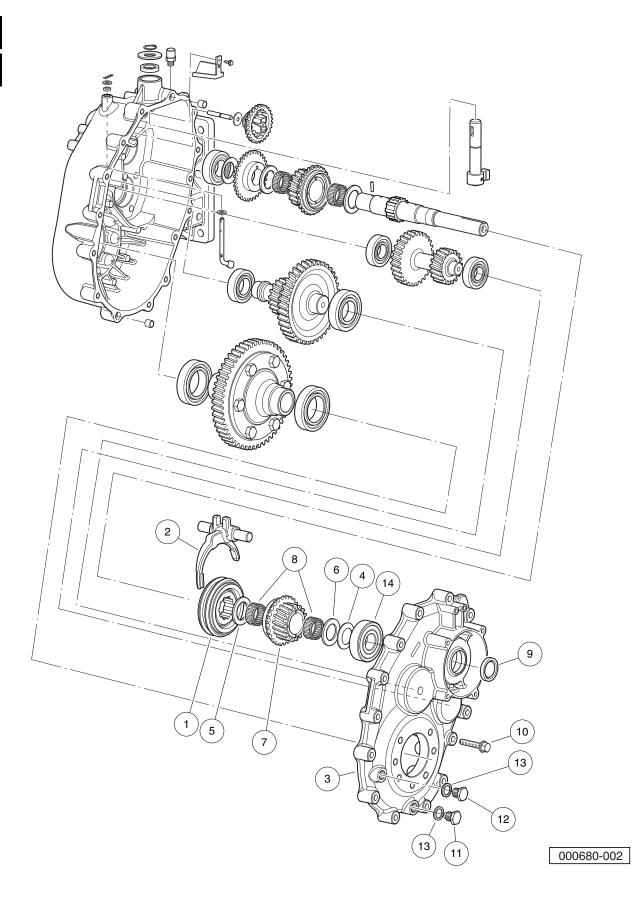







### **GRAZIANO TRANSAXLE – GASOLINE VEHICLES**


ГЕМ	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	102897201	Synchronizer, Complete	1
2	102897301	Fork, Complete	1
3	102897501	Cover, Box	1
4	102898001	Washer, Belleville	1
5	102898301	Bearing, Thrust	1
6	102898401	Washer, Thrust	1
7	102898901	Gear, Complete, 25t	
8	102899601	Cage, Roller	2
9	102899901	Grommet	
10	102900001	Screw	1
11	102900101	Plug, Magnetic	1
12	102900201	Plug	1
13	102900301	Seal	1
14	102901101	Bearing	





**DID YOU** 



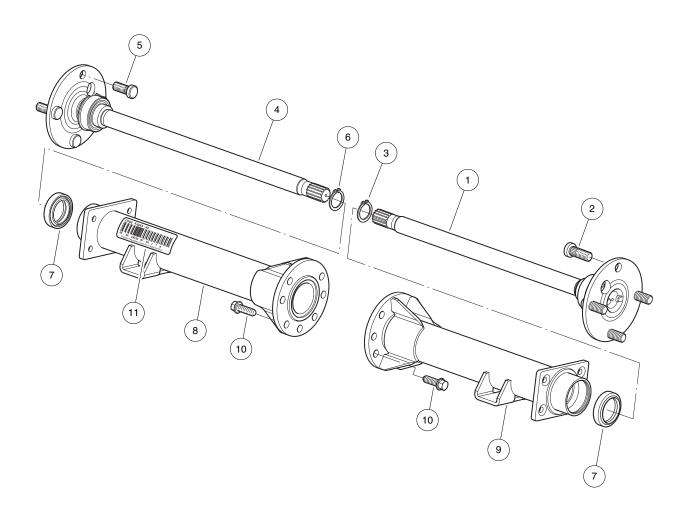







### **GRAZIANO TRANSAXLE – GASOLINE VEHICLES**

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	N/A	Shaft, Short, Complete (includes items 2 and 3)	1
2	102902301	Bolt, Stud	4
3	102902401	Snap Ring	1
4	102902201	Shaft, Long, Complete (includes items 5 and 6)	1
5	102902301	Bolt, Stud	4
6	102902401	Snap Ring	1
7	102902501	Seal, Lip	2
8	102902601	Assembly, Tube Extension, Lh	1
9	102902701	Assembly, Tube Extension, Rh	1
10	102902801	Screw, M10 X 30	14
11	N/A	Tag, Serial	1
		Note: Items listed on this page are components of the Graziano transaxle assembly.	
			1





12





GET STARTED

https://CartPros.com/f.html

## our search box and it will find the part you are looking for. ELECTRICAL SYSTEM — ELECTRIC VEHICLES


13

=







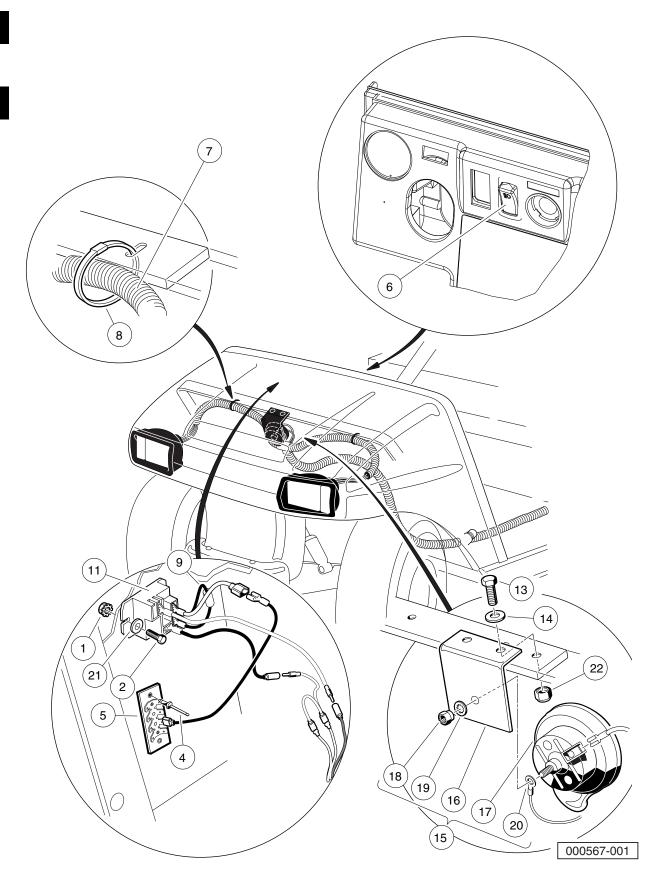







### **HEADLIGHT AND HORN ELECTRICAL COMPONENTS**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011229	Locknut, #6-32 Whiz	2
2	1017853	Screw, #6-32 X 0.75 Hex-Head Machine	2
3	N/A	Headlight Only, IQ Plus (includes items 4 through 8)	1
4	1013357	Rivet, 5/32 Aluminum Pop	2
5	1016356	Terminal Block with Insulator	1
6	102869401	Switch, Rocker, Light	1
7	103255701	Wire Harness, Hd Lght, Ca, Ele	1
8	8990	Tie Wrap, 8" Nylon	8
9	101914401	Assembly, Voltage Suppressor	1
10	103414901	Kit, Relay, 48v 30a W/instr (includes items 11 and 12)	1
11	103397901	Relay, Spst No, 48v 30a, Pmt	1
12	N/A	Kit, Relay, 48v 30a Instrns	1
13	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
14	332	Washer, 1/4 Type A Narrow Flat	2
15	4029	Horn (includes items 16 through 20)	1
16	1011825	Horn Bracket	1
17	N/A	Horn, 12-VDC	1
18	101955101	Nut, M6 Hex	1
19	7820	Washer, 5/16 Internal-Tooth	1
20	N/A	5/16 Ring Term	1
21	7591	Washer, #6 Flat	2
22	8233	Locknut, 1/4-20 Nylon Insert	2

**DID YOU** 

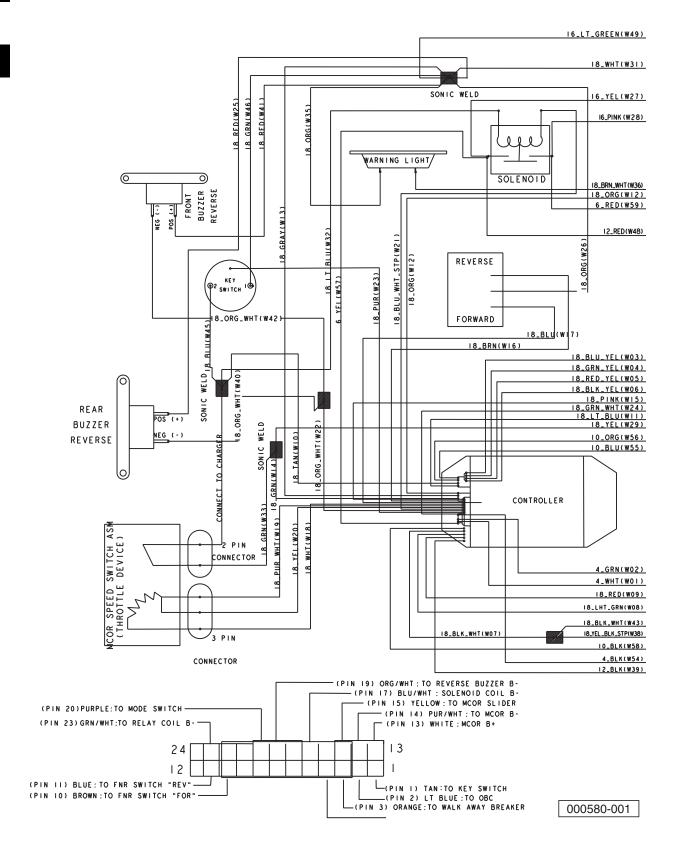



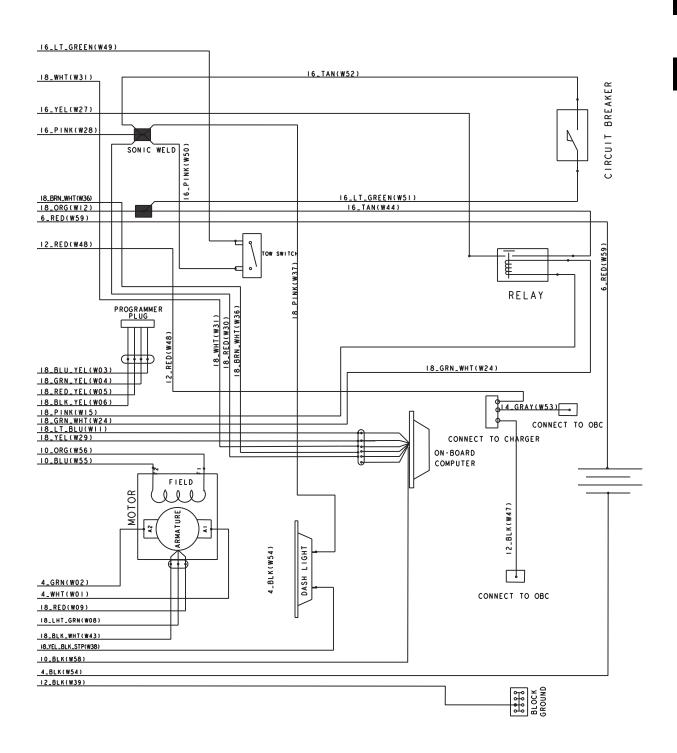



13

See previous two pages for illustration.








## **WIRING – IQ PLUS ELECTRIC VEHICLES**

ITEM	PART NO.	DESCRIPTION	Q
		1 2 3 4	
1	N/A	Shaft Governor Gear	
2	102845501	Harness, Power, Stretch IQ Plus (includes items 3 through 9)	
3	N/A	Asm, #4 Grn Wire, 89"	
4	N/A	Asm, #4 Wht Wire, 88.5"	
5	N/A	Asm, #10 Org Wire, 89.5"	1
6	N/A	Asm, #10 Blu Wire, 95.5"	1
7	N/A	Asm, #4 Red Wire, 67.5"	1
8	N/A	Asm, #4 Blk Wire, 57.5"	1
9	8639	Tie Wrap, 11" Nylon	6
10	102938301	Chrgr Harness, Iq Plus, Shelf	1
11	103222001	Asm, Wire Harness, Stretch, Electric	1
		Note: Item 1 and 10 not shown.	
			l

13

**DID YOU** 

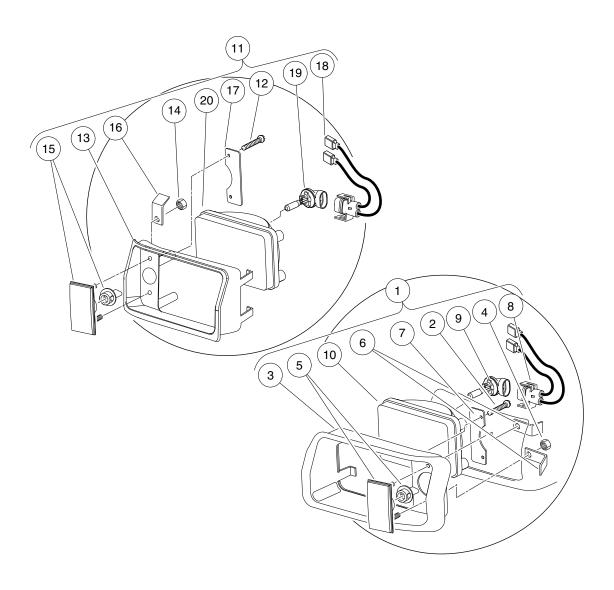








### **HEADLIGHTS**

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	101988001	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	1013461	Screw, #10-16 Hex-Head Hi-Lo	
3	1016880	Headlight Bezel, Left	
4	1017	Nut, #10-24 Stainless-Steel Hex Machine	
5	1017062	Turn Signal Lens Assy	
6	1017064	Mounting Bracket	
7	1017065	Retainer, Headlight	
8	101987901	Connector Harness Assembly, Headlight	
9	101988101	Bulb, Headlight	
10	101988201	Lens, Headlight	
11	101988002	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	
12	1013461	Screw, #10-16 Hex-Head Hi-Lo	
13	1016879	Headlight Bezel, Right	
14	1017	Nut, #10-24 Stainless-Steel Hex Machine	
15	1017062	Turn Signal Lens Assy	
16	1017064	Mounting Bracket	
17	1017065	Retainer, Headlight	
18	101987901	Connector Harness Assembly, Headlight	
9	101988101	Bulb, Headlight	
20	101988201	Lens, Headlight	

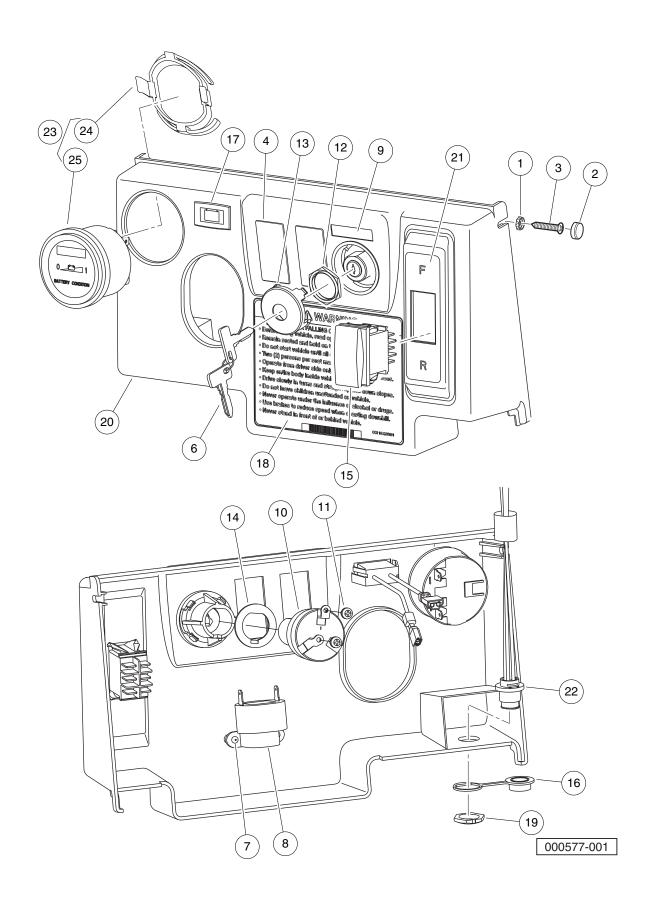






### **INSTRUMENT PANEL WITH ELECTRICAL COMPONENTS**

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	N/A	Washer, #10 Pan-Head Screw	2
2	1013494	Cover, Screw Head	2
3	1015528	Screw, #10 x 1-1/4 Phillips Head	2
4	103180101	Cover, Hole, Switch, Rocker	2
5	N/A	Asm, Dash, Elec, BCI (Instrument Panel) (includes items 6 through 23)	1
6	1012505	Keys (set of 2)	1
7	1016849	Screw, #4-24 X 0.33 Pan-Head Machine	2
8	1016851	Buzzer, Reverse (9-48 VDC)	1
9	101825101	Decal, Off/On	1
10	101826201	Key Switch, On/Off	1
11	101830601	Screw and Washer Assembly	
12	101830701	Nut, Key Switch	
13	101834502	Cap, Black Key Switch	
14	101851101	Washer, Key Switch	
15	101856002	Switch, Rocker, Single-Pole	
16	102196901	Dust Cap	
17	102508701	Light, Battery	
18	102518001	Decal, Operating Instr. Elec	
19	102572401	Nut, Diagnostic Port, Prec	
20	102977002	Panel, Dash, Center, Gas (Instrument Panel)	
21	102977002	Decal, Forward/Reverse, Electric	
	103210301		
22		Harness, Diagnostic Port	
23	103354401	Gauge, Battery Cond Ind, Rnd (includes items 24 and 25)	
24	103348202	Clip, Bci, Round	1
25	N/A	Battery Condition Indicator Gauge	1

13

E

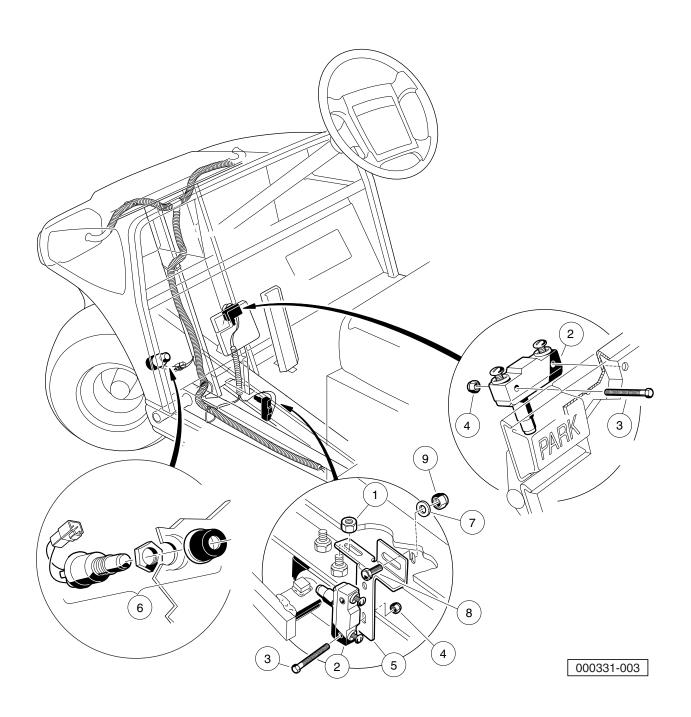






#### **HORN AND BRAKE SWITCHES**

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1011280	Locknut, 5/16-18	1
2	1011439	Switch, Limit	
3	1011557	Screw, #6-32 X 1.00 Hex-Head Machine	
4	101932201	Locknut, #6-32 Nylon	
5	101957101	Bracket, Brake Light Switch	
6	101969701	Horn Button and Wire Assembly	
7	1241	Washer, 5/16 Type A Flat	
8	7173	Screw, 5/16-18 X 0.75 Hex-Head Cap	
9	7473	Locknut, 5/16-18 Nylon Insert	

13

E

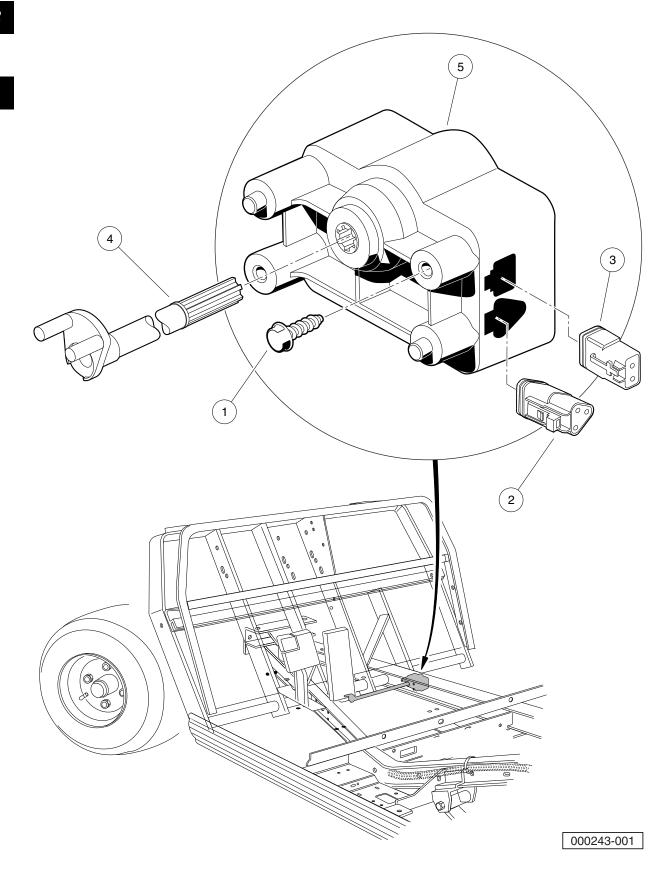






### **MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)**

	14	IOTOR CONTROLLER OUTPUT REGULATOR (MIC	.011)	
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	1015752	Screw, #12-16 X 0.625 Hi-Lo	2	
2	101920101	Kit, 3-Pin Wedge Lock		
3	101936801	Kit, 2-Pin Wedge Lock		
4	102101001	Bar, Drive, Cast		
5				
)	102101101	MCOR	1	

13

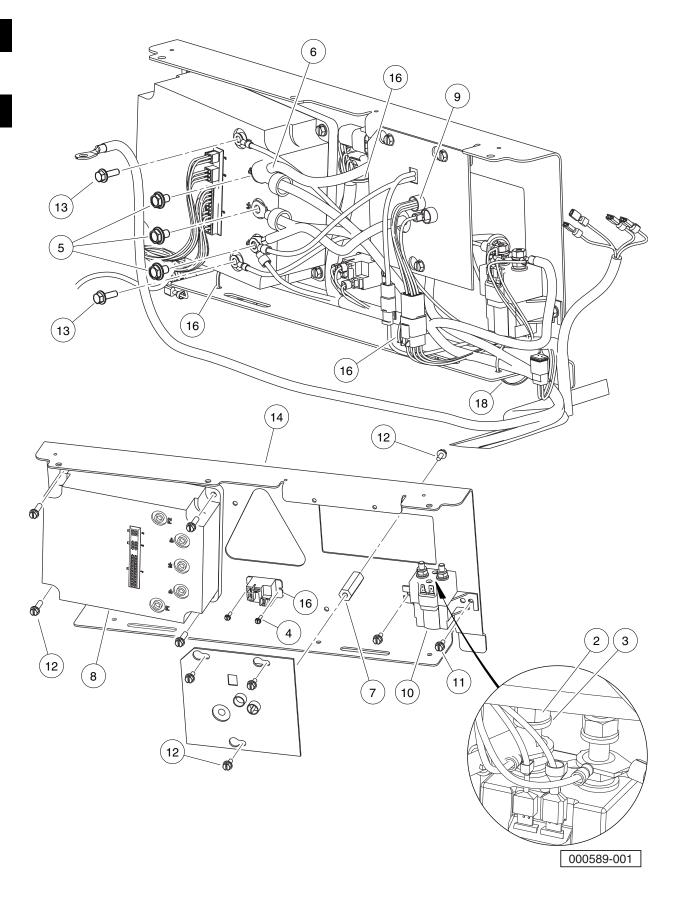






## **ELECTRICAL COMPONENTS – IQ PLUS VEHICLES**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Asm, Electrical Component Box (includes items 2 through 18)	1
2	1012528	Nut, M8-1.25 Hex	2
3	1013734	Lockwasher, 8mm Split	2
4	N/A	Screw, #6-32 X 1/2 Hex Washer-Head	2
5	102240501	Bolt, Controller, Terminal	3
6	102440901	Wire Asm, #4 Yellow, 13"	1
7	102769701	Spacer, 2", 1/4-20, Hex	1
8	102774501	Controller, 500 Amp	1
9	102774601	Computer, Onbrd, 8x 6v, 64"	1
10	102774701	Solenoid, 48v, Ith-150	1
11	102817101	Screw, 1/4-20 X .50 Hex Wsh Hd	6
12	102817201	Screw, 1/4-20 X .88 Hex Wsh Hd	4
13	102859501	Screw, M6 X 1 X 20 Ser Hex Flg	2
14	102912801	Plate, Component, Front	1
15	103414901	Kit, Relay, 48v 30a W/instr (includes items 16 and 17)	1
16	103397901	Relay, Spst No, 48v 30a, Pmt	1
17	N/A	Kit, Relay, 48v 30a Instrns	1
18	8990	Tie Wrap, 8" Nylon	5

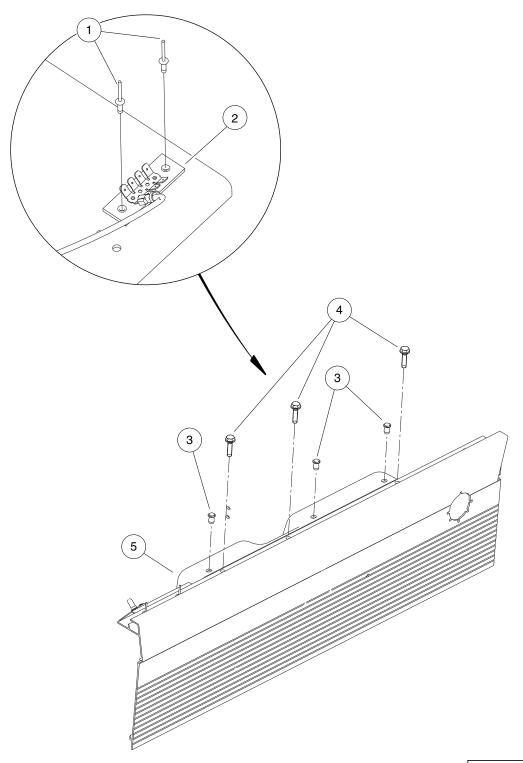








### **ELECTRICAL INSTALLATION**

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1013357	Rivet, 5/32 Aluminum Pop	2
2	1016356	Terminal Block with Insulator	
3	1016967	Blind Rivet, Push Type	
4	102238001	#10-24 Taptite Screw	
5	102772402	Cover, Electrical Component, Carryall 6	
6	8990	Tie Wrap, 8" Nylon	

**DID YOU** 

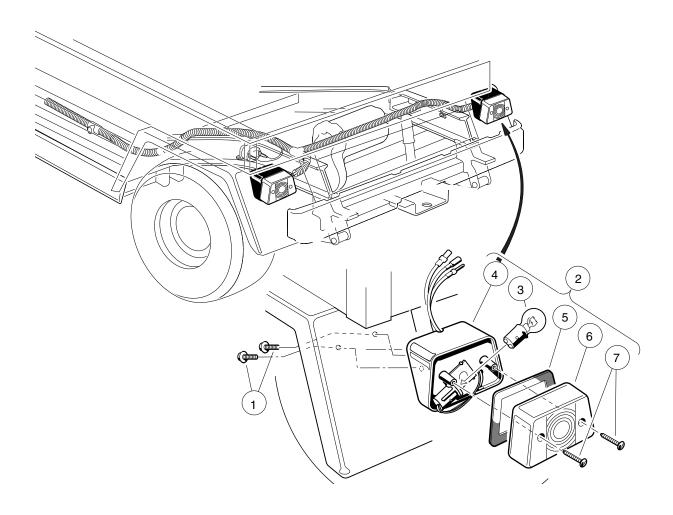








### **TAILLIGHTS**

			IAILLIGHI	<b>J</b>
ITEM	PART NO.	DESCRIPTION	QTY	Y
		1 2 3 4		
1	1015752	Screw, #12-16 X 0.625 Hi-Lo	4	
2	1016717	Light Assembly, Stop/Taillight (includes items 3 through 7)		
3	1011582	Taillight Bulb		
4	N/A	Housing, Taillight		
5	N/A	Gasket, Taillight		
6	N/A	Lens, Taillight		
7	N/A	Screw, Taillight Lens	2	

**DID YOU** 

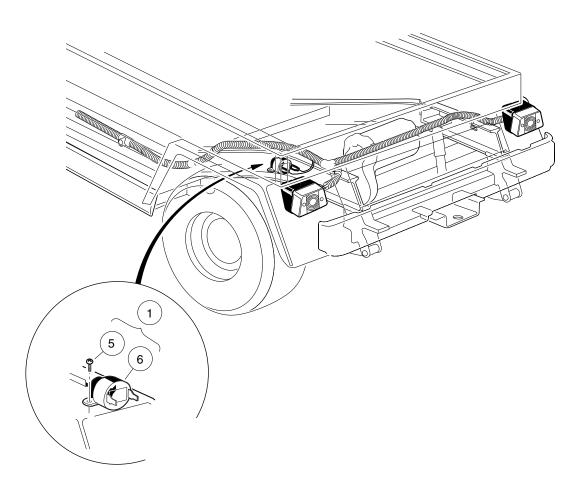








### **REAR REVERSE BUZZER**

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		-
1	1016859	Kit, Reverse Buzzer (includes items 2 through 10)	1	
2	1011229	Locknut, #6-32 Whiz	1	
3	1012431	Washer, #4 Flat	2	
4	N/A	Screw, #6-32 X 1/2 Hex Washer-Head	1	
5	1016849	Screw, #4-24 X 0.33 Pan-Head Machine	2	
6	1016851	Buzzer, Reverse (9-48 VDC)	1	
7	N/A	Wire Assembly Black #18	1	
8	8056	Screw, #4-40 X 0.75 Round-Head Machine		
9	8057	Nut, #4-40 Hex Machine		
10	8058	Lockwasher, #4 Helical Split	2	
		Note: Note: Items 2 through 4 and 7 through 10 are included in the kit, but are not used in this application.		

**DID YOU** 

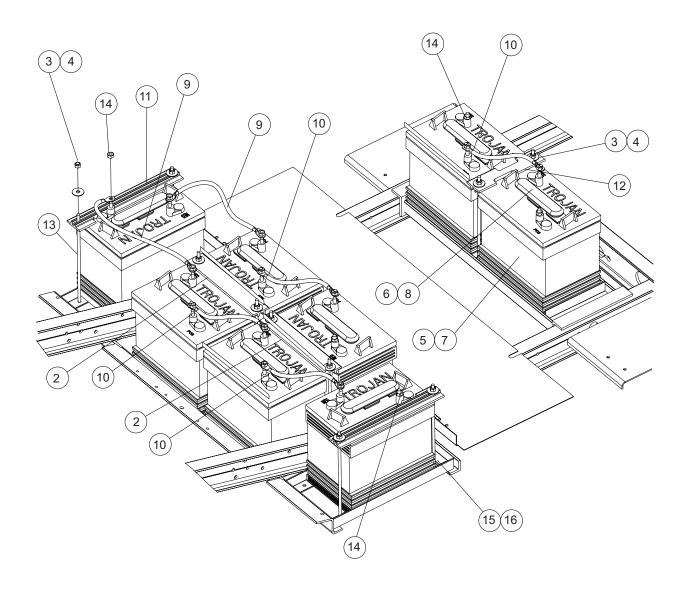








#### **IQ PLUS VEHICLE WITH T-105 BATTERIES**

	T	IQ I E03 VEHICLE WITH I-103 DATTE	1
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Battery Install, Stretch IQ Plus w/T-105 Batteries (includes items 2 through 16)	. 1
2	101090801	Hold-Down, Battery	. 2
3	1012571	Washer, 5/16 Extra Thick Flat	. 10
4	1015072	Locknut, 5/16-18 Nylon Insert	. 10
5	101661601	Battery, 6v Trojan T105 (Wet) (includes item 6)	. 8
6	101831401	Battery Cap 6 Volt	. 1
7	101661602	Battery, 6v Trojan T105 (Dry, also known as moist) (includes item 8)	. 8
8	101831401	Battery Cap 6 Volt	. 1
9	102002801	Wire Assy, #4 Black	. 2
10	102002901	Wire Assy, #4 Black	
11	102766201	Hold Down, Outside	
12	102830301	Hold Down, Front Center	. 1
13	102845203	Rod, Battery Hold Down 10.7"	
14	102873401	5/16-18 Heavy Hex Nut	
15	102980801	Extr, Plastic, 1 X 1 X 3	
16	102980901	Clamp, Hose, Nylon, .25	

**DID YOU** 

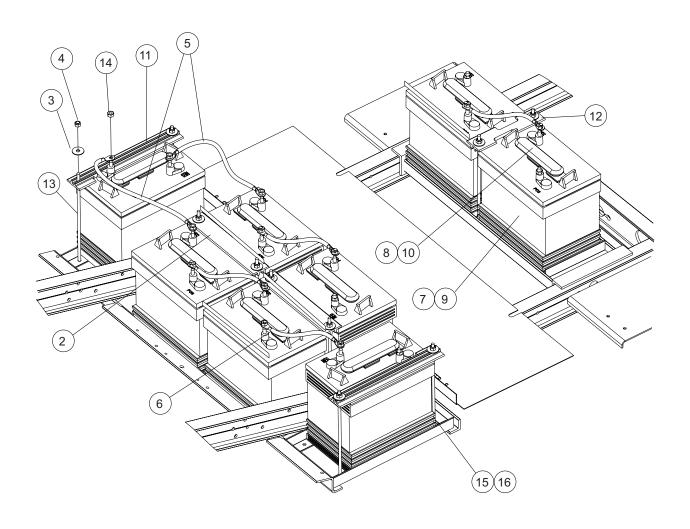

000410-002







#### **IQ PLUS VEHICLE WITH T-145 BATTERIES**

	T	IQ I LOS VEINCEE WITH I-143 DATTE	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Battery Install, Stretch IQ Plus w/T-145 Batteries (includes items 2 through 16)	1
2	101090801	Hold-Down, Battery	2
3	1012571	Washer, 5/16 Extra Thick Flat	10
4	1015072	Locknut, 5/16-18 Nylon Insert	10
5	102002801	Wire Assy, #4 Black	2
6	102002901	Wire Assy, #4 Black	4
7	102764401	Battery, 6v Trojan T145 (wet) (includes item 8)	8
8	101831401	Battery Cap 6 Volt	1
9	102764402	Battery, 6v Trojan T145 (Dry, also known as moist) (includes item 10)	8
10	101831401	Battery Cap 6 Volt	1
11	102766201	Hold Down, Outside	2
12	102830301	Hold Down, Front Center	1
13	102845204	Rod, Battery Hold Down 12"	12
14	102873401	5/16-18 Heavy Hex Nut	16
15	102980801	Extr, Plastic, 1 X 1 X 3	2
16	102980901	Clamp, Hose, Nylon, .25	



13

:








# **ELECTRIC MOTOR**

14



E

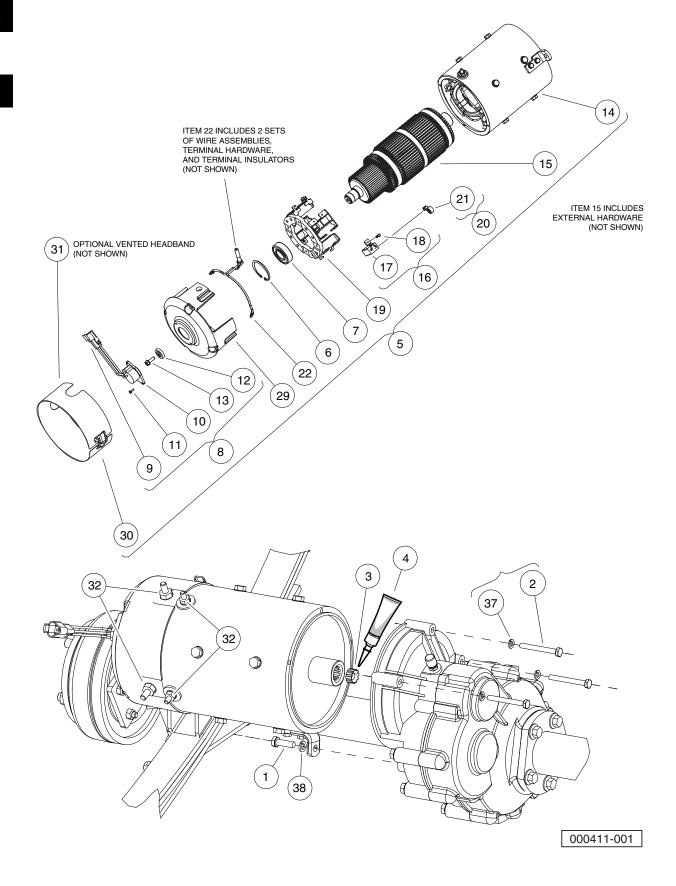





## **MOTOR (MODEL DA5-4006) - IQ PLUS**

	PART NO.	DESCRIPTION	Q
		1 2 3 4	
1	1010934	Screw, 5/16-18 X 1.00 Hex Cap	
2	1014201	Screw, 1/4-20 X 2.25 Hex Cap	
3	102235201	Bumper, Drive Unit	
4	102243403	Lubricant, Moly-Teflon (Single-Use Tube)	
5	102775101	IQ Plus Electric Motor, 48-VDC 3.7 hp (includes items 6 through 30)	
6	N/A	Ring, 2.24" Internal Retaining	
7	102186401	Bearing, Ball	
8	102704901	Kit, Speed Sensor (includes items 9 through 13)	
9	101942301	Kit, 3-Pin Wedge Lock	
10	N/A	Sensor, Motor Speed, ADC	
11	N/A	Screw, #8-32, Taptite Thread	
12	N/A	Magnet, ADC Motor	
13	N/A	Screw, 1/4-20 x 0.5	
14	N/A	Asm, Frame And Field, 3.7 Hp	
15	N/A	Armature (Includes external hardware - not shown)	
16	102938601	Kit, Brush, 3.7 Hp (includes items 17 and 18)	
17	N/A	Brush, Motor	
18	N/A	Screw, Taptite	
19	102938701	Asm, Brush Box, 3.7 Hp	
20	102938801	Kit, Brush Spring, 3.7 Hp (includes item 21)	
21	N/A	Brush Spring	
22	102938901	Kit, Brush Lead Asm, 3.7 Hp (includes items 23 through 28)	
23	N/A	Terminal and Lead Assembly	
24	N/A	Insulator, Terminal	
25	N/A	Washer, Insulating	
26	N/A	Washer, Flat, 5/16, Brass/Bronze	
27	N/A	Nut, 5/16, Steel	
28	N/A	Lockwasher, 5/16, Steel	
29	102939001	Commutator End Head, 3.7 Hp	
30	102939101	Sealed Headband, 3.7 Hp	
31	102939102	Vented Headband, 3.7 HP (optional - not shown)	
32	102951701	Pkg, Terminal Hardware, 3.7hp (includes items 33 through 36)	
33	N/A	Nut, 5/16, Steel	
34	N/A	Lockwasher, 5/16, Steel	
35	N/A	Nut, 1/4-20, Steel	
36	N/A	Lockwasher, 1/4-20, Steel	
37	451	Lockwasher, 1/4 Helical Split	
38	7174	Lockwasher, 5/16 Split	










## TRANSAXLE - ELECTRIC VEHICLES

**15** 

F



**DID YOU** 

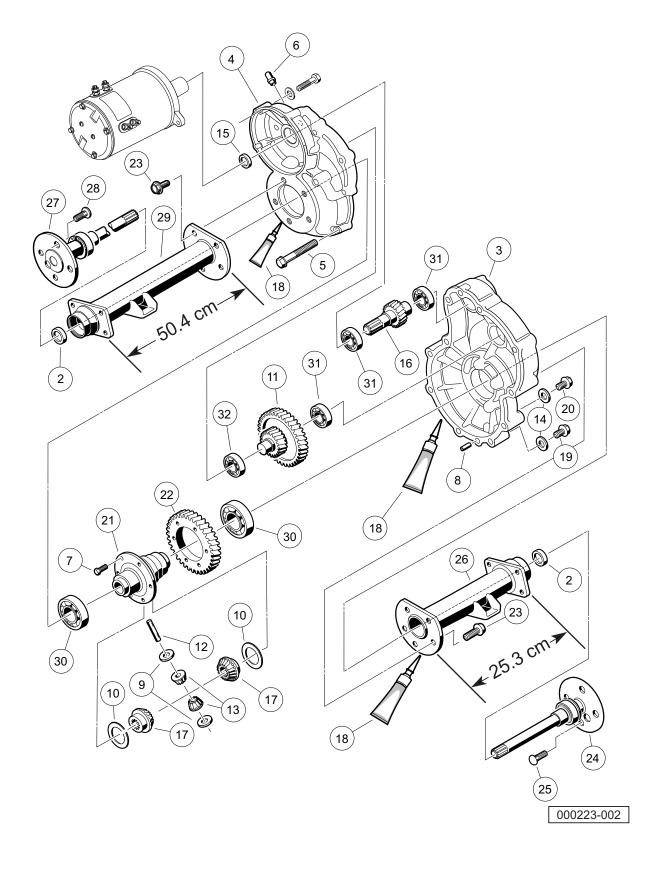





#### TRANSAXLE - ELECTRIC VEHICLES

	PART NO.	DESCRIPTION	Q
		1 2 3 4	
1	102771701	Transaxle, Electric (includes items 2 through 32)	
2	1013794	Axle Shaft Oil Seal	
3	101895401	Gear Case, Left-Hand	
4	101895501	Gear Case, Passenger-Side	
5	101897001	Screw, M8-1.25 X 60mm Hex-Head	1
6	101897201	Breather	
7	101897401	Screw, M10-1.25 X 25mm	6
8	101897601	Pin, 11mm OD X 8.5mm ID X 10mm	:
9	101903601	Washer, Thrust	2
10	101903701	Washer, Thrust	1
11	101906901	Intermediate Shaft Assembly	
12	101922101	Pin, 15.99mm X 88.7mm Dowel	
13	101923001	Gear, Differential Idler	
14	101923201	Gasket	
15	101923501	Seal, Lip	] -
16	101923701	Shaft, Input	
17	101923901	Gear, Differential	;
18	101928701	Liquid Gasket (Transaxle case)	A
19	101972101	Plug, M14-1.5 X 12mm Magnetic	
20	101972101	Plug, M14-1.5 X 12mm Hex	
21	102356601	Housing, Differential, 6 Bolt	
22	102356801	Gear, Differential Output, 6-Bolt	
23	102357001	Screw, Flg Hd M10 X 1.5 X 30	1
24	102337001	Axle Assembly, Driver-Side (includes item 25)	<b>'</b> .
25	101922201	Lug Stud	
26	101322201	Tube, Axle, Driver-Side	]
27	102886501	Axle Assembly, Passenger-Side (includes item 28)	
28	101922201	Lug Stud	
29	101922201	Tube, Axle, Passenger-Side	,
30	7330		2
31	7335	Inner Axle Tube Bearing  Bearing	3
32	7336	Bearing	



*15* 

•








## **BATTERY CHARGER**

16



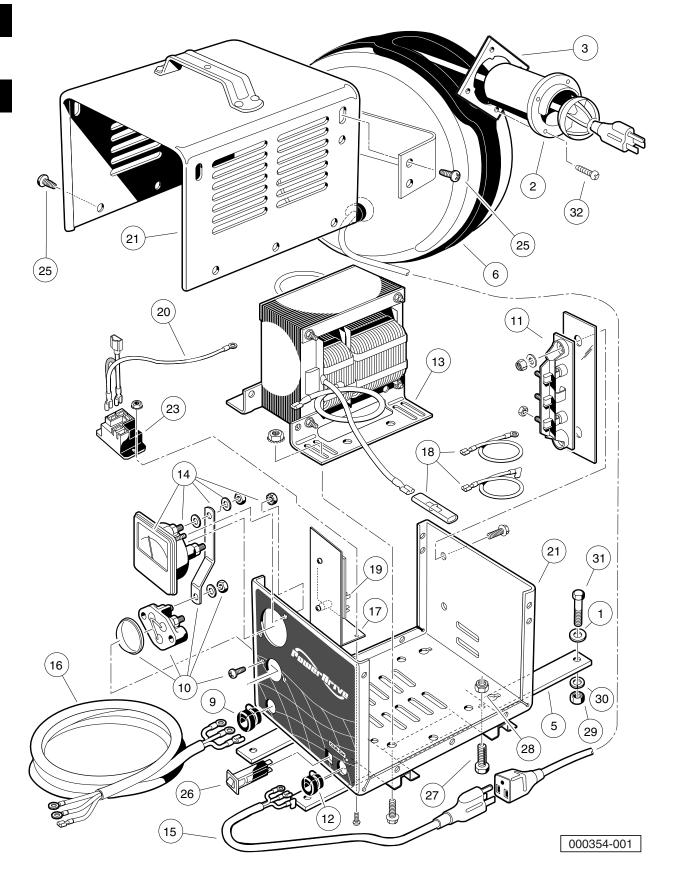

**ITEM** 

28

29

30

31

32

8233

1028

451

7479

8796

PART NO.

**DESCRIPTION** 

1 2 3 4

QTY

### (IVIOULL 17935), **DOMESTIC**

		1 2 3 4	1	
1	1014306	Washer, 1/4" Type B Flat	4	
2	1016673	Housing, Cord Reel	1	
3	101801001	Plate, Receptacle Backing	1	
4	101814301	Battery Charger and Reel Assembly (includes items 5 through 28)	1	
5	1011707	Bracket, Mounting, Battery Charger	2	
6	1017187	Retractable Cord Reel	1	
7	N/A	Heat Shrink Tube 1.5"x 4'	1	
8	101802301	Battery Charger, Onboard, 120-VAC, 48-VDC (includes items 9 through 26)	1	
9	1012098	Bushing, DC Cord	1	
10	1012101	Fuse Assembly	1	
11	N/A	Rectifier with Heatsink Assembly	1	
12	1015917	Bushing, AC Cord	1	
13	***	Transformer, Battery Charger	1	
14	101828501	Ammeter	1	
15	101829001	Cord, AC, 22-Inch (56 cm)	1	
16	101829101	Cord, DC, 90.5-Inch (230 cm)	1	
17	****	Mounting Bracket, Relay	1	
18	N/A	Kit, Wire Assembly	1	
19	101841901	Control Board	1	
20	101914401	Assembly, Voltage Suppressor	1	
21	N/A	Case, Charger	1	
22	103414901	Kit, Relay, 48v 30a W/instr (includes items 23 and 24)	1	
23	103397901	Relay, Spst No, 48v 30a, Pmt	1	
24	N/A	Kit, Relay, 48v 30a Instrns	1	
25	7577	Screw, #10 X 0.50 Phillips Pan-Head	12	
26	CCX8506	Circuit Breaker, 15-Amp/120-Volt	1	
27	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	4	

\*\*\*\* Special order item available upon request.

Note: Item 7 not shown.

4

4

4

4

4


Locknut, 1/4-20 Nylon Insert .....

Screw, 1/4-20 X 1.25 Hex-Head Cap ......

Nut, 1/4-20 Hex .....

Lockwasher, 1/4 Helical Split .....


Screw, #7-19 X 0.75 Pan-Head Type AB .....

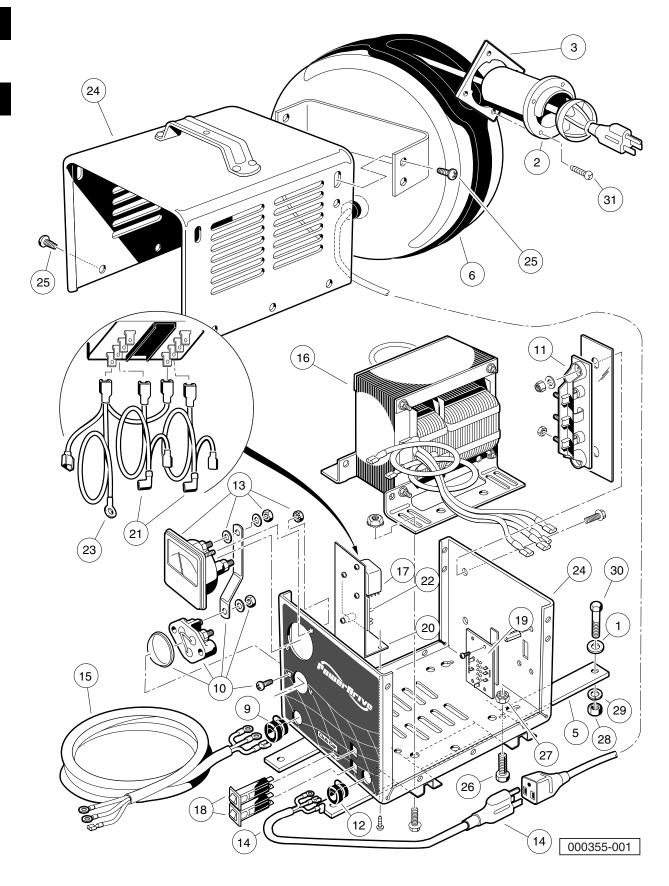

#### ∟L 17790), **EXPORT**

1 2 3 4  Washer, 1/4" Type B Flat
Housing, Cord Reel Plate, Receptacle Backing Battery Charger and Reel Assembly (includes items 5 through 27) Bracket, Mounting, Battery Charger Retractable Cord Reel Heat Shrink Tube 1.5"x 4' Battery Charger, Onboard, 48-Volt DC (includes items 9 through 25) Bushing, DC Cord Fuse Assembly Rectifier with Heatsink Assembly Bushing, AC Cord
Plate, Receptacle Backing
Battery Charger and Reel Assembly (includes items 5 through 27)  Bracket, Mounting, Battery Charger  Retractable Cord Reel  Heat Shrink Tube 1.5"x 4'  Battery Charger, Onboard, 48-Volt DC (includes items 9 through 25)  Bushing, DC Cord  Fuse Assembly  Rectifier with Heatsink Assembly  Bushing, AC Cord
Bracket, Mounting, Battery Charger
Retractable Cord Reel
Heat Shrink Tube 1.5"x 4'
Battery Charger, Onboard, 48-Volt DC (includes items 9 through 25)  Bushing, DC Cord  Fuse Assembly  Rectifier with Heatsink Assembly  Bushing, AC Cord
Bushing, DC Cord
Fuse Assembly
Rectifier with Heatsink Assembly  Bushing, AC Cord
Bushing, AC Cord
Ammeter
Cord, AC, 22-Inch (56 cm)
Cord, DC, 90.5-Inch (230 cm)
Transformer, Export Battery Charger
Relay, Export Charger
Circuit Breaker
Four-Position Switch
Mounting Bracket, Relay
Kit, Wire Assembly
Control Board
Assembly, Voltage Suppressor
Case, Charger
Screw, #10 X 0.50 Phillips Pan-Head
Screw, 1/4-20 X 0.75 Hex-Head Cap
B Locknut, 1/4-20 Nylon Insert
3 Nut, 1/4-20 Hex
Lockwasher, 1/4 Helical Split
5 Screw, #7-19 X 0.75 Pan-Head Type AB
**** Special order item available upon request.
Note: Item 7 not shown.
3   

E

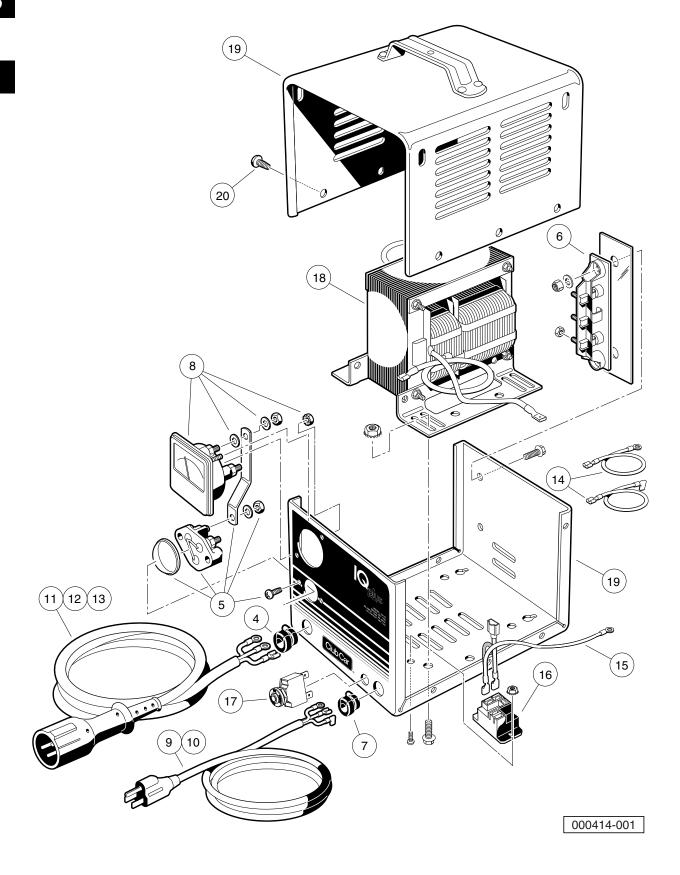






#### **IQ PLUS DOMESTIC BATTERY CHARGER (MODEL 25730)**

1 102847801 48-V/17-A IQ Plus (9-ft. DC Cord, 6-ft. AC Cord)	TEM PART NO.	DESCRIPTION
2       102847802       48-V/17-A IQ Plus (12-ft. DC Cord, 9-ft. AC Cord)         3       102847803       48-V/17-A IQ Plus (20-ft. DC Cord, 9-ft. AC Cord) (includes items 4 through 20)         4       1012098       Bushing, DC Cord         5       1012101       Fuse Assembly         6       N/A       Rectifier with Heatsink Assembly         7       1015917       Bushing, AC Cord         8       101828501       Ammeter         9       101828801       Cord, AC, 80-Inch (203 cm)         10       101828802       Cord, AC, 108-Inch (274 cm)         11       101828901       Cord, DC, 113-Inch (287 cm)         12       101828902       Cord, DC, 154-Inch (391 cm)         13       101828903       Cord, DC, 250-Inch (635 cm)         14       101831101       Wire Assembly Kit         15       101914401       Assembly, Voltage Suppressor         16       102275401       Relay, 48-VDC         17       102838101       Circuit Breaker 250vac-50vdc         18       N/A       Transformer, Battery Charger         19       N/A       Case, Battery Charger		1 2 3 4
3       102847803       48-V/17-A IQ Plus (20-ft. DC Cord, 9-ft. AC Cord) (includes items 4 through 20)	1 102847801	48-V/17-A IQ Plus (9-ft. DC Cord, 6-ft. AC Cord)
44       1012098       Bushing, DC Cord         55       1012101       Fuse Assembly         66       N/A       Rectifier with Heatsink Assembly         77       1015917       Bushing, AC Cord         8       101828501       Ammeter         99       101828801       Cord, AC, 80-Inch (203 cm)         100       101828802       Cord, AC, 108-Inch (274 cm)         101       101828901       Cord, DC, 113-Inch (287 cm)         102       101828902       Cord, DC, 154-Inch (391 cm)         103       101828903       Cord, DC, 250-Inch (635 cm)         104       101831101       Wire Assembly Kit         105       101914401       Assembly, Voltage Suppressor         106       102275401       Relay, 48-VDC         107       102838101       Circuit Breaker 250vac-50vdc         108       N/A       Transformer, Battery Charger	2 102847802	48-V/17-A IQ Plus (12-ft. DC Cord, 9-ft. AC Cord)
5       1012101       Fuse Assembly         6       N/A       Rectifier with Heatsink Assembly         7       1015917       Bushing, AC Cord         8       101828501       Ammeter         9       101828801       Cord, AC, 80-Inch (203 cm)         10       101828802       Cord, AC, 108-Inch (274 cm)         11       101828901       Cord, DC, 113-Inch (287 cm)         12       101828902       Cord, DC, 154-Inch (391 cm)         13       101828903       Cord, DC, 250-Inch (635 cm)         14       101831101       Wire Assembly Kit         15       101914401       Assembly, Voltage Suppressor         16       102275401       Relay, 48-VDC         17       102838101       Circuit Breaker 250vac-50vdc         18       N/A       Transformer, Battery Charger         19       N/A       Case, Battery Charger	3 102847803	48-V/17-A IQ Plus (20-ft. DC Cord, 9-ft. AC Cord) (includes items 4 through 20)
6       N/A       Rectifier with Heatsink Assembly         7       1015917       Bushing, AC Cord         8       101828501       Ammeter         9       101828801       Cord, AC, 80-Inch (203 cm)         10       101828802       Cord, AC, 108-Inch (274 cm)         11       101828901       Cord, DC, 113-Inch (287 cm)         12       101828902       Cord, DC, 154-Inch (391 cm)         13       101828903       Cord, DC, 250-Inch (635 cm)         14       101831101       Wire Assembly Kit         15       101914401       Assembly, Voltage Suppressor         16       102275401       Relay, 48-VDC         17       102838101       Circuit Breaker 250vac-50vdc         18       N/A       Transformer, Battery Charger         19       N/A       Case, Battery Charger	4 1012098	Bushing, DC Cord
7       1015917       Bushing, AC Cord	5 1012101	Fuse Assembly
8       101828501       Ammeter	6 N/A	
9       101828801       Cord, AC, 80-Inch (203 cm)         10       101828802       Cord, AC, 108-Inch (274 cm)         11       101828901       Cord, DC, 113-Inch (287 cm)         12       101828902       Cord, DC, 154-Inch (391 cm)         13       101828903       Cord, DC, 250-Inch (635 cm)         14       101831101       Wire Assembly Kit         15       101914401       Assembly, Voltage Suppressor         16       102275401       Relay, 48-VDC         17       102838101       Circuit Breaker 250vac-50vdc         18       N/A       Transformer, Battery Charger         19       N/A       Case, Battery Charger	7 1015917	Bushing, AC Cord
9       101828801       Cord, AC, 80-Inch (203 cm)         10       101828802       Cord, AC, 108-Inch (274 cm)         11       101828901       Cord, DC, 113-Inch (287 cm)         12       101828902       Cord, DC, 154-Inch (391 cm)         13       101828903       Cord, DC, 250-Inch (635 cm)         14       101831101       Wire Assembly Kit         15       101914401       Assembly, Voltage Suppressor         16       102275401       Relay, 48-VDC         17       102838101       Circuit Breaker 250vac-50vdc         18       N/A       Transformer, Battery Charger         19       N/A       Case, Battery Charger	8 101828501	Ammeter
11       101828901       Cord, DC, 113-Inch (287 cm)         12       101828902       Cord, DC, 154-Inch (391 cm)         13       101828903       Cord, DC, 250-Inch (635 cm)         14       101831101       Wire Assembly Kit         15       101914401       Assembly, Voltage Suppressor         16       102275401       Relay, 48-VDC         17       102838101       Circuit Breaker 250vac-50vdc         18       N/A       Transformer, Battery Charger         19       N/A       Case, Battery Charger	9 101828801	
11       101828901       Cord, DC, 113-Inch (287 cm)         12       101828902       Cord, DC, 154-Inch (391 cm)         13       101828903       Cord, DC, 250-Inch (635 cm)         14       101831101       Wire Assembly Kit         15       101914401       Assembly, Voltage Suppressor         16       102275401       Relay, 48-VDC         17       102838101       Circuit Breaker 250vac-50vdc         18       N/A       Transformer, Battery Charger         19       N/A       Case, Battery Charger	10 101828802	Cord, AC, 108-Inch (274 cm)
13       101828903       Cord, DC, 250-Inch (635 cm)         14       101831101       Wire Assembly Kit         15       101914401       Assembly, Voltage Suppressor         16       102275401       Relay, 48-VDC         17       102838101       Circuit Breaker 250vac-50vdc         18       N/A       Transformer, Battery Charger         19       N/A       Case, Battery Charger	11 101828901	
13       101828903       Cord, DC, 250-Inch (635 cm)         14       101831101       Wire Assembly Kit         15       101914401       Assembly, Voltage Suppressor         16       102275401       Relay, 48-VDC         17       102838101       Circuit Breaker 250vac-50vdc         18       N/A       Transformer, Battery Charger         19       N/A       Case, Battery Charger		
14       101831101       Wire Assembly Kit		
15       101914401       Assembly, Voltage Suppressor         16       102275401       Relay, 48-VDC         17       102838101       Circuit Breaker 250vac-50vdc         18       N/A       Transformer, Battery Charger         19       N/A       Case, Battery Charger		
16       102275401       Relay, 48-VDC         17       102838101       Circuit Breaker 250vac-50vdc         18       N/A       Transformer, Battery Charger         19       N/A       Case, Battery Charger		
17       102838101       Circuit Breaker 250vac-50vdc		
18 N/A Transformer, Battery Charger		·
19 N/A Case, Battery Charger		
	19 N/A	
		, -

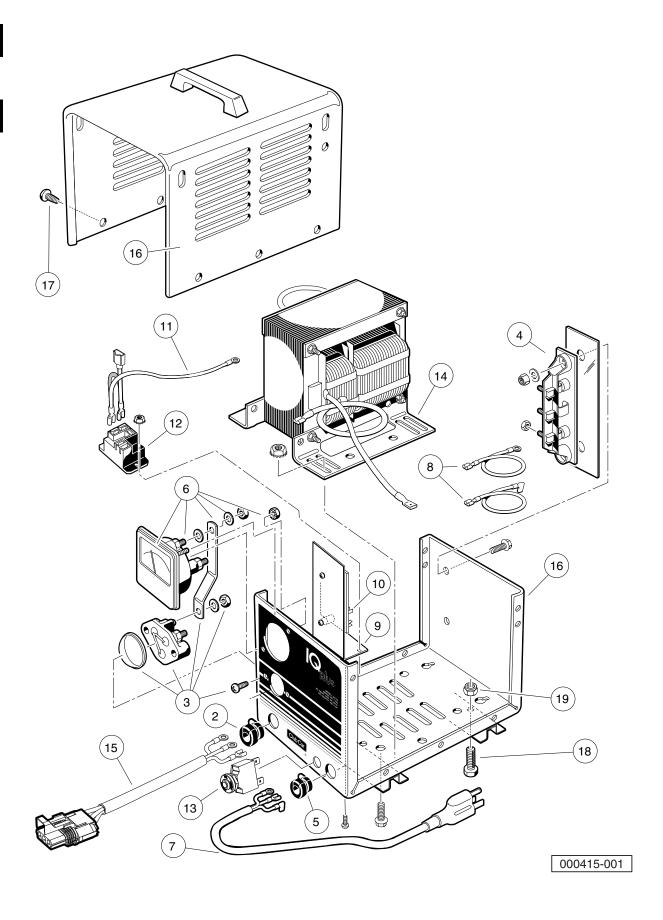






#### **IQ PLUS ONBOARD BATTERY CHARGER (MODEL 25260)**

2 1012098 Bushing, DC Cord	PART NO.	O. DESCRIPTION	QT
2       1012098       Bushing, DC Cord         3       1012101       Fuse Assembly         4       N/A       Rectifier with Heatsink Assembly         5       1015917       Bushing, AC Cord         6       101828501       Ammeter         7       101829001       Cord, AC, 22-Inch (56 cm)         8       101831101       Wire Assembly Kit         9       *****       Mounting Bracket, Relay         10       101841901       Control Board         11       101914401       Assembly, Voltage Suppressor         12       102275401       Relay, 48-VDC         13       102838101       Circuit Breaker 250vac-50vdc         14       N/A       Transformer, Battery Charger         15       102940801       Cord, Dc         16       N/A       Case, Battery Charger         17       7577       Screw, #10 X 0.50 Phillips Pan-Head         18       7847       Screw, 1/4-20 X 0.75 Hex-Head Cap         19       8233       Locknut, 1/4-20 Nylon Insert		1 2 3 4	
3       1012101       Fuse Assembly         4       N/A       Rectifier with Heatsink Assembly         5       1015917       Bushing, AC Cord         6       101828501       Ammeter         7       101829001       Cord, AC, 22-Inch (56 cm)         8       101831101       Wire Assembly Kit         9       *****       Mounting Bracket, Relay         10       101841901       Control Board         11       101914401       Assembly, Voltage Suppressor         12       102275401       Relay, 48-VDC         13       102838101       Circuit Breaker 250vac-50vdc         14       N/A       Transformer, Battery Charger         15       102940801       Cord, Dc         16       N/A       Case, Battery Charger         17       7577       Screw, #10 X 0.50 Phillips Pan-Head         18       7847       Screw, 1/4-20 X 0.75 Hex-Head Cap         19       8233       Locknut, 1/4-20 Nylon Insert	102837001	01 Battery Charger, Onboard, 120-VAC, 48-VDC (includes items 2 through 19)	1
4       N/A       Rectifier with Heatsink Assembly         5       1015917       Bushing, AC Cord         6       101828501       Ammeter         7       101829001       Cord, AC, 22-Inch (56 cm)         8       101831101       Wire Assembly Kit         9       *****       Mounting Bracket, Relay         10       101841901       Control Board         11       101914401       Assembly, Voltage Suppressor         12       102275401       Relay, 48-VDC         13       102838101       Circuit Breaker 250vac-50vdc         14       N/A       Transformer, Battery Charger         15       102940801       Cord, Dc         16       N/A       Case, Battery Charger         17       7577       Screw, #10 X 0.50 Phillips Pan-Head         18       7847       Screw, 1/4-20 X 0.75 Hex-Head Cap         19       8233       Locknut, 1/4-20 Nylon Insert	1012098	98 Bushing, DC Cord	1
5       1015917       Bushing, AC Cord         6       101828501       Ammeter         7       101829001       Cord, AC, 22-Inch (56 cm)         8       101831101       Wire Assembly Kit         9       *****       Mounting Bracket, Relay         10       101841901       Control Board         11       101914401       Assembly, Voltage Suppressor         12       102275401       Relay, 48-VDC         13       102838101       Circuit Breaker 250vac-50vdc         14       N/A       Transformer, Battery Charger         15       102940801       Cord, Dc         16       N/A       Case, Battery Charger         17       7577       Screw, #10 X 0.50 Phillips Pan-Head         18       7847       Screw, 1/4-20 X 0.75 Hex-Head Cap         19       8233       Locknut, 1/4-20 Nylon Insert	1012101	01 Fuse Assembly	1
5       1015917       Bushing, AC Cord         6       101828501       Ammeter         7       101829001       Cord, AC, 22-Inch (56 cm)         8       101831101       Wire Assembly Kit         9       *****       Mounting Bracket, Relay         10       101841901       Control Board         11       101914401       Assembly, Voltage Suppressor         12       102275401       Relay, 48-VDC         13       102838101       Circuit Breaker 250vac-50vdc         14       N/A       Transformer, Battery Charger         15       102940801       Cord, Dc         16       N/A       Case, Battery Charger         17       7577       Screw, #10 X 0.50 Phillips Pan-Head         18       7847       Screw, 1/4-20 X 0.75 Hex-Head Cap         19       8233       Locknut, 1/4-20 Nylon Insert	N/A	/A Rectifier with Heatsink Assembly	1
6       101828501       Ammeter         7       101829001       Cord, AC, 22-Inch (56 cm)         8       101831101       Wire Assembly Kit         9       *****       Mounting Bracket, Relay         10       101841901       Control Board         11       101914401       Assembly, Voltage Suppressor         12       102275401       Relay, 48-VDC         13       102838101       Circuit Breaker 250vac-50vdc         14       N/A       Transformer, Battery Charger         15       102940801       Cord, Dc         16       N/A       Case, Battery Charger         17       7577       Screw, #10 X 0.50 Phillips Pan-Head         18       7847       Screw, 1/4-20 X 0.75 Hex-Head Cap         19       8233       Locknut, 1/4-20 Nylon Insert	1015917	·	1
7       101829001       Cord, AC, 22-Inch (56 cm)         8       101831101       Wire Assembly Kit         9       *****       Mounting Bracket, Relay         10       101841901       Control Board         11       101914401       Assembly, Voltage Suppressor         12       102275401       Relay, 48-VDC         13       102838101       Circuit Breaker 250vac-50vdc         14       N/A       Transformer, Battery Charger         15       102940801       Cord, Dc         16       N/A       Case, Battery Charger         17       7577       Screw, #10 X 0.50 Phillips Pan-Head         18       7847       Screw, 1/4-20 X 0.75 Hex-Head Cap         19       8233       Locknut, 1/4-20 Nylon Insert	101828501		1
8       101831101       Wire Assembly Kit			1
9       *****       Mounting Bracket, Relay	101831101		1
10       101841901       Control Board			1
11       101914401       Assembly, Voltage Suppressor         12       102275401       Relay, 48-VDC         13       102838101       Circuit Breaker 250vac-50vdc         14       N/A       Transformer, Battery Charger         15       102940801       Cord, Dc         16       N/A       Case, Battery Charger         17       7577       Screw, #10 X 0.50 Phillips Pan-Head         18       7847       Screw, 1/4-20 X 0.75 Hex-Head Cap         19       8233       Locknut, 1/4-20 Nylon Insert	101841901		1
12       102275401       Relay, 48-VDC			1
13       102838101       Circuit Breaker 250vac-50vdc         14       N/A       Transformer, Battery Charger         15       102940801       Cord, Dc         16       N/A       Case, Battery Charger         17       7577       Screw, #10 X 0.50 Phillips Pan-Head         18       7847       Screw, 1/4-20 X 0.75 Hex-Head Cap         19       8233       Locknut, 1/4-20 Nylon Insert			1
14       N/A       Transformer, Battery Charger			1
15       102940801       Cord, Dc			1
16       N/A       Case, Battery Charger         17       7577       Screw, #10 X 0.50 Phillips Pan-Head         18       7847       Screw, 1/4-20 X 0.75 Hex-Head Cap         19       8233       Locknut, 1/4-20 Nylon Insert	-	, ,	1
17       7577       Screw, #10 X 0.50 Phillips Pan-Head         18       7847       Screw, 1/4-20 X 0.75 Hex-Head Cap         19       8233       Locknut, 1/4-20 Nylon Insert			
18 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap	-		1
19 8233 Locknut, 1/4-20 Nylon Insert		·	12
			4 4






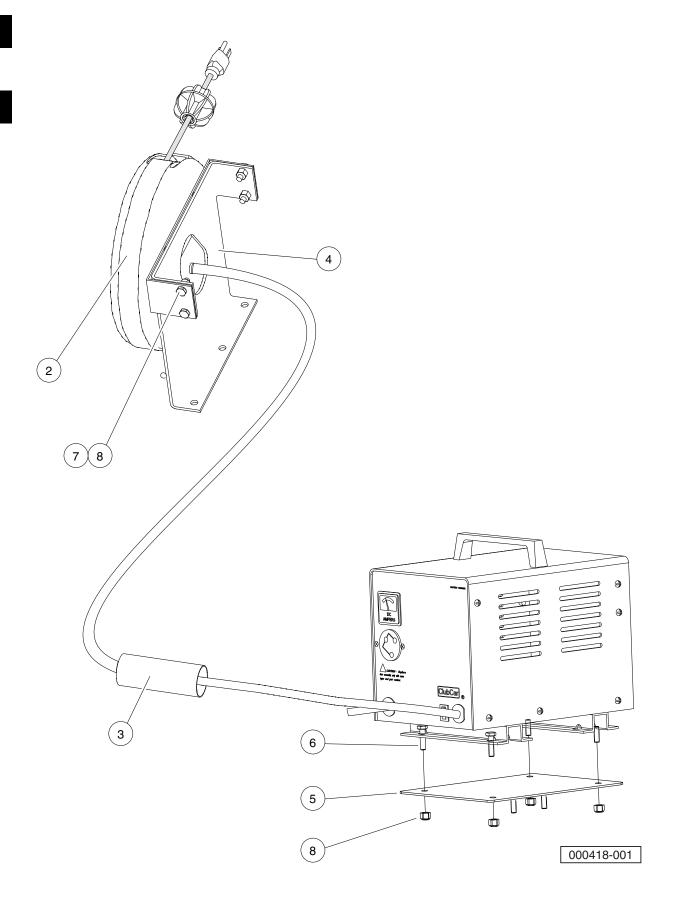

#### AND REEL با **MOUNTING**

ITEM	PART NO.	DESCRIPTION	QTY	1
		1 2 3 4		
1	N/A	Installation, Onboard IQ Plus Charger (includes items 2 through 8)	. 1	
2	1017187	Retractable Cord Reel		
3	N/A	Heat Shrink Tube 1.5"x 4'	A/R	
4	102770701	Bracket, Reel, Tabbed	. 1	
5	102942601	Asm, Plate, Charger Mounting	. 1	
6	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	. 4	
7	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	. 4	
8	8233	Locknut, 1/4-20 Nylon Insert	. 8	
	1		Ī	

E

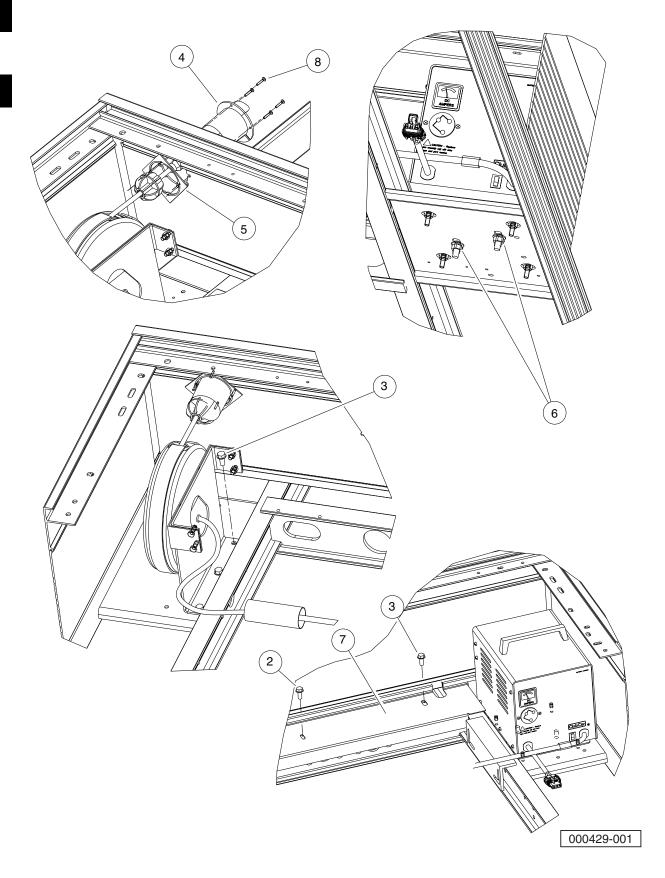






#### **IQ PLUS ONBOARD CHARGER (MODEL 25260) MOUNTING**

IQ I E03 ONDOAND CHANGEN (MODEL 23200) MOONTIN				
ITEM	PART NO.	DESCRIPTION	QTY	1
		1 2 3 4		
1	N/A	Installation, Charger System, HDIQ CA 6 (includes items 2 through 8)	1	
2	1014063	Screw, 1/4-20 X 1.00 Hex Head	1	E
3	1014288	Screw, 5/16-18 X 0.75 Thread-Forming	4	
4	1016673	Housing, Cord Reel	1	
5	101801001	Plate, Receptacle Backing	1	
6	101832901	Nut, M10-1.25 Hex Flange	2	
7	103352701	Asm, Shield, Iq Plus Ob Chgr,	1	
8	8796	Screw, #7-19 X 0.75 Pan-Head Type AB	4	

E

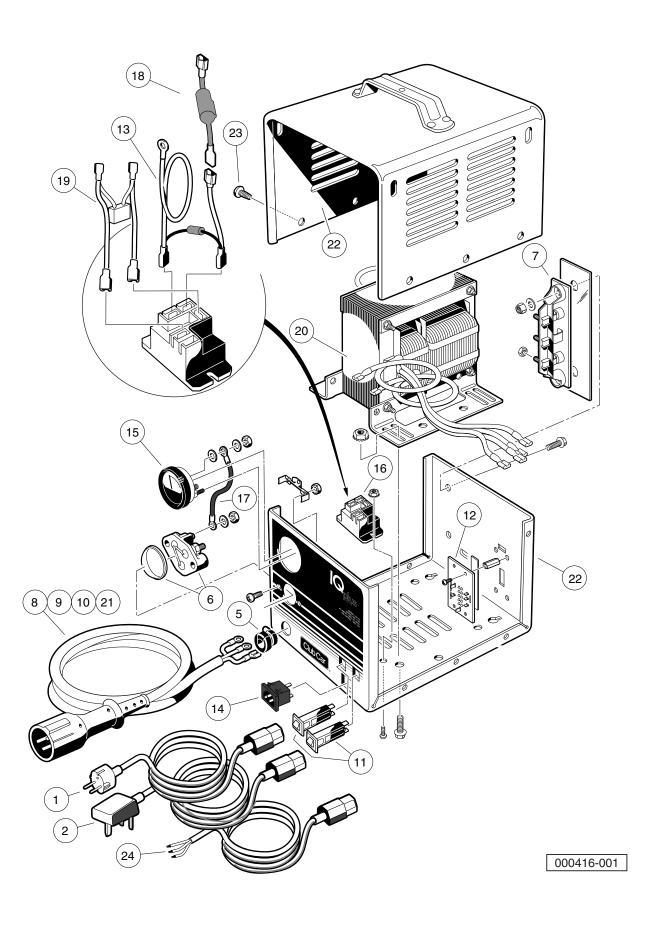




CartPros directs you to the right part using the part numbers from this manual. Enter the part number into our search box and it will find the part you are looking for.


# https://CartPros.com/f.html
 
#### MULIN (IVIOULL 25880), **EXPORT AND EUROPEAN**



ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101958201	Cord, UK, AC, Battery Charger	1
2	101958301	Cord, European AC, Battery Charger	1
3	N/A	Charger, Export and European	1
4	N/A	Charger, Export and European (includes items 5 through 23)	1
5	1012098	Bushing, DC Cord	1
6	1012101	Fuse Assembly	1
7	N/A	Rectifier with Heatsink Assembly	1
8	101828901	Cord, DC, 113-Inch (287 cm)	1
9	101828902	Cord, DC, 154-Inch (391 cm)	1
10	101828903	Cord, DC, 250-Inch (635 cm)	1
11	101838401	Circuit Breaker	2
12	101838601	Four-Position Switch	1
13	101914401	Assembly, Voltage Suppressor	1
14	101973501	Receptacle, AC Cord	1
15	101976601	Ammeter with Mounting Bracket	1
16	102275401	Relay, 48-VDC	1
17	N/A	Wire, Jumper	1
18	***	Limiter, Current	1
19	***	Wire Assembly, Battery Charger	1
20	***	Transformer, Battery Charger	1
21	102940801	Cord, Dc	1
22	N/A	Case, Battery Charger	1
23	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
24	102939501	Cord, European AC, Battery Charger	1
		**** Special order item available upon request.	


E

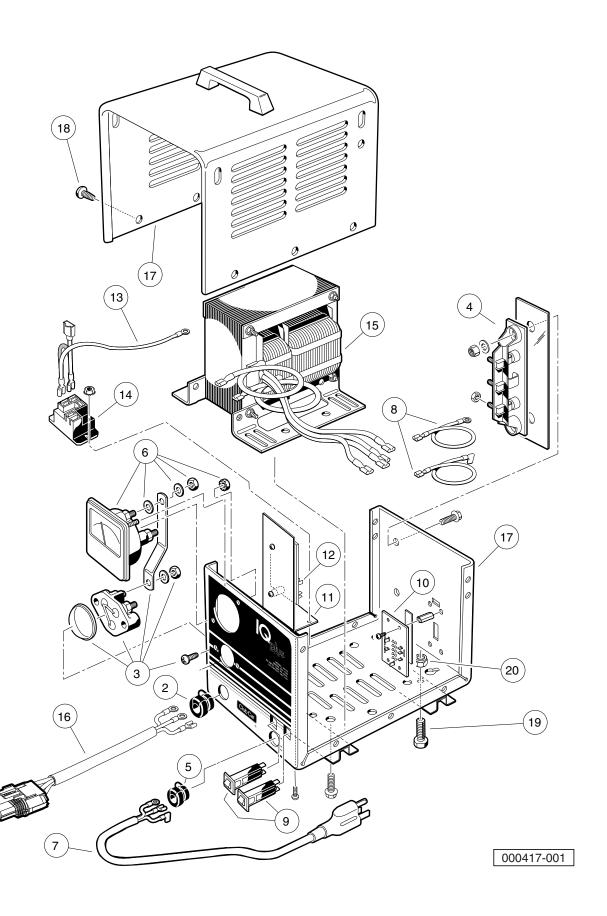



https://CartPros.com/f.html

## .r. (www.LL 25660), **EXPORT**

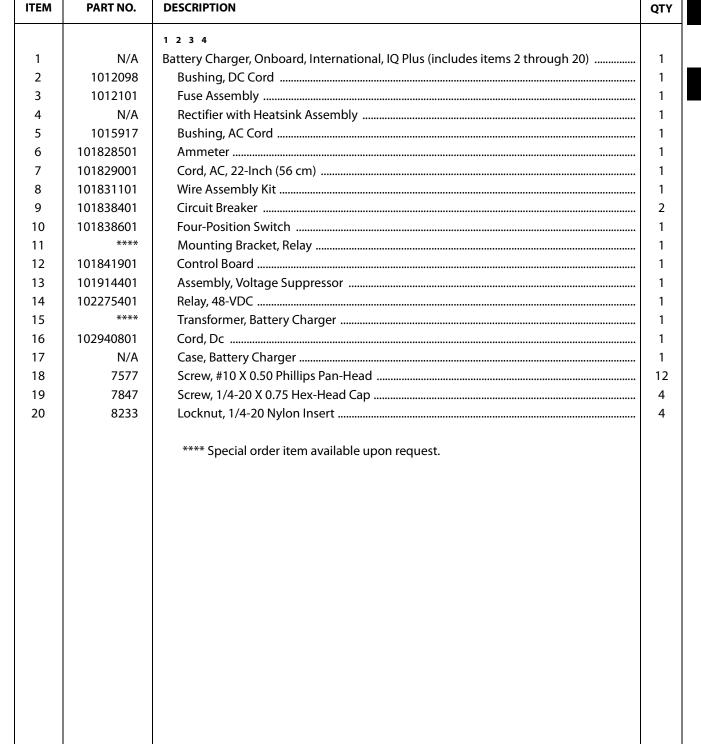



16

:







# **MAINTENANCE AND SERVICE TOOLS**

17


G

E

D





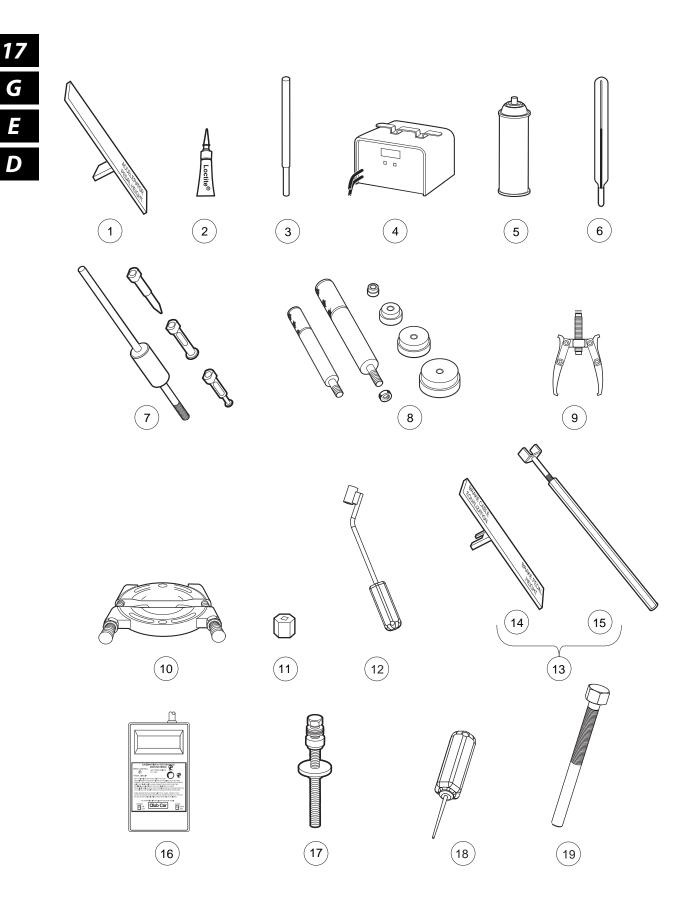






#### **MAINTENANCE AND SERVICE TOOLS**

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC
		1 2 3 4			
		The following tool list includes all tools available from Club Car for			
		maintenance and service procedures for gasoline, electric, and/or			
		diesel vehicles, both past and present models. Be sure to carefully			
		examine the tool list for applicability to your vehicle before ordering.			
1	101871001	Accelerator Pedal Adjustment Tool		1	1
2	101813202	Adhesive, Guide Ring, 3-Gram Tube			1
3	101641202	Arbor		1	
4	101831901	Battery Discharge Machine, 36/48 Volt			1
5	1014305	Battery Terminal Protector Spray	1	1	1
6	1011767	Battery Thermometer	1	1	1
7	1016417	Bearing and Oil Seal Remover Assembly	1	1	1
8	1016416	Bearing Driver Set	1	1	1
9	1012811	Bearing Puller	1	1	1
10	1012812	Bearing Puller Wedge Attachment	1	1	1
11	1013582	Brake Adjustment Tool (used only on vehicles with			
		manually adjusted mechanical brakes)		1	1
12	102555501	Brake Cable Release Tool	1	1	1
13	102249901	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric			
		Industrial Truck only) (includes items 14 and 15)			1
14	***	Brake Pedal Adjustment Tool			1
15	***	Brake Pedal Tension Tool			1
16	101887101	Calibration Test Module			1
17	101808401	Cam Installation Tool		1	
18	102562401	Charger Bezel Tool			1
19	102686101	Clutch Removal Tool (for 4x4 vehicles)	1	1	
		Please refer to the maintenance and service manual for proper tool application.			
	***	Special order item available upon request			

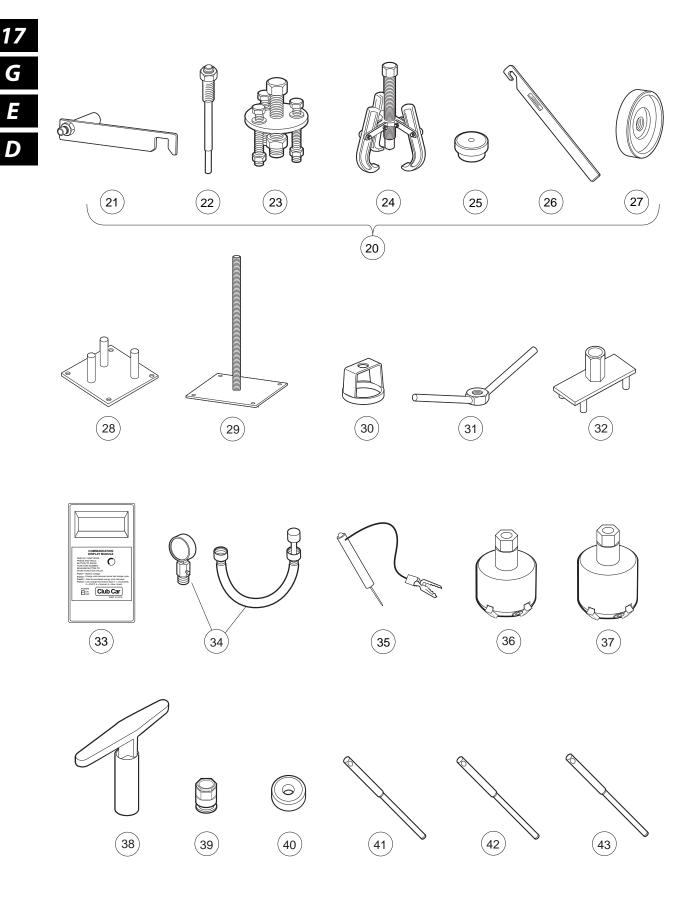







#### MAINTENANCE AND SERVICE TOOLS, CONTINUED


ITEM	PART NO.	DESCRIPTION	QTY	QTY	QTY
I I EIVI	PAKI NU.	DESCRIPTION	DIESEL	GAS	ELEC
		1 2 3 4			
20	1014510	Clutch Tool Kit (includes items 21 - 27)		1	
21	1014498	Clutch Alignment Tool (for pre-unitized transaxle			
		vehicles built prior to 1997 model year)		1	
22	1014496	Drive Clutch Puller (for Kawasaki engines only)	1	1	
23	1014497	Drive Clutch Hub Puller (for Kawasaki engines only)		1	
24	1014508	Driven Clutch Cam Puller (for Kawasaki engines only)		1	
25	1014507	Driven Clutch Puller Plug (for Kawasaki engines only)		1	
26	1015524	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1	
27	101809101	Press Weldment (for Kawasaki engines only)		1	
28	102601501	Drive ClutchFixed Sheave Tool			
		(for 4x4 vehicles)	1	1	
29	102603501	Driven Clutch Spring Compression Base (for use with items 30			
		and 31) (for 4x4 vehicles)	1	1	
30	102605201	Driven Clutch Spring Compression Collar (for use with items 29			
		and 31) (for 4x4 vehicles)	1	1	
31	102606101	Driven Clutch Spring Compression Nut (for use with items 29			
		and 30) (for 4x4 vehicles)	1	1	
32	102607501	Drive Clutch Spider Removal Tool			
		(for 4x4 vehicles)	1	1	
33	101831801	Communication Display Module			1
34	101641002	Compression Gauge and Adapter		1	
35	1011273	Continuity Tester		1	1
36	102773801	Cutter, Valve Seat, #122		1	
37	102773901	Cutter, Valve Seat #115		1	
38	102774101	Wrench, T, #505		1	
39	102774101	Adapter, T-Wrench		1	
40	102675401	Cutter, Valve Seat, 60 Degree (requires item 51)			
		(for Honda GX620 Gasoline Engines)		1	
41	102774201	Pilot, 6.6 MM		1	
42	102774301	Pilot, 6.62 MM		1	
43	102774401	Pilot, 6.65 MM		1	
		Please refer to the maintenance and service manual			
		for proper tool application.			
ĺ					

 




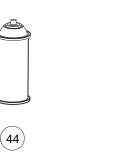


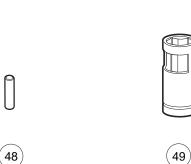


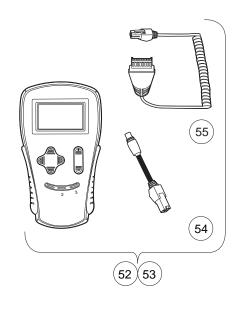





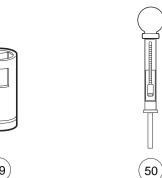

 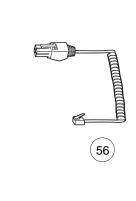


 


 



















## MAINTENANCE AND SERVICE TOOLS, CONTINUED

45 46 10 47 48 10 49 10 50 51 52 10	1012151 1016627 02669901 1016418 01933101 02169401 1011478 1013593	Dry Moly Lubricant	1	1 1 1 1	1
45 46 10 47 48 10 49 10 50 51 52 10	1016627 02669901 1016418 01933101 02169401 1011478 1013593	Flywheel Puller Kit (for Kawasaki Engines)  Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)  Gear Yoke  Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)  Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200, Bobcat 2100, HUV 4213)  Hydrometer		1 1 1	
46 10 47 48 10 49 10 50 51 52 10	1016418 01933101 02169401 1011478 1013593	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)	1	1	1
47 48 10 49 10 50 51 52 10	1016418 01933101 02169401 1011478 1013593	(for Honda GX620 Gasoline Engines)  Gear Yoke  Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)  Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200,  Bobcat 2100, HUV 4213)  Hydrometer	1	1	1
48 10 49 10 50 51 52 10	01933101 02169401 1011478 1013593	Gear Yoke	1	1	1
48 10 49 10 50 51 52 10	01933101 02169401 1011478 1013593	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)	1	·-	1
49 10 50 51 52 10	02169401 1011478 1013593	Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200, Bobcat 2100, HUV 4213) Hydrometer		1	
50 51 52 10	1011478 1013593	Bobcat 2100, HUV 4213) Hydrometer			
51 52 10	1013593	Hydrometer			
51 52 10	1013593				1
52 10			1	1	1
	02248803	Internal Retaining Ring Pliers	1	1	1
53 10		IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)			1
53 10		(includes items 54 and 55)			
	)2248804	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)			1
		(includes items 54 and 55)			
54 10	)2251501	Adaptor, Cable			1
55 10	)2241502	IQDM Series 2 Cable			1
56 10	)2241501	IQDM Series 1 Cable (replacement)			1
57 10	)1928701	Liquid Gasket (transaxle case)	1	1	1
58 10	)2243402	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1
59 10	01997201	Paint, Touch-Up – Beige*		1	1
59 10	)1997207	Paint, Touch-Up – Black*		1	1
59 10	)1997212	Paint, Touch-Up – Burgundy*		1	1
59 10	)1997211	Paint, Touch-Up – Classic Blue (Navy)*		1	1
59 10	)1997205	Paint, Touch-Up – Dark Gray*	1	1	1
59 10	)1997209	Paint, Touch-Up – Dark Green*		1	1
59 10	01997204	Paint, Touch-Up – Gray*		1	1
59 10	01997203	Paint, Touch-Up – Red*	1	1	1
59 10	01997206	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1
	)1997202	Paint, Touch-Up – White*	1	1	1
60 10	02562301	Paint, Precedent Underbody – Gray		1	1
	02587201	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1
		Please refer to the maintenance and service manual for proper tool application.			
		* Item 59 is not for use on Surlyn $^{\circ}$ body material, which is used on Precedent vehicles.			



G

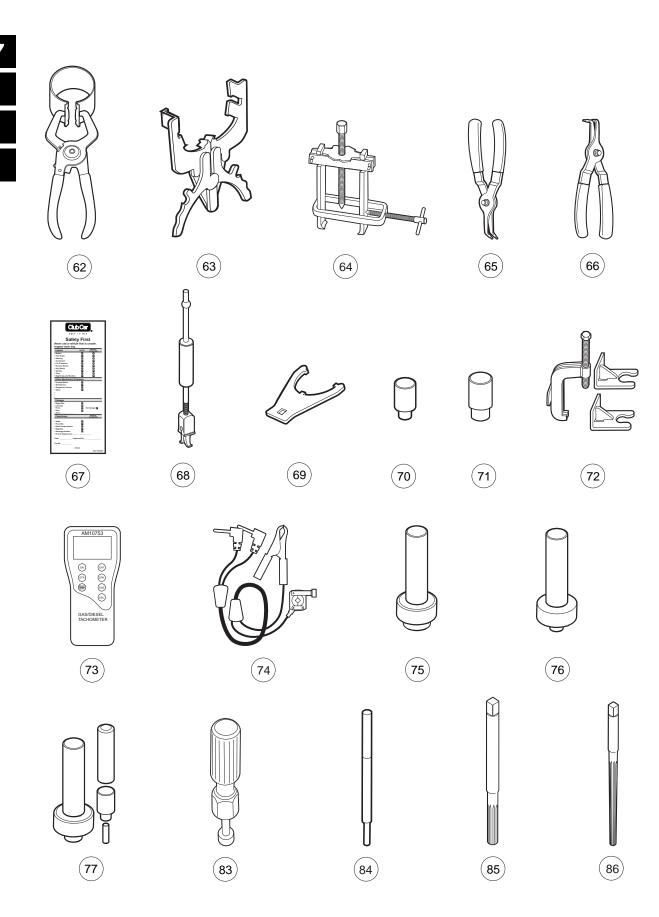





## MAINTENANCE AND SERVICE TOOLS, CONTINUED

 
ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC
		1 2 3 4			
62	1016414	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)		1	
63	1016415	Piston Ring Pliers (for Kawasaki Engines)		1	
64	102668801	Puller, Special Use (for Kubota D722 Diesel Engines)	1		
65	1012549	Retaining Ring Pliers, 45° External	1	1	1
66	1012560	Retaining Ring Pliers, 90° Internal	1	1	1
67	101823101	Safety First Card (50 per pack)	1	1	1 '
68	1012809	Seal Puller	1	1	1
69	102330901	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1	
70	1014264	Steering Column Bearing Press Tool		1	1
71	1014259	Steering Column Retaining Ring Tool		1	1
72	102061201	Steering Wheel Puller Tool	1	1	1
73	AM10753	Tachometer (includes gasoline engine pick up lead only)	1	1	
74	AM10771	Tachometer Diesel Probe (for use with item 73)	1		
75	1014162	Transaxle Axle Seal Tool		1	
76	1014161	Transaxle Pinion Seal Tool		1	
77	1014115	Transmission Tool Kit		1	
78	101611003	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes			
		air filter, spark plug, oil filter, fuel filters) (not shown)		1	
79	AM11804	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter,			
		spark plug, oil filter, fuel filters) (not shown)		1	
80	AM11805	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter,			
0.1	4.44.22.22.4	oil filter, fuel filters, water separator filter) (not shown)	1		
81	AM1220301	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air		4	
02	A M 1 2 2 2 4 0 1	filter, spark plug, oil filter, fuel filters) (not shown)		1	
82	AM1232401	Tune-Up Kit, FH680D (for Kawasaki V-Twin Engines) (includes oil		1	
83	1016413	filter, fuel filter, air filter, and spark plugs) (not shown)		1	
84	1010413	Valve Guide Driver		'	
04	102074001	(for Honda GX620 Gasoline Engines)		1	
85	101641201	Valve Guide Reamer (FE290, FE350, and FE400 only)		1	
86	102674401	Valve Guide Reamer, 6.6 mm		•	
	102071101	(for Honda GX620 Gasoline Engines)		1	
		(10) Horida Groza dasonile Engines, illinininininininininininininininininin		·	



 


D





 

















92

 

 

 







## MAINTENANCE AND SERVICE TOOLS, CONTINUED

 
	1	CON				
ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	
		1 2 3 4				
87	1016552	Valve Seat Cutter Guide		1		
88	1016551	Valve Seat Cutter T-Wrench		1		
89	1016553	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1		
90	1016554	Valve Seat Cutter, 45°/30° (35 mm diameter)		1		
91	101641101	Valve Spring Compressor		1		
92	1011480	Volt Ohm Meter	1	1	1	
93	102570401	Tool, Tensioning, Starter Generator (For Precedent vehicles)		1		
94	103601401	Puller, Drive Clutch, XRT 950*		1		
95	103601701	Tool, Disassembly, Driven Clutch, XRT 950		1		
96	103600501	Screw, Driven Clutch Disassembly, M6, XRT 950		1		
		*Note: The XRT 950 Drive Clutch Puller requires the use of Screw, Driven Clutch Disassembly, CCI Part Number 103600501.				
		Diver clutch bisassembly, cerrare number 103000301.				
	1	I and the second se	i	ı	i	













<b>5</b>	7040 5 15	1011004 4 22
Part Number and <i>Page</i>	7840 <i>5-15</i>	1011084 4-23
AM10753 <i>17-9</i>	7847 1-19, 1-21, 9-3, 16-3, 16-5, 16-9, 16-11, 16-17	1011114 <i>4-3</i> , <i>4-9</i> 1011137 <i>4-9</i>
AM10771 <i>17-9</i>	7893 6-7, 6-11	1011229 6-7, 6-23, 13-3, 13-23
AM10080 11-5	7910 <i>5-15</i>	1011273 17-5
AM10081 11-5	7973 1-5, 8-17	1011280 6-15, 13-13
AM10419 10-7	8056 6-23, 13-23	1011291 <i>11-7</i>
AM10724 7-5	8057 6-11, 6-23, 11-9, 13-23	1011303 4-3, 4-9
CCX8506 16-3	8058 6-11, 6-23, 11-9, 13-23	1011393 5-15
183 6-7, 6-11, 8-5, 8-17, 8-19, 10-3, 11-3	8067 <i>5-15</i>	1011394 1-3
304 6-7, 13-3, 16-11	8104 11-9	1011402 4-5, 4-7
320 4-13, 4-15	8233 1-19, 1-21, 1-25, 1-29, 4-19, 4-21, 5-21,	1011415 <i>5-17, 5-19</i>
332 1-7, 1-19, 1-21, 1-25, 1-27, 1-29, 6-7, 6-25, 8-15, 9-3, 13-3	6-7, 6-25, 11-3, 13-3, 16-3, 16-5, 16-9, 16-11,	1011418
334 4-19, 4-21, 5-3, 5-7, 7-15	16-17	1011439 6-15, 13-13
357 5-11, 5-13, 5-21	8248 <i>6-25</i>	101146302 4-3, 4-9
451 4-3, 4-9, 9-3, 14-3, 16-3, 16-5	8418 1-29	1011464 <i>4-3, 4-9</i>
705 6-19, 7-15	8450 6-11, 10-3	1011465 <i>4-3, 4-9</i>
706 5-11, 5-13	8639 8-17, 13-7	1011466 <i>4-3, 4-9</i>
808 5-21, 10-3	8717 4-19, 4-21, 6-11, 11-3, 11-9	1011467 4-3, 4-9
1016 6-7, 6-11, 8-5, 8-19	8745 <i>5-11,5-13</i>	1011478 <i>17-7</i>
1017 6-9, 6-11, 13-9	8754 1-19, 1-25, 4-13, 4-15, 4-19, 4-21, 5-3, 5-7, 5-9, 5-11, 5-13, 5-17, 5-19, 6-19	1011480 <i>17-11</i>
1028 <i>4-5, 4-7, 16-3, 16-5</i>	8755 1-25, 5-11, 5-13, 5-17	1011557 <i>6-15, 13-13</i>
1032 4-5, 4-7	8796 16-3, 16-5, 16-13	1011578 <i>5-3</i>
1035 <i>5-7</i> , <i>5-9</i>	8797 8-5, 8-19	1011582 <i>6-23, 13-21</i>
1108 <i>1-27</i>	8861 1-19, 5-9, 5-21	1011652 <i>1-15, 1-17</i>
1218 <i>1-29</i>	8990 5-7, 6-7, 6-11, 13-3, 13-17, 13-19	1011694 <i>4-19, 4-21</i>
1241 1-3, 1-29, 4-5, 4-7, 4-17, 4-19, 4-21, 6-11,	1010005 <i>5-15</i>	1011697 <i>1-21, 5-3, 7-15, 8-13</i>
6-15, 6-19, 6-21, 9-3, 13-13	1010028 11-9	1011700 4-19, 4-21
1242 4-11, 4-17, 5-21, 6-11, 6-19	1010124 5-11, 5-13	1011707 <i>16-3, 16-5</i>
1308 <i>5-9</i>	1010138 5-9	1011734 <i>4-23</i>
1624 <i>4-19, 4-21, 5-7</i>	1010145 <i>5-17, 5-19</i>	1011767 <i>17-</i> 3
1631 <i>8-17</i>	1010150 <i>5-11, 5-13</i>	1011779 4-11, 4-17
2402 5-9, 5-13	1010177 <i>5-11</i>	1011825 <i>6-7, 13-3</i>
4029 6-7, 13-3	1010219 5-9	101187702 4-5, 4-7
7048 5-15	1010434	1011887 5-15
7173 5-21, 6-15, 6-21, 13-13	1010435 <i>1-3, 1-25, 1-29</i>	1011892 <i>5-15</i>
7174 5-3, 5-21, 6-19, 8-13, 9-3, 14-3	1010543 <i>1-7, 1-15, 1-17</i>	1011930 5-7, 5-9
7251 <i>1-3</i>	1010545 <i>1-15, 1-17</i>	1011931 <i>4-19, 4-21</i> 1011988 <i>1-29</i>
7310 <i>2-3</i> 7311 <i>1-27, 5-21</i>	1010577 <i>7-15</i>	1011990 1-19
7330 11-7, 15-3	1010805 <i>4-5, 4-7</i>	1012098 16-3, 16-5, 16-7, 16-9, 16-15, 16-17
7335 11-5, 15-3	1010829 4-11, 4-17	1012101 16-3, 16-5, 16-7, 16-9, 16-15, 16-17
7336 15-3	1010850 4-3, 4-9	1012151 17-7
7410 <i>1-29</i>	1010877 4-5, 4-7	1012180 <i>5-17</i>
7473 1-3, 1-21, 1-25, 1-29, 4-5, 4-7, 4-11, 4-17,	1010878 1-25, 4-5, 4-7	1012181 <i>5-19</i>
4-19, 4-21, 6-7, 6-11, 6-15, 6-21, 13-13	101090801 13-25, 13-27	1012182 <i>5-19</i>
7479 <i>1-19, 1-27, 16-3, 16-5</i>	1010909 6-7	1012285 <i>1-21, 8-7, 8-13</i>
7539 <i>5-9</i>	1010921 4-5, 4-7	1012295 <i>6-11</i>
7540 <i>5-7, 5-9</i>	1010927	1012303 <i>1-25</i> , <i>5-11</i> , <i>5-13</i> , <i>5-17</i> , <i>5-19</i>
7555 <i>5-7, 5-9</i>	1010932 4-5, 4-7	1012304 <i>5-17</i>
7577 16-3, 16-5, 16-7, 16-9, 16-15, 16-17	1010933 4-3, 4-7	1012328 <i>6-21</i>
7591 <i>6-7, 13-3</i>	1010954 1-27, 0-21, 14-3	1012431 6-11, 6-23, 13-23
7602 <i>5-7</i> , <i>5-9</i>	1010934 0-17	1012438 <i>8-17</i>
7716 4-5, 4-7, 4-19, 4-21	1011014 1-3	1012466 5-3
7818 <i>6-11</i>	1011017 1-3	1012467 <i>5-7</i>
7820 <i>6-7</i> , 13-3		1012505 <i>6-13, 13-11</i>



1012528	9-3, 13-17	1013772	11-7	1014387 1-11, 1-13, 1-19
1012549	17-9	1013773	11-7	1014453 <i>10-3</i>
1012560	17-9	1013774	11-7	1014454 <i>10-7</i>
1012571	7-15, 13-25, 13-27	1013787	11-7	1014471 <i>1-25</i>
1012604	5-3	1013792	11-7	1014496 <i>17-5</i>
1012605	5-3	1013794	11-7, 15-3	1014497 <i>17-5</i>
1012649	8-7	1013861	5-3	1014498 <i>17-5</i>
1012711	11-3		4-5, 4-7	1014507 <i>17-5</i>
1012714	11-5	1013870		1014508 <i>17-5</i>
1012740	11-5	1013871	4-19, 4-21	1014510 <i>17-5</i>
1012741	11-5	1013872		1014523 <i>8-7</i>
1012747	11-5		4-5, 4-7	1014555 <i>5-17</i> , <i>5-19</i>
1012748	11-5		4-3, 4-9, 7-15	1014771 2-3
1012752	11-3	1014007	4-19, 4-21, 11-3	1014807 6-11, 11-9
1012809	17-9	1014049	10-3	1014808 11-9
1012811	17-3	1014050	10-3	1014902 5-19
1012812	17-3	1014052	10-3	1014948 6-11
1012830	6-19, 8-13, 9-3	1014055	10-3	101503202 1-5
1012836	10-7	1014056	10-3	1015072 13-25, 13-27
1012896	11-3	1014057	10-3	1015075 1-3
1013001	6-17	1014058	10-3	1015137 <i>8-7, 8-11</i>
	6-17	1014059	10-3	1015139 <i>8-5, 8-17</i>
1013005		1014062	10-3	1015143 8-5
10130110		1014063	10-3, 16-13	101524002 <i>6-19</i>
1013035 1013042		1014065	6-11, 10-3	1015332 7-3
		1014070	10-7	1015345 6-11
	5-7 5-7	1014072 1014078	10-7 10-7	1015372 <i>6-11</i> 1015373 <i>6-11</i>
1013051		1014078	10-7	1015399 <i>1-25</i>
	1-19, 11-3, 11-9	1014080	17-9	1015399 1-23
1013001	5-15	1014116	8-7	1015426 8-15
1013169	1-19		6-11	1015453 <i>5-21</i>
1013107	5-17		5-3	1015457 <i>5-21</i>
1013207	1-7, 1-15, 1-17		5-3	101547601 3-9
1013311	1-7		6-11	1015507 1-25
1013311	1-7, 1-15, 1-17	1014153	4-3, 4-9	1015524 <i>17-5</i>
	1-5		17-9	1015528 6-13, 13-11
1013344	1-5	1014162		1015530 1-21
1013357	1-23, 6-7, 13-3, 13-19	1014201	14-3	101553901 <i>1-27</i> , 3-5, 3-9
1013461	6-9, 8-5, 8-19, 13-9		11-7	1015583 1-25, 5-11, 5-13, 5-17, 5-19
1013462		1014211		1015597 5-7, 5-9, 5-15
1013494		1014212		1015613 <i>5-21</i>
1013531	4-17	1014213		1015614 <i>5-21</i>
1013582	17-3	1014214		101562711 <i>1-7, 1-17</i>
1013589	6-11	1014216	5-3	101562712 <i>1-7, 1-15</i>
1013593	17-7	1014217		101562714 <i>1-7, 1-15</i>
1013609	6-11	1014259	17-9	101562715 <i>1-7, 1-17</i>
1013687	8-7	1014264	17-9	101564501 <i>1-7</i>
1013700	8-13	1014276	5-11, 5-13	101564502 <i>1-7</i>
1013734	9-3, 13-17	1014287	10-3	101564503 <i>1-7</i>
	8-7, 8-11	1014288	5-3, 6-21, 10-3, 16-13	101564505 <i>1-7</i>
1013760	11-3	1014289	6-17	1015649 <i>7-3</i>
1013768	11-7	1014305	17-3	1015654 <i>1-27</i>
1013769	11-7	1014306	1-21, 16-3, 16-5	1015656 <i>1-27</i>
1013770	11-7	1014321	1-11, 1-13, 1-19	1015660 <i>1-27</i>
1013771	11-7	1014375	6-21	101570506 2-3



**GET STARTED** 

https://CartPros.com/f.html

101570507 2-3	1016438 <i>8-11</i>	1016554 <i>17-11</i>
101570514 2-3	1016440 <i>7-9</i> , <i>8-11</i>	1016557 4-3, 4-9
1015707 2-3	1016441 <i>8-11</i>	1016560 <i>7-9</i>
1015737 6-11	1016444 8-11	1016561 <i>7-5</i>
1015741 <i>6-11</i>	1016445 <i>7-5</i>	1016562 <i>7-5, 7-13</i>
1015752 6-11, 6-23, 8-15, 13-15, 13-21	1016449 <i>7-9</i>	1016563 <i>7-9</i>
1015760 <i>5-21</i>	1016450 <i>7-9</i>	1016564 <i>7-11</i>
1015814 9-3	1016452 <i>7-9</i>	1016566 <i>7-9</i>
101584502 <i>8-13</i>	1016454 <i>7-11</i>	1016569 <i>7-9</i>
1015878 <i>6-11, 11-9</i>	1016455 <i>7-5</i>	1016570 <i>7-7</i>
1015917 16-3, 16-5, 16-7, 16-9, 16-17	1016456 <i>7-3</i> , <i>7-5</i>	1016571 <i>7-13</i>
1015932 6-19	1016457 <i>7-7</i>	1016572 <i>8-11</i>
1015969 7-3	1016458 <i>7-9</i>	1016573 4-3, 4-9
1016074 6-19	1016467 <i>7-7</i>	1016576 <i>7-7</i>
1016077 <i>1-27</i>	1016470 <i>7-13</i>	1016578 <i>7-5</i>
101609401 <i>3-5</i> , <i>3-9</i>	1016472 <i>7-11</i>	1016579 <i>7-5</i>
101611003 <i>17-9</i>	1016473 <i>7-7</i>	1016581 <i>7-7</i>
101615504 <i>5-5</i>	1016474 7-9	1016582 <i>8-11</i>
1016156 <i>5-5</i>	1016479 <i>7-9</i>	1016583 <i>7-9</i>
1016183 <i>5-3</i>	1016480 8-11	1016584 <i>7-11</i>
1016201 <i>10-3</i>	101648102 <i>8-11</i>	1016585 8-9
1016269 5-3	101648203 <i>7-7</i>	1016586 <i>7-5</i>
1016289 <i>10-3</i>	1016483 <i>7-9</i>	1016587 <i>7-5</i>
1016337 <i>11-5</i>	1016486 8-9	1016588 <i>7-5</i>
1016338 11-5	1016489 7-9	101661601 <i>13-25</i>
1016346 5-9	101649002 8-11	101661602 <i>13-25</i>
1016349 5-9	1016494 7-11	1016627 <i>17-7</i>
1016350 5-9	1016496 7-11	1016630 <i>6-13</i>
1016353 5-9	1016497 7-5	1016663 1-27, 5-5
1016356 6-7, 13-3, 13-19	1016499 8-9	1016668 <i>1-29</i>
1016379 1-21	1016501 8-9	1016672 11-7
1016384 5-11, 5-13	1016502 7-7	1016673 16-3, 16-5, 16-13
1016385 5-9	1016506 <i>7-11</i>	1016679 <i>1-21</i>
1016386 5-11, 5-13	1016507 7-3	101670201 3-11
1016387 <i>5-11, 5-13</i> 1016389 <i>5-11, 5-13</i>	1016510 <i>7-11</i> 1016513 <i>11-3</i>	1016717 <i>6-23, 13-21</i> 1016724 <i>1-25</i>
,		
101641002 <i>17-5</i>	101651406 2-3	101674702 4-23
101641101 <i>17-11</i> 101641201 <i>17-9</i>	101651407 <i>2-3</i> 101651414 <i>2-</i> 3	1016751 <i>1-9, 1-19</i> 101675511 <i>1-9, 1-19</i>
101641201 17-3	1016517 7-9	101675512 1-9, 1-19
101041202 17-3 1016413 <i>17-9</i>	1016518 7-9	101675514 1-9, 1-19
1016414 17-9	1016519 7-9	101675515 1-9, 1-19
1016415 17-9	1016521 <i>7-11</i>	101677701 1-9, 1-19
1016416 17-3	1016531 <i>7-3</i>	101677702 1-9, 1-19
1016417 <i>17-</i> 3	1016535 7-11	101677703 1-9, 1-19
1016418 17-7	1016537 7-7	101677705 1-9, 1-19
1016423 6-11	1016538 7-11	1016801 <i>10-3</i>
101642575 8-9	1016539 <i>7-3</i>	1016813 <i>5-21</i>
101642578 8-9	1016541 7-13	1016814 <i>5-21</i>
101642580 8-9	1016544 7-5, 7-9, 7-11	1016819 1-19
101642582 8-9	1016546 8-13	1016824 1-15, 1-17
101642585 8-9	1016547 7-3, 7-13, 8-11	1016835 1-29
1016429 7-7	1016549 7-9	1016839 1-19
1016432 7-7, 11-3	1016551 17-11	101684102 1-15
1016436 7-9	1016552 17-11	101684103 <i>1-15</i>
1016437 8-9	1016553 17-11	101684105 1-17



mbers from r search box			ou a	re looki	ng f
				NU	-

1016842 <i>1-29</i>	1017317 <i>5-</i> 3	1017686 <i>10-7</i>
1016843 <i>1-29</i>	101737002 2-3	1017689 <i>9-3</i>
1016849 6-13, 6-23, 13-11, 13-23	1017378 <i>4-19, 4-21</i>	101769302 <i>2-3</i>
1016851 6-13, 6-23, 13-11, 13-23	1017380 <i>4-19, 4-21</i>	1017696 <i>4-19, 4-21</i>
1016859 <i>6-23, 13-23</i>	101738302 <i>10-3</i>	1017721 <i>6-7</i>
1016868 <i>1-3</i>	1017424 <i>4-19, 4-21</i>	101773301 <i>7-13</i>
1016874 <i>1-21</i>	1017434 <i>7-9</i>	101773302 <i>7-13</i>
1016875 <i>1-21</i>	1017435 <i>7-9</i>	101773303 <i>7-13</i>
1016876 1-21	1017442 <i>7-7</i>	101773304 <i>7-13</i>
1016879 <i>6-9, 13-9</i>	1017443 <i>7-9, 7-11</i>	101773305 <i>7-13</i>
1016880 <i>6-9, 13-9</i>	1017444 <i>7-9</i>	101773306 <i>7-13</i>
1016883 <i>6-19</i>	1017445 <i>7-9</i>	101773307 <i>7-13</i>
1016901 <i>10-3</i>	1017446 7-9	101773308 <i>7-13</i>
1016904 7-9, 9-3	1017447 <i>7-11</i>	101773309 <i>7-13</i>
101692501 <i>1-</i> 3	1017448 <i>7-5</i>	101773310 <i>7-13</i>
101692502 1-3	101744901 <i>7-13</i>	101773311 <i>7-13</i>
101692506 <i>1-</i> 3	101744902 <i>7-13</i>	1017853 <i>6-7, 13-3</i>
101692509 1-3	1017450 <i>7-13</i>	101791101 4-3
101692510 1-3	101745101 <i>7-13</i>	101796201 <i>4-19, 4-21</i>
101692511 1-3	101745102 7-13	101801001 16-3, 16-5, 16-13
101692512 1-3	1017453 7-13	101802301 <i>16-3</i>
101692513 1-3	1017454 7-9	101804301 6-13, 8-15, 8-17
101692514 1-3	1017455 7-5	101808401 <i>17-3</i>
1016930 1-19	1017456 7-7	101809101 <i>17-5</i>
	101745701 <i>7-1</i> 3	
	101745701 7-13 101745702 7-13	101811301 <i>8-17</i> 101811901 <i>8-15</i>
101693901 <i>1-3</i>		
101693902 1-3	1017458 <i>7-</i> 7	101812301 8-15
101693906 <i>1-3</i>	1017460 7-7	101813001 <i>8-15</i>
101693908 1-3	1017461 8-9	101813202 <i>17-3</i>
101693909 1-3	1017463 7-5	101814301 <i>16-3</i>
101693910 1-3	1017466 8-11	101817401 <i>4-19</i> , <i>4-21</i>
101693911 1-3	1017468 7-5	101818801 4-19
101693912 1-3	1017471 7-13	101821501 <i>8-15</i>
101693913 <i>1-3</i>	1017472 <i>7-11</i>	101823101 <i>17-9</i>
1016967 1-3, 13-19	1017473 <i>7-9</i>	101824401 <i>8-7</i>
1016997 6-11	1017474 <i>7-</i> 3	101825101 3-3, 13-11
1017029 <i>4-5, 4-7</i>	1017475 <i>7-</i> 3	101825102 <i>3-7, 6-13</i>
101705701 3-5, 3-9	1017476 <i>7-</i> 3	101825701 <i>8-17</i>
1017062 6-9, 13-9	1017486 7-3	101826201 <i>13-11</i>
1017064 6-9, 13-9	1017487 <i>7-11</i>	101826401 <i>6-13</i>
1017065 <i>6-9, 13-9</i>	1017490 <i>7-5</i>	101827101 <i>7-15</i>
1017079 1-21	1017500 <i>7-3</i>	101828501 16-3, 16-5, 16-7, 16-9, 16-17
1017080 <i>1-3</i>	1017501 <i>7-13</i>	101828801 <i>16-7</i>
1017082 11-3	1017502 <i>7-13</i>	101828802 <i>16-7</i>
1017187 <i>16-3, 16-5, 16-11</i>	1017503 <i>7-13</i>	101828901 <i>16-7, 16-15</i>
1017188 <i>10-5</i>	1017504 <i>7-11</i>	101828902 <i>16-7, 16-15</i>
1017211 <i>4-11</i>	1017507 <i>7-7</i>	101828903 <i>16-7, 16-15</i>
1017226 5-3	1017508 <i>7-11</i>	101829001 <i>16-3, 16-5, 16-9, 16-17</i>
1017231 <i>11-3</i>	1017510 <i>7-13</i>	101829101 <i>16-3, 16-5</i>
1017239 <i>6-11</i>	1017511 <i>7-11</i>	101830601 <i>6-13, 13-11</i>
1017243 <i>6-11</i>	1017512 <i>7-13</i>	101830701 <i>6-13, 13-11</i>
1017266 5-9	1017513 <i>7-11</i>	101831101 <i>16-7, 16-9, 16-17</i>
1017273 <i>5-5</i>	1017514 <i>7-11</i>	101831401 <i>13-25, 13-27</i>
1017313 <i>5-3</i>	101751801 <i>7-11</i>	101831801 <i>17-5</i>
1017314 <i>5-3</i>	101751802 <i>7-11</i>	101831901 <i>17-3</i>
1017315 <i>5-3</i>	101751803 <i>7-11</i>	101832202 <i>8-13</i>



**GET STARTED** 

https://CartPros.com/f.html

101832302	8-13	101878302	5-7	101906901	15-3
101832601		101879001		101908401	
101832701	7-15		5-7	101909201	7-5
101832901	16-13	101879501	5-7	101909301	7-5
101833101	7-15	101879601	5-7	101909401	7-5
101833401	10-7	101879701	5-7	101910501	11-7
101833601	11-3	101879801	5-7	101914401	6-7, 13-3, 16-3, 16-5, 16-7, 16-9,
101833701	6-17	101879901	5-7	16-15, 16	
101833904	10-3	101880001	5-7	101915201	3-9
101834001	10-7	101880101	5-7	101916001	7-13
101834502	6-13, 13-11	101880201	5-7	101916101	7-3
101834601	7-15	101880301	5-7	101916201	7-5
101834801	11-3	101880901	1-15, 1-17	101916301	
101836201	10-7	101881101	7-5	101916701	6-19, 10-3
101837001	1-23	101881701	1-15, 1-17, 8-15	101917601	8-15
101837101	8-15	101884801	7-15	101918402	2-3
101837301	6-19	101886101	11-3	101920101	13-15
101838201	16-5	101887101	17-3	101921501	
101838301	16-5	101887601	7-3		15-3
101838401	16-5, 16-15, 16-17	101889401	11-5		15-3
101838601	16-5, 16-15, 16-17	101890001	11-5	101922501	
101841901	16-3, 16-5, 16-9, 16-17	101890101	11-3	101923001	15-3
101846301	1-29	101890201	11-3	101923201	15-3
101851101	6-13, 13-11	101890501	11-3	101923501	15-3
101856002	13-11	101890601	11-3	101923701	15-3
101856102		101890901	11-7	101923901	15-3
101859401			11-7	101925701	8-15
101861901			11-3	101926501	5-17
	4-21		11-7	101926802	
101865301			11-7	101926901	11-3
101869302			11-5	101927101 101927201	11-3
101870401			11-5	101927201	11-3
101870501			11-5		11-3 11-5
	17-3	101892201	11-5		11-5
101874601		101892301	11-5	101927001	
101874901		101892401	11-5	101927701	
101875001		101892501			11-5
101875102		101892601		101928101	11-5
101875201 101875301			11-7 11-3	101928301	11-7
101875401			11-5	101928601	11-3
101875501			11-3	101928701	11-3, 15-3, 17-7
101875501			11-5	101929401	5-17
101875701			1-7	101929501	8-7
101875802			15-3	101931501	3-5
101876001		101895501	15-3	101932201	6-15, 13-13
101876202		101896501	6-17		17-7
101876301		101897001	15-3	101933701	8-17
101876402		101897201	15-3	101935301	4-13, 4-15
101876501		101897401	15-3	101936801	13-15
	5-15	101897601	15-3	101939901	6-17
101877001		101898001	6-21	101942301	14-3
	6-17		5-11, 5-13	101946201	1-19
	6-17	101903601	15-3	101953103	4-17
	6-17	101903701	15-3	101953106	4-11
101878201		101905901		101953801	7-3





101954301	1-7, 1-15, 1-17	102186401	14-3	102674101	1 <i>7-5</i>
101955001	5-9	102196901	13-11	102674201	1 <i>7</i> -5
101955101	6-7, 13-3	102197901	5-13	102674401	17-9
101957101	6-15, 13-13	102199001	6-7	102674601	17-9
101958201	16-15	102235201	14-3	102675001	17-5
101958301	16-15	102238001	13-19	102675101	1 <i>7-</i> 5
101960001	3-3, 3-7	102240501	13-17	102675201	1 <i>7-</i> 5
101960501	3-9	102241501	17-7	102675301	1 <i>7-</i> 5
101963301	1-11, 1-13	102241502	17-7	102675401	1 <i>7-5</i>
101963401	1-11, 1-13, 7-15	102242101	10-7	102684602	11-9
101964001	1-11, 1-13	102243402	17-7	102686101	1 <i>7</i> -3
101964601	3-5	102243403	14-3	102704901	14-3
101969701	6-15, 13-13	102248803	17-7	102751601	8-5
101971301	8-15	102249901	17-3	102753401	7-9
101972001	17-7	102251501	17-7	102764401	13-27
101972002	17-7	102271601	7-11	102764402	13-27
101972003	17-7	102275401	16-7, 16-9, 16-15, 16-17	102766201	13-25, 13-27
101972004	17-7	102278001	5-3	102769701	13-17
101972005	17-7	102292801	4-11, 4-17	102770701	16-11
101972006	17-7	102304801	7-9	102771701	15-3
101972007	17-7	102323101	4-5, 4-7, 4-11, 4-17	102772402	13-19
101972009	17-7	102323201	4-5, 4-7, 4-11, 4-17	102774501	13-17
101972011	17-7	102330901	17-9	102774601	13-17
101972012	17-7	102336001	8-13	102774701	13-17
101972101	15-3	102336101	8-13	102775101	14-3
101972201	15-3	102355301	6-21	102803401	6-11
101972801	8-15	102356601	15-3	102817101	13-17
101973101	8-9	102356801	15-3	102817201	13-17
101973301	8-9	102357001	15-3	102830301	13-25, 13-27
101973401	8-11	102376001	11-9	102837001	16-9
101973501	16-15	102406701	8-19	102838101	16-7, 16-9
101976601	16-15	102430901	7-13	102845101	3-5
101980801	11-5	102440901	13-17	102845203	13-25
101980901	11-5	102453001	11-5	102845204	13-27
101981001	11-5	102453101	11-5	102845501	13-7
101984801	5-3	102458901	3-9	102847801	16-7
101987901	6-9, 13-9	102508701	13-11	102847802	16-7
101988001	6-9, 13-9	102513701	8-5	102847803	16-7
101988002	6-9, 13-9	102515401	11-3	102859501	13-17
101988101	6-9, 13-9	102518001	3-3, 13-11	102865101	8-7
101988201	6-9, 13-9	102522001	8-5, 8-19	102869401	6-7, 13-3
101990801	4-17	102526201	11-3, 11-9	102871801	5-17, 5-19
102002801	13-25, 13-27	102540301	7-15	102873401	13-25, 13-27
102002901	13-25, 13-27	102555501	17-3	102886301	15-3
102003201	8-7	102562401	17-3	102886401	15-3
102004001	5-11	102570401	17-11	102886501	15-3
102025401	4-13, 4-15	102572401	13-11	102886601	15-3
102026001	4-19, 4-21	102601501	17-5	102891101	5-19
102031901	11-7	102603501	17-5	102896801	12-3
102061201	17-9	102605201	17-5	102896901	12-3
102065901	7-15	102606101	17-5	102897201	12-5
102066201	5-19	102607501	17-5	102897301	12-5
102101001	13-15	102616701	11-9	102897401	12-3
102101101	13-15	102668801	17-9	102897501	12-5
102166901	4-17	102669901	17-7	102897601	12-3
102169401	17-7	102674001	17-5	102897701	12-3



**GET STARTED** 

102897801	12-3	102938901	14-3	103369101 <i>8-19</i>
102897901	12-3	102939901	14-3	103369501 11-9
102898001	12-3, 12-5	102939101	14-3	103372101 <i>8-19</i>
102898101	12-3	102939102	14-3	103372201 8-19
102898201	12-3	102939501	16-15	103372301 8-19
102898301	12-3, 12-5	102940801	16-9, 16-15, 16-17	103374701 8-19
102898401	12-5	102942601	16-11	103390801 6-13
102898501	12-3	102951701	14-3	103397901 13-3, 13-17, 16-3
102898601	12-3	102966401	1-11, 1-13	103414901 <i>13-3, 13-17, 16-3</i>
102898701	12-3	102966501	1-11, 1-13	103538701 <i>1-25</i>
102898801	12-3	102966502	1-11, 1-13	103538901 <i>1-25</i>
102898901	12-5	102967601	3-5	96704416 <i>7-15</i>
102899001	12-3	102969401	11-9	
102899101	12-3	102969801	11-9	A
102899201	12-3	102969901	11-9	AC cord 16-3, 16-5, 16-7, 16-9, 16-15, 16-17
102899301	12-3	102977001	6-13	AC cord receptacle 16-15
102899401	12-3	102977002	13-11	accelerator bracket and bearing assembly
102899501	12-3	102977901	8-7	4-19, 4-21
102899601	12-3, 12-5	102978001	8-7	accelerator cable 8-13
102899701	12-3	102980801	13-25, 13-27	accelerator pedal 4-19, 4-21
102899801	12-3	102980901	13-25, 13-27	accelerator pedal adjustment tool 17-3
102899901	12-5	102989501	1-13	accelerator pivot rod 4-19, 4-21
102900001	12-5	103173301	11-9	accelerator return spring 4-19, 4-21
102900101	12-5	103174401	8-3	accelerator rod 4-23
102900201	12-5	103177401	11-9	adapter
102900301	12-5	103180101	6-13, 13-11	cable (IQDM) 17-7
102900401	12-3	103187601	8-5	adhesive, guide ring 17-3
102900501	12-3	103192701	11-9	adjuster
102900601	12-3	103197301	6-5, 6-11	hydraulic brake 17-7
102900701	12-3	103198401	6-25	adjuster, lash 7-11
102900801	12-3	103199001	6-13	air box 8-15
102900901	12-3	103199101	6-13	air box top 8-15
102901001	12-3	103205401	3-3, 3-7, 6-13	air filter 8-15
102901101	12-5	103205501	3-7, 6-25	air intake hose 8-15
102901201	12-3	103210201	3-9, 6-13	ammeter 16-3, 16-5, 16-7, 16-9, 16-15, 16-17
102901301	12-3	103210301	3-3, 13-11	anchor body 4-3, 4-9
102901401	12-3	103218601	13-11	anchor body kit 4-3, 4-9
102901501	12-3	103222001	13-7	anchor, piston 4-3, 4-9
102901601	12-3	103245201	1-11, 1-13	anti-sway bar 5-21
102901701	12-3	103245301	1-11, 1-13	A-plate strap 5-9
102901801	12-3	103255601	6-5, 6-7	A-plate, delta 5-9
102901901	12-3	103255701	13-3	arbor <i>17-3</i>
102902001	12-3	103261701	3-11	arm
102902201	12-7	103261801	3-11	governor 11-3
102902301	12-7	103284201	3-11	pivot 11-3
102902401	12-7	103306301	8-7	rocker 7-9
102902501	12-7	103345701	10-3	armature <i>6-17, 14-3</i>
102902601	12-7	103348201	6-13	armature conversion kit 6-17
102902701	12-7	103348202	13-11	armrest 1-29
102902801	12-7	103348501	6-13	assembly
102912801	13-17	103348601	6-13	accelerator bracket and bearing 4-19, 4-21
102917101	5-19	103350901	5-17	accelerator pivot rod 4-19, 4-21
102938301	13-7	103351001	5-9	air box 8-15
102938601	14-3	103351101	5-19	air box top 8-15
102938701	14-3	103352701	16-13	armature 6-17
102938801	14-3	103354401	13-11	axle 11-7



### **GET STARTED** https://CartPros.com/f.html



belicank and shaft 6-11 brush bolder 6-17 commercing of 7-13 cylinder hoad 7-9 delta Aplate 5-9 delta A			
brush holder 6-17 carburetor 8-9 battery charge for 21 carburetor 8-9 battery charge for 21 carburetor 8-9 battery charge for 21-1 battery discharge machine 17-3 battery discharge machine 17-3 battery blot-down 17-3 connecting rod 7-13 connecting rod 7-13 battery hold-down 17-3 battery hold-down 17-3 battery hold-down 17-3 battery hold-down 17-3 discharge machine 17-3 battery hold-down 17-3 battery light 13-11 battery hold-down 17-3 diver dutch 10-3 diver bub 10-3 battery light 13-11 battery hold-down 17-3 battery hold-down 17-3 battery light 13-11 battery hold-down 17-3 battery light 13-11 battery hold-down 17-3 batter hold-down 17-3 batter hold-down 17-3 batter hol	<b>5</b> .		
bouts holder 6-17 carburetor 8-9 connecting rod 7-13 cylinder head 7-9 delta shock and gear support 5-9 delta shock and gear support		, ,	•
cannetting rod 7-13 battery condition indicator 13-11 bracker 5-17 connecting rod 7-19 battery bloth-down rod 13-25, 13-27 battery cloth-down rod 13-25, 13-27 battery clother cloth roll of the		, , ,	3 3
connecting rod 7-13 cylinder head 7-9 battery hold-down rod 13-25, 13-27 delta A-plate 5-9 battery hold-down rod 13-25, 13-27 battery charger 76-3, 16-5 brake calle guide 5-9 battery hold-down rod 13-25, 13-27 brake calle guide 5-9 brake calle called purchase called guide 5-9 brake called guide 5-9 brake called guide 5-9 brake called guide 5-9 brake called called 5-9 brake called calle		•	•
Commonwealth   Comm			
delta Aplate 59 delta shock and gear support 5-9 dive clutch 10-3 dive hub 10-3 dive hub 10-3 diven clutch 10-7 battery linght 17-11 float 8-9 fled coil 6-17 float 8-9 float 8-9 fled coil 6-17 float 8-9 fled coil 6-17 float 8-9 float 8-9 float 18-5 headlight 6-9, 13-9 headlight 10-13 float 8-9 float 18-15 headlight 6-17 headlight 6-17 headlight 6-17 headlight 6-17 headlight 10-18 headlight 6-17 headlight 10-18 headligh	3	, ,	
delta-block and gear support 5-9   battery installor 1-23   brake cable guide 5-9   drive clutch 10-3   battery injuht 13-11   brake light switch 6-15, 13-13   driven clutch 10-7   battery terminal protector spray 17-3   FNR shifter 11-9   governor cable 8-13   driven clutch floof-67   battery 12-volt 6-21   headlight mounting 6-9, 13-9   driven clutch floof-67   battery, 12-volt 6-21   headlight mounting 6-9, 13-9   battery, 6-volt, Trojan T105, moist 13-25   multi-mounting 9-3   oil filter mount 7-7   oil level switch 7-11   headlight 6-9, 13-9   battery, 6-volt, Trojan T145, moist 13-27   oil filter mount 7-7   oil level switch 7-11   headlight 6-9, 13-9   battery, 6-volt, Trojan T145, moist 13-27   oil filter mount 7-7   oil level switch 7-11   folds screw 6-9   bail (motor) 14-3   relating 8-17   folds from 6-9, 13-9   bail (motor) 14-3   relating 8-17   folds from 6-9, 13-9   bail (motor) 14-3   folds from 6-9, 13-9   folds from 6-9, 13-9   bail (motor) 14-3   folds from 6-9, 13-9   folds from 6-9	cylinder head 7-9	•	-
drive dutch         10-3         battery terminal protector spray         17-3         brake light switch         6-15, 13-13         headilght she she         6-13         13-13         headilght she she         13-25         muffler mounting         6-13         13-13         headilght she she         6-11, 16-3, 16-5, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9, 16-9	•	•	, ,
driven clutch 10-7 driven clutch 10-7 driven clutch fixed-face 10-7 battery thermometer 17-3 driven clutch fixed-face 10-7 battery, 10-volt, Trojan T105 13-25 fleat Coil 6-17 fleat Coil 6-13 fleat Coil 6-17	delta shock and gear support 5-9	battery insulator 1-23	brake cable guide 5-9
driven clutch 10-7 driven clutch fixed-face 10-7 driven clutch fixed-face 10-7 field coil 6-17	drive clutch 10-3	battery light 13-11	brake light switch 6-15, 13-13
direct colling   Find	drive hub 10-3	battery terminal protector spray 17-3	FNR shifter 11-9
Reld coil 6-17	driven clutch 10-7	battery thermometer 17-3	governor cable 8-13
Final Resident Residence   Battery, 6 volt, Trojan T105, moist 13-25   muffler mount 7-7   moil filter mount 7-8   moil filt	driven clutch fixed-face 10-7	battery, 12-volt <i>6-21</i>	headlight mounting 6-9, 13-9
fuel tank vent	field coil 6-17	battery, 6-volt, Trojan T105 13-25	horn 6-7, 13-3
Boutery, 6-volt, Trojan T145, moist 13-27   oil level switch 7-11	float 8-9	battery, 6-volt, Trojan T105, moist 13-25	muffler mounting 9-3
headlight 6-9,13-9   bearing 15-3   relay mounting 6-11, 16-3, 16-5, 16-9     headlight harness 6-9, 13-9   ball 7-11   16-17     fidle screw 8-9   ball (notor) 14-3   retaining 8-17     inner ball joint 5-7   ball (steering pinion) 5-7   RPM limiter 7-5     kingpin 5-11,5-13   front wheel hub 5-15   shock aborstore 5-19     pilot air screw 8-9   idler 10-3   snubber 7-15     stabilizer bar mounting 5-19     stateling shaft 5-3   stateling shaft 5-3   steering shaft 5-3     steering shaft 5-3   steering shaft 5-3   steering shaft 5-3     steering shaft 5-3   steering shaft 5-3   steering shaft 5-3     axie 11-7, 12-3, 15-3   bearing and oil seal remover 17-3   bearing and oil seal remover 17-3     bearing paller wedge 17-3   brake adjustment tool 17-3     brake adjustment tool 17-3   brake adjustment tool 17-3     brake adjustment tool 17-3   brake cable 4-11, 4-17     backing plate, brake 4-3, 4-9   bearing seat 5-3   brake backing plate 4-3, 4-9     ball bearing 7-11   bed frame assembly 1-25   brake cable release tool 17-3     brake cable release tool 17-3   brake cable release tool 17-3     brake cable release tool 17-3   brake cable release tool 17-3     brake padd thread 5-7, 5-9   bed, flat 1-25   brake cluster 4-3, 4-9     brake padd at 4-3, 4-9   brake drawn 4-3, 4-9     brake padd at 4-3, 4-9   brake drawn 4-3, 4-9     brake padd at 4-3, 4-9   brake drawn 4-3, 4-9     brake padd at 4-3, 4-9   brake padd at 4-3, 4-9     brake padd at 4-3, 4-9   brake padd at 4-3, 4-9     brake padd at 4-3, 4-9   brake padd at 4-3, 4-9     brake padd at 4-3, 4-9   brake padd at 4-3, 4-9     brake padd at 4-3, 4-9   brake padd at 4-3, 4-9     brake padd at 4-3, 4-9   brake padd at 4-3, 4-9     brake padd at 4-3,	fuel tank vent 8-5	battery, 6-volt, Trojan T145 13-27	oil filter mount 7-7
headlight harness 6-9, 13-9  idle screw 8-9  idle screw 8-9  iball (motor) 14-3  inner ball joint 5-7  kingpin 5-11, 5-13  moveable-face 10-3, 10-7  hub 5-15  plug cap 7-5  ratchet 4-5, 4-7  secondary clutch weight 10-3  steering shaft 5-3  bearing shaft 5-3  steering shaft 5-1  steeri	governor 11-5	battery, 6-volt, Trojan T145, moist 13-27	oil level switch 7-11
idle screw 8-9 ball (motor) 14-3 retaining 8-17 Innerball joint 5-7 ball (steering pinion) 5-7 Ikingpin 5-11,5-13 front wheel hub 5-15 shock absorber 5-19 Imoveable-face 10-3, 10-7 hub 5-15 shock shorber 5-19 Innerball joint is 5-7 Innerball joint joint is 5-7 Innerball joint is 5-7 Innerball joint joint is 5-19 Innerball joint joint is 5-7 Innerball joint joint is 5-19 Innerball joint joint is 5-7 Innerball joint joint joint is 5-19 Innerball joint jo	headlight 6-9, 13-9	bearing 15-3	relay mounting 6-11, 16-3, 16-5, 16-9,
inner ball joint 5-7 kingpin 5-11,5-13 front wheel hub 5-15 shock absorber 5-19 shock absorber 7-15 statering shock absorber 7-15 shock absorber 7-15 statering shock absorber 7-15 shock	headlight harness 6-9, 13-9	ball <i>7-11</i>	16-17
kingpin 3-11, 5-13 moveable-face 10-3, 10-7 pilot air screw 8-9 plug cap 7-5 inner axide tube 11-7, 15-3 stabber 7-15 stacked 4-5, 4-7 secondary clutch weight 10-3 steering shaft 5-3 steering solumn mounting 5-3 thrust 5-11,5-12 storake shaft oil seal steering shaft 5-3 steering solumn mounting 5-3 thrust 5-11,5-13 steering solumn mounting 5-3 thrust 5-11,5-13 steering solumn mounting 5-3 steering solumn mounting 5-3 steering solumn mounting 5-19 stake shaft 6-11 ball, shifter 11-5 ball, shifter 11-5 ball, shifter 11-5 ball, steering solumn shaft 6-11 ball, shifter 11-5 barke pedal dipts witch bracket 6-15, 13-13 brake pedal dipts witch bracket 6-15, 13-13 brake spring 4-3, 4-9 brake spring 4-3, 4-9 brake s	idle screw 8-9	ball (motor) 14-3	retaining 8-17
kingpin 5-11,5-13 front wheel hub 5-15 shock absorber 5-19 moveable-face 10-3,10-7 hub 5-15 shock mounting 5-19 pilot air screw 8-9 idler 10-3 shock mounting 5-19 pilot air screw 8-9 idler 10-3 shock mounting 5-19 plug cap 7-5 inner axle tube 11-7, 15-3 stabilizer bar mounting 5-21 ratchet 4-5,4-7 lower pinion (steering) 5-7 stake side 1-27 secondary clutch weight 10-3 needle 11-5 starter/generator mounting 6-19 steering shaft 5-3 outer axle tube 11-7 steering column mounting 6-19 steering shaft 5-5 pivot support 4-19, 4-21 steering column mounting 5-3 trum signal lens 6-9, 13-9 steering shaft 5-3 throttle spring return 8-11 axle 11-7, 12-3, 15-3 bearing shaft 5-3 throttle spring return 8-11  Axle 11-7, 12-3, 15-3 bearing shaft 5-3 throttle spring return 8-11  BB bearing puller 17-3 bearing shaft 6-13 bearing shaft 6-13 shaft oil seal 1-17, 17-13 bearing shaft 5-3 bearing shaft oil seal 1-17, 15-3 bearing shaft 6-13 shaft oil seal remove 17-3 brake acquistment tool 17-3 bearing puller 17-3 brake adjustment tool 17-3 bearing seal 5-3 brake cable shaft 4-3, 4-9 bearing seal 5-3 brake cable sequalizer 4-11, 4-17 bag, desiccant 10-3 bearing seal 5-3 brake cable equalizer 4-11, 4-17 bag, desiccant 10-3 bearing seal 5-3 brake cable release tool 17-3 ball joint, 4-5, 4-7, 4-23, 5-7, 5-9 bed seal 1-13, 1-25 brake cluster 4-3, 4-9 ball joint, 4-6, 4-7, 4-23, 5-7, 5-9 bed, flat 1-25 brake cluster 4-3, 4-9 ball joint, 4-6, 4-7, 4-23, 5-7, 5-9 bed, flat 1-25 brake cluster 4-3, 4-9 ball, shifter 11-5 bell crank and shaft 6-11 brake light switch bracket 6-15, 13-13 brake pedal ad 4-5, 4-7 band, RPM limiter mount 7-5 belt, drive 10-5 belt, starter/generator 6-19, 10-3 brake pedal adjustment tool 17-3 barrel, plastic 1-3, 1-29, 8-3 block, brake-mounting 4-5, 4-7 barrel, plastic 1-3, 1-29, 8-3 block, brake-mounting 4-5, 4-7 barrel, plastic 1-3, 1-29, 8-3 block, brake-mounting 4-5, 4-7 battery charger 16-7, 16-15 block, terminal 6-7, 13-3, 13-19 brake spring 4-17 brake spring 4-3, 4-9 brake spring 4-3, 4-9 brake spring 4-3, 4-9	inner ball joint 5-7	ball (steering pinion) 5-7	RPM limiter 7-5
pilot air screw 8-9 idler 10-3 snubber 7-15 plug cap 7-5 inner axlet tube 11-7, 15-3 stabilizer bar mounting 5-21 ratchet 4-5, 4-7 secondary clutch weight 10-3 needle 11-5 statering 5-7 stake side 1-27 steering shaft 5-3 outer axle tube 11-7 steering 5-7 statering column 5-3 steering shaft 5-3 outer axle tube 11-7 steering column 5-3 steering shaft 5-3 steering column 5-3 steering column 5-3 steering shaft 5-3 turn signal lens 6-9, 13-9 steering shaft 5-3 through 11-7, 12-3, 15-3 turn signal lens 6-9, 13-9 steering shaft 5-3 through 11-7, 12-3, 15-3 turn signal lens 6-9, 13-9 steering shaft 5-3 through 11-7, 15-3 bearing and oil seal remover 17-3 brake actuator kit 4-3, 4-9 bearing puller 17-3 brake actuator kit 4-3, 4-9 bearing puller 17-3 brake adjustment tool 17-3 brake backing plate, brake 4-3, 4-9 bearing puller wedge 17-3 brake cable equalizer 4-11, 4-17 brake cable hanger 5-17 brake cable release tool 17-3 brake cable release tool 17-3 brake cable release tool 17-3 brake for 11-1 bed, floor plate 1-25 brake light switch bracket 6-15, 13-13 brake pedal 4-5, 4-7 brake pedal 4-5 brake pedal 4-5, 4-7 brake pedal adjustment tool 17-3 brake, pedal pedal 4-5, 4-7 brake pedal adjustment tool 17-3 brake, pedal pedal adjustment tool 17-3 brake pedal adjustment tool 17-3 brake pedal puller 4-7 brake pedal per 4-7 brake pedal pedal 4-5, 4-7 brake pedal puller 4-7 brake pedal puller 4-7 brake pedal pedal 4-5, 4-7 brake pedal adjustment tool 17-3 brake pedal puller 4-7 brake pedal pull		front wheel hub 5-15	shock absorber 5-19
plug cap 7-5 ratchet 4-5, 4-7 ratchet 4-5, 4-7 secondary clutch weight 10-3 steering shaft 5-3 steering column mounting 5-3 turn signal lens 6-9, 13-9 turn signal lens 6-9, 13-9 saxle 11-7, 12-3, 15-3 axle shaft oil seal 11-7, 15-3 bearing and oil seal remover 17-3 bearing puller 17-3 bearing puller wedge 17-3 bearing puller wedge 17-3 bearing puller wedge 17-3 bearing puller wedge 17-3 bearing seal 5-3 brake cable equalizer 4-11, 4-17 brake cable equalizer 4-11, 4-17 brake cable equalizer 4-17, 4-19 brake cable release tool 17-3 brake light switch bracket 6-15, 13-13 brake light switch bracket 6-15, 13-13 brake pedal adjustment tool 17-3 brake pedal adju	moveable-face 10-3, 10-7	hub <i>5-15</i>	shock mounting 5-19
Plug cap 7-5	·	idler 10-3	snubber 7-15
ratchet 4-5, 4-7 secondary clutch weight 10-3 steering shaft 5-3 steering wheel 5-5 steering wheel 5-5 pivot support 4-19, 4-21 steering column 5-3 steering column mounting 5-3 turn signal lens 6-9, 13-9 axle 11-7, 12-3, 15-3 axle 11-7, 12-3, 15-3 bearing and oil seal are mover 17-3 bearing puller 17-3 bearing puller wedge 17-3 bearing puller wedge 17-3 bearing puller wedge 17-3 ball bearing 7-11 ball joint, 4-5, 4-7, 4-23, 5-7, 5-9 ball joint, left-hand thread 5-7, 5-9 ball stud 6-11 ball, shifter 11-5 bar, stabilizer 5-21 bard, gray 13-15 battery charger 16-7, 16-15 battery charger a failer 16-13 bout support 4-19, 4-21 steering column 5-3 steering column mounting 5-3 throat tube 11-7 steering solumn mounting 5-3 throat steering column mounting 5-3 throat tube 11-7 steering column mounting 5-3 throat steering column for steering solumn mounting 5-3 throat steering column for 3 throat steering column for 3 steering column for 5-3 brake actuator kit 4-3, 4-9 brake cable actuator ki	•	inner axle tube 11-7, 15-3	stabilizer bar mounting 5-21
secondary clutch weight 10-3 needle 11-5 starter/generator mounting 6-19 steering shaft 5-3 outer act tube 11-7 steering wheel 5-5 pivot support 4-19, 4-21 steering column 5-3 steering shaft 5-3 turn signal lens 6-9, 13-9 steering shaft 5-3 throttle spring return 8-11 axis 11-7, 12-3, 15-3 thrust 5-11, 5-13 Tow/Run switch 6-25 axis 11-7, 12-3, 15-3 bearing and oil seal remover 17-3 brake actuator kit 4-3, 4-9 bearing puller 17-3 brake adjustment tool 17-3 brake actuator kit 4-3, 4-9 bearing puller 17-3 brake adjustment tool 17-3 brake cable qualizer 4-11, 4-17 bearing seat 5-3 brake cable equalizer 4-11, 4-17 brake cable hanger 5-17 brake cable hanger 5-17 brake cable release tool 17-3 brake fell rank and shaft 6-11 bell cank and shaft 6-11 brake pecal adjustment tool 17-3 brake			stake side 1-27
steering shaft         5-3         outer aske tube         11-7         steering column         5-3           steering wheel         5-5         pivot support         4-19, 4-21         steering column mounting         5-3           axke         11-7, 12-3, 15-3         throttle spring return         8-11           axke shaft oil seal         11-7, 15-3         bearing and oil seal remover         17-3         brake actuator kit         4-3, 4-9           bearing puller         17-3         brake addjustment tool         17-3           backing plate, brake         4-3, 4-9         bearing puller wedge         17-3         brake cable ing plate         4-3, 4-9           bad kesicrant         10-3         bearing seal         5-3         brake cable equalizer         4-11, 4-17           bad bearing         7-11         bed frame assembly         1-25         brake cable equalizer         4-11, 4-17           ball bearing         7-11         bed frame assembly         1-25         brake cable equalizer         4-11, 4-17           ball joint, left-hand thread         5-7, 5-9         bed, floor plate         1-25         brake cluster         4-3, 4-9           ball stud         6-11         bell (floor plate         1-25         brake lever am -43, 4-9           bal	·	•	starter/generator mounting 6-19
steering wheel         5-5         pivot support         4-19, 4-21         steering column mounting         5-3           turn signal lens         6-9, 13-9         steering shaft         5-3         throttle spring return         8-11           axle         11-7, 12-3, 15-3         thrust         5-11, 5-13         Tow/Run switch         6-25           axle shaft oil seal         11-7, 12-3         bearing and oil seal remover         17-3         brake actuator kit         4-3, 4-9           axle tube         15-3         bearing puller wedg         17-3         brake adjustment tool         17-3           backing plate, brake         4-3, 4-9         bearing seal         5-3         brake cable 4-11, 4-17           bag, desiccant         10-3         bearing seal         5-3         brake cable equalizer         4-11, 4-17           ball bearing         7-11         bed frame assembly         1-25         brake cable equalizer         4-11, 4-17           ball joint, left-hand thread         5-7, 5-9         bed seal         1-13, 1-25         brake cluster         4-3, 4-9           ball stud         6-11         bed, floor plate         1-25         brake lever arm         4-3, 4-9           ball, shifter         11-5         bell crank and shaft         6-11	· -		steering column 5-3
turn signal lens 6-9, 13-9  axle 11-7, 12-3, 15-3  axle shaft oil seal 11-7, 15-3  bearing and oil seal remover 17-3  bearing and oil seal remover 17-3  bearing and oil seal remover 17-3  brake actuator kit 4-3, 4-9  bearing puller 17-3  bearing puller wedge 17-3  brake adjustment tool 17-3  brake adjustment tool 17-3  brake adjustment tool 17-3  brake cable 4-11, 4-17  brake cable 4-11, 4-17  brake cable 4-11, 4-17  brake cable equalizer 4-11, 4-17  brake cable equalizer 4-11, 4-17  brake cable lenganger 5-17  ball bearing 7-11  bed frame assembly 1-25  brake cable release tool 17-3  brake cable release tool 17-	· · · · · · · · · · · · · · · · · · ·		steering column mounting 5-3
axle 11-7, 12-3, 15-3  axle shaft oil seal 11-7, 15-3  axle shaft oil seal 11-7, 15-3  bearing and oil seal remover 17-3  bearing puller set 17-3  bearing puller 17-3  bearing puller 17-3  bearing puller wedge 17-3  brake actuator kit 4-3, 4-9  brake adjustment tool 17-3  brake backing plate 4-3, 4-9  brake cable 4-11, 4-17  brake cable 4-11, 4-17  brake cable equalizer 4-11, 4-17  brake cable release tool 17-3  brake drum 4-3, 4-9	5		throttle spring return 8-11
bearing and oil seal remover 17-3 brake actuator kit 4-3, 4-9 brake attuator kit 4-3, 4-9 brake tube 15-3 bearing puller 17-3 bearing puller 17-3 brake adjustment tool 17-3 brake cable 4-3, 4-9 brake cable 4-11, 4-17 brake cable 4-11, 4-17 brake cable 4-11, 4-17 brake cable adjustment tool 17-3 brake cable prake cable 4-11, 4-17 brake cable adjustment tool 17-3 brake adjustment tool 17-3 brake adjustment tool 17-3 brake adjustment tool 17-3 brake padal adjustment pring 4-17 brake padal adjustment pring 4	_	_	Tow/Run switch 6-25
BB         bearing puller 17-3         brake adjustment tool 17-3           backing plate, brake 4-3, 4-9         bearing puller wedge 17-3         brake cable 4-11, 4-17           backing plate, brake 4-3, 4-9         bearing seal 5-3         brake cable 4-11, 4-17           bad, desiccant 10-3         bearing seal 5-3         brake cable equalizer 4-11, 4-17           ball bearing 7-11         bed frame assembly 1-25         brake cable release tool 17-3           ball joint, left-hand thread 5-7, 5-9         bed, flat 1-25         brake cluster 4-3, 4-9           ball stud 6-11         bed, floor plate 1-25         brake lever arm 4-3, 4-9           ball, shifter 11-5         bell crank and shaft 6-11         brake light switch bracket 6-15, 13-13           ball, steel pressure relief 7-7         bellows 5-7         brake mounting block 4-5, 4-7           bar, drive 13-15         belt, drive 10-5         brake pedal 4-5           bar, stabilizer 5-21         bezel, choke cable 8-17         brake pedal adjustment tool 17-3           barter, plastic 1-3, 1-29, 8-3         block, brake-mounting 4-5, 4-7         brake pedal pad 4-5, 4-7           battery charger 16-7, 16-15         block, fuse 6-11         brake pedal pad 4-5, 4-7           battery charger and reel 16-3, 16-5, 16-7, 16-9, 16-15, 16-17, 16-9, 16-15, 16-17, 16-19, 16-15, 16-17, 16-19, 16-15, 16-17, 16-19, 16-15, 16-17, 16-19, 16-15, 16-17, 16-19, 16-15, 16-17, 16-			brake actuator kit 4-3, 4-9
B         bearing puller 17-3         brake backing plate 4-3, 4-9           backing plate, brake 4-3, 4-9         bearing seal 5-3         brake cable 4-11, 4-17           bag, desiccant 10-3         bearing seal 5-3         brake cable equalizer 4-11, 4-17           ball bearing 7-11         bed frame assembly 1-25         brake cable release tool 17-3           ball joint 4-5, 4-7, 4-23, 5-7, 5-9         bed seal 1-13, 1-25         brake cluster 4-3, 4-9           ball joint, left-hand thread 5-7, 5-9         bed, flat 1-25         brake drum 4-3, 4-9           ball, shifter 11-5         bed, floor plate 1-25         brake lever arm 4-3, 4-9           ball, shifter 11-5         bell crank and shaft 6-11         brake lever arm 4-3, 4-9           band, RPM limiter mount 7-5         belt, drive 10-5         brake mounting block 4-5, 4-7           bar, stabilizer 5-21         bezel, choke cable 8-17         brake pedal 4-5           bar, parting 1-3, 1-29, 8-3         block, brake-mounting 4-5, 4-7         brake pedal pad 4-5, 4-7           battery cap, 6-volt 13-25, 13-27         block, fuse 6-11         brake return spring 4-17           battery charger and reel 16-3, 16-5         body, anchor 4-3, 4-9         brake return spring 4-17           battery charger and reel 16-3, 16-5, 16-7, 16-9, 16-15, 16-17, 16-19         body, seering column 5-3         breather 11-3, 15-3	·	<del>-</del>	brake adjustment tool 17-3
backing plate, brake 4-3, 4-9 bearing puller wedge 17-3 brake cable 4-11, 4-17 bag, desiccant 10-3 bearing seal 5-3 brake cable equalizer 4-11, 4-17 brake, desired searing seal 5-3 brake cable hanger 5-17 brake cable hanger 5-17 brake cable hanger 5-17 brake cable hanger 5-17 brake cable hanger 5-18 brake cable release tool 17-3 brake drum 4-3, 4-9 brake luster arm 4-3, 4-9 brake pressure relief 7-7 brake mounting block 4-5, 4-7 brake pedal 4-5 brake pedal 4-5 brake pedal 4-5 brake pedal 4-5 brake pedal adjustment tool 17-3 brake, luster 13-15 brake luster arm spring 4-17 brake pedal pad 4-5, 4-7 brake pedal lension tool 17-3 brake pedal graver arm 4-3, 4-9 brake spring 4-3,	axic tabe 133	-	brake backing plate 4-3, 4-9
backing plate, brake 4-3, 4-9 bearing seal 5-3 brake cable equalizer 4-11, 4-17 brake cable hanger 5-17 brake cable release tool 17-3 brake loph release too	R	- 1	brake cable 4-11, 4-17
bag, desiccant 10-3 bearing seat 5-3 brake cable hanger 5-17 ball bearing 7-11 bed frame assembly 1-25 brake cable release tool 17-3 ball bearing 7-11 bed frame assembly 1-25 brake cable release tool 17-3 ball joint, left-hand thread 5-7, 5-9 bed, flat 1-25 brake cluster 4-3, 4-9 ball stud 6-11 bed, floor plate 1-25 brake lever arm 4-3, 4-9 ball, shifter 11-5 bell crank and shaft 6-11 brake light switch bracket 6-15, 13-13 ball, steel pressure relief 7-7 bell, crive 10-5 brake pedal 4-5 bar, drive 13-15 belt, starter/generator 6-19, 10-3 pedal, brake 4-7 bar, stabilizer 5-21 bezel, choke cable 8-17 brake pedal adjustment tool 17-3 battery cap, 6-volt 13-25, 13-27 block, fuse 6-11 brake return spring 4-17 battery charger 16-7, 16-15 block, terminal 6-7, 13-3, 13-19 brake shoe 4-3, 4-9 battery charger and reel 16-3, 16-5, 16-7, 16-9, 16-15, 16-17 battery charger shield 16-13 bottom, air box 8-15 brush box assembly 14-3	_	3.	
ball bearing 7-11 bed frame assembly 1-25 brake cable release tool 17-3 bell bearing 7-11 bed frame assembly 1-25 brake cluster 4-3, 4-9 brake cluster 4-3, 4-9 brake cluster 4-3, 4-9 brake drum 4-3, 4-9 brake drum 4-3, 4-9 brake drum 4-3, 4-9 brake lever arm 4-3, 4-9 brake pedal differ switch bracket 6-15, 13-13 brake mounting block 4-5, 4-7 brake pedal 4-5 brake pedal 4-5 brake pedal adjustment tool 17-3 brake pedal pad 4-5, 4-7 brake pedal pad 4-5, 4-7 brake pedal pad 4-5, 4-7 brake pedal tension tool 17-3 brake return spring 4-17 brake return spring 4-17 brake shoe 4-3, 4-9 brake spring 4-3, 4-9		-	•
ball joint 4-5, 4-7, 4-23, 5-7, 5-9 bed seal 1-13, 1-25 brake cluster 4-3, 4-9 ball joint, left-hand thread 5-7, 5-9 bed, flat 1-25 brake drum 4-3, 4-9 ball stud 6-11 bed, floor plate 1-25 brake lever arm 4-3, 4-9 ball, shifter 11-5 bell crank and shaft 6-11 brake light switch bracket 6-15, 13-13 ball, steel pressure relief 7-7 bellows 5-7 brake mounting block 4-5, 4-7 band, RPM limiter mount 7-5 belt, drive 10-5 brake pedal 4-5 bar, stabilizer 5-21 bezel, choke cable 8-17 brake pedal adjustment tool 17-3 bartery cap, 6-volt 13-25, 13-27 block, brake-mounting 4-5, 4-7 battery charger and reel 16-3, 16-5 body, anchor 4-3, 4-9 battery charger case 16-3, 16-5, 16-7, 16-9, 16-15, 16-17 battery charger harness 13-7 boot, switch 6-25 brush box assembly 14-3 battery charger shield 16-13	<b>5</b> .	_	3
ball joint, left-hand thread 5-7, 5-9 bed, flat 1-25 bed, floor plate 1-25 bell crank and shaft 6-11 brake light switch bracket 6-15, 13-13 brake mounting block 4-5, 4-7 brake pedal 4-5 brake pedal 4-5 brake pedal 4-5 brake pedal adjustment tool 17-3 brake pedal adjustment tool 17-3 brake pedal pad 4-5, 4-7 brake pedal tension tool 17-3 brake return spring 4-17 brake return spring 4-17 brake spring 4-3, 4-9 brake spring 4-17 brake spring 4-3, 4-9 brake spring 4-17 brake pedal adjustment tool 17-3 brake pedal	3	·	
ball stud 6-11 bell crank and shaft 6-11 brake light switch bracket 6-15, 13-13 brake mounting block 4-5, 4-7 brake pedal 4-5 brake pedal 4-5 brake pedal 4-5 brake pedal 4-5 brake pedal adjustment tool 17-3 brake pedal pad 4-5, 4-7 brake pedal tension tool 17-3 brake return spring 4-17 brake shoe 4-3, 4-9 brake shoe 4-3, 4-9 brake shoe 4-3, 4-9 brake shoe 4-3, 4-9 brake spring 4-3, 16-5, 16-17, 16-15 bott, terminal 6-7, 13-3, 13-19 brake shoe 4-3, 4-9 brake spring 4-3, 4-9 brake spring 4-3, 4-9 brake spring 4-3, 16-5, 16-15, 16-17 bott, terminal 6-25 brush and screw set 6-17 brush box assembly 14-3 brake lever arm 4-3, 4-9 brake light switch bracket 6-15, 13-13 brake lever arm 4-3, 4-9 brake light switch bracket 6-15, 13-13 brake light switch bracket 6-15, 13-13 brake mounting block 4-5, 4-7 brake pedal 4-5 brake pedal 4-5 brake pedal adjustment tool 17-3 brake pedal 4-5 b		·	·
ball stud 6-17 ball, shifter 11-5 bell crank and shaft 6-11 bell crank and shaft 6-11 bell crank and shaft 6-11 brake light switch bracket 6-15, 13-13 brake mounting block 4-5, 4-7 brake pedal 4-5 brake pedal 4-5 brake pedal 4-5 brake pedal dystment tool 17-3 brake pedal adjustment tool 17-3 brake pedal pad 4-5, 4-7 brake pedal tension tool 17-3 brake pedal pad 4-5, 4-7 brake pedal pad 4-5, 4-			
ball, streel pressure relief 7-7 band, RPM limiter mount 7-5 belt, drive 10-5 bar, drive 13-15 bar, stabilizer 5-21 barb, vent 8-7 barrel, plastic 1-3, 1-29, 8-3 battery cap, 6-volt 13-25, 13-27 battery charger and reel 16-3, 16-5 battery charger and reel 16-3, 16-5 battery charger farness 13-7 battery charger shield 16-13 belt drive 10-5 belt, drive 10-5 belt, drive 10-5 belt, drive 10-5 belt, starter/generator 6-19, 10-3 belt, starter/generator 6-19, 10-3 bezel, headlight 6-9, 13-9 bezel, headlight 6-9, 13-9 brake pedal adjustment tool 17-3 brake pedal pad 4-5, 4-7 brake pedal tension tool 17-3 brake return spring 4-17 brake shoe 4-3, 4-9 brake shoe 4-3, 4-9 brake shoe 4-3, 4-9 brake spring 4-3, 4-9 brake spring 4-3, 4-9 breaker, circuit 16-3, 16-5, 16-15, 16-17 boot, steering column 5-3 brush and screw set 6-17 brush box assembly 14-3 brush box assembly 14-3		•	•
ball, steel pressure feller 7-7 band, RPM limiter mount 7-5 belt, drive 10-5 belt, drive 10-5 belt, drive 10-5 belt, starter/generator 6-19, 10-3 bezel, choke cable 8-17 bezel, choke cable 8-17 brake pedal 4-5 brake pedal djustment tool 17-3 brake pedal pad 4-5, 4-7 brak			
bard, kPM limiter mount 7-5 bard, drive 13-15 bard, trive 13-15 bard, stabilizer 5-21 bard, vent 8-7 bard, plastic 1-3, 1-29, 8-3 battery cap, 6-volt 13-25, 13-27 battery charger and reel 16-3, 16-5 battery charger case 16-3, 16-5, 16-7, 16-9, 16-15, 16-17 battery charger harness 13-7 battery charger shield 16-13 bett, starter/generator 6-19, 10-3 bett, starter/generator 6-19, 10-3 bett, starter/generator 6-19, 10-3 pedal, brake 4-7 brake pedal adjustment tool 17-3 brake pedal pad 4-5, 4-7 brake pedal tension tool 17-3 brake return spring 4-17 brake shoe 4-3, 4-9 brake shoe 4-3, 4-9 brake spring 4-3, 4-9 brake spring 4-3, 4-9 breaker, circuit 16-3, 16-5, 16-15, 16-17 brough are deal in the spring 4-17 brough are deal in the spring 4-17 breaker, circuit 16-3, 16-5, 16-15, 16-17 brough are deal in the spring 4-17 breaker spring 4-17 breaker, circuit 16-3, 16-5, 16-17 breaker, circuit 16-3, 16-5, 16-17 brough are deal in the spring 4-17 breaker spring 4-17 breaker spring 4-3, 4-9 breaker, circuit 16-3, 16-5, 16-17 breaker spring 4-3, 4-9 breaker, circuit 16-3, 16-5, 16-17 breaker pedal adjustment tool 17-3 brake pedal pad 4-5, 4-7 brake pedal adjustment tool 17-3 brake pedal pad 4-5, 4-7 brake pedal pad 4	•		_
bar, three 15-15 bar, stabilizer 5-21 barb, vent 8-7 barrel, plastic 1-3, 1-29, 8-3 battery cap, 6-volt 13-25, 13-27 battery charger and reel 16-3, 16-5 battery charger case 16-3, 16-5, 16-7, 16-9, 16-15, 16-17 battery charger harness 13-7 battery charger shield 16-13 bezel, choke cable 8-17 brake pedal adjustment tool 17-3 brake pedal pad 4-5, 4-7 brake pedal tension tool 17-3 brake return spring 4-17 brake shoe 4-3, 4-9 brake spring 4-3, 4-9 brake spring 4-3, 4-9 breaker, circuit 16-3, 16-5, 16-15, 16-17 boot, steering column 5-3 brush and screw set 6-17 brush box assembly 14-3		,	•
barb, vent 8-7 barrel, plastic 1-3, 1-29, 8-3 battery cap, 6-volt 13-25, 13-27 battery charger and reel 16-3, 16-5 battery charger case 16-3, 16-5, 16-7, 16-9, 16-15, 16-17 battery charger harness 13-7 battery charger shield 16-13 bezel, headlight 6-9, 13-9 brake pedal pad 4-5, 4-7 brake pedal tension tool 17-3 brake return spring 4-17 brake shoe 4-3, 4-9 brake spring 4-3, 4-9 brake spring 4-3, 4-9 brake spring 4-3, 4-9 breaker, circuit 16-3, 16-5, 16-17, 16-17 broot, steering column 5-3 brush and screw set 6-17 brush box assembly 14-3	bar, drive 13-15		
barrel, plastic 1-3, 1-29, 8-3 block, brake-mounting 4-5, 4-7 brake pedal tension tool 17-3 battery cap, 6-volt 13-25, 13-27 block, fuse 6-11 brake return spring 4-17 battery charger 16-7, 16-15 block, terminal 6-7, 13-3, 13-19 brake shoe 4-3, 4-9 brake spring 4-3, 4-9 brake spring 4-3, 4-9 brake spring 4-3, 4-9 brake spring 4-3, 4-9 brakes, circuit 16-3, 16-5, 16-17, 16-15, 16-17 boot, steering column 5-3 breather 11-3, 15-3 brush and screw set 6-17 battery charger shield 16-13 bottom, air box 8-15 brush box assembly 14-3	•		
battery cap, 6-volt 13-25, 13-27 block, fuse 6-11 brake return spring 4-17 battery charger 16-7, 16-15 block, terminal 6-7, 13-3, 13-19 brake shoe 4-3, 4-9 battery charger case 16-3, 16-5, 16-7, 16-9, 16-15, 16-17 boot, steering column 5-3 brake spring 4-3, 4-9 brakes, circuit 16-3, 16-5, 16-15, 16-17 boot, steering column 5-3 brush and screw set 6-17 battery charger shield 16-13 bottom, air box 8-15 brush box assembly 14-3	barb, vent 8-7		
battery charger 16-7, 16-15 block, terminal 6-7, 13-3, 13-19 brake shoe 4-3, 4-9 battery charger and reel 16-3, 16-5 body, anchor 4-3, 4-9 brake spring 4-3, 4-9 brake spring 4-3, 4-9 brake spring 4-3, 4-9 brakes, circuit 16-3, 16-5, 16-17 boot, steering column 5-3 breather 11-3, 15-3 brush and screw set 6-17 battery charger shield 16-13 bottom, air box 8-15 brush box assembly 14-3	barrel, plastic 1-3, 1-29, 8-3	•	•
battery charger 16-7, 16-15  battery charger and reel 16-3, 16-5 body, anchor 4-3, 4-9  battery charger case 16-3, 16-5, 16-7, 16-9, 16-15, 16-17  battery charger harness 13-7 boot, switch 6-25  battery charger shield 16-13  body, anchor 4-3, 4-9  breaker, circuit 16-3, 16-5, 16-15, 16-17  breather 11-3, 15-3  brush and screw set 6-17  brush box assembly 14-3			
battery charger case 16-3, 16-5, 16-7, 16-9, 16-15, 16-17 bott, steering column 5-3 bottom, air box 8-15 breaker, circuit 16-3, 16-5, 16-15, 16-17 breaker, circuit 16-3, 16-5, 16-17 breaker, circuit	battery charger 16-7, 16-15		
battery charger case 16-3, 16-3, 16-3, 16-4, 16-9, boot, steering column 5-3 breather 11-3, 15-3 battery charger harness 13-7 bottom, air box 8-15 brush and screw set 6-17 brush box assembly 14-3	battery charger and reel 16-3, 16-5		
battery charger harness 13-7 boot, switch 6-25 brush and screw set 6-17 battery charger shield 16-13 bottom, air box 8-15 brush box assembly 14-3	battery charger case 16-3, 16-5, 16-7, 16-9,		
battery charger shield 16-13 bottom, air box 8-15 brush box assembly 14-3	16-15, 16-17	_	·
battery charger shield 10 15	· ·		
battery charger transformer 16-3, 16-5, 16-7, box brush connector 6-17		bottom, air box 8-15	•
	battery charger transformer 16-3, 16-5, 16-7,	box	prusn connector 6-1/



## GET STARTED

XC	and	It wil	Ifind	the	part	you	are	100	king

brush holder 6-17	seat back 1-9, 1-19	controller, speed 13-17
brush inspection port cover 6-17	carburetor 8-9	cord connector 7-11
brush kit, motor 14-3	carburetor float level tool 17-7	cord reel 16-3, 16-5, 16-11, 16-13
brush port cover 6-17	carburetor gasket 8-11	cord, AC 16-3, 16-5, 16-7, 16-9, 16-15, 16-17
brush rigging 14-3	carburetor insulator 8-11	cord, DC 16-3, 16-5, 16-7, 16-9, 16-15, 16-17
brush spring 14-3	carburetor mounting gasket 8-11	counterbalance guide shaft 7-13
brush spring set 6-17	card, safety first 17-9	counterbalance weight 7-13
brush, motor 14-3	case	cover
bulb, headlight 6-9, 13-9	battery charger 16-3, 16-5, 16-7, 16-9,	brush inspection port 6-17
bulb, tail light 6-23, 13-21	16-15, 16-17	brush port 6-17
bumper	differential gear 11-7	crankcase 7-11
drive unit (motor) 14-3	gear 11-3, 15-3	dust 4-3, 4-9, 5-3, 5-15
front 1-3	rocker 7-9	electrical box 6-11
front, kit 1-3	charger bezel tool 17-3	oil pump 7-7
rear <i>1-21</i>	charger harness 13-7	rocker switch hole 6-13, 13-11
rubber 1-25, 4-5, 4-7	charger, battery 16-7, 16-15	screw head 6-13, 13-11
seal, long 1-7, 1-15, 1-17	charger, battery, onboard 16-3, 16-9, 16-17	steering column 5-3
side trim 1-29	charger, battery, shield 16-13	cowl 1-3
spring return 4-19, 4-21	choke cable 8-17	crankcase 7-13
bumper mounting 1-21	choke cable bezel 8-17	crankcase cover 7-11
bumper, seat 1-7	choke valve 8-15	crankcase cover 7 77 crankcase vent tube 8-11
bushing 10-3, 11-9	circuit breaker 16-3, 16-5, 16-7, 16-9, 16-15,	crankshaft 7-13
_	16-17	crankshaft rod 7-13
bronze 5-15	clamp	
nylon 4-5, 4-7	battery <i>6-21</i>	crankshaft shim 7-13
return line 8-19	cable retaining 8-13	C-type stop ring 5-7
spindle 5-15	hose 8-7, 8-11, 8-15	cup, spring 4-19, 4-21
stabilizer bar 5-21	muffler hose 9-3	current limiter 16-15
steel 1-25, 5-11, 5-13, 5-17, 5-19	clevis, upper delta 5-11, 5-13	cushion, shock absorber 5-17, 5-19
urethane 1-25, 5-9, 5-11, 5-13, 5-17, 5-19	clip, meter 6-13	cutter, valve seat 17-5, 17-11
bushing support 5-21	cluster idler gear 11-5	_
button, drive 10-7	-	D
buzzer, reverse 6-13, 6-23, 13-11, 13-23	cluster, brake 4-3, 4-9	damper, RPM limiter 7-5
	clutch alignment tool 17-5	dash 6-13, 13-11
C	clutch removal tool 17-3	dash component 1-5
cable	clutch repair kit 10-7	dash panel 6-13, 13-11
accelerator 8-13	clutch tool kit 17-5	DC cord 16-3, 16-5, 16-7, 16-9, 16-15, 16-17
brake 4-11, 4-17	clutch weight 10-3	decal
choke <i>8-17</i>	clutch, driven 10-7	4-gauge wire warning 3-5
governor <i>8-13</i>	coil, field 6-17	bed hold-down bolts 3-5, 3-9
IQDM <i>17-7</i>	coil, ignition 7-5	bed load warning 1-27, 3-5, 3-9
calibration test module 17-3	collet 7-9	Carryall/TransPorter 3-11
cam	column, steering 5-3	component cover 3-5
driven clutch 10-7	communication display module 17-5	crush area warning 3-5, 3-9
electrical component box 6-11	component box, electrical 6-11	driver/passenger 3-9
·	component mounting plate 13-17	
cam installation tool 17-3	component mounting plate cover 13-19	FNR 3-3, 3-9, 6-13, 13-11
cam, FNR shifter 11-9	compression gauge 17-5	four-passenger warning 3-5, 3-9
camshaft 7-11	compression mount 5-21	frame ground 3-9
camshaft shim 7-11	compressor, piston ring 17-9	hot surface warning 3-9
camshaft spring 7-11	compressor, valve spring 17-11	key switch 3-7, 6-13
cap	computer, onboard 13-17	no ground warning 3-5
battery, 6-volt 13-25, 13-27	connecting bar 1-29	on/off 3-3, 13-11
corner 1-11, 1-13, 1-19	connecting rod 7-13	operating instructions 3-7
dust 13-11	connector, a- 6-17	operating instructions (electric) 3-3, 13-11
fuel tank 8-5	continuity tester 17-5	rollover warning 3-3, 3-7, 6-13
key switch 6-13, 13-11	control board 16-3, 16-5, 16-9, 16-17	rotating parts 3-9
plug <i>7-5</i>	Control bodia 10 3, 10-3, 10-7, 10-17	run/service switch 3-7, 6-25

Tow/Run switch 3-5	E	front spring retainer plate 5-11, 5-13
TransPorter 4 3-11	eccentric adjustment screw 5-11, 5-13	F-terminal hardware 6-17
TransPorter 6 3-11	E-clip 4-11, 4-17	f-terminal insulator 6-17
vehicle loading 1-27, 3-3, 3-7	electrical box cover 6-11	fuel filter 8-7
delta A-plate 5-9	electrical box cover 6-77 electrical component box 6-11, 13-17	fuel gauge sending unit 8-5, 8-19
delta A-plate sub-assembly 5-9	•	fuel line 8-7, 8-11
delta shock and gear support 5-9	end bell, commutator 6-17	fuel meter 6-13
desiccant bag 10-3	end bell, output shaft 6-17	fuel pickup tube 8-5
DF-terminal insulator 6-17	end cap, motor 14-3	fuel pump mount 8-7
diagnostic port 13-11	engine 7-3	fuel pump, impulse 8-7
diesel tachometer probe 17-9	engine mounting plate 7-15	fuel tank 8-5
differential	engine shroud 7-3	fuel tank cap 8-5
drive unit 12-3, 15-3	equalizer pivot 4-11	fuel tank strap 8-7
differential gear 11-7, 15-3	equalizer rod 4-11, 4-17	fuel tank vent 8-5
differential gear case 11-7	equalizer, brake cable 4-11, 4-17	fuel tank vent gromment 8-19
differential housing 15-3	exhaust system 9-3	fuse 16-3, 16-5, 16-7, 16-9, 16-15, 16-17
<del>-</del>	exhaust valve 7-9	
differential idler gear 11-7	extrusion, fender 1-3	10-amp <i>6-11</i>
differential pin 11-7		20-amp <i>6-11</i>
diode 6-11	F	fuse block 6-11
dipstick 7-3	face, moveable 10-3, 10-7	
drain plug 7-7	fan housing 7-3	G
drain plug gasket 7-7, 11-3	fan shroud 7-3	gasket <i>15-3</i>
drive bar 13-15	fan, flywheel 7-5	carburetor 8-11
drive belt 10-5	fender extrusion 1-3	carburetor mounting 8-9, 8-11
drive button 10-7	fender, rear 1-21	crankcase cover 7-9, 7-11
drive clutch assembly 10-3		drain plug 7-7, 11-3
drive clutch button 10-3	field coil 6-17	exhaust <i>7-9</i> , <i>9-3</i>
drive clutch fixed sheave tool 17-5	field coil housing 6-17	head <i>7-9</i>
drive clutch fixed-face 10-3	fill plug 11-3	insulator <i>7-9</i> , <i>8-11</i>
drive clutch holder tool 17-5	filter	liquid 11-3, 15-3, 17-7
drive clutch hub puller 17-5	air 8-15	rocker case 7-9
drive clutch puller 17-5	fuel <i>8-7</i>	sending unit 8-5, 8-19
drive clutch pulley 10-3	oil <i>7-7</i>	taillight 6-23, 13-21
drive clutch spider removal tool 17-5	oil pump 7-7	gasket kit, FE350 <i>7-9</i>
drive clutch spring 10-3	fitting, thread-forming grease 5-7, 5-9, 5-15	- <del>-</del>
drive clutch weight 10-3	fixed-face, drive clutch 10-3	gauge, battery condition 13-11
drive hub 10-3	fixed-face, driven clutch 10-7	gauge, compression 17-5
drive unit bumper 14-3	flat bed 1-25	gauge, fuel-hour 6-13
driven clutch 10-7	float 8-9	gear
driven clutch button 10-7	floor mat 1-5	case 11-3, 15-3
	flywheel 7-5	cluster idler 11-5
driven clutch cam 10-7	flywheel fan 7-5	differential 11-7, 15-3
driven clutch cam puller 17-5	flywheel fan plate 7-5	differential idler 11-7, 15-3
driven clutch fixed-face assembly 10-7	flywheel puller 17-7	differential output 15-3
driven clutch puller plug 17-5	FNR closeout brush 6-13	helical <i>7-13, 11-5, 11-7</i>
driven clutch spring compression base tool	FNR shift lever 11-3	spur <i>7-13, 11-5</i>
17-5	FNR shifter 11-9	synchro 11-5
driven clutch spring compression collar tool	FNR shifter bracket 11-9	gear yoke 17-7
17-5	FNR shifter cam 11-9	governor 11-5
driven clutch spring compression nut tool  17-5	foam, seat 1-15, 1-17	governor arm 11-3
		governor cable 8-13
driver, drive clutch 10-3	foot rest 1-29	governor cable bracket 8-13
drum, brake 4-3, 4-9	foot rest mat 1-29	governor gear shaft 13-7
dry moly lubricant 17-7	fork, shift 11-5	governor shaft installation tool 17-7
duct, intake 8-17	frame and field, motor 14-3	grommet 8-5, 8-17
dust cap 13-11	front bumper 1-3	grommet, fuel tank vent 8-19
dust cover 4-3, 4-9, 5-3, 5-15	front bumper kit 1-3	guard splash 8-3





# **GET STARTED**

https://CartPros.com/f.html

quido	ignition coil 7.5	park braka padal 45 47
guide intake valve 7-9	ignition coil 7-5 indicator, battery condition 13-11	park brake pedal 4-5, 4-7 reverse buzzer 6-23, 13-23
valve 7-9	inner frame snubber 7-15	shock absorber cushion 5-17, 5-19
valve y-9	input shaft 15-3	steering column rebuild 5-3
guide ring adhesive 17-3	insert, synchronizer 11-5	tune-up 17-9
guide mig dunesive 17 5	instrument panel 6-13, 13-11	knob, forward/reverse 11-9
Н	insulating washer 14-3	Kilob, forward/feverse 11 5
handrail 1-29	insulator gasket 7-9, 8-11	L
hanger, brake cable 5-17	insulator, battery 1-23	lash adjuster 7-11
hardware, F-terminal 6-17	insulator, carburetor 8-11	latch, air box 8-15
harness, battery charger 13-7	insulator, motor terminal 14-3	latch, park brake 4-5, 4-7
harness, headlight 6-5, 6-7, 13-3	intake duct 8-17	leaf spring 5-11, 5-13, 5-17, 5-19
harness, wire 6-5, 6-11, 13-7	intake pipe 8-11	lens, headlight 6-9, 13-9
head gasket 7-9	intake valve 7-9	lens, taillight 6-23, 13-21
head, cylinder 7-9	intermediate shaft 15-3	lever
headband, sealed, motor 14-3	intermediate steering shaft 5-3	change <i>11-3</i>
headband, vented, motor 14-3	internal retaining ring pliers 17-7	choke <i>8-15</i>
headlight assembly 6-9, 13-9	IQ display module (IQDM) 17-7	light
headlight bulb 6-9, 13-9		battery <i>13-11</i>
headlight harness 6-9, 13-9	J	oil <i>6-13</i>
headlight retainer 6-9, 13-9	jet, main <i>8-9</i>	tail <i>6-23, 13-21</i>
headlight wire harness 6-5, 6-7, 13-3	jet, pilot 8-9	limit switch 6-11, 6-15, 11-9, 13-13
heat shrink tube 16-3, 16-5, 16-11	joint	limiter
heatsink and rectifier 16-3, 16-5, 16-7, 16-9,	ball 4-5, 4-7, 4-23, 5-9	current <i>16-15</i>
16-15, 16-17	left-hand thread ball 5-7, 5-9	RPM <i>7-5</i>
helical gear 7-13, 11-5, 11-7		voltage 6-7
hill brake rod 4-5, 4-7	K	line, fuel 8-7, 8-11
hill brake weld assembly 4-5, 4-7	key	link, rack and pinion drag 5-7
hinge pin 1-27	crankshaft <i>7-5, 7-13</i>	link, stabilizer bar 5-21
hinge plate 1-15, 1-17	driven clutch 10-7	liquid gasket 11-3, 15-3, 17-7
hinge, stake side 1-27	On/Off 6-13, 13-11	low oil warning light 6-13
hip restraint 1-29	square 10-7	lubricant, dry moly 17-7
hold-down rod, battery 13-25, 13-27	starter/generator 6-17	lubricant, moly-teflon 14-3, 17-7
hold-down, battery 13-25, 13-27	woodruff 11-3	lug nut 2-3
horn 6-7, 13-3	key switch 6-13	lug stud 5-15, 11-7, 15-3
horn bracket 6-7, 13-3	key switch cap 6-13, 13-11	
horn button and wire assembly 6-15, 13-13	key switch, On/Off 13-11	M
hose, air intake 8-15	kingpin <i>5-11, 5-13</i>	magnet, speed sensor 14-3
hose, fuel 8-7	kit	main jet 8-9
hour meter 6-13	2-pin housing 13-15	maintenance/operation switch 6-25
housing	3-pin housing 13-15, 14-3	mat, floor 1-5
2-pin <i>13-15</i>	accelerator pivot rod 4-19, 4-21	mat, foot rest 1-29
3-pin <i>13-15, 14-3</i>	anchor body 4-3, 4-9	MCOR 13-15
differential 15-3	brake pedal 4-5	meter clip 6-13
fan <i>7-3</i>	brake pedal adjustment tool 17-3	meter, volt ohm 17-11
field coil 6-17	brake shoe retainer 4-3, 4-9	module
hub 5-15	clutch repair 10-7	calibration test 17-3
hub bearing 5-15	differential gear case 11-7	communication display 17-5
hub, synchronizer clutch 11-5	drive clutch button 10-3	moly-teflon lubricant 17-7
hydraulic brake adjuster 17-7	drive clutch weight 10-3	motor
hydrometer 17-7	driven clutch button 10-7	48-volt IQ Plus 14-3
_	IQ display module (IQDM) 17-7	motor brush 14-3
I	motor brush 14-3	motor brush kit 14-3
idle screw assembly 8-9	motor speed sensor 14-3	motor brush spring 14-3
idler bearing 10-3	park brake latch 4-5, 4-7	motor bumper 14-3
idler gear, differential 15-3	,	p

# GET STARTED \_\_\_

al	CH	DUX	allu	IL	WIII	IIIIu	uie	part	you	are	100	KILIS
										IIV	IIJ	E

motor controller 13-17
motor end cap 14-3
motor frame and field 14-3
motor headband, sealed 14-3
motor headband, vented 14-3
motor magnet, speed sensor 14-3
motor speed sensor 14-3
motor speed sensor kit 14-3
motor terminal and lead assembly 14-3
motor terminal insulator 14-3
mount, compression 5-21
mount, fuel pump 8-7
mounting block, brake 4-5, 4-7
moveable-face 10-3, 10-7
muffler hose clamp 9-3
N

#### N

name plate 3-11 needle bearing 11-5 nozzle, main 8-9 nut, lug 2-3

### 0

OBC 13-17 oil filler tube 7-3 oil filter 7-7 oil filter mount bracket 7-7 oil filter screen 7-11 oil filter screen plate 7-11 oil level sensor 7-11 oil level switch bracket 7-11 oil pump and rotor 7-7 oil pump cover 7-7 oil pump filter 7-7 oil pump plate 7-7 oil seal 7-9, 7-11, 7-13, 11-3, 11-5 oil warning light, low 6-13 onboard battery charger 16-3, 16-9, 16-17 onboard computer 13-17 operation/maintenance switch 6-25 O-ring 7-3, 7-9, 7-11, 7-13

### P

pad
accelerator pedal 4-19, 4-21
brake pedal 4-5, 4-7
park brake 4-5, 4-7
paint, touch-up 17-7
panel, instrument 6-13, 13-11
park brake latch 4-5, 4-7
park brake pedal 4-5, 4-7
park brake rod sleeve 4-5, 4-7
park brake spacer 4-5, 4-7
park brake torsion spring 4-5, 4-7
pawl 4-5, 4-7

pedal group 4-7
pedal, accelerator 4-19, 4-21
pedal, brake 4-5
pedal, park brake 4-5, 4-7
pilot air screw assembly 8-9
pilot jet 8-9
pin, differential 11-7
pin, hinge <i>1-27</i>
pin, piston <i>7-13</i>
pinion, steering <i>5-7</i>
pipe, intake 8-11
piston <i>7-13</i>
piston anchor 4-3, 4-9
piston pin 7-13
piston ring 7-13
piston ring compressor 17-9
piston ring pliers 17-9
piston ring set 7-13
pivot arm 11-3
pivot support bearing 4-19, 4-21
plate
bed floor 1-25
bumper mounting 1-21 component mounting 13-17
engine mounting 7-15
flywheel fan 7-5
front spring retainer 5-11, 5-13
hinge 1-15, 1-17
name 3-11
oil filter screen 7-11
oil pump 7-7
receptacle backing 16-3, 16-5, 16-13
score card 5-5
spring mounting 5-11, 5-13
steering wheel 5-5
thrust 11-5, 11-7
pliers
internal retaining ring 17-7
piston ring 17-9
retaining ring 17-9
plug
drain <i>7-7</i>
driven clutch puller 17-5
fill 11-3
spark <i>7-5</i>
plug cap 7-5
pole set <i>6-17</i>
port, diagnostic 13-11
press weldment 17-5
protector spray, battery terminal 17-3
puller
bearing 17-3
clutch <i>17-3</i> drive clutch <i>17-5</i>
drive clutch hub 17-5
GLIVE CIGICII HUD 17-J

flywheel 17-7					
seal 17-9					
special use tool 17-9					
pulley					
drive clutch 10-3					
starter-generator 6-17					
pump, impulse fuel 8-7					
push rod 7-9					

```
R
race, front hub bearing 5-15
rack and pinion drag link 5-7
rack guide pressure spring 5-7
rack, steering 5-7
ratchet, park brake 4-5, 4-7
reamer, valve guide 17-9
rear bumper 1-21
rear fender 1-21
rear spring shackle 5-17
receptacle backing plate 16-3, 16-5, 16-13
receptacle, AC cord 16-15
rectifier with heatsink 16-3, 16-5, 16-7, 16-9,
    16-15, 16-17
reel bracket 16-11
reel cord 16-3, 16-5, 16-11, 16-13
regulator, voltage 6-11
relay 6-11, 16-5
relay mounting bracket 6-11, 16-3, 16-5, 16-9,
    16-17
relay, 12-volt 6-7
relay, 48-volt 16-7, 16-9, 16-15, 16-17
remover, bearing and oil seal 17-3
retainer
   accelerator pedal spring 4-19, 4-21
  brake shoe 4-3, 4-9
  headlight 6-9, 13-9
   shock absorber cushion 5-17, 5-19
  spring (drive clutch) 10-3
  valve spring 7-9
retaining bracket 8-17
retaining ring 5-3
retaining ring pliers 17-9
return spring bumper 4-19, 4-21
reverse buzzer 6-13, 6-23, 13-11, 13-23
rim, wheel, white 2-3
ring
  piston 7-13
   retaining 5-3, 6-11, 10-3, 10-7
  snap 5-7, 7-9, 7-13
   spiral backup 10-3
   synchronizer 11-5
ring, C-type stop 5-7
```

ring, piston 7-13

rocker arm 7-9

rocker case 7-9

rivet, blind push 1-3, 13-19



driven clutch cam 17-5



# **GET STARTED**

https://CartPros.com/f.html

rocker case gasket 7-9	set, brush and screw 6-17	brake <i>4-3, 4-9</i>
rocker shaft 7-9	set, pole <i>6-17</i>	brake return 4-17
rocker switch 13-11	shackle weldment 5-19	brush <i>6-17, 14-3</i>
rocker switch (lights) 6-7, 13-3	shackle, rear spring 5-17	camshaft 7-11
rod	shaft	drive button 10-3
accelerator 4-23	change 11-3	drive clutch 10-3
accelerator pivot 4-19, 4-21	counterbalance guide 7-13	driven clutch 10-7
battery hold-down 13-25, 13-27	governor gear 13-7	extension return 8-15
connecting 7-13	input 15-3	leaf 5-11, 5-13, 5-17, 5-19
crankshaft 7-13	intermediate 15-3	park brake torsion 4-5, 4-7
equalizer 4-11, 4-17	intermediate steering 5-3	rack guide pressure 5-7
hill brake 4-5, 4-7	rocker 7-9	shifter 11-5
push <i>7-9</i>	steering column 5-3	steering shaft compression 5-3
shift <i>11-5</i>	transmission 11-5	synchronizer 11-5
tie 5-9	shield, battery charger 16-13	throttle return 8-11
rotor, oil pump and 7-7	shift fork 11-5	valve <i>7-9</i>
RPM limiter 7-5	shift lever 11-3	spring cup 4-19, 4-21
RPM limiter bracket 7-5	shift rod 11-5	spring mounting plate 5-11, 5-13
RPM limiter damper 7-5	shifter, FNR 11-9	spring, motor brush 14-3
RPM limiter mount band 7-5	shim, camshaft 7-11	spur gear <i>7-13, 11-5</i>
	shim, crankshaft 7-13	stabilizer bar 5-21
S	shim, tilt bed pivot 1-25	stabilizer bar link 5-21
safety first card 17-9	shock absorber 5-9, 5-17, 5-19	stabilizer bar mounting bracket 5-21
screen, oil filter 7-11	shock absorber cushion 5-17, 5-19	stake side 1-27
screw, eccentric adjustment 5-11, 5-13	shock absorber cushion retainer 5-17, 5-19	stake side bracket 1-27
screw, valve clearance adjuster 17-9	shock mounting bracket 5-19	stake side hinge 1-27
seal	shoe, brake 4-3, 4-9	stake side kit 1-27
bearing 5-3	shroud 7-3	starter/generator 6-17
bed 1-25	shroud, engine 7-3	starter/generator belt 6-19, 10-3
intake 8-15	shroud, fan 7-3	starter/generator pulley 6-17
lip 15-3	sleeve	steel bushing 1-25, 5-11, 5-13, 5-17, 5-19
oil 7-9, 7-11, 7-13, 11-3, 11-5, 11-7, 15-3	delta A-plate 5-9	steel pressure relief ball 7-7
steering pinion dust $5-7$	governor 11-5	steering column 5-3
vertical socket dust 5-7, 5-9	park brake rod 4-5, 4-7	steering column bearing press tool 17-9
seal puller 17-9	synchronizer 11-5	steering column retaining ring tool 17-9
seal, bed 1-13	snap ring 5-7, 7-9, 7-13	steering gear box 5-7
sealant 11-3, 15-3	snubber bracket 7-15	steering pinion 5-7
seat	snubber, inner frame 7-15	steering pinion dust seal 5-7
spring 7-9	socket 5-7, 5-9	steering rack 5-7
valve <i>7-7</i>	solenoid 13-17	steering shaft assembly 5-3
seat back 1-9, 1-19	solenoid, 12-volt 6-11	steering shaft compression spring 5-3
seat back assembly 1-9, 1-19	spacer	steering wheel 5-5
seat back cap 1-9, 1-19	accelerator pivot rod 4-19, 4-21	steering wheel plate 5-5
seat back mounting bracket 1-19	park brake 4-5, 4-7	steering wheel puller tool 17-9
seat back tube 1-11, 1-13	spanner wrench 17-9	stem, valve 2-3
seat back, white 1-9, 1-19	spark plug 7-5	stiffener 1-7
seat bottom assembly 1-7, 1-15, 1-17	speed controller 13-17	stiffener, flywheel side 7-15
seat bumper 1-7	speed sensor 14-3	stiffener, PTO side 7-15
seat cover, vinyl 1-7, 1-15, 1-17	speed sensor magnet 14-3	strap, A-plate 5-9
seat foam 1-15, 1-17	speed sensor, motor 14-3	strap, fuel tank 8-7
seat hinge 1-19	spindle 5-15	strap, seat 1-7, 1-15, 1-17
seat strap 1-7, 1-15, 1-17	spiral backup ring 10-3	stud 7-15
seat, bearing 5-3	splash guard 8-3	lug <i>5-15, 11-7, 15-3</i>
sending unit, fuel gauge 8-5, 8-19	spray, battery terminal protector 17-3	stud, ball 6-11

INDEX

support yoke (steering) 5-7

support, bushing 5-21

accelerator return 4-19, 4-21

spring

sensor, motor speed 14-3

sensor, oil level 7-11

### **GET STARTED** https://CartPros.com/f.html

suppressor, voltage 6-7, 13-3, 16-3, 16-5, 16-7,	drive clutch fixed sheave 17-5	valve clearance adjuster screw 17-9
16-9, 16-15, 16-17	drive clutch holder 17-5	valve guide 7-9
switch	drive clutch spider removal 17-5	valve guide driver tool 17-9
four-position 16-5, 16-15, 16-17	driven clutch spring compression base	valve guide reamer 17-9
key 6-13, 13-11	17-5	valve guide, intake 7-9
light rocker 6-7, 13-3	driven clutch spring compression collar	valve seat 7-7
limit 6-11, 6-15, 11-9, 13-13	17-5	valve seat cutter 17-5, 17-11
rocker 13-11	driven clutch spring compression nut 17-5	valve seat cutter guide 17-11
switch rubber boot 6-25	governor shaft installation 17-7	valve seat cutter tool 17-5
switch, operation/maintenance 6-25	puller, special use 17-9	valve seat t-wrench 17-11
switch, toggle 6-25	steering column bearing press 17-9	valve spring 7-9
synchro gear 11-5	steering column retaining ring 17-9	valve spring compressor 17-11
synchronizer clutch hub 11-5	steering wheel puller 17-9	valve spring retainer 7-9
synchronizer insert 11-5	transaxle axle seal 17-9	valve stem 2-3
synchronizer sleeve 11-5	transaxle pinion seal 17-9	vent barb 8-7
synchronizer spring 11-5	transmission 17-9	vent, fuel tank, w/ valve 8-19
system, exhaust 9-3	valve guide driver 17-9	vertical socket dust seal 5-7, 5-9
system, emiador y s	valve seat cutter 17-5	·
т	tool kit, clutch 17-5	volt ohm meter 17-11
	touch-up paint 17-7	voltage limiter 6-7
12-volt battery 6-21	Tow/Run switch bracket 6-25	voltage regulator 6-11
12-volt solenoid 6-11	transaxle 12-3, 15-3	voltage suppressor 6-7, 13-3, 16-3, 16-5, 16-7,
tachometer 17-9	transaxle axle seal tool 17-9	16-9, 16-15, 16-17
tachometer probe, diesel 17-9	transaxle housing 15-3	W
tail light bulb 6-23, 13-21	transaxle pinion seal tool 17-9	W
taillight 6-23, 13-21	·	warning light, low oil 6-13
taillight gasket 6-23, 13-21	transaxle, unitized 11-3	washer, insulating 14-3
taillight lens <i>6-23, 13-21</i>	transformer, battery charger 16-3, 16-5, 16-7, 16-9, 16-15, 16-17	wedge, bearing puller 17-3
tailskirt 1-21	transmission shaft 11-5	weight
tank, fuel 8-5	transmission tool 17-9	clutch 10-3
tape, vinyl foam 1-25	trim	counterbalance 7-13
terminal block 6-7, 13-3, 13-19		secondary clutch 10-3
tester, continuity 17-5	cowl 1-3	weldment
thermometer, battery 17-3	seat bottom 1-11, 1-13	press 17-5
thread-forming grease fitting 5-7, 5-9, 5-15	tube	wheel 2-3
throttle return spring 8-11	crankcase vent 8-11	wheel and tire assembly 2-3
throttle spring return bracket 8-11	fuel pickup 8-5	wheel rim, white 2-3
thrust bearing 5-11, 5-13	oil filler 7-3	wheel, steering 5-5
thrust plate 11-5, 11-7	seat back 1-11, 1-13	wire assembly, battery charger 16-15
tie rod 5-9	tune-up kit 17-9	wire harness 6-5, 6-11, 13-7
tie wrap 5-7, 6-7, 6-11, 8-17, 13-3, 13-7, 13-17,	turn signal lens 6-9, 13-9	wire harness, headlight 6-5, 6-7, 13-3
13-19	T-wrench tool 17-5	woodruff key 11-3
tire 2-3		wrap, tie 5-7, 6-7, 6-11, 8-17, 13-3, 13-7, 13-17,
tire and wheel assembly 2-3	U	13-19
toggle switch 6-25	U-bolt 5-19	wrench, spanner 17-9
tool	u-bolt <i>5-17</i>	, I
accelerator pedal adjustment 17-3	unitized transaxle 11-3	Υ
belt tensioning, starter/generator 17-11	upper delta clevis 5-11, 5-13	
brake adjustment 17-3	urethane bushing 1-25, 5-9, 5-11, 5-13, 5-17,	yoke, gear 17-7
brake cable release 17-3	5-19	yoke, support (steering) 5-7
brake pedal adjustment 17-3		
brake pedal tension 17-3	V	
cam installation 17-3	valve	
carburetor float level 17-7	choke 8-15	
	exhaust 7-9	
charger bezel 17-3		
clutch alignment 17-5	intake <i>7-9</i>	



cT-wrench 17-5

reed *7-9* 































