






2009-2011 XRT 850 Illustrated Parts List

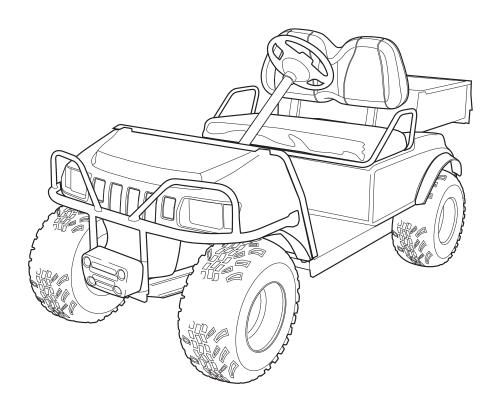

Gasoline and Electric Vehicles

Manual Number 103472614 Edition Code 0508G1010F











USING THE ILLUSTRATED PARTS LIST

⚠ WARNING

• This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.

This manual covers all 2009-2011 XRT850 gasoline and electric vehicles.

The manual is divided into sections. Note that there are two or three flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flag (or flags) contains the letter D, E, or G, signifying that the page pertains to the diesel, electric, or gasoline vehicles only.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indention corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to level 2 is a component of the level 1 part (assembly) that it is listed under. A level 3 part is a component of the level 2 part that it is listed under, and a level 4 part is a component of the level 3 part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part is the quantity used per next higher level assembly of which it is a component. A part that is not indented is a level 1 part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories are sold through our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "Distributor Search" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P.O. Box 204658 Augusta, Georgia 30917-4658 USA Telephone 706-863-3000 Service Parts Fax 706-855-7413 www.clubcar.com







NOTE: This illustrated parts list represents the most current information at the time of publication. Club Car, LLC. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.

Club Car, LLC. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2010 Club Car, LLC. Club Car and ArmorFlex are registered trademarks of Club Car, LLC. This manual effective October 1, 2010.







Brushguard and Bumper	1-3
Inner Fender	1-5
Front Body	1-
Cowl Edge Covers	1-
Rear Body – Gasoline Vehicles	1-1
Dash Trim	1-1
Dash – Electric Vehicles	1-1.
Dash – Gasoline Vehicles	1-1
Beverage Holder	1-1
Rear Body – Electric Vehicles	1-2
Canopy (White) for Vehicles Equipped with Bed	1-2
Canopy (White) for Vehicles Equipped with Fold Down Rear Seat	1-2
Canopy (Black) for Vehicles Equipped with Bed	1-2
Canopy (Black) for Vehicles Equipped with Fold Down Rear Seat	1-2
Seat, Beige	1-3
Seat, White	1-3
Seat, Gray	1-3
Seat, Black	1-3
Rear Fold Down Seat	1-3
Floormat	1-4
Bed Box	1-4
SECTION 2. WHEELS AND TIDES	
SECTION 2 – WHEELS AND TIRES	
Wheels and Tires	2-
SECTION 3 – DECALS	
SECTION 5 DECRES	
Safety Decals – Electric Vehicles	3-
Safety Decals – Gasoline Vehicles	
Badging Decals	3-
SECTION 4 – BRAKE SYSTEMS	
Rear Brake Assembly, Self-Adjusting – Vehicle with 2-Wheel Brakes	4-
Brake Pedal Assembly	
Brake Cable, Equalizer, and Equalizer Rod – Vehicles with Two-Wheel Brakes	
Accelerator Pedal – Gasoline Vehicles	
Accelerator Pedal Assembly – Electric Vehicles with MCOR	
Accelerator Rod – Gasoline Vehicles	





SECTION 5 – STEERING AND SUSPENSION	
Steering Column	5-3
Steering Gear Assembly	5-5
Front Spindles and Hubs	5-7
Steering Wheel	5-9
Steering Gear Assembly	5-11
Front Suspension, Upper	5-13
Front Suspension, Lower	5-15
Rear Suspension – Shock Absorbers	5-17
Rear Suspension and Swaybar	5-19
Rear Suspension Hardware	5-21
SECTION 6 – ELECTRICAL SYSTEM – GASOLINE VEHICLE	
Wiring – Gasoline Vehicle	6-5
Headlights	6-7
Electrical Component Box	6-9
Starter/Generator Assembly Model G425419 – Gasoline Vehicles	6-11
FE350 Starter/Generator Mounting – Gasoline Vehicles	6-13
Battery – Gasoline Vehicle	6-15
Operation and Maintenance Switch	6-17
SECTION 7 – FE350 ENGINE – S27	
FE350 Engine – Oil Circulation	7-3
FE350 Engine without ACR (Automatic Compression Release) – Shrouds and Brackets	7-5
AS26 FE350 Engine – Ignition Components and Flywheel	7-7
AS26 FE350 Engine – Cylinder Head	7-9
AS26 FE350 Engine – Crankcase and Crankshaft Oil Sensor	7-11
AS26 FE350 Engine – Crankcase and Crankshaft	7-13
FE350 Engine Mounting	7-15
SECTION 8 – AS11 FE350 ENGINE	
AS11 FE350 Engine without ACR (Automatic Compression Release) – Shrouds and Brackets	8-3
AS11 FE350 Engine – Ignition Components and Flywheel	8-5
FE350 Engine – Oil Circulation	8-7
AS11 FE350 Engine – Cylinder Head	8-9
AS11 FE350 Engine without ACR – Crankcase, Camshaft, and Oil Sensor	8-11
AS11 FE350 Engine – Crankcase and Crankshaft	8-13
FE350 Engine Mounting	8-15







SECTION 9 – FUEL, INTAKE, AND GOVERNOR SYSTEMS	
Fuel System	
Fuel Tank with Fuel Level Sending Unit	
Carburetor Assembly – FE350	
Carburetor Installation – FE350	
Governor and Accelerator Cables	
Intake Duct, Choke, and Air Box Assembly	
Carburetor Assembly – FE350 S26	
Carburetor Installation – FE350 S27	9-17
SECTION 10 – EXHAUST SYSTEM	
Exhaust System – FE350 Engine	10-3
SECTION 11 – TORQUE CONVERTER	
Drive Clutch	11-3
Drive Belt – FE350	11-5
Driven Clutch	11-7
SECTION 12 – TRANSAXLE AND FNR SHIFTER – GASOLINE VEHICLE	
Transaxle – Gasoline Vehicles, Gear Cases and Brackets	12-3
Transaxle – Gasoline Vehicles, Transmission and Gear Reduction	12-5
Transaxle – Gasoline Vehicles, Differential and Axles	12-7
Forward/Reverse Shifter Cable	12-9
Differential Guard	12-11
SECTION 13 – ELECTRICAL SYSTEM – ELECTRIC VEHICLES	
Wiring – Electric Vehicle	13-5
Headlights	13-7
Motor Controller Output Regulator (MCOR)	13-9
Battery Charger Receptacle	13-11
Batteries, Electric Vehicle	13-13
Tow/Run Switch	13-15
Hour Meter	13-17
Electrical Components – Turf/Carryall 1	
SECTION 14 – ELECTRIC MOTOR	
Motor (Model 5BC59JBS6390) – Electric Vehicle	14-3





Motor (Model EJ8-4001A) – Electric Vehicle	14-5
SECTION 15 – TRANSAXLE – ELECTRIC VEHICLES	
Transaxle – Electric Vehicles	15-3
Differential Guard	15-5
SECTION 16 – BATTERY CHARGER	
PowerDrive 3 Battery Charger, Domestic	16-3
PowerDrive 2 Battery Charger (Model 22110), Domestic	16-5
PowerDrive Battery Charger (Model 17930), Domestic	16-7
PowerDrive Battery Charger (Model 18780), Export	16-9
PowerDrive Battery Charger (Model 20310), European	16-11
SECTION 17 – MAINTENANCE AND SERVICE TOOLS	
Maintenance and Service Tools	17-3
Maintenance and Service Tools, Continued	17-5
Maintenance and Service Tools, Continued	17-7
Maintenance and Service Tools, Continued	17-9
Maintenance and Service Tools, Continued	17-11
SECTION i – INDEX	





BODY AND TRIM

G

1


E





1 G

E

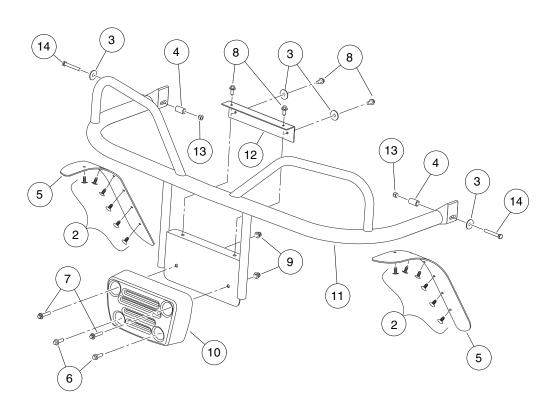







BRUSHGUARD AND BUMPER

		DINOSI IGOAND AND DOM	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Brush Guard And Bumper (includes items 2 through 14)	1
2	1010434	Barrel - Plastic	12
3	1011578	Washer, 5/16 Type B Flat	4
4	1015608	Tube Spacer, Hydraulic Cylinder	2
5	N/A	Fender Extrusion	2
6	102289002	Screw, M8 X 1.25 X 30 Tri, Blk	2
7	102298240	Bolt, Flange Head, M8-1.25 X 40	2
8	102298720	M8-1.25x20 Taptite	4
9	102618601	Lock Nut, Flg M8 X 1.25 Nylon	2
10	102830501	Bumper, Cast	1
11	103411501	Guard, Brush, Front, W Weight	1
12	103413101	Angle, Cowl Retention	1
13	7473	Locknut, 5/16-18 Nylon Insert	2
14	8935	Screw, 5/16-18 X 2.25 Hex-Head Cap	2






DID YOU

G

E

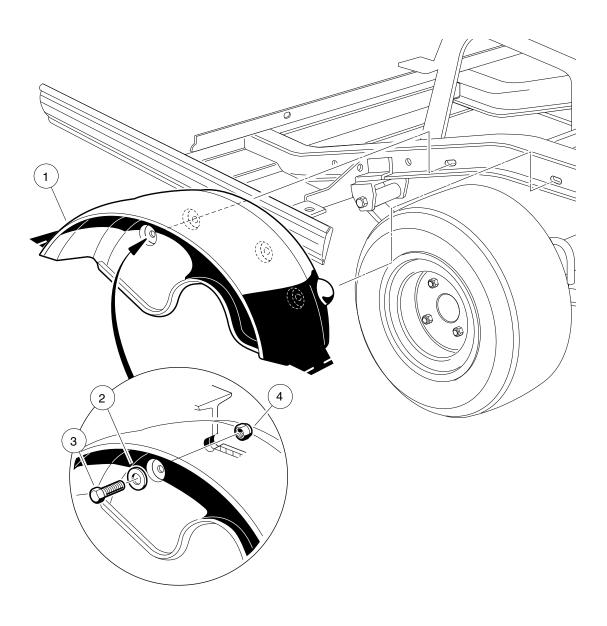








INNER FENDER

		IIVIVEN I EIV	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017936	Fender, Inner	2
2	332	Washer, 1/4 Type A Narrow Flat	4
3	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
4	8233	Locknut, 1/4-20 Nylon Insert	4
	İ	I and the second	i l

 




DID YOU

G

E

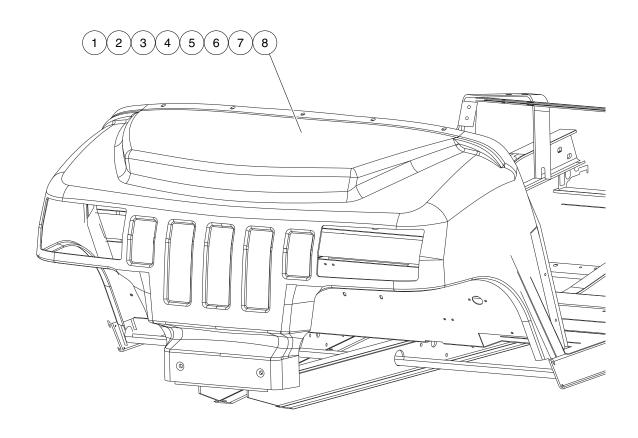








FRONT BODY

		INONID	
TEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	102778501	Cowl, Red	1
2	102778502	Cowl, Green	1
3	102778503	Cowl, Camouflage (Husqvarna)	1
4	102778504	Cowl, Classic Blue	
5	102778505	Cowl, XRT- Black	
б	102778507	Cowl, XRT- Camo Hard Wood HD (Standard camo for XRT850)	1
7	N/A	Cowl, XRT- Camo Max4 HD	1
8	102778509	Cowl, XRT- Silver	1
	102170303		

 




DID YOU

G

E

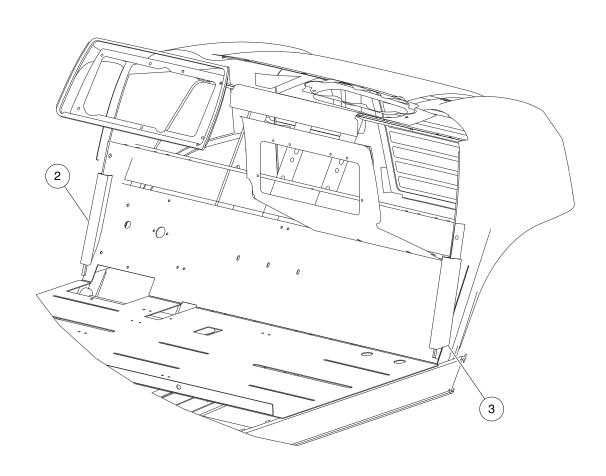







COWL EDGE COVERS


COWL EDGE COVE			VLING	
TEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	N/A	Instl, Cowl Cover (includes items 2 and 3)	1	
2	103405401	Cowl Cover, Driver, Short		
3	103405402	Cowl Cover, Pass, Short		



DID YOU

G

E

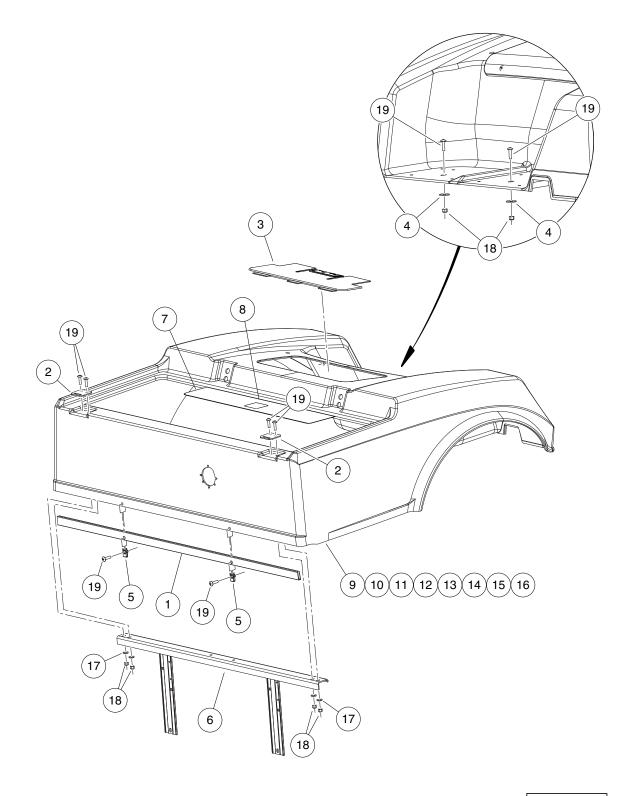







REAR BODY – GASOLINE VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010993	Body Kick Plate	1
2	1012412	Body, Hinge Plate	2
3	101303202	Access Panel - Black, Cut	1
4	1014306	Washer, 1/4" Type B Flat	2
5	1016952	U-Nut, 1/4-20	2
6	1017141	Body Support Weldment	1
7	101806901	Shield, Heat	1
8	101960501	Decal, Rotating Parts/Hot Manifold	1
9	103365501	Body, Rear XRT Gas Red	1
10	103365502	Body, Rear XRT Gas Green	1
11	103365503	Body, Rear XRT Gas Camo (Husqvarna)	1
12	103365504	Body, Rear XRT Gas Blue	1
13	103365505	Body, Rear XRT Gas Black	1
14	103365507	Body, Rear XRT Gas Hardwood	1
15	N/A	Body, Rear XRT Gas Max4	1
16	103365509	Body, Rear XRT Gas Silver	1
17	332	Washer, 1/4 Type A Narrow Flat	4
18	8233	Locknut, 1/4-20 Nylon Insert	6
19	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	8



1

G

E

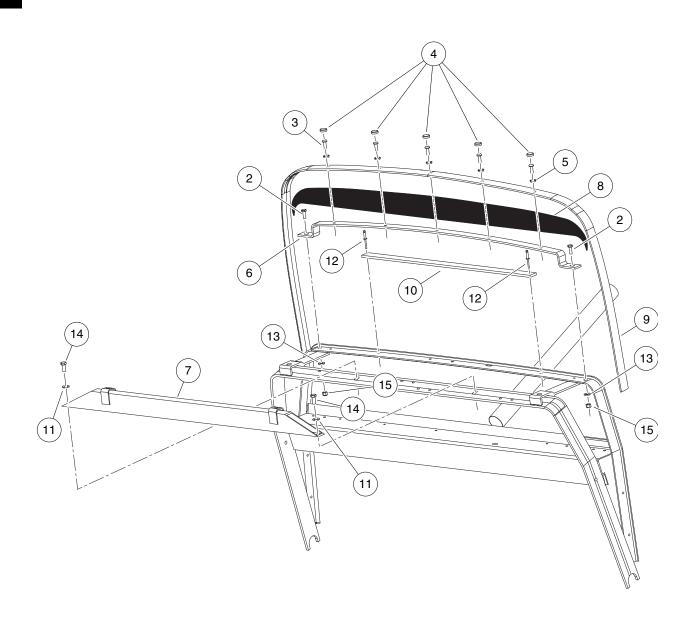








DASH TRIM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Closeout, Dash (includes items 2 through 15)	A/
2	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap	2
3	102025801	Screw, 1/4-20 X .75 Torx Pn Hd	5
4	102045001	Cap, 1/4" Plastic Screw Head	5
5	102048401	Washer, 1/4 Id Scalloped Plast	5
6	102778601	Support, Upper Cowl	1
7	103313301	Asm, Brace, Canopy, Tube, Xrt	1
8	103364101	Panel, Closeout, Dash	1
9	103364201	Strip, Trim, Dash, Black	1
10	103395101	Plate, Retention, Closeout	1
11	1241	Washer, 5/16 Type A Flat	2
12	1606	Rivet, 3/16 X .500 Alum Pop	2
13	332	Washer, 1/4 Type A Narrow Flat	2
14	7173	Screw, 5/16-18 X 0.75 Hex-Head Cap	2
15	8233	Locknut, 1/4-20 Nylon Insert	2

1

G

E

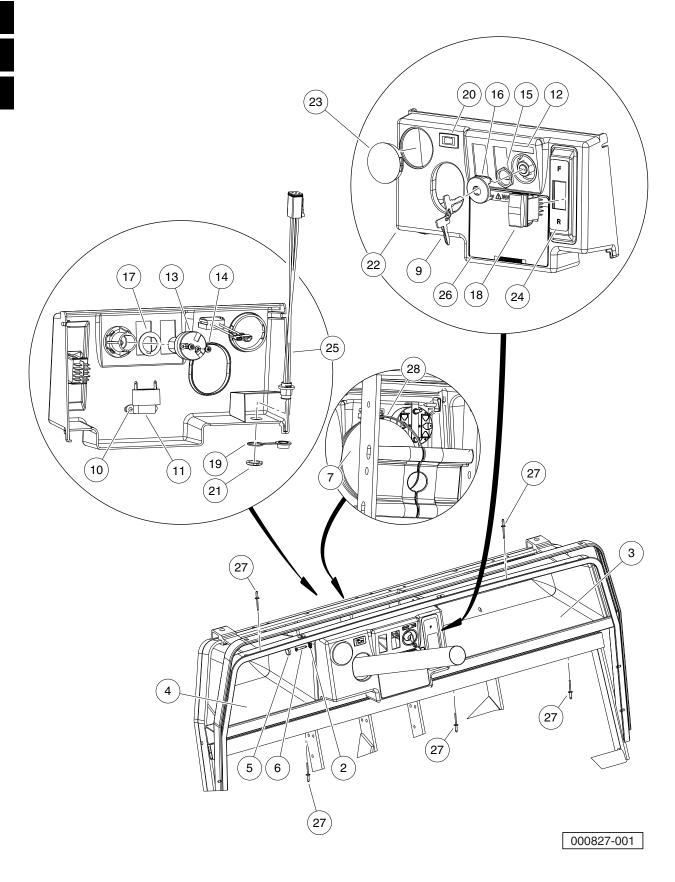





DASH – ELECTRIC VEHICLES


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Dash, Utl Ele, Xrt (includes items 2 through 28)	1
2	1011382	Washer, #10 Pan-Head Screw	2
3	1013343	Dash Component, Passenger-Side, Black	1
4	1013344	Dash Component, Driver-Side	1
5	1013494	Cover, Screw Head	2
6	1015528	Screw, #10 x 1-1/4 Phillips Head	2
7	102278001	Boot, Steering Column Round	1
8	N/A	Asm, Dash, Elec (Instrument Panel) (includes items 9 through 26)	1
9	1012505	Keys (set of 2)	1
10	1016849	Screw, #4-24 X 0.33 Pan-Head Machine	2
11	1016851	Buzzer, Reverse (9-48 VDC)	1
12	101825101	Decal, Off/On	1
13	101826201	Key Switch, On/Off	1
14	101830601	Screw and Washer Assembly	2
15	101830701	Nut, Key Switch	1
16	101834502	Cap, Black Key Switch	1
17	101851101	Washer, Key Switch	1
18	101856002	Switch, Rocker, Single-Pole	1
19	102196901	Dust Cap	1
20	102508701	Light, Battery	1
21	102518001	Decal, Operating Instr, Elec	1
22	102572401	Nut, Diagnostic Port, Prec	1
23	102977002	Panel, Dash, Center, Gas (Instrument Panel)	1
24	103198301	Plug, Hole, Round, 2.0 In	1
25	103210301	Decal, Forward/Reverse, Electric	1
26	103218601	Harness, Diagnostic Port	1
27	7973	Rivet, 3/16 X .400 Blind	5
28	8639	Tie Wrap, 11" Nylon	1



1

G

E

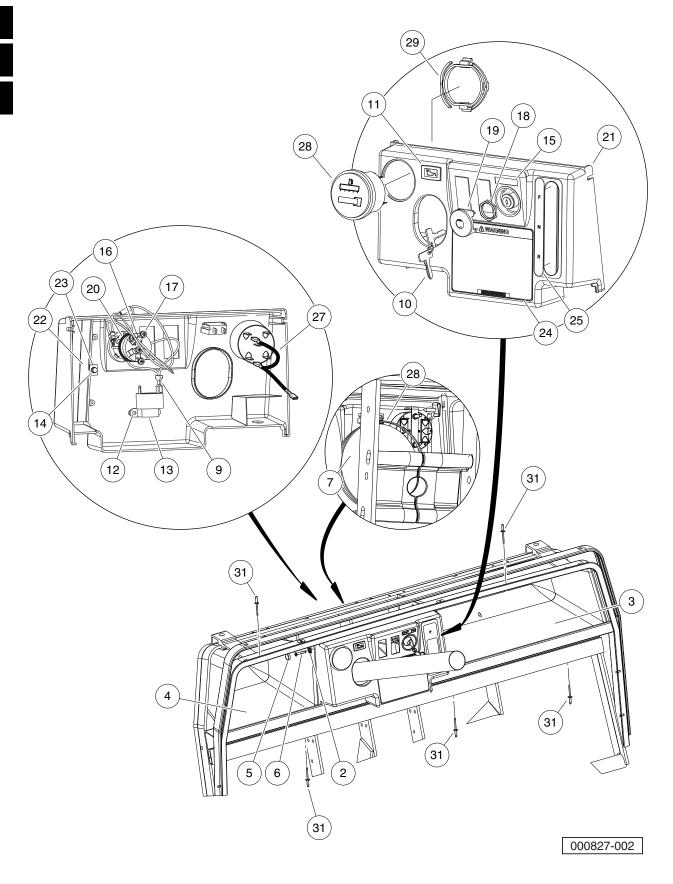








DASH – GASOLINE VEHICLES

N/A 1011382 1013343	1 2 3 4 Instl, Dash, Utl Gas, Xrt (includes items 2 through 32)	
1011382		
1013343	Washer, #10 Pan-Head Screw	
	Dash Component, Passenger-Side, Black	
1013344	Dash Component, Driver-Side	
1013494	Cover, Screw Head	
1015528	Screw, #10 x 1-1/4 Phillips Head	
102278001	Boot, Steering Column Round	
N/A	Asm, Dash, Gas, Pedal-Start (Instrument Panel) (includes items 9 through 26)	
1012396	Wire Assy #18 Black	
1012505	Keys (set of 2)	
1016630	Light, Oil	
1016849	Screw, #4-24 X 0.33 Pan-Head Machine	
1016851	Buzzer, Reverse (9-48 VDC)	
101804301	Screw, #8 X 0.500, Hex-Head Hi-Lo	
101825101	Decal, Off/On	
101826301		
101830601	Screw and Washer Assembly	
101830701	•	
101834502		
101851101		
102977001	· ·	
	·	
	·	
	N/A 1012396 1012505 1016630 1016849 1016851 101804301 101825101 101826301 101830601 101830701 101834502 101851101	N/A Asm, Dash, Gas, Pedal-Start (Instrument Panel) (includes items 9 through 26) 1012396 Wire Assy #18 Black 1012505 Keys (set of 2) 1016630 Light, Oil 1016849 Screw, #4-24 X 0.33 Pan-Head Machine 101804301 Buzzer, Reverse (9-48 VDC) 101804301 Screw, #8 X 0.500, Hex-Head Hi-Lo 101825101 Decal, Off/On 101826301 Key Switch, 12-Volt, Off/On 101830601 Screw and Washer Assembly 10183701 Nut, Key Switch 101834502 Cap, Black Key Switch 101851101 Washer, Key Switch 102977001 Panel, Dash, Center, Gas (Instrument Panel) 103199001 Brush, Closeout, FNR 103199001 Washer, Retaining, Brush, FNR 103205401 Decal, Warning, Rollover, Utl 103390801 Kit, F-h Replmnt Utl Pre2007 (includes items 27 through 30) 103348501 Asm Wire Meter F-h Jumper 103348201 Clip, Meter, Round N/A Instr, F-h Replmnt Pre2007 Rivet, 3/16 X 400 Blind



1

G

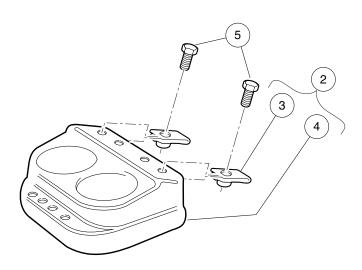







BEVERAGE HOLDER


TEM		DEVERAGE HOLL		
1 101708301 Drink Holder Kit (includes items 2 through 5) 1 2 1016811 Holder, Dual Cup (includes items 3 and 4) 1 3 1016952 U-Nut, 1/4-20 2 4 N/A Cup Holder, Dual 1	ITEM	PART NO.	DESCRIPTION	QTY
1 101708301 Drink Holder Kit (includes items 2 through 5) 1 2 1016811 Holder, Dual Cup (includes items 3 and 4) 1 3 1016952 U-Nut, 1/4-20 2 4 N/A Cup Holder, Dual 1			1 2 3 4	
2 1016811 Holder, Dual Cup (includes items 3 and 4) 1 3 1016952 U-Nut, 1/4-20 2 4 N/A Cup Holder, Dual 1	1	101708301		1
3 1016952 U-Nut, 1/4-20 2 4 N/A Cup Holder, Dual 1				
4 N/A Cup Holder, Dual				
5 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap				
	5	/84/	Screw, 1/4-20 X 0./5 Hex-Head Cap	2



DID YOU

G

E

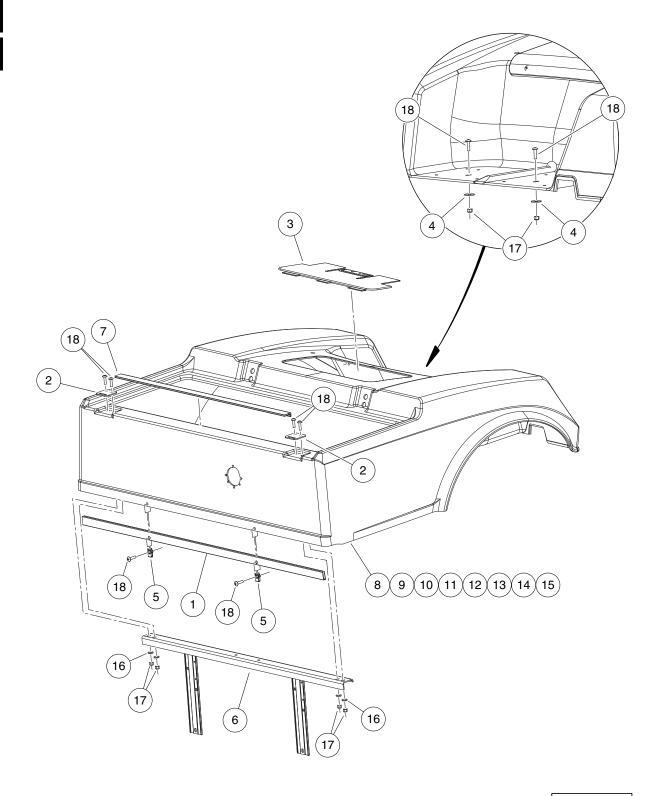








REAR BODY - ELECTRIC VEHICLES

		<u> </u>	1
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010993	Body Kick Plate	1
2	1012412	Body, Hinge Plate	2
3	101303202	Access Panel - Black, Cut	1
4	1014306	Washer, 1/4" Type B Flat	2
5	1016952	U-Nut, 1/4-20	2
6	1017141	Body Support Weldment	1
7	101837001	Battery Insulator	1
8	103365401	Body, Rear XRT Elec Red	1
9	103365402	Body, Rear XRT Elec Green	1
10	103365403	Body, Rear XRT Elec Camo (Husqvarna)	1
11	103365404	Body, Rear XRT Elec Blue	1
12	103365405	Body, Rear XRT Elec Black	1
13	103365407	Body, Rear XRT Elec Camo Hardwood (Standard camo for XRT850)	1
14	N/A	Body, Rear XRT Elec Max4	1
15	103365409	Body, Rear XRT Elec Silver	1
16	332	Washer, 1/4 Type A Narrow Flat	4
17	8233	Locknut, 1/4-20 Nylon Insert	6
18	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	8



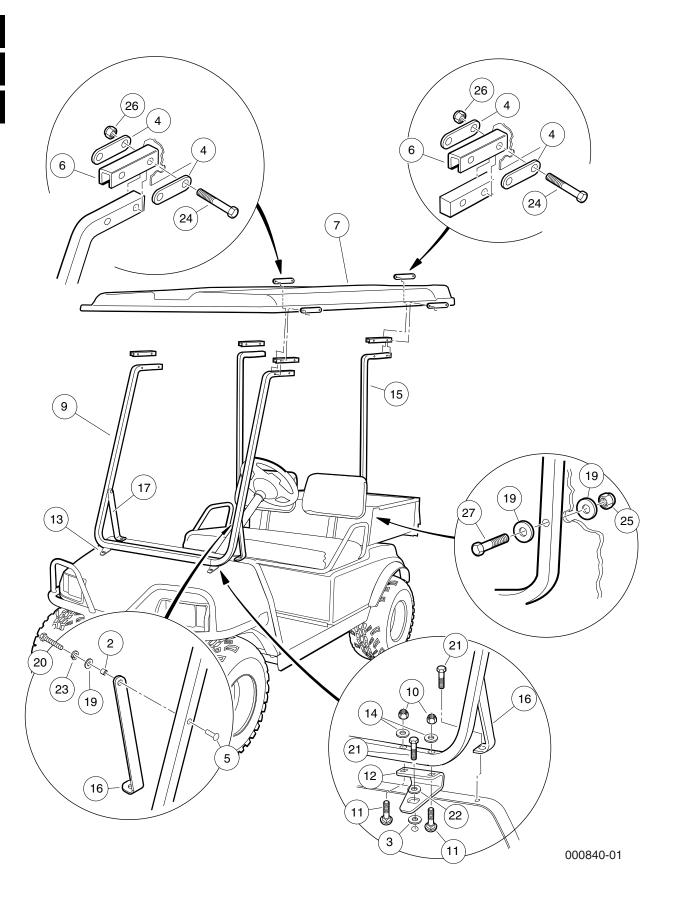








CANOPY (WHITE) FOR VEHICLES EQUIPPED WITH BED

TEM PART NO.	IO. DESCRIPTION	QTY
	1 2 3 4	
1 103410501	Kit, Canopy, White 56" (includes items 2 through 27)	A/R
2 1010237	Bushing	2
3 1010517	17 Washer, .88 Od X .343 Id Nylon	2
4 1011852	Plate, Canopy Trim	8
5 1011878		2
6 1012008	Support, Side Canopy	2
7 1014509	609 Canopy, White	1
8 102824402	Support, Front, Canopy, 800 (includes items 9 through 14)	1
9 101186302	Frame, Windshield, Vac Cowl	1
10 1015091	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
11 N/A	I/A Bolt, Carriage 1/4-20 X 1.50	4
12 102854301		1
13 102854302	·	1
14 332		4
15 103411001		1
16 103411101		1
17 103411201		1
18 N/A		1
19 1241		6
20 1703		2
21 304		2
22 332		20
23 451		2
24 7311		8
25 7473		3
26 8233		8
27 8963	· ·	3



1

E

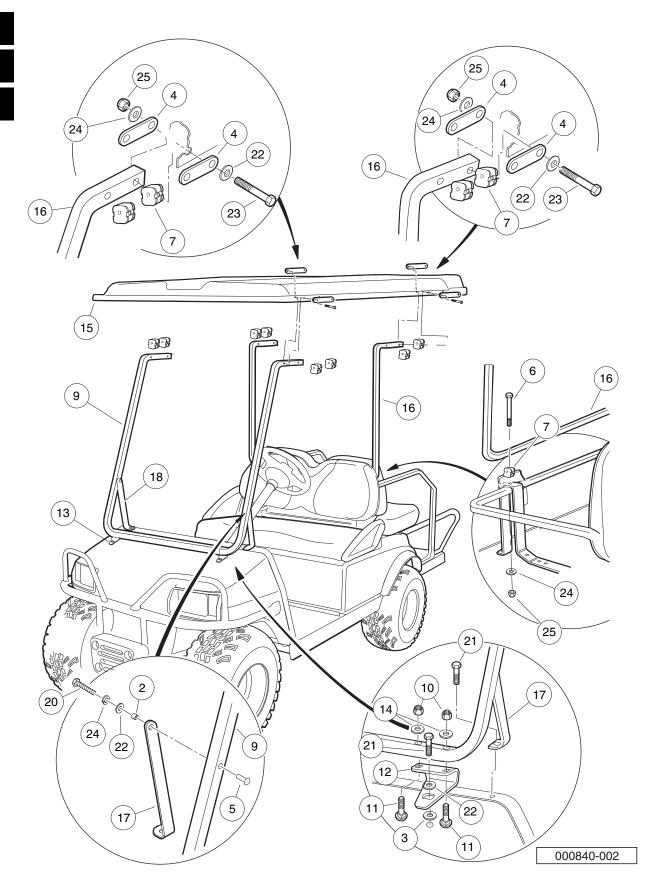







REAR SEAT


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	103410701	Kit, Canopy, White 80" Fld Dwn (includes items 2 through 25)	A/R
2	1010237	Bushing	2
3	1010517	Washer, .88 Od X .343 Id Nylon	2
4	1011852	Plate, Canopy Trim	8
5	1011878	T-nut, 1/4-20 X .310 Capped	2
6	1013872	Bolt, 1/4-20 X 4.00 Hex Head	2
7	1013884	Spacer, Bag Hoop	10
8	102824402	Support, Front, Canopy, 800 (includes items 9 through 14)	1
9	101186302	Frame, Windshield, Vac Cowl	1
10	1015091	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
11	N/A	Bolt, Carriage1/4-20 X 1.50	4
12	102854301	Brkt, Spt, Wdshld Frm, Drv	1
13	102854302	Brkt, Spt, Wdshld Frm, Pass	1
14	332	Washer, 1/4 Type A Narrow Flat	4
15	N/A	Canopy, 80" White, Plain Band	1
16	103410901	Brace, Canopy, Rear, Long	1
17	103411101	Brace, Knee, Lh	1
18	103411201	Brace, Knee, Rh	1
19	N/A	Instr, Canopy Xrt 850	1
20	1703	Screw, 1/4-20 X 1.50 Hx Hd Cap	2
21	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
22	332	Washer, 1/4 Type A Narrow Flat	24
23	343	Screw, 1/4-20 X 3.00 Hx Hd Cap	8
24	451	Lockwasher, 1/4 Split	2
25	8233	Locknut, 1/4-20 Nylon Insert	10
1			



1

G

E

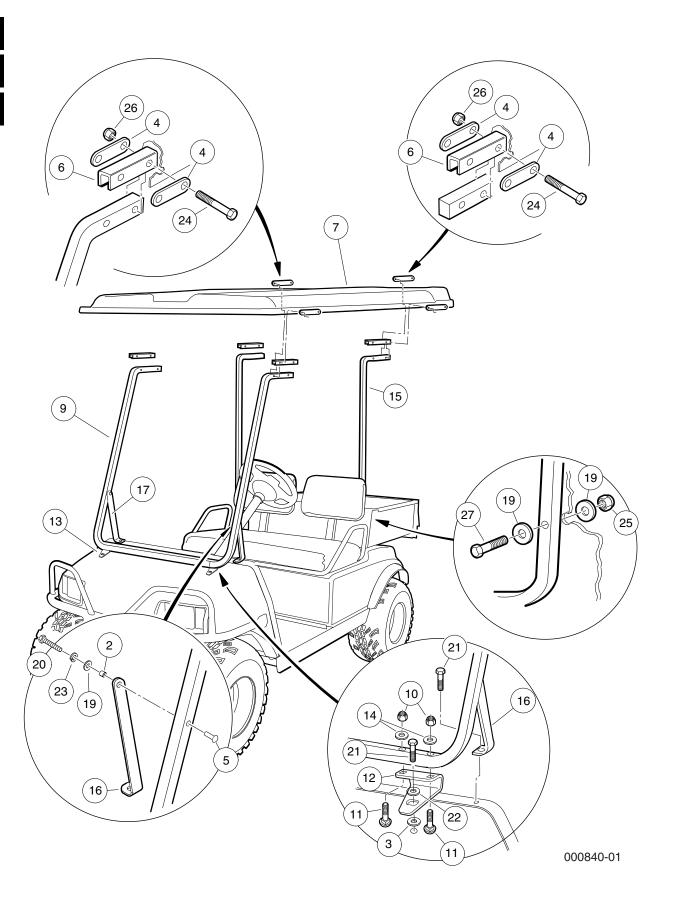





CANOPY (BLACK) FOR VEHICLES EQUIPPED WITH BED


ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	103410401	Kit, Canopy, Black 56" (includes items 2 through 27)	A/I
2	1010237	Bushing	2
3	1010517	Washer, .88 Od X .343 ld Nylon	2
4	1011852	Plate, Canopy Trim	8
5	1011878	T-nut, 1/4-20 X .310 Capped	2
6	1012008	Support, Side Canopy	2
7	101450902	Asm, Canopy, Black	1
8	102824402	Support, Front, Canopy, 800 (includes items 9 through 14)	1
9	101186302	Frame, Windshield, Vac Cowl	1
10	1015091	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	4
11	N/A	Bolt, Carriage 1/4-20 X 1.50	4
12	102854301	Brkt, Spt, Wdshld Frm, Drv	1
13	102854302	Brkt, Spt, Wdshld Frm, Pass	1
14	332	Washer, 1/4 Type A Narrow Flat	4
15	103411001	Brace, Canopy, Short, Bed	1
16	103411101	Brace, Knee, Lh	1
17	103411201	Brace, Knee, Rh	1
18	N/A	Instr, Canopy Xrt 850	1
19	1241	Washer, 5/16 Type A Flat	6
20	1703	Screw, 1/4-20 X 1.50 Hx Hd Cap	2
21	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
22	332	Washer, 1/4 Type A Narrow Flat	20
23	451	Lockwasher, 1/4 Split	2
24	7311	Screw, 1/4-20 X 2.00 Hex-Head Cap	8
25	7473	Locknut, 5/16-18 Nylon Insert	3
26	8233	Locknut, 1/4-20 Nylon Insert	8
27	8963	Screw, 5/16-18 X 1.75 Hex-Head Cap	3





1

E

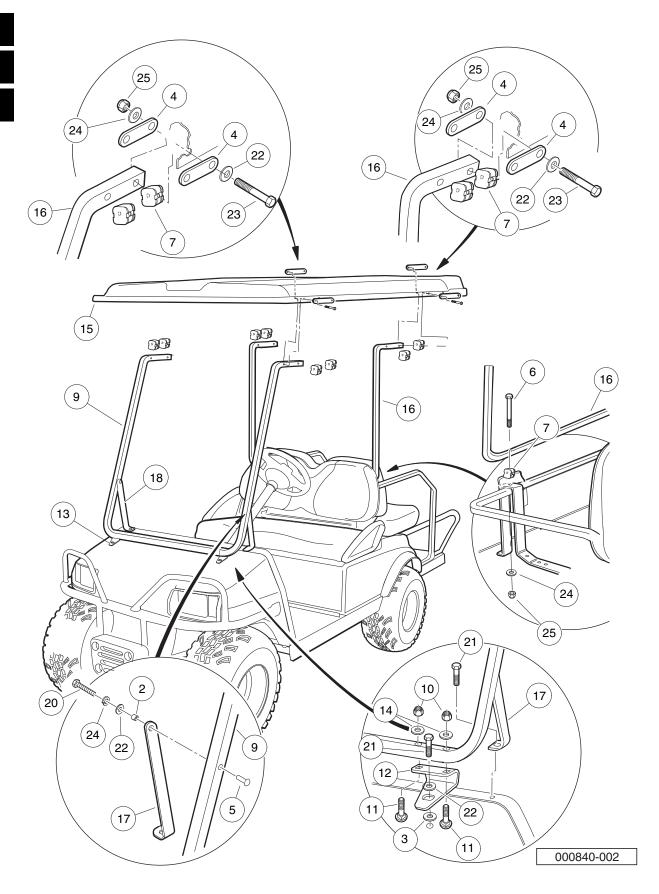





VVIIII OLD DOWN **REAR SEAT**


	1 2 3 4	
103410601	Kit, Canopy, Black 80" Fld Dwn (includes items 2 through 25)	A
1010237	Bushing	
1010517	Washer, .88 Od X .343 Id Nylon	
1011852	Plate, Canopy Trim	
1011878	T-nut, 1/4-20 X .310 Capped	
1013872	Bolt, 1/4-20 X 4.00 Hex Head	
1013884	Spacer, Bag Hoop	1
102824402	Support, Front, Canopy, 800 (includes items 9 through 14)	
101186302	Frame, Windshield, Vac Cowl	
1015091	Nut, 1/4-20 Stainless-Steel Center-Lock Cap	
N/A	Bolt, Carriage 1/4-20 X 1.50	
102854301	Brkt, Spt, Wdshld Frm, Drv	
102854302	Brkt, Spt, Wdshld Frm, Pass	
332	Washer, 1/4 Type A Narrow Flat	
103410803	Canopy, 80" Black, Black Band	
103410901	Brace, Canopy, Rear, Long	
103411101	Brace, Knee, Lh	
103411201	Brace, Knee, Rh	
N/A	Instr, Canopy Xrt 850	
1703	Screw, 1/4-20 X 1.50 Hx Hd Cap	
304	Screw, 1/4-20 X 1.0 Hex-Head Cap	
332	Washer, 1/4 Type A Narrow Flat	2
343	Screw, 1/4-20 X 3.00 Hx Hd Cap	
451	Lockwasher, 1/4 Split	
8233	Locknut, 1/4-20 Nylon Insert	1
	1010237 1010517 1011852 1011878 1013872 1013884 102824402 101186302 1015091 N/A 102854301 102854302 332 103410803 103410901 103411101 103411201 N/A 1703 304 332 343 451	103410601 Kit, Canopy, Black 80" Fld Dwn (includes items 2 through 25) 1010237 Bushing 1010517 Washer, .88 Od X .343 ld Nylon 1011852 Plate, Canopy Trim 1011878 T-nut, 1/4-20 X .310 Capped 1013872 Bolt, 1/4-20 X 4.00 Hex Head 1013884 Spacer, Bag Hoop 102824402 Support, Front, Canopy, 800 (includes items 9 through 14) 101186302 Frame, Windshield, Vac Cowl 1015091 Nut, 1/4-20 Stainless-Steel Center-Lock Cap N/A Bolt, Carriage1/4-20 X 1.50 102854301 Brkt, Spt, Wdshld Frm, Drv 102854302 Brkt, Spt, Wdshld Frm, Pass 332 Washer, 1/4 Type A Narrow Flat 103410803 Canopy, 80" Black, Black Band 10341101 Brace, Canopy, Rear, Long 103411101 Brace, Knee, Lh 103411201 Brace, Knee, Rh 1703 Screw, 1/4-20 X 1.50 Hx Hd Cap 304 Screw, 1/4-20 X 1.0 Hex-Head Cap 332 Washer, 1/4 Type A Narrow Flat 333 Screw, 1/4-20 X 1.0 Hex-Head Cap 343 Screw, 1/4-20 X 3.00 Hx Hd Cap 451 Lockwasher,









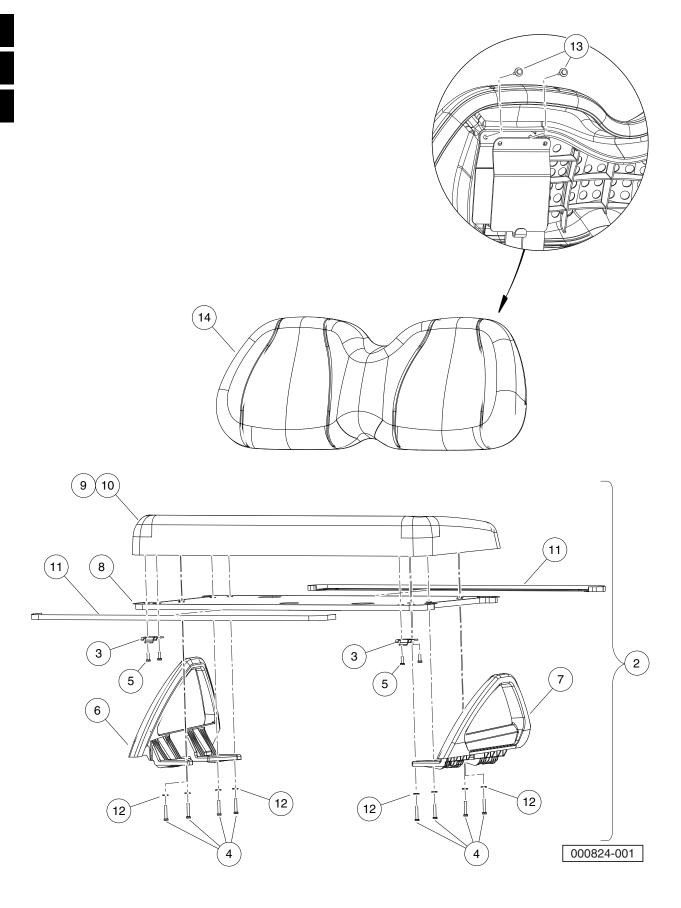






SEAT, BEIGE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Seat, Bench, Beige (includes items 2 through 14)	1
2	N/A	Seat Assy Precedent Beige (includes items 3 through 12)	1
3	1011652	Hinge Plate	2
4	1016916	Screw, 1/4-20 X 1.50 Hex-Head Cap	8
5	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
6	101985502	Armrest, Passenger (right)	1
7	101987602	Armrest, Driver (left)	1
8	N/A	Plywood Assy	1
9	N/A	Vinyl Cover - Beige	
10	N/A	Foam, Seat	
11	101998501	Gasket, Seat	
12	332	Washer, 1/4 Type A Narrow Flat	8
13	102296530	Screw - M6 X 1.0 X 30 Sems	2
14	102503211	4 Pass Backrest Asm-beige	





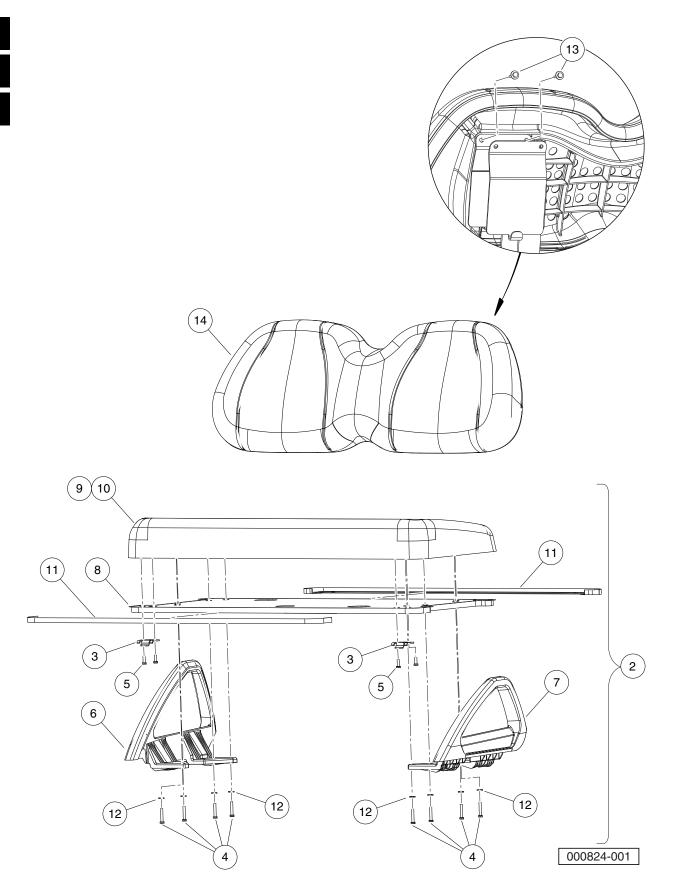








SEAT, WHITE

			MI, WIIIII		
ITEM	PART NO.	DESCRIPTION	QTY		
		1 2 3 4			
1	N/A	Instl, Seat, Bench, White (includes items 2 through 14)	1		
2	N/A	Seat Assy Precedent White (includes items 3 through 12)	1		
3	1011652	Hinge Plate	2		
4	1016916	Screw, 1/4-20 X 1.50 Hex-Head Cap			
5	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap	4		
6	101985502	Armrest, Passenger (right)	1		
7	101987602	Armrest, Driver (left)	1		
8	N/A	Plywood Assy	1		
9	N/A	Vinyl Cover Seat Btm-prec Wht			
10	N/A	Foam, Seat			
11	101998501	Gasket, Seat	2		
12	332	Washer, 1/4 Type A Narrow Flat	8		
13	102296530	Screw - M6 X 1.0 X 30 Sems	2		
14	102503212	4 Pass Backrest Asm-white	1		





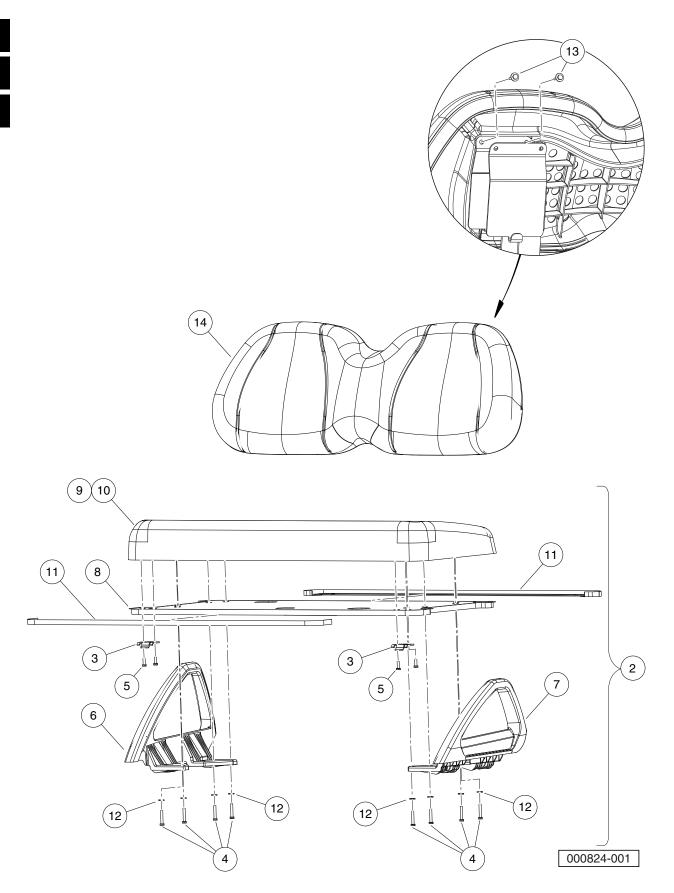








SEAT, GRAY

ITEM	PART NO.	DESCRIPTION	Q
		1 2 3 4	
1	N/A	Instl, Seat, Bench, Gray (includes items 2 through 14)	
2	N/A	Seat Bottom Assembly, Gray (includes items 3 through 12)	
3	1011652	Hinge Plate	
4	1016916	Screw, 1/4-20 X 1.50 Hex-Head Cap	
5	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap	
6	101985502	Armrest, Passenger (right)	
7	101987602	Armrest, Driver (left)	
8	N/A	Plywood Assy	
9	101998205	Vinyl Cover, Seat Bottom, Gray	
10	N/A	Foam, Seat	
11	101998501	Gasket, Seat	
12	332	Washer, 1/4 Type A Narrow Flat	
13	102296530	Screw - M6 X 1.0 X 30 Sems	
14	102503214	Backrest Assembly, Gray	





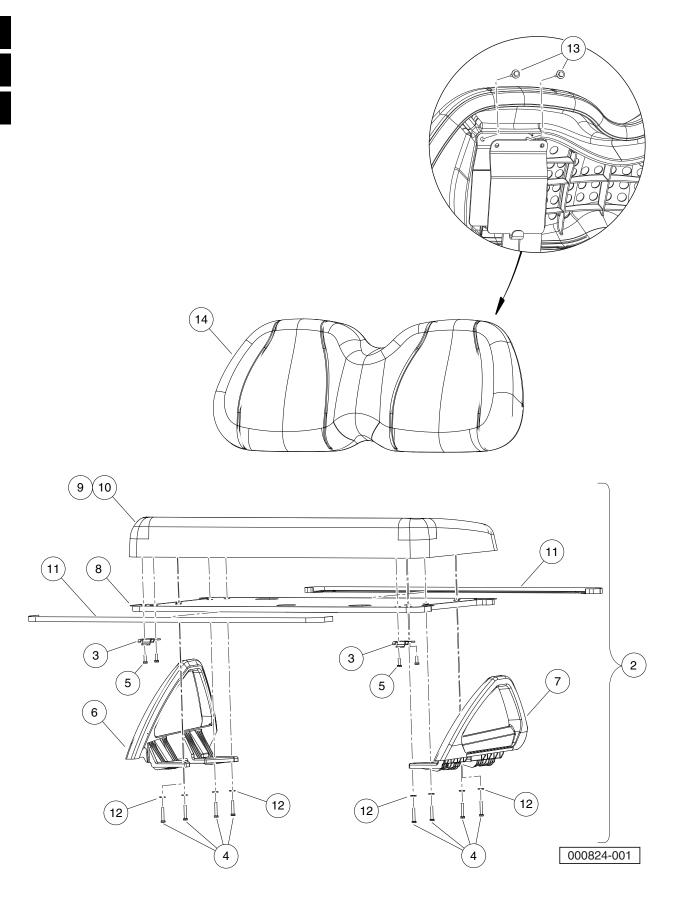








SEAT, BLACK

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Seat, Bench, Black (includes items 2 through 14)	1
2	N/A	Seat Bottom Assembly, Black (includes items 3 through 12)	1
3	1011652	Hinge Plate	2
4	1016916	Screw, 1/4-20 X 1.50 Hex-Head Cap	8
5	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
6	101985502	Armrest, Passenger (right)	1
7	101987602	Armrest, Driver (left)	1
8	N/A	Plywood Assy	1
9	101998204	Vinyl Cover, Seat Bottom, Black	1
10	N/A	Foam, Seat	1
11	101998501	Gasket, Seat	2
12	332	Washer, 1/4 Type A Narrow Flat	8
13	102296530	Screw - M6 X 1.0 X 30 Sems	2
14	102503215	4 Pass Backrest Asm-black	1

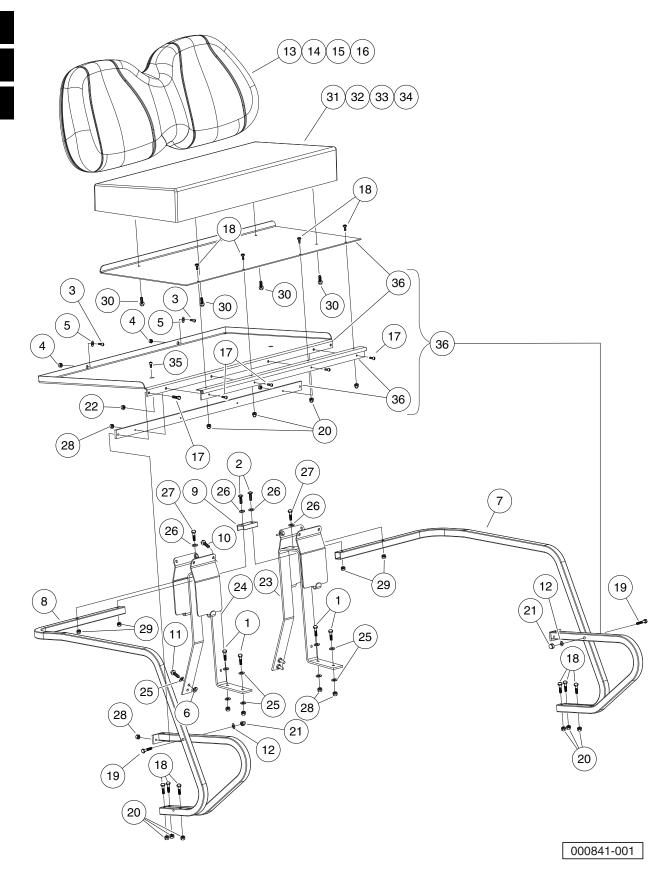





REAR FOLD DOWN SEAT


1010577 1011988 1015059 1015072 N/A 1017774 01841201 01841202 01841301	1 2 3 4 Bolt, Hex-Head, 5/16-18 X 1.50
1011988 1015059 1015072 N/A 1017774 01841201 01841202	Screw, 1/4-20 X 2.00 Phillips Truss-Head
1015059 1015072 N/A 1017774 01841201 01841202	Screw, 5/16-18 X 1.0 Phl Truss
1015072 N/A 1017774 01841201 01841202	Locknut, 5/16-18 Nylon Insert
N/A 1017774 01841201 01841202	Washer, 5/16 Flat
1017774 01841201 01841202	Body Spacer
)1841201)1841202	Armrest, Seat, Rear, Right-Hand
)1841202	Armrest, Seat, Rear, Left-Hand
01841301	A was up at Dun alcot
	Armrest Bracket
)1910401	Screw, 5/16-18 X 1.25 Thrd Frm
)2296530	Screw - M6 X 1.0 X 30 Sems
)2324901	Washer, Flat, 1/4", Blk
)2503211	4 Pass Backrest Asm-beige
)2503212	4 Pass Backrest Asm-white
)2503214	Backrest Assembly, Gray
)2503215	4 Pass Backrest Asm-black
)2541425	Bolt-m6x1.0x25 Hex Flhd, Blk-l
)2541445	Bolt-m6x1.0x45 Hex Flhd,blk
)2541465	Bolt, M 6 X 1.0 X 65 Hex, Flange, Head, Black
)2541501	Nut-m6x1.0 Fl Mtl Lock,blk
)2582401	Cap Nut M6, Sp
02618601	Lock Nut, Flg M8 X 1.25 Nylon
)3378301	Weldment, Bracket, Seat, Fd Rh
)3378302	Weldment, Bracket, Seat, Fd Lh
1241	Washer, 5/16 Type A Flat
332	Washer, 1/4 Type A Narrow Flat
7311	Screw, 1/4-20 X 2.00 Hex-Head Cap
7473	Locknut, 5/16-18 Nylon Insert
8233	Locknut, 1/4-20 Nylon Insert
N/A	1/4-20x.75 Fl Hd Mach Scr Ss
-	Seat Sub Asm, Beige
	Seat Sub Asm, White
	Seat Asm - Gray
-	Seat Sub Asm, Blk
	M8x1.25x25 Fl Hd Mach Scr
-	Kit, Fold Downxrt 800/810/850
	N/A N/A N/A N/A N/A N/A



1

G

E

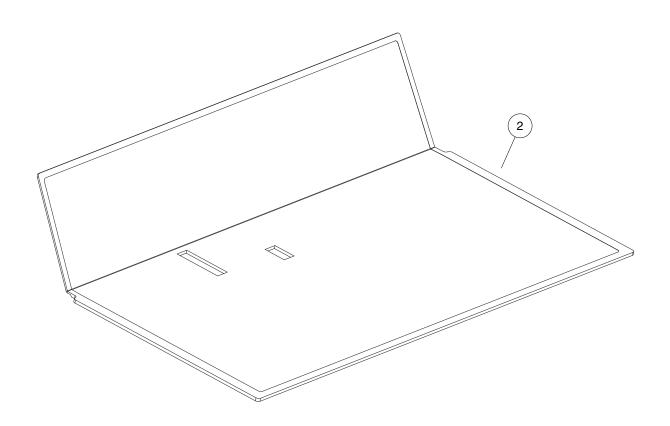







FLOORMAT


	FLOORIV		MAI	
ITEM	PART NO.	DESCRIPTION	QTY	
1 2	N/A 101503202	1 2 3 4 Floormat Installation (includes item 2)	1	



1

G

E

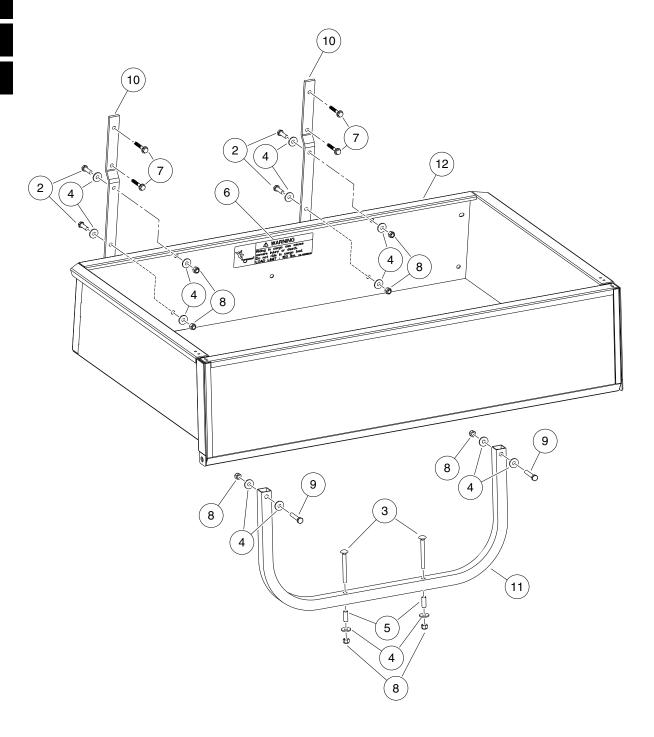







BED BOX

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	AM10622	Kit, Bedbox, Painted (includes items 2 through 13)	1
2	1010934	Screw, 5/16-18 X 1.00 Hex Cap	4
3	N/A	.38-18 Unc-2a-3.0 Carriage Blt	2
4	1011697	Washer, 5/16 Flat	14
5	1017760	Spacer .31 X .38 X .98	2
6	101972001	Decal, D.s. Box Bed Warning	1
7	102076701	Screw, 1/4-20 X 1.75 Hex Sems	4
8	7473	Locknut, 5/16-18 Nylon Insert	8
9	8963	Screw, 5/16-18 X 1.75 Hex-Head Cap	2
10	AM1205602	Support, Seat, Ics, Bed, Ctd	2
11	N/A	Tube, Support, Bedbox, Ptd	1
12	N/A	Asm, Bed Box, Painted	1
13	N/A	Instructions, Bed Box, Ics	1



HERE https://CartPros.com/f.html

1

G

7=



WHEELS AND TIRES

G


2

 
E






E

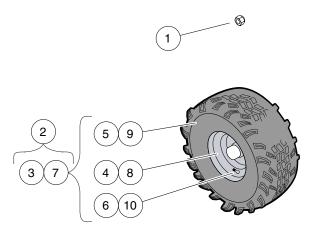



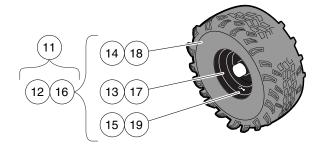







WHEELS AND TIRES

TEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1010984	.500-20 Unf Lug Nut	16
2	N/A	Asm, Tire, O/R Gray Wheels (includes items 3 through 7)	1
3	102009402	Off-Road Tire and Wheel Asm, Right, Rear (includes items 4 through 6)	2
4	N/A	Wheel Rim, Silver	1
5	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
6	7310	Valve Stem	1
7	102009502	Off-Road Tire and Wheel Asm, Left, Rear (includes items 8 through 10)	2
8	N/A	Wheel Rim, Silver	1
9	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	1
10	7310	Valve Stem	1
11	N/A	Asm, Tire, O/R Black Wheels (includes items 12 through 16)	
12	AM10821	Tire & Wheel Asm Ls - Black (includes items 13 through 15)	
13	N/A	Wheel, Rim, Black	
14	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	
 15	7310	Valve Stem	
16	AM10822	Tire & Wheel Asm Rs - Black (includes items 17 through 19)	
10 17	N/A	Wheel, Rim, Black	
18	N/A	Tire, Unmounted, Duro, Off-Road Tire, 22 x 11-10, 6-Ply Rated	
10 19	7310	Valve Stem	





2

G

7=





DECALS


3

G

E





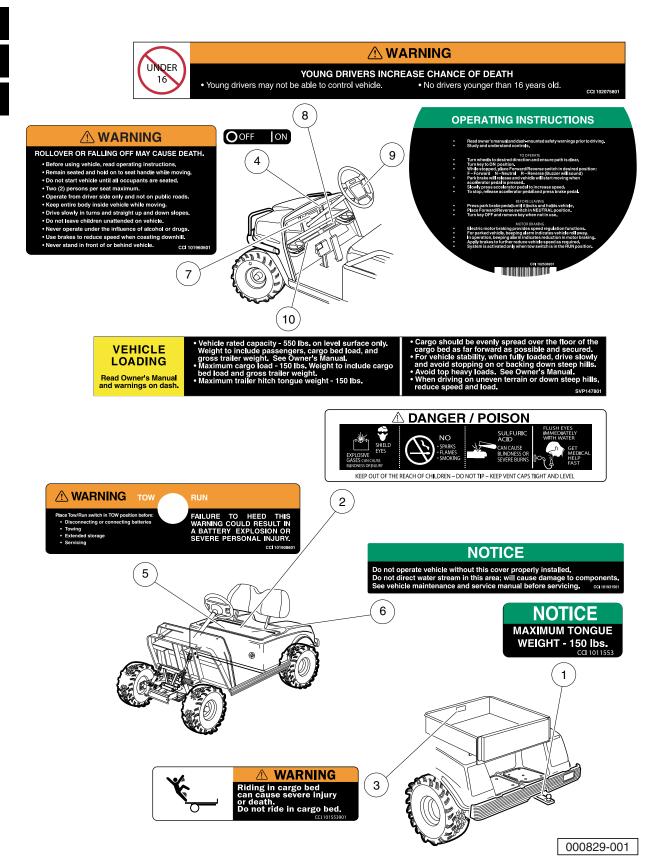








SAFETY DECALS – ELECTRIC VEHICLES


	SAFETT DECALS - ELECTRIC VEHICL		
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011553	Decal, Trailer Hitch	1
2	1013677	Decal, Battery Danger	
3	101553901	Decal, Bed Load Warning	
4	101825101	Decal, Off/On	
5	101908601	Decal, Tow/Run Switch Warning	
6	101931501	Decal, Component Cover	
7	101960601	Decal, Dash Warning	
8	102075801	Decal, Young Driver Warning	
9	1025738201	Decal, Operating Instructions	
10	SVP147801	decal, vehicle loading	
10	341147001	detai, verifice roading	'
			1





E

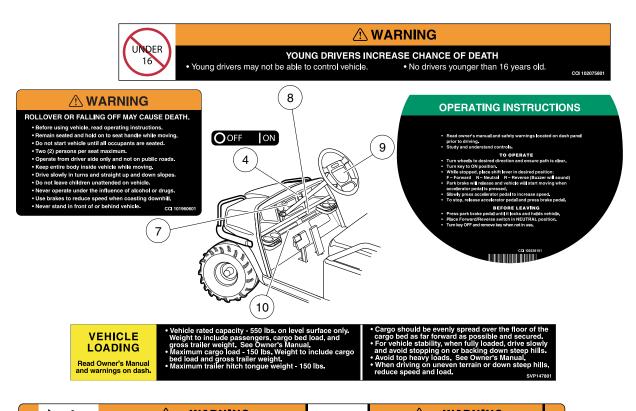

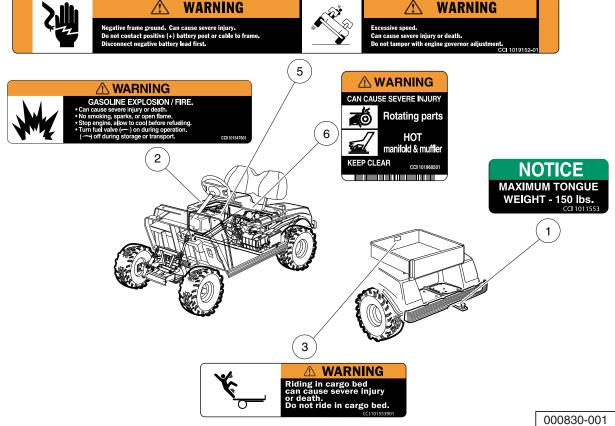









SAFETY DECALS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
1	1011553	1 2 3 4 Docal Trailor Hitch	1
1 2	1011553	Decal, Trailer Hitch Decal, Gasoline Explosion/Fire Warning	1
		· · · · · · · · · · · · · · · · · · ·	
3	101553901	Decal, Bed Load Warning	1
4	101825101	Decal, Off/On	1
5	101915201	Decal, Frame Ground and Governor Warning	1
6	101960501	Decal, Rotating Parts/Hot Manifold	2
7	101960601	Decal, Dash Warning	1
8	102075801	Decal, Young Driver Warning	1
9	102538101	Decal, Operating Instructions	1
10	SVP147801	decal, vehicle loading	1





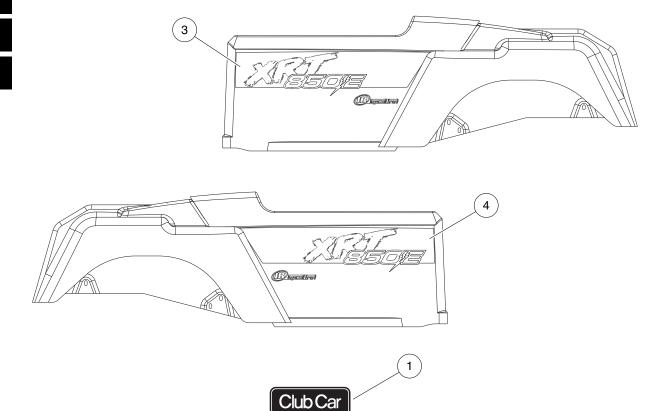

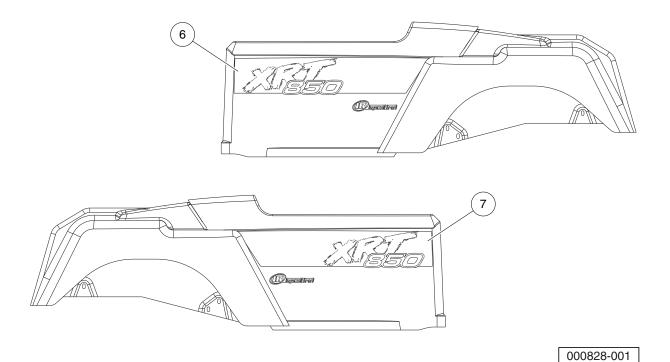







BADGING DECALS

	DADGING DECAL		
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102046501	Decal, XRT Front	1
2	N/A	Instl, Decals Xrt 850 Elec (includes items 3 and 4)	1
3	103389301	Decal, 850e Drv	1
4	103389401	Decal, 850e Pass	1
5	N/A	Instl, Decals Xrt 850 Gas (includes items 6 and 7)	1
			-
6	103389101	Decal, 850 Drv	1
7	103389201	Decal, 850 Pass	1



3

G

7=







BRAKE SYSTEMS

4


G





4

F

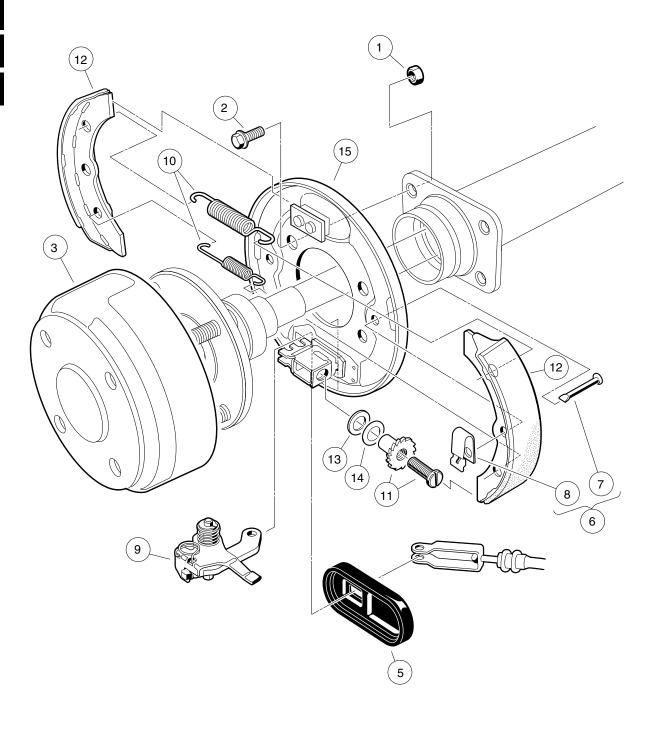




WHEEL BRAKES


2 1014153 Bolt, Brake Cluster Mounting 3 101791101 Drum without Center Hole, Brake 4 101823301 Cluster Assembly, Right (Passenger) Brake (includes items 5 through 15) 5 1010850 Dust Cover 6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Shoe Clamp Spring 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/	1 1013924 Nut, 5/16-24 Hex Head Cone 2 1014153 Bolt, Brake Cluster Mounting 3 101791101 Drum without Center Hole, Brake 4 101823301 Cluster Assembly, Right (Passenger) Brake (includes items 5 through 15) 5 1010850 Dust Cover 6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Pin 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 1010850 Washer, Brake (includes items 17 through 27) 10 Dust Cover 10 N/A 10 N/A 10 N/A 10 N/A 10 N/A 10 N/A </th <th>1 1013924 Nut, 5/16-24 Hex Head Cone </th> <th>ITEM</th> <th>PART NO.</th> <th>DESCRIPTION</th> <th>Q</th>	1 1013924 Nut, 5/16-24 Hex Head Cone	ITEM	PART NO.	DESCRIPTION	Q
2 1014153 Bolt, Brake Cluster Mounting 3 101791101 Drum without Center Hole, Brake 4 101823301 Cluster Assembly, Right (Passenger) Brake (includes items 5 through 15) 5 1010850 Dust Cover 6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Pin 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A	1014153	2 1014153 Bolt, Brake Cluster Mounting 3 101791101 Drum without Center Hole, Brake 4 101823301 Cluster Assembly, Right (Passenger) Brake (includes items 5 through 15) 5 1010850 Dust Cover 6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Pin 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101823201 Package, Brake Shoe, Self-Adjusting 12 101823301 Plate, Washer, Brake, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823302 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Left Brake (includes items 17 through 27) 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 N/A 18 1011466 N/A 19 N/A Shoe Clamp Spring <td></td> <td></td> <td>1 2 3 4</td> <td></td>			1 2 3 4	
3 101791101 Drum without Center Hole, Brake 4 101823301 Cluster Assembly, Right (Passenger) Brake (includes items 5 through 15) 5 1010850 Dust Cover 6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Pin 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Pin 20 N/A Shoe Clamp Spring	101791101	3 101791101 Drum without Center Hole, Brake Cluster Assembly, Right (Passenger) Brake (includes items 5 through 15) 5 1010850 Kit, Shoe Retainer (includes items 7 and 8) Dust Cover 6 1011466 Kit, Shoe Retainer (includes items 7 and 8) Pin 7 N/A Pin Shoe Clamp Spring 8 N/A Shoe Clamp Spring Package, Brake Spring, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) Package, Brake Shoe, Self-Adjusting 12 101823201 Package, Brake Shoe, Self-Adjusting Plate, Washer, Brake, Self-Adjusting 13 101823901 Washer, Brake, Self-Adjusting Plate Assembly, Left Brake (includes items 17 through 27) 15 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) Fin 20 N/A Pin Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Br	1	1013924	Nut, 5/16-24 Hex Head Cone	
4 101823301 Cluster Assembly, Right (Passenger) Brake (includes items 5 through 15) 5 1010850 Dust Cover 6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Pin 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101823201 Package, Brake Shoe, Self-Adjusting 12 101823301 Plate, Washer, Brake, Self-Adjusting 13 101823901 Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Right Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Adjusting Mechanism, Self-Adjusting 23 101823201	101823301 Cluster Assembly, Right (Passenger) Brake (includes items 5 through 15) Dust Cover Stit, Shoe Retainer (includes items 7 and 8) Pin Shoe Clamp Spring Lever Assembly, Self-Adjusting Brake, Right (Passenger) Package, Brake Spring, Self-Adjusting Package, Brake Spring, Self-Adjusting Package, Brake Shoe, Self-Adjusting Package, Brake,	4 101823301 Cluster Assembly, Right (Passenger) Brake (includes items 5 through 15) 5 1010850 Dust Cover 6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Pin 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823301 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Right Brake Backing 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 17 through 27) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816502 Adjusting Mechanis	2	1014153	Bolt, Brake Cluster Mounting	
5 1010850 Dust Cover 6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Pin 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting <td>5 1010850 Dust Cover 6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Pin 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 1 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 2 101823201 Package, Brake Shoe, Self-Adjusting 3 101823801 Plate, Washer, Brake, Self-Adjusting 4 101823901 Washer, Brake, Self-Adjusting 5 101824001 Plate Assembly, Right Brake Backing 6 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 7 1010850 Kit, Shoe Retainer (includes items 19 and 20) 8 1011466 N/A 9 N/A Shoe Clamp Spring 10 N/A Shoe Clamp Spring 11 101815502 Lever Assembly, Self-Adjusting Brake, Left 12 101816301 Adjusting Mechanism, Self-Adjusting</td> <td>5 1010850 Dust Cover 6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Pin 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Pin 20 N/A Shoe Clamp Spring 21 10181502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting</td> <td>3</td> <td>101791101</td> <td>Drum without Center Hole, Brake</td> <td></td>	5 1010850 Dust Cover 6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Pin 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 1 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 2 101823201 Package, Brake Shoe, Self-Adjusting 3 101823801 Plate, Washer, Brake, Self-Adjusting 4 101823901 Washer, Brake, Self-Adjusting 5 101824001 Plate Assembly, Right Brake Backing 6 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 7 1010850 Kit, Shoe Retainer (includes items 19 and 20) 8 1011466 N/A 9 N/A Shoe Clamp Spring 10 N/A Shoe Clamp Spring 11 101815502 Lever Assembly, Self-Adjusting Brake, Left 12 101816301 Adjusting Mechanism, Self-Adjusting	5 1010850 Dust Cover 6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Pin 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Pin 20 N/A Shoe Clamp Spring 21 10181502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting	3	101791101	Drum without Center Hole, Brake	
6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Pin 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 11 101823201 Package, Brake Shoe, Self-Adjusting 12 101823301 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101823201 Package, Brake Shoe, Self-Adjusting 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate,	65 1011466 Kit, Shoe Retainer (includes items 7 and 8)	6 1011466 Kit, Shoe Retainer (includes items 7 and 8) 7 N/A Pin 8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101823201 Package, Brake Shoe, Self-Adjusting 12 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting Brake, Left 23 101823201 Package, Brake Shoe, Self-Adjusting Brake, Left 24 101823301 Package, Brake Shoe, Self-Adjusting 25 101823901	4	101823301	Cluster Assembly, Right (Passenger) Brake (includes items 5 through 15)	
7 N/A Pin Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Pin 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting	7 N/A Pin Shoe Clamp Spring Self-Adjusting Brake, Right (Passenger) Shoe Clamp Spring Self-Adjusting Shoe Clamp Spring	7 N/A Pin Shoe Clamp Spring	5	1010850	Dust Cover	
8 N/A Shoe Clamp Spring	8 N/A Shoe Clamp Spring B. 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) B. 101816301 Package, Brake Spring, Self-Adjusting B. Adj Mechanism, S.A. Brakes, Right (Passenger) B. Adj Mechanism, S.A. Brakes, Right (Passenger) B. B. N.A. Brakes, Right (Passenger) B. B. B. B. Adj Mechanism, S.A. Brakes, Right (Passenger) B.	8 N/A Shoe Clamp Spring 9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Adjusting Mechanism, Self-Adjusting Brake, Left 23 101823201 Package, Brake Shoe, Self-Adjusting 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101	6	1011466	Kit, Shoe Retainer (includes items 7 and 8)	
9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting Brake, Left 23 101823201 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823801 Plate, Washer, Brake, Self-Adjusting 25 101823901 Washer, Brake, Self-Adjusting	9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 1 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 2 101823201 Package, Brake Shoe, Self-Adjusting 3 101823801 Plate, Washer, Brake, Self-Adjusting 4 101823901 Washer, Brake, Self-Adjusting 5 101824001 Plate Assembly, Right Brake Backing 6 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 7 1010850 Dust Cover 8 1011466 Kit, Shoe Retainer (includes items 19 and 20) 9 N/A Shoe Clamp Spring 10 Lever Assembly, Self-Adjusting Brake, Left 10 Package, Brake Spring, Self-Adjusting Brake, Left 10 Package, Brake Shoe, Self-Adjusting 10 Package, Brake Shoe, Self-Adjusting 10 Plate, Washer, Brake, Self-Adjusting 10 Plate, Washer, Brake, Self-Adjusting 10 Plate Assembly, Left Brake Backing 10 Plate Assembly, Left Brake Backing 10 Plate Assembly, Left Brake Back	9 101815501 Lever Assembly, Self-Adjusting Brake, Right (Passenger) 10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Adjusting Mechanism, Self-Adjusting Brake, Left 23 101823201 Package, Brake Shoe, Self-Adjusting 24 101823201 Plate, Washer, Brake, Self-Adjusting 25 101823901 Washer, Brake, Self-Adjusting 26<	7	N/A	Pin	
10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101823201 Adjusting Mechanism, Self-Adjusting 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting	0 101816301 Package, Brake Spring, Self-Adjusting 1 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 2 101823201 Package, Brake Shoe, Self-Adjusting 3 101823801 Plate, Washer, Brake, Self-Adjusting 4 101823901 Washer, Brake, Self-Adjusting 5 101824001 Plate Assembly, Right Brake Backing 6 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 7 1010850 Dust Cover 8 1011466 Kit, Shoe Retainer (includes items 19 and 20) 9 N/A Shoe Clamp Spring 10 N/A Shoe Clamp Spring 11 10181502 Lever Assembly, Self-Adjusting Brake, Left 12 101816301 Package, Brake Spring, Self-Adjusting 13 101823201 Adjusting Mechanism, Self-Adjusting 14 101823801 Plate, Washer, Brake, Self-Adjusting 15 101823901 Washer, Brake, Self-Adjusting 16 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	10 101816301 Package, Brake Spring, Self-Adjusting 11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101823201 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823901 Washer, Brake, Self-Adjusting 26 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brak	8	N/A	Shoe Clamp Spring	
11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101823201 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting	1 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 2 101823201 Package, Brake Shoe, Self-Adjusting 3 101823801 Plate, Washer, Brake, Self-Adjusting 4 101823901 Washer, Brake, Self-Adjusting 5 101824001 Plate Assembly, Right Brake Backing 6 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 7 1010850 Dust Cover 8 1011466 Kit, Shoe Retainer (includes items 19 and 20) 9 N/A Shoe Clamp Spring 10 N/A Shoe Clamp Spring 11 101815502 Lever Assembly, Self-Adjusting Brake, Left 12 101816301 Package, Brake Spring, Self-Adjusting 13 101823201 Package, Brake Shoe, Self-Adjusting 14 101823301 Plate, Washer, Brake, Self-Adjusting 15 101823901 Washer, Brake, Self-Adjusting 16 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	11 101816501 Adj Mechanism, S.A. Brakes, Right (Passenger) 12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101816502 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	9	101815501	Lever Assembly, Self-Adjusting Brake, Right (Passenger)	
12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101823201 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting	2 101823201 Package, Brake Shoe, Self-Adjusting 3 101823801 Plate, Washer, Brake, Self-Adjusting 4 101823901 Washer, Brake, Self-Adjusting 5 101824001 Plate Assembly, Right Brake Backing 6 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 7 1010850 Dust Cover 8 1011466 Kit, Shoe Retainer (includes items 19 and 20) 9 N/A Shoe Clamp Spring 10 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101823201 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting 27 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting Brake, Left 23 101823201 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting 27 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	10	101816301	Package, Brake Spring, Self-Adjusting	
12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101816502 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting	2 101823201 Package, Brake Shoe, Self-Adjusting 3 101823801 Plate, Washer, Brake, Self-Adjusting 4 101823901 Washer, Brake, Self-Adjusting 5 101824001 Plate Assembly, Right Brake Backing 6 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 7 1010850 Dust Cover 8 1011466 Kit, Shoe Retainer (includes items 19 and 20) 9 N/A Shoe Clamp Spring 10 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101823201 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting 27 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	12 101823201 Package, Brake Shoe, Self-Adjusting 13 101823801 Plate, Washer, Brake, Self-Adjusting 14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Shoe Clamp Spring 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101823201 Package, Brake Shoe, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	11	101816501	Adj Mechanism, S.A. Brakes, Right (Passenger)	
14 101823901 Washer, Brake, Self-Adjusting	4 101823901 Washer, Brake, Self-Adjusting 5 101824001 Plate Assembly, Right Brake Backing 6 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 7 1010850 Dust Cover 8 1011466 Kit, Shoe Retainer (includes items 19 and 20) 9 N/A Pin 10 N/A Shoe Clamp Spring 11 101815502 Lever Assembly, Self-Adjusting Brake, Left 12 101816301 Package, Brake Spring, Self-Adjusting 13 101816502 Adjusting Mechanism, Self-Adjusting Brake, Left 14 101823201 Package, Brake Shoe, Self-Adjusting 15 101823801 Plate, Washer, Brake, Self-Adjusting 16 101823901 Washer, Brake, Self-Adjusting 17 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Pin 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101823201 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting 27 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	12	101823201		
14 101823901 Washer, Brake, Self-Adjusting	4 101823901 Washer, Brake, Self-Adjusting 5 101824001 Plate Assembly, Right Brake Backing 6 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 7 1010850 Dust Cover 8 1011466 Kit, Shoe Retainer (includes items 19 and 20) 9 N/A Pin 10 N/A Shoe Clamp Spring 11 101815502 Lever Assembly, Self-Adjusting Brake, Left 12 101816301 Package, Brake Spring, Self-Adjusting 13 101816502 Adjusting Mechanism, Self-Adjusting Brake, Left 14 101823201 Package, Brake Shoe, Self-Adjusting 15 101823801 Plate, Washer, Brake, Self-Adjusting 16 101823901 Washer, Brake, Self-Adjusting 17 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	14 101823901 Washer, Brake, Self-Adjusting 15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Pin 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101816502 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting 27 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	13	101823801	Plate, Washer, Brake, Self-Adjusting	
15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Pin 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101816502 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting	5 101824001 Plate Assembly, Right Brake Backing 6 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 7 1010850 Dust Cover 8 1011466 Kit, Shoe Retainer (includes items 19 and 20) 9 N/A Pin 10 N/A Shoe Clamp Spring 10 Lever Assembly, Self-Adjusting Brake, Left 10 Package, Brake Spring, Self-Adjusting 10 Adjusting Mechanism, Self-Adjusting Brake, Left 10 Package, Brake Shoe, Self-Adjusting Brake, Left 10 Package, Brake Shoe, Self-Adjusting 10 Plate, Washer, Brake, Self-Adjusting 10 Plate, Washer, Brake, Self-Adjusting 10 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	15 101824001 Plate Assembly, Right Brake Backing 16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Pin 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101823201 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting 27 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	14	101823901	1	
16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Pin 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101816502 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting	66 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 7 1010850 Dust Cover 8 1011466 Kit, Shoe Retainer (includes items 19 and 20) 9 N/A Pin 10 N/A Shoe Clamp Spring 10 101815502 Lever Assembly, Self-Adjusting Brake, Left 12 101816301 Package, Brake Spring, Self-Adjusting 13 101816502 Adjusting Mechanism, Self-Adjusting Brake, Left 14 101823201 Package, Brake Shoe, Self-Adjusting 15 101823801 Plate, Washer, Brake, Self-Adjusting 16 101823901 Washer, Brake, Self-Adjusting 17 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	16 101823302 Cluster Assembly, Left Brake (includes items 17 through 27) 17 1010850 Dust Cover 18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Pin 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101816502 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting 27 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	15		1	
17 1010850 Dust Cover	7 1010850 Dust Cover	17 1010850 Dust Cover	-			
18 1011466 Kit, Shoe Retainer (includes items 19 and 20) 19 N/A Pin 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101816502 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting	8 1011466 Kit, Shoe Retainer (includes items 19 and 20) 9 N/A Pin 20 N/A Shoe Clamp Spring 21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101816502 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting 27 101824002 Plate Assembly, Left Brake Backing Note: Driver-side brake cluster not shown. Components have a similar	18	-			
19 N/A Pin	9 N/A Pin	19 N/A Shoe Clamp Spring	18			
20 N/A Shoe Clamp Spring	Shoe Clamp Spring	N/A Shoe Clamp Spring				
21 101815502 Lever Assembly, Self-Adjusting Brake, Left 22 101816301 Package, Brake Spring, Self-Adjusting 23 101816502 Adjusting Mechanism, Self-Adjusting Brake, Left 24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting	Lever Assembly, Self-Adjusting Brake, Left	21 101815502 Lever Assembly, Self-Adjusting Brake, Left				
22 101816301 Package, Brake Spring, Self-Adjusting	Package, Brake Spring, Self-Adjusting	101816301 Package, Brake Spring, Self-Adjusting		1	1	
23101816502Adjusting Mechanism, Self-Adjusting Brake, Left24101823201Package, Brake Shoe, Self-Adjusting25101823801Plate, Washer, Brake, Self-Adjusting26101823901Washer, Brake, Self-Adjusting	Adjusting Mechanism, Self-Adjusting Brake, Left	23 101816502 Adjusting Mechanism, Self-Adjusting Brake, Left				
24 101823201 Package, Brake Shoe, Self-Adjusting 25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting	Package, Brake Shoe, Self-Adjusting	24 101823201 Package, Brake Shoe, Self-Adjusting				
25 101823801 Plate, Washer, Brake, Self-Adjusting 26 101823901 Washer, Brake, Self-Adjusting	Plate, Washer, Brake, Self-Adjusting	25 101823801 Plate, Washer, Brake, Self-Adjusting				
26 101823901 Washer, Brake, Self-Adjusting	Washer, Brake, Self-Adjusting	26 101823901 Washer, Brake, Self-Adjusting				
, and the second	Plate Assembly, Left Brake Backing	27 101824002 Plate Assembly, Left Brake Backing	_		1	
27 101824002 Plate Assembly, Left Brake Backing	Note: Driver-side brake cluster not shown. Components have a similar	Note: Driver-side brake cluster not shown. Components have a similar	_		1	
	· ·	· · · · · · · · · · · · · · · · · · ·	27	101824002	Plate Assembly, Left Brake Backing	
·					·	



 



DID YOU

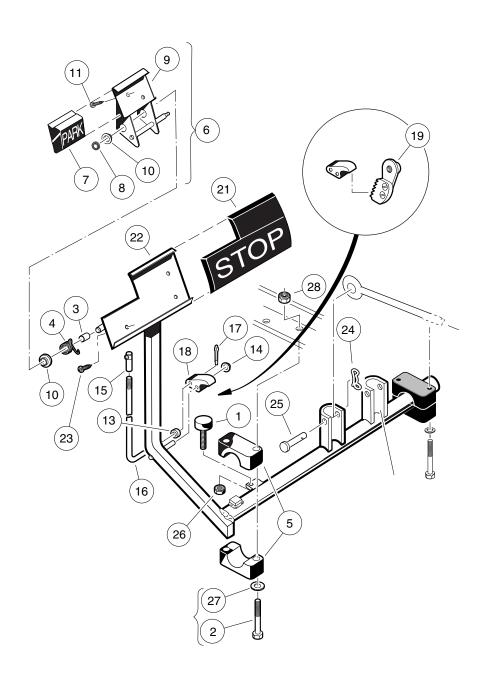









BRAKE PEDAL ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010878	Bumper, Rubber	1
2	1010921	Screw, 5/16-18 X 2.50 Hex Cap	4
3	1010927	Hill Brake Spacer	1
4	1010933	Spring, Hill Brake Torsion	1
5	1011402	Package, Brake Mounting Block	1
6	1011418	Kit, Hill Brake Pedal (includes items 7 through 11)	1
7	1013870	Pad, Hill Brake	1
8	1013876	Pushnut, 3/8	1
9	N/A	Hill Brake Weld Assembly	1
10	1032	Bushing, Nylon	2
11	7716	Screw, #10-16 Type AB, Sheet Metal	2
12	101187702	Kit, Hill Brake Latch (includes items 13 through 19)	1
13	1010805	Sleeve, Hill Brake Rod	1
14	1010877	Pushnut, 3/8	1
15	1010932	Ball Joint, 1/4-28	1
16	N/A	Rod, Hill Brake	1
17	1017029	Pin, Cotter, 7/64 x 1/2 Stainless-Steel	1
18	N/A	Pawl, Hill Brake	1
19	101918501	Ratchet Assembly	1
20	101878201	Brake Pedal Kit (includes items 21 through 23)	1
21	1013869	Pad, Brake Pedal	1
22	N/A	Weldment, Brake Pedal 4wb Std	1
23	7716	Screw, #10-16 Type AB, Sheet Metal	
24	102323101	Pin, Bow Tie Locking	1
25	102323201	Pin, 3/8 X 1-5/16 Clevis	1
26	1028	Nut, 1/4-20 Hex	1
27	1241	Washer, 5/16 Type A Flat	4
28	7473	Locknut, 5/16-18 Nylon Insert	4

 4 G

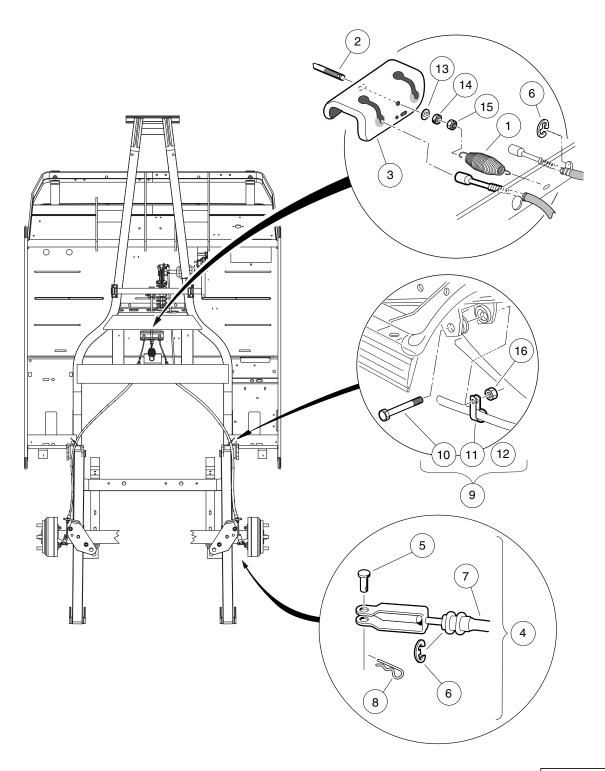









 our search box and it will find the part you are looking for. .n ハンレ – VEHICLES WITH TWO-WHEEL BRAKES

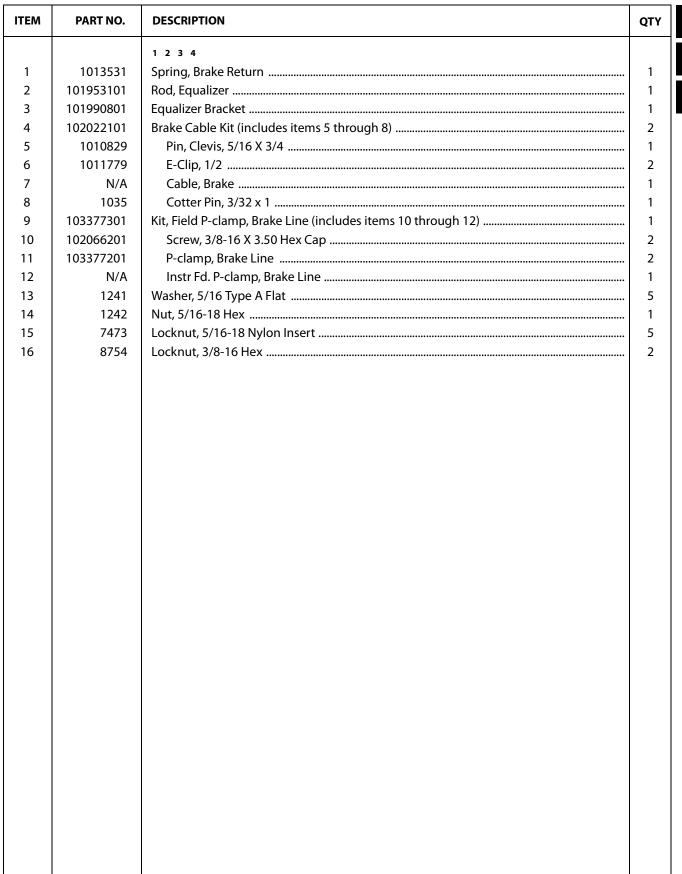






19

22

4 G

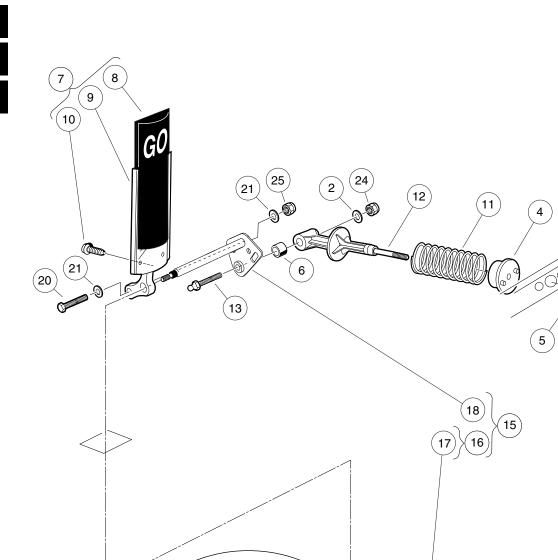

000188-003



23

1






ACCELERATOR PEDAL – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011694	Accelerator Bracket and Bearing Assembly	2
2	1011931	Washer, 1/4 Flat	1
3	1014007	Washer, 1/4 Flat	4
4	1017378	Cup, Spring	1
5	1017380	Bumper, Spring Return	1
6	1017424	Bearing, Pivot Support	1
7	1017696	Sub Asm, Accelerator Pedal (includes items 8 through 10)	1
8	1013871	Pad, Accelerator Pedal	1
9	N/A	Accelerator Pedal Weldment	1
10	7716	Screw, #10-16 Type AB, Sheet Metal	4
11	101796201	Spring, Accelerator Return	1
12	101817401	Retainer, Spring	1
13	101818801	Stud, 1/4-28 X 1.35 Ball	1
14	101861901	Screw, 1/4-20 X 1.125 Hex Cap	4
15	102026001	Kit, Accelerator Pivot Rod Assembly (includes items 16 through 18)	1
16	1011700	Spacer Assembly (includes item 17)	
17	N/A	Spacer, Accelerator	1
18	N/A	Pivot Rod Weldment	1
19	1241	Washer, 5/16 Type A Flat	1
20	1624	Screw, 3/8-16 X 1.50 Hex-Head Cap	
21	334	Washer, 3/8 Type A Flat	2
22	7473	Locknut, 5/16-18 Nylon Insert	1
23	8233	Locknut, 1/4-20 Nylon Insert	
24	8717	Locknut, 1/4-28 Nylon Insert	1
25	8754	Locknut, 3/8-16 Hex	2

G

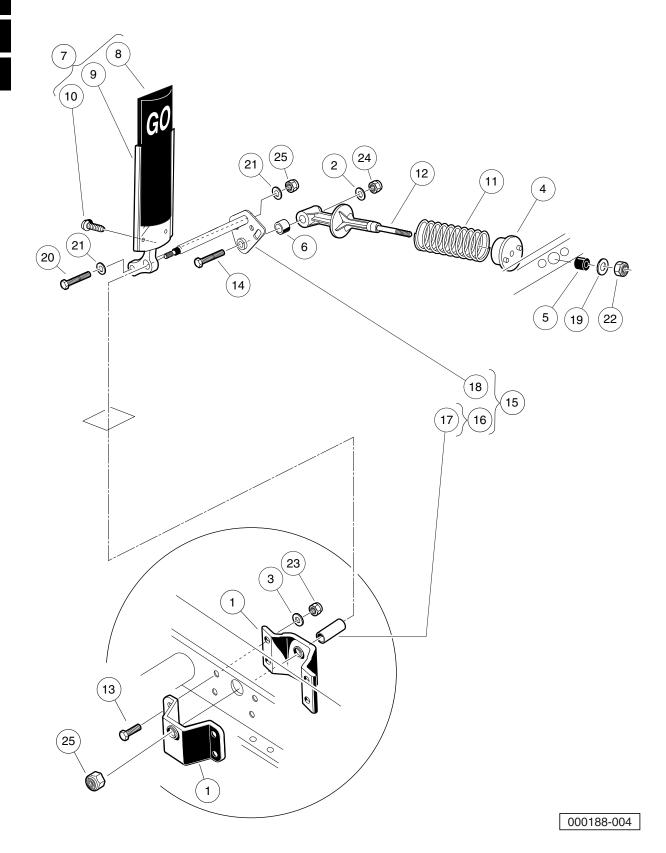








https://CartPros.com/f.html

T LUAL AJJEMBLY -ELECTRIC VEHICLES WITH MCOR

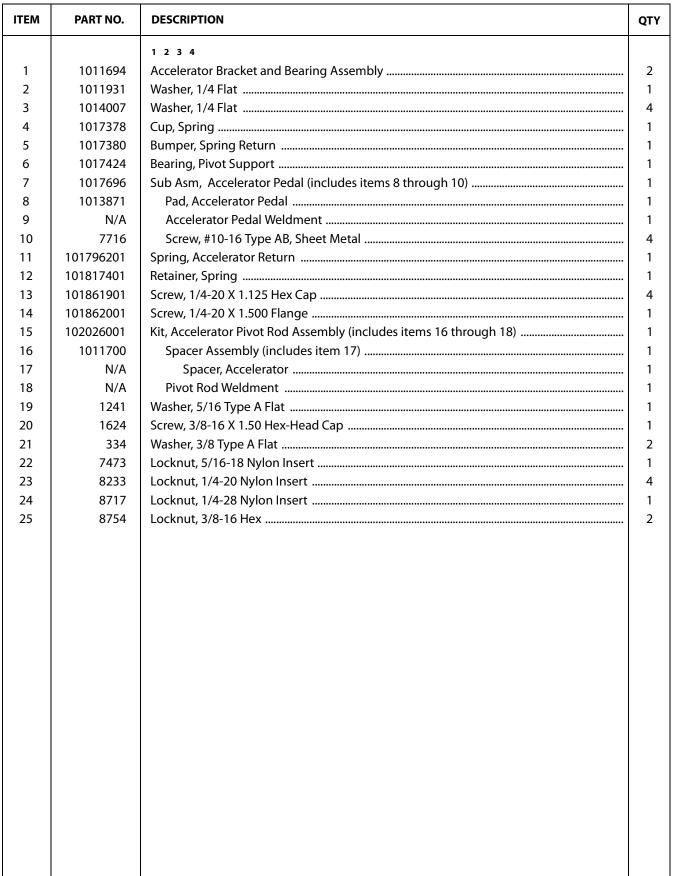






4

Ξ

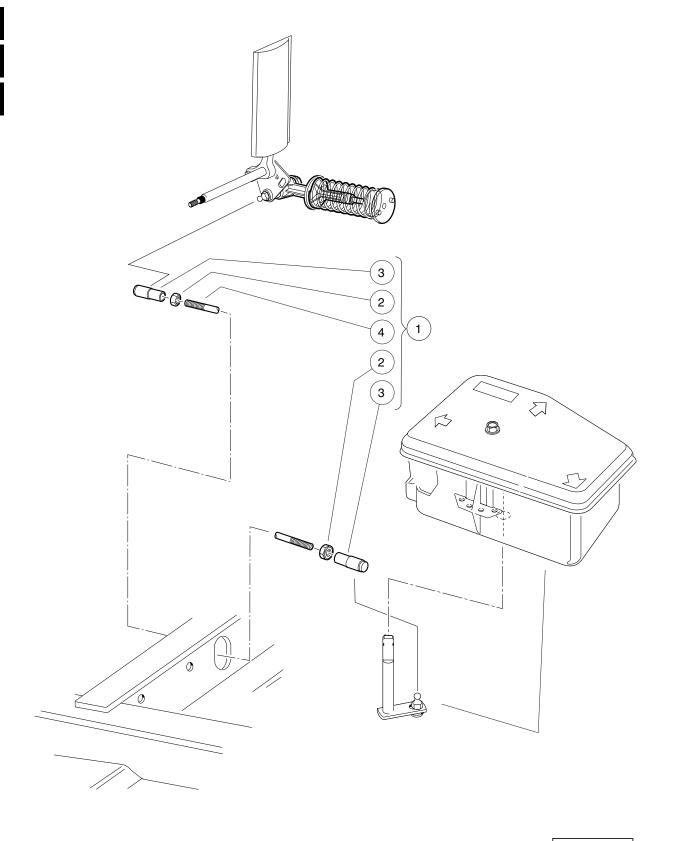







ACCELERATOR ROD – GASOLINE VEHICLES

TEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101912401	Rod, Accelerator (includes items 2 through 4)	1
2	1011084	Nut, 1/4-28 Hex Jam	
3	1011734	Joint, Ball	
4	N/A	Accelerator Rod	
7	11/73	Accelerator nod	



4

G

7=







STEERING AND SUSPENSION

G


5

F



5 G



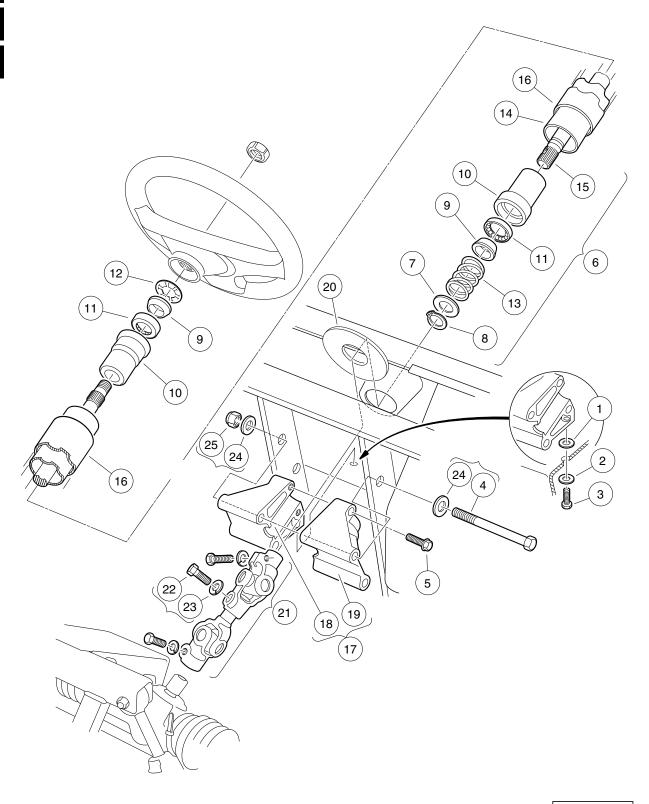








STEERING COLUMN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011578	Washer, 5/16 Type B Flat	1
2	1011697	Washer, 5/16 Flat	1
3	1014288	Screw, 5/16-18 X 0.75 Thread-Forming	1
4	1016183	Screw, 3/8-16 X 7.00 Hex Cap	2
5	1016269	Screw, 5/16-18 Thrd Forming	2
6	1017313	Steering Shaft Assembly (includes items 7 through 15)	1
7	1012604	Washer, 0.675 ID X 1.19 OD	1
8	1012605	Ring, 0.579 Internal Retaining	
9	1014125	Wedge, Molded	2
10	1014126	Seat, Plastic Bearing	2
11	1014213	Bearing, Ball	2
12	1014214	Ring, Retaining	
13	1014217	Spring, Steering Shaft	
14	1017314	Column, Aluminum Steering	
15	1017315	Shaft Steering Column	
16	1017317	Tube Cover, Steering Column	
17	101984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	
18	N/A	Bracket, RH Steering Column Mount	
19	N/A	Bracket, LH Steering column mount	
20	102278001	Boot, Steering Column Round	
21	103601601	Shaft, Intermediate Steering (includes items 22 and 23)	
22	1017226	Bolt, Hex-Head, 8mm X 1.25 - 30	
23	7174	Lockwasher, 5/16 Split	3
24	334	Washer, 3/8 Type A Flat	4
25	8754	Locknut, 3/8-16 Hex	2
		1	1



5 G F

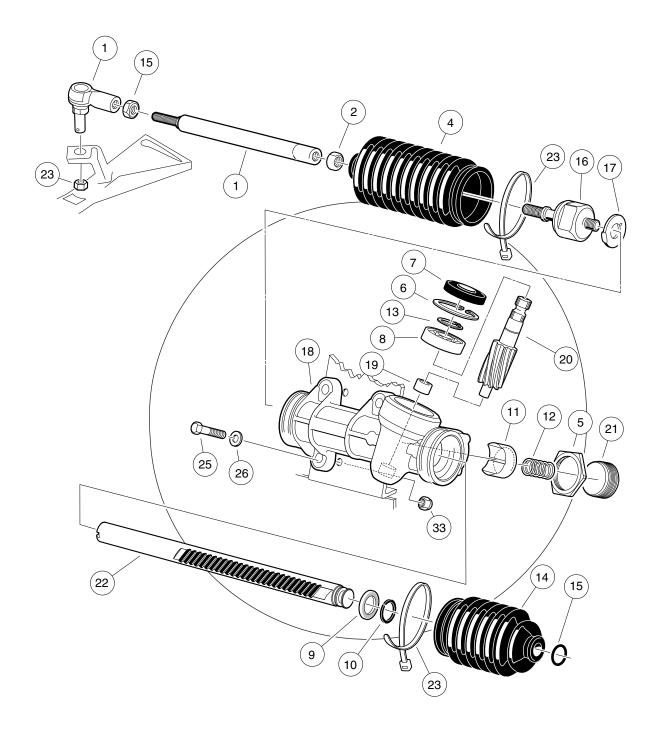








STEERING GEAR ASSEMBLY

012467 013042 013035 013035 013044 013051 013052 079401 079501 079901 07900 07900 07900 07900 07900 07900 0	Link, Rack and Pinion Drag	
013042 013042 013035 013044 013051 013052 013052 013052 013052 013052 013052 013052 013052 013052 013052 013052 013051	Nut, 12mm Hex Steering Gear Assembly (without yoke) (includes items 4 through 23) Bellows, Long Rack Screw Locknut Snap Ring Seal, Steering Pinion Dust Bearing, Ball Stop Washer Stop Ring, C-Type Support Yoke Rack Guide Pressure Spring Ring, Stop, C-Type Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab	
378302 013035 013044 013051 013052 379401 379501 379701 379801 379901 380001 380101 380201	Nut, 12mm Hex Steering Gear Assembly (without yoke) (includes items 4 through 23) Bellows, Long Rack Screw Locknut Snap Ring Seal, Steering Pinion Dust Bearing, Ball Stop Washer Stop Ring, C-Type Support Yoke Rack Guide Pressure Spring Ring, Stop, C-Type Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab	
013035 013044 013051 013052 379401 379501 379601 379801 379901 380001 380101 380201	Bellows, Long Rack Screw Locknut Snap Ring Seal, Steering Pinion Dust Bearing, Ball Stop Washer Stop Ring, C-Type Support Yoke Rack Guide Pressure Spring Ring, Stop, C-Type Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab	
013044 013051 013052 379401 379501 379601 379701 379801 380001 380101 380201	Rack Screw Locknut Snap Ring Seal, Steering Pinion Dust Bearing, Ball Stop Washer Stop Ring, C-Type Support Yoke Rack Guide Pressure Spring Ring, Stop, C-Type Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab	
013051 013052 879401 879501 879701 879801 879901 880001 880101 880201	Snap Ring	
013052 379401 379501 379601 379801 379901 380001 380101 380201	Seal, Steering Pinion Dust Bearing, Ball Stop Washer Stop Ring, C-Type Support Yoke Rack Guide Pressure Spring Ring, Stop, C-Type Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab	
379401 379501 379601 379701 379801 379901 380001 380101 380201	Bearing, Ball Stop Washer Stop Ring, C-Type Support Yoke Rack Guide Pressure Spring Ring, Stop, C-Type Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab	
379501 379601 379701 379801 379901 380001 380101 380201	Stop Washer Stop Ring, C-Type Support Yoke Rack Guide Pressure Spring Ring, Stop, C-Type Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab	
379601 379701 379801 379901 380001 380101 380201	Stop Ring, C-Type	
379701 379801 379901 380001 380101 380201	Support Yoke	
379801 379901 380001 380101 380201 380301	Rack Guide Pressure Spring Ring, Stop, C-Type Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab	
379901 380001 380101 380201 380301	Ring, Stop, C-Type Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab	
880001 880101 880201 880301	Bellows, Short Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab	
380101 380201 380301	Dust Seal Retaining Ring Inner Ball Joint Asm Washer, Tab	
880201 880301	Inner Ball Joint Asm	
880301	Washer, Tab	
N/A	l Rox Steering Gear	
N/A	Bearing, Lower Pinion	
N/A	Pinion, Steering	
N/A	Screw, Rack Guide	
N/A	Rack, Steering	
8990	Tie Wrap, 8" Nylon	
1035	Cotter Pin, 3/32 x 1	
1624	Screw, 3/8-16 X 1.50 Hex-Head Cap	
)1)1)1	334 7540 1895 1930 5597 7602 7555 8754	Washer, 3/8 Type A Flat

5 G E

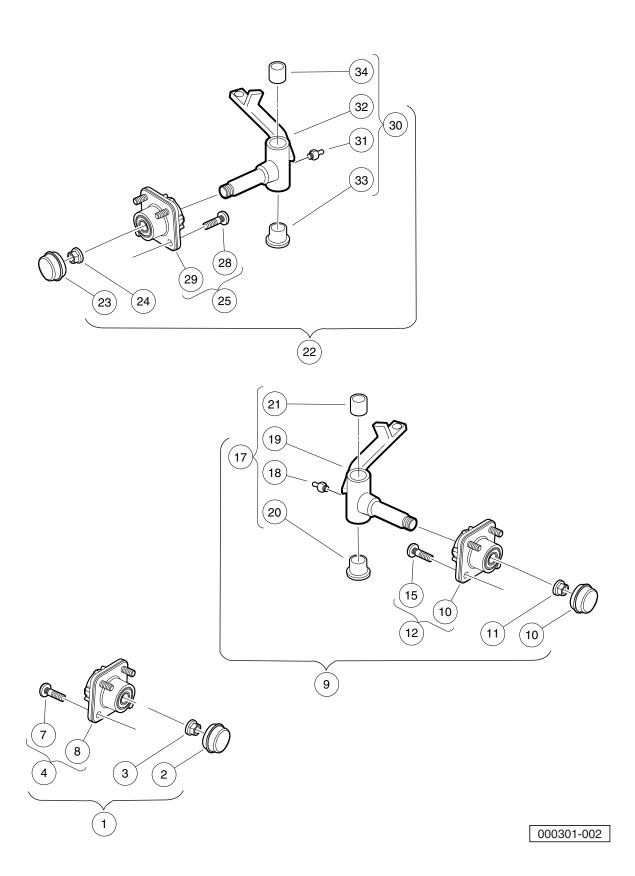






FRONT SPINDLES AND HUBS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102357701	Replacement Kit, Front Hub (includes items 2 through 4)	2
2	102353201	Cap, Front Hub	1
3	102353301	Hex Nut, Locking Flange, M14x2	1
4	N/A	Asm, Front Hub, Bb, Long Stud (includes items 5 through 8)	1
5	N/A	Bearing, Ball, 6204	2
6	N/A	Spacer, Bearing, Front Hub, Pm	1
7	103477901	Lug Stud, 1/2-20 Unf, 4037	4
8	N/A	Front Hub, Ball Brg, Long Stud	
9	N/A	Asm, Hub And Spindle, Left-Hand Ext (includes items 10 through 15)	1
10	N/A	Front Hub Assembly, Ball Bearing (includes items 11 and 12)	
11	102353401	Lug Stud, 1/2-20 UNF, 4037 Stl	
12	N/A	Hub, Front	1
13	102353201	Cap, Front Hub	1
14	102353301	Hex Nut, Locking Flange, M14x2	
15	102354204	Asm, Spindle, LH, Ext (includes items 16 through 19)	
16	1015597	Fitting, 1/4-28 Thread-Forming Grease	
17	N/A	Subasm, Spindle, LH, Ext	
18	7048	Bushing, Flanged Bronze	
19	8067	Bushing, Bronze Spindle	
20	N/A	Asm, Hub And Spindle, Right-Hand Ext (includes items 21 through 26)	
21	N/A	Front Hub Assembly, Ball Bearing (includes items 22 and 23)	1
22	102353401	Lug Stud, 1/2-20 UNF, 4037 Stl	
23	N/A	Hub, Front	
24	102353201	Cap, Front Hub	1
25	102353301	Hex Nut, Locking Flange, M14x2	_
26	102354104	Asm, Spindle, RH, Ext (includes items 27 through 30)	
27	1015597	Fitting, 1/4-28 Thread-Forming Grease	
28	N/A	Subasm, Spindle, RH, Ext	
29	7048	Bushing, Flanged Bronze	1
30	8067	Bushing, Bronze Spindle	1



5

E

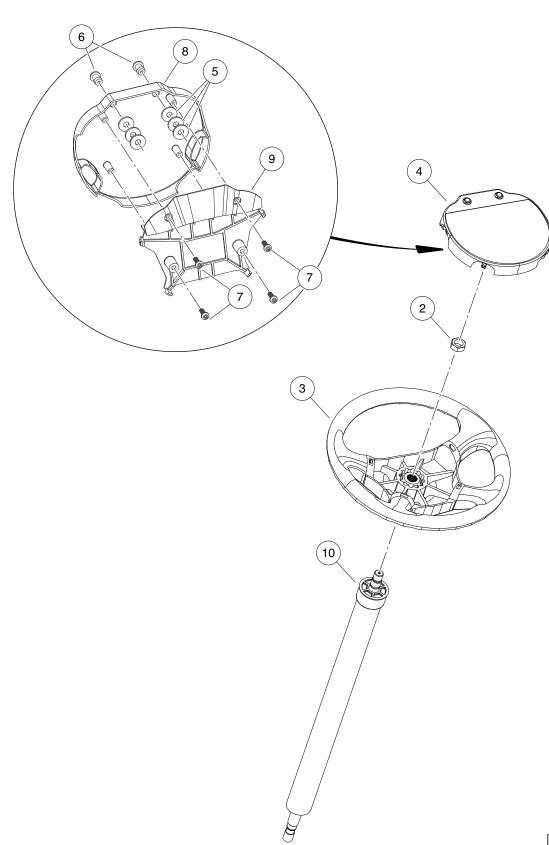








STEERING WHEEL

		STEERING WITE			
ITEM	PART NO.	DESCRIPTION	QTY		
		1 2 3 4			
1	N/A	Instl, Steering Wheel, Champ (includes items 2 through 10)	1		
2	1017273	Nut, 5/8-18 Nylon Insert Jam	1		
3	102537802	Steer Wheel, Comf/grip, Spline	1		
4	102540802	Center, Plate, Steering Wheel (includes items 5 through 9)	1		
5	1011697	Washer, 5/16 Flat	6		
6	1016967	Blind Rivet, Push Type	2		
7	102296020	Screw, Torx Pan Hd Pt, M6 X 20	4		
8	N/A	Scorecard Plate, Comfort Grip	1		
9	N/A	Scorecard Back Plate	1		
10	103405501	Shroud, Steering Column Spline	1		



5 G

E

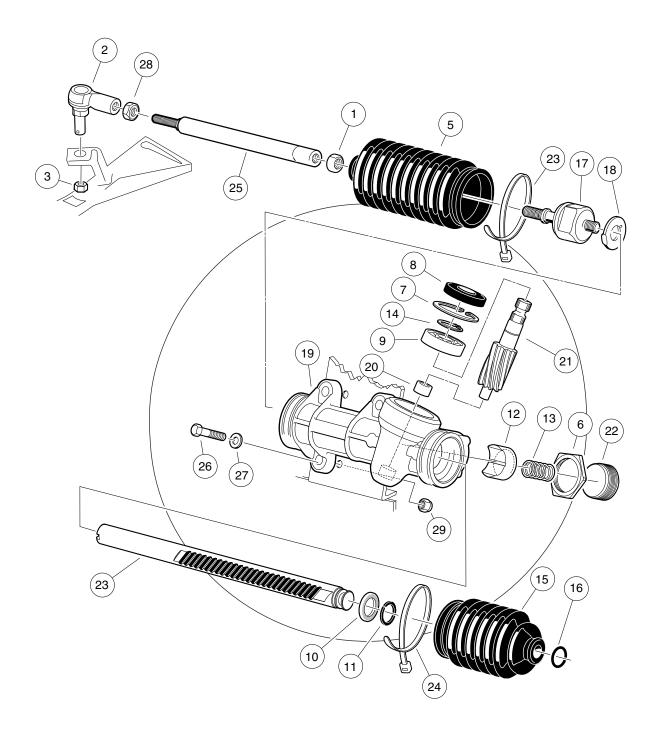








STEERING GEAR ASSEMBLY

		DESCRIPTION	Q
		1 2 3 4	
1	1013042	Nut, 12mm Hex	
2	102022602	End, Tie Rod, M12 X 1.25, Lh	
3	102289201	Nut - Hex Locking, M12 X 1.25	
4	103601501	Asm, Steering Rack And Pinion (includes items 5 through 24)	
5	1013035	Bellows, Long	
6	1013044	Rack Screw Locknut	
7	1013051	Snap Ring	
8	1013052	Seal, Steering Pinion Dust	
9	101879401	Bearing, Ball	
10	101879501	Stop Washer	
11	101879601	Stop Ring, C-Type	
12	101879701	Support Yoke	
13	101879801	Rack Guide Pressure Spring	
14	101879901	Ring, Stop, C-Type	
15	101880001	Bellows, Short	
16	101880101	Dust Seal Retaining Ring	
17	101880201	Inner Ball Joint Asm	
18	101880301	Washer, Tab	
19	N/A	Box, Steering Gear	
20	N/A	Bearing, Lower Pinion	
21	N/A	Pinion, Steering	
22	N/A	Screw, Rack Guide	
23	N/A	Rack, Steering	
24	8990	Tie Wrap, 8" Nylon	
25	103653401	Link, Drag, Male Thd	
26	1624	Screw, 3/8-16 X 1.50 Hex-Head Cap	
27	334	Washer, 3/8 Type A Flat	
28	7555	Nut, 1/2-20 Hex, Left-Hand Thread	
29	8754	Locknut, 3/8-16 Hex	



DID YOU

E

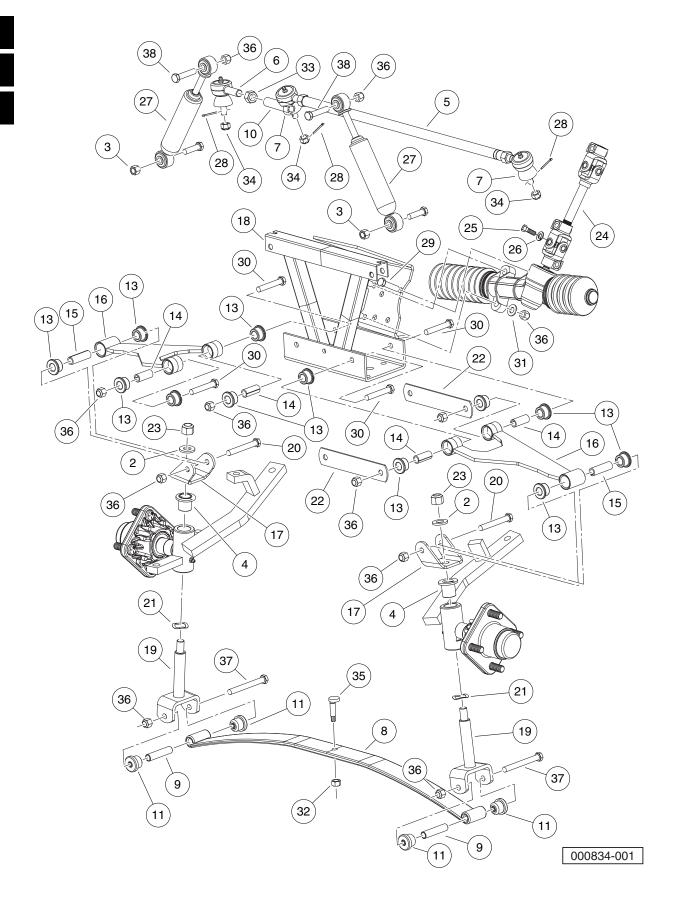









FRONT SUSPENSION, UPPER

1 2 3 4 5	N/A 1010028 1010138	1 2 3 4 Subasm Front Susp, Xrt (includes items 2 through 38)
2 3 4	1010028	
3 4		Washer, 1/2 Type A Flat
4	1010138	
_		Locknut, 3/8-16 Dimpled
5	1010150	Bearing, Thrust
	N/A	Tie Rod Assembly
6	1011895	Socket, LH Vertical
7	1011930	Seal, Vertical Socket Dust
8	1012030	Spring, Front Leaf
9	1012303	Bushing, Steel
10	1012467	Link, Rack and Pinion Drag
11	1015583	Bushing, Urethane
12	1016353	Sub-Assembly, Delta A-Plate (includes items 13 through 16)
13	1016346	Bushing, Urethane
14	1016349	Sleeve, Delta Inner
15	1016350	Sleeve, Delta Outer
16	N/A	Delta A-Plate
17	1016384	Clevis, Delta Upper
18	1016385	Delta Shock and Gear Support Assembly
19	1016386	King Pin Assembly
20	1016387	Screw, 3/8-16 X 2.75 Hx Hd Cap
21	1016389	Washer, 1.125 Od Wave
22	1017266	A-Plate Strap
23	101903101	Locknut, 1/2-20 Nylon Insert
24	102004101	Joint, Steering (includes items 25 and 26)
25	1017226	Bolt, Hex-Head, 8mm X 1.25 - 30
26	7174	Lockwasher, 5/16 Split
27	103351001	Shock Absorber, Front, Common
28	1035	Cotter Pin, 3/32 x 1
29	1624	Screw, 3/8-16 X 1.50 Hex-Head Cap
30	2402	Screw, 3/8-16 X 2.25 Hx Hd Cap
31	334	Washer, 3/8 Type A Flat
32	706	Nut, Hex 3/8-16
33	7555	Nut, 1/2-20 Hex, Left-Hand Thread
34	7602	Nut, 3/8-24 UNF Hex
35	8745	Screw, Eccentric Adjustment
36	8754	Locknut, 3/8-16 Hex
37	8755	Screw, 3/8-16 X 3.375 Hex Cap
38	8861	Bolt, 3/8-16 X 1.75 Hex

 

5 G E

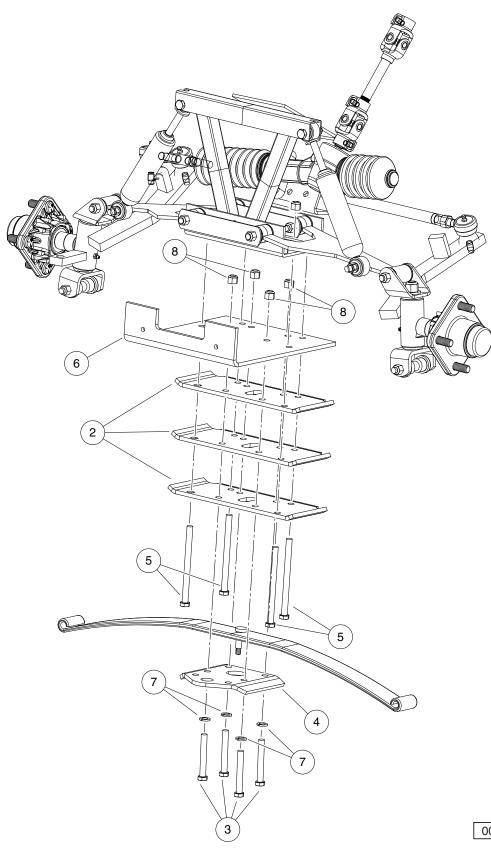








FRONT SUSPENSION, LOWER

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Asm, Front Suspension, Lifted (includes items 2 through 8)	1
2	1010124	Plate, Spring Mount	3
3	1013832	Screw, 3/8-16 X 5.00 Hex-Head Cap	4
4	1014276	Plate, Front Spring Retainer	1
5	1016387	Screw, 3/8-16 X 2.75 Hx Hd Cap	4
6	102830401	Support, Brush Guard	1
7	357	Lockwasher, 3/8 Split	4
8	8754	Locknut, 3/8-16 Hex	8



5

E

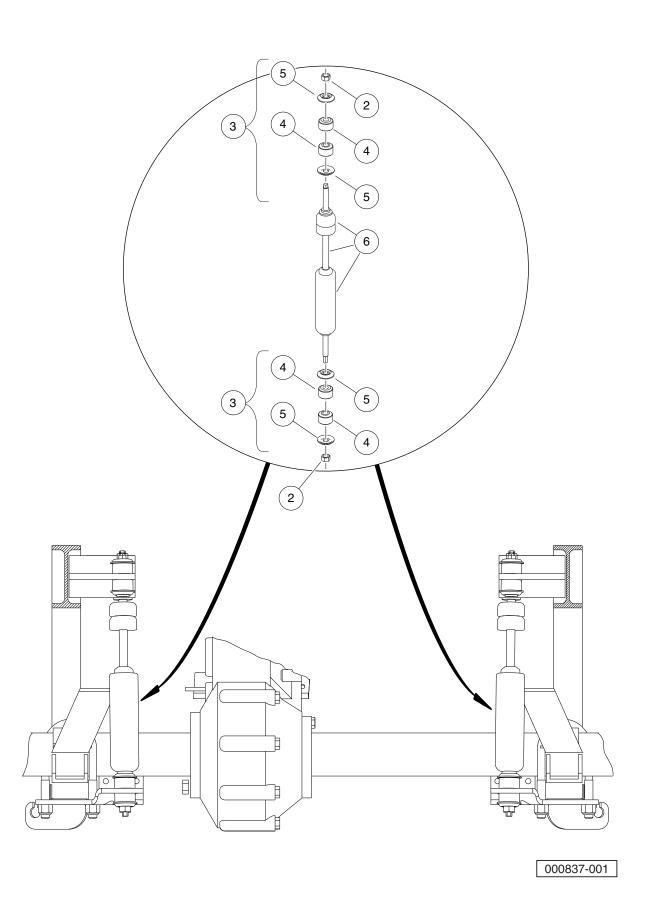








REAR SUSPENSION – SHOCK ABSORBERS

ITESA	DARTHO	DESCRIPTION	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Shock Absorber Instl (includes items 2 through 6)	1
2	1010145	Nut, 3/8-24 Hex	4
3	1011415	Kit, Shock Absorber Cushion (includes items 4 and 5)	4
4	1010142	Cushion, Shock Absorber	2
5	1010144	Retainer, Shock Absorber Cushion	2
6	103351101	Shock, Absorber, Utility	2
U	103331101	Shock, Absorber, othicy	_
			1

5 G

E

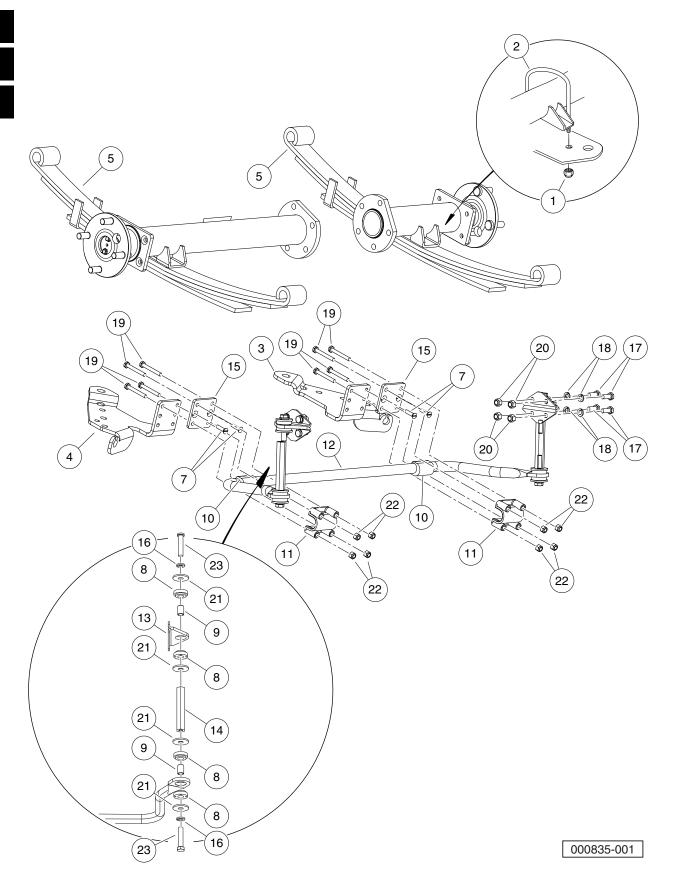







REAR SUSPENSION AND SWAYBAR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1014555	Locknut, 7/16-14 Nylon Hex	2
2	1014902	U-Bolt	2
3	101926501	Bracket, Left-Hand	1
4	101929401	Bracket, Right	1
5	102871801	Spring, Multi Leaf	2
6	N/A	Asm, Swaybar, Rear, Lift (includes items 7 through 23)	1
7	N/A	Screw, 1/4-20 X 1.0 SI Flt Cs	4
8	1015453	Compression Mount	8
9	1015457	Spacer, 0.720"	4
10	1015613	Bushing, Stabilizer Bar	2
11	1015614	Support, Bushing	2
12	1015760	Stabilizer Bar	1
13	1016813	Mounting Bracket, Stabilizer Bar	2
14	1016814	Link, Stabilizer Bar	2
15	103364801	Bracket, Sway Bar , Lift	2
16	357	Lockwasher, 3/8 Split	4
17	7173	Screw, 5/16-18 X 0.75 Hex-Head Cap	8
18	7174	Lockwasher, 5/16 Split	8
19	7311	Screw, 1/4-20 X 2.00 Hex-Head Cap	8
20	7473	Locknut, 5/16-18 Nylon Insert	8
21	808	Washer, 3/8 Type B Flat	8
22	8233	Locknut, 1/4-20 Nylon Insert	12
23	8861	Bolt, 3/8-16 X 1.75 Hex	4






5

G

E

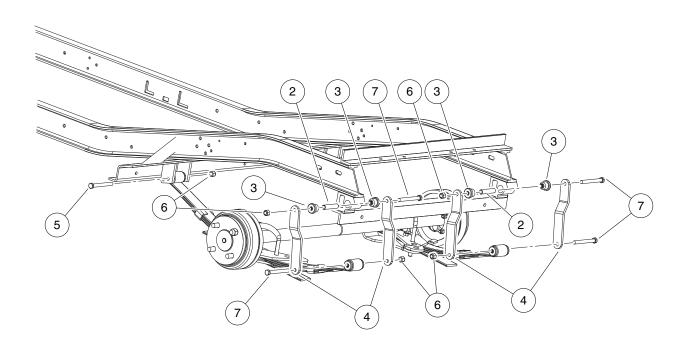







REAR SUSPENSION HARDWARE

NEAR 3031 ENSIGN HARDW			1
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Rear Susp Hdw - Gas 252 (includes items 2 through 7)	1
2	1012303	Bushing, Steel	2
3	1015583	Bushing, Urethane	
4	102004201	Rear Spring Shackle	
5	102066201	Screw, 3/8-16 X 3.50 Hex Cap	
6	8754	Locknut, 3/8-16 Hex	6
7			
,	8755	Screw, 3/8-16 X 3.375 Hex Cap	4



5

G

[=





GET STARTED

https://CartPros.com/f.html


our search box and it will find the part you are looking for. ELECTRICAL SYSTEM - GASOLINE VEHICLE

G

6




DID YOU

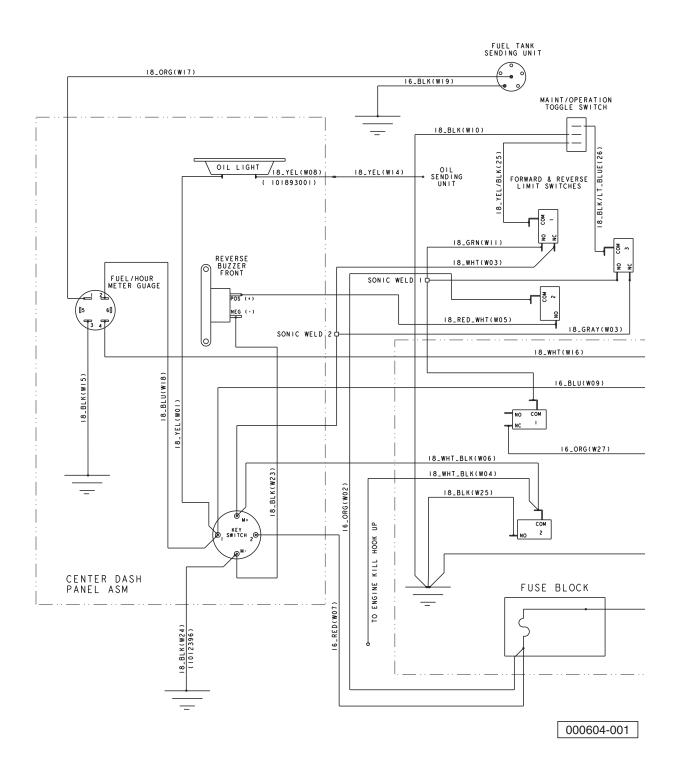



KNO

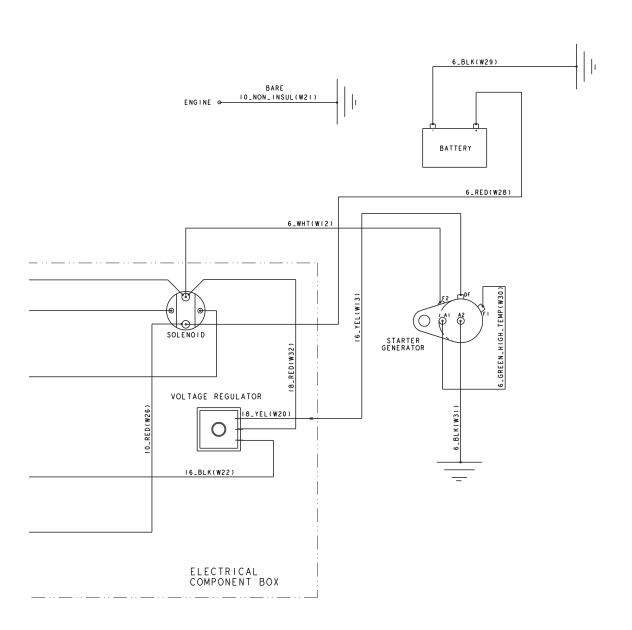



6

G

See previous two pages for illustration.








WIRING – GASOLINE VEHICLE

WINING - GASCLINE V				
ITEM	PART NO.	DESCRIPTION	QTY	6
1	103197001	1 2 3 4 Asm, Wire Harness, CA 1, Gas	1	G



6

G

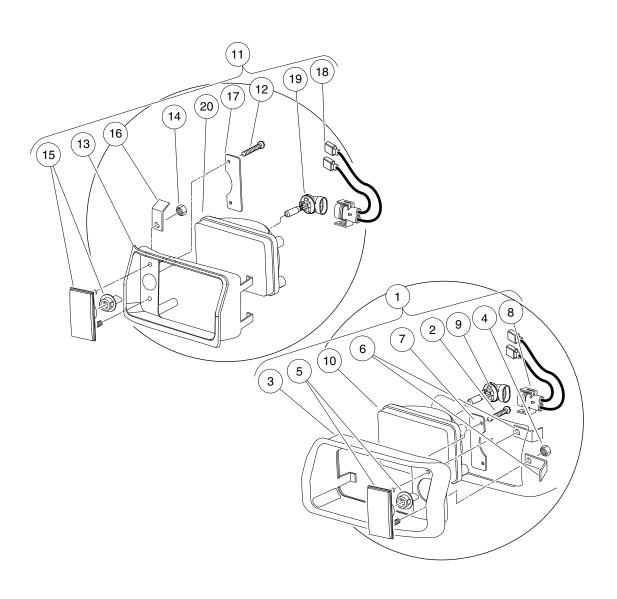








HEADLIGHTS

TEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	101988001	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	1013461	Screw, #10-16 Hex-Head Hi-Lo	2
3	1016880	Headlight Bezel, Left	1
4	1017	Nut, #10-24 Stainless-Steel Hex Machine	2
5	1017062	Turn Signal Lens Assy	1
6	1017064	Mounting Bracket	2
7	1017065	Retainer, Headlight	1
8	101987901	Connector Harness Assembly, Headlight	1
9	101988101	Bulb, Headlight	1
10	101988201	Lens, Headlight	1
11	101988002	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	
12	1013461	Screw, #10-16 Hex-Head Hi-Lo	
13	1016879	Headlight Bezel, Right	1
14	1017	Nut, #10-24 Stainless-Steel Hex Machine	
15	1017062	Turn Signal Lens Assy	1
16	1017064	Mounting Bracket	
17	1017065	Retainer, Headlight	
8	101987901	Connector Harness Assembly, Headlight	
19	101988101	Bulb, Headlight	
20	101988201	Lens, Headlight	

DID YOU

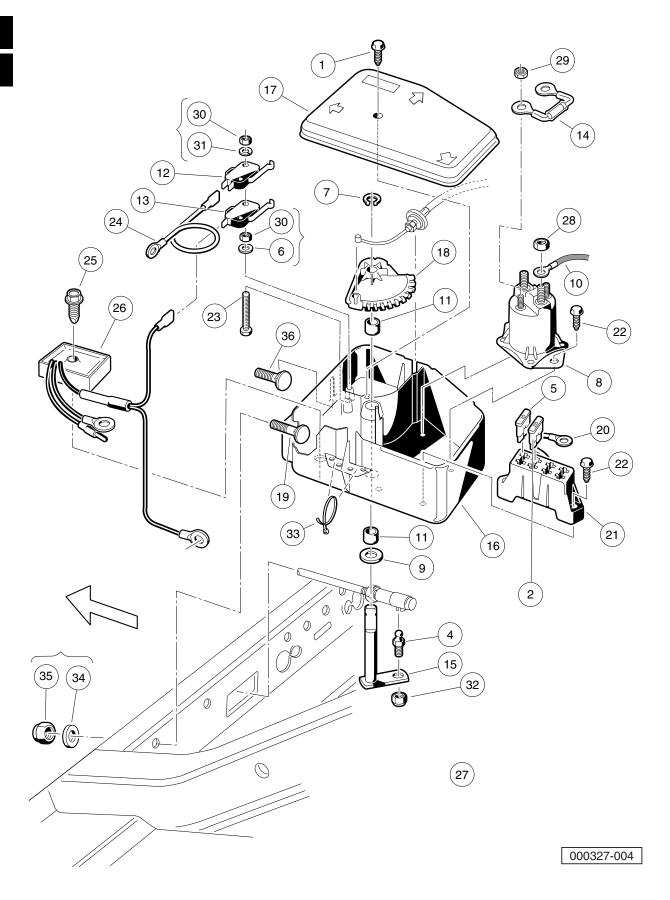






ELECTRICAL COMPONENT BOX


ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1015752	Screw, #12-16 X 0.625 Hi-Lo	1
2	1016423	Fuse, 20-Amp	1
3	N/A	Asm, Electrical Component Box (includes items 4 through 33)	1
4	1010954	Stud, 1/4-28 X 0.560 Ball	1
5	1012295	Fuse, 10-Amp	1
6	1012431	Washer, #4 Flat	2
7	1013589	Ring, 0.338" Internal Retaining	1
8	1013609	Solenoid, 12-Volt	1
9	1014065	Washer, 0.38" ID Delrin Flat	1
10	1014119	Wire Assembly #6 Red	1
11	1014145	Bushing, Secondary Weight, Split	2
12	1014807	Switch, Limit	1
13	1014808	Switch, Limit	1
14	1014948	Diode	1
15	1015345	Bell Crank and Shaft Assembly	1
16	1015371	Box, Electrical Component	1
17	1015372	Cover, Electric Box	1
18	1015373	Cam, Electric Box	1
19	1015405	Bolt, Carriage, 5/16-18 X 2.0	1
20	1015737	Wire Assy, #10 Red	1
21	1015741	Fuse Block	1
22	1015752	Screw, #12-16 X 0.625 Hi-Lo	4
23	1015878	Screw, #4-40 Hex Head Machine	2
24	N/A	Wire Assy, #16 Orange	1
25	101856102	Screw, 1/4-15 X 1.50 Hi-lo Hex	1
26	102711201	Voltage Regulator	1
27	102711201	Asm, Wire Harness, CA 1, Gas	1
28	1242	Nut, 5/16-18 Hex	2
29	7893	Nut, #10-32 Hex	2
30	8057	Nut, #4-40 Hex Machine	4
31	8058	Lockwasher, #4 Split	2
32	8717	Locknut, 1/4-28 Nylon Insert	1
33	8990	Tie Wrap, 8" Nylon	2
34	1241	Washer, 5/16 Type A Flat	2
35	7473	Locknut, 5/16-18 Nylon Insert	2
			1
36	7818	Bolt, Carriage, 5/16-18 X 1.5	



 





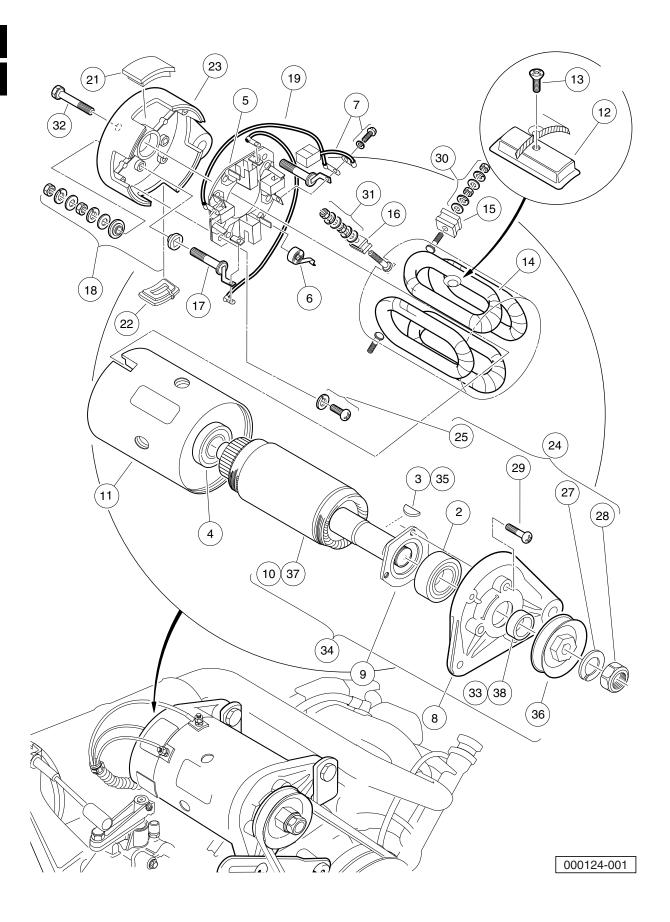








MODEL G425419 – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	101833701	Starter/Generator (cw) (includes items 2 through 33)	1
2	1013001	Bearing, Output Shaft Ball	1
3	1013003	Key, Starter/Generator	1
4	1013005	Bearing, Ball	1
5	101301102	Brush Holder Assembly (cw) (includes item 6)	1
6	101878101	Brush Spring Set	4
7	101869302	Brush and Screw Set (cw)	1
8	101874901	Front Bracket	1
9	101875001	Retainer	1
10	101875101	Armature	1
11	101875201	Field Coil Housing	1
12	101875301	Pole Set	1
13	101875401	Screw Set	1
14	101875501	Field Stator Coil Assembly	1
15	101875601	F Insulator Set	2
16	101875701	DF Insulator	1
17	101875802	A Connector (cw)	1
18	101876001	Screw and Mold Assembly	2
19	101876202	Brush Connector Assembly (cw)	2
20	101876301	Cover Set (includes items 21 and 22)	1
21	N/A	Brush Inspection Port Cover	
22	1017653	Brush Port Cover w/Drain	1
23	101876402	Rear Bracket (cw)	
24	101876501	Nut and Screw Set (includes items 25 through 29)	
25	101896501	Brush Holder Asm Screw	2
26	N/A	Washer, M5 Flat	1
27	N/A	Washer, M14 Lock	1
28	N/A	Nut, Hex, M14 x 2	1
29	N/A	Screw, M5 x 0.8 x 18mm	3
30	101877601	Nut and Washer Set	
31	101877001	Nut and Washer Set	
32	101877701	Through Bolt Set	
33	101879001	Spacer	ı
34	101939901	Armature Asm Conversion Kit (includes items 35 through 38)	
35	1018/3102	_	
		Key, Starter/Generator	ı
36 37	1014289 101875101		
38	1018/5101	Armature	1
30	101333301	Note: Item 36 will ONLY fit Model G425419 Starter/Generator.	







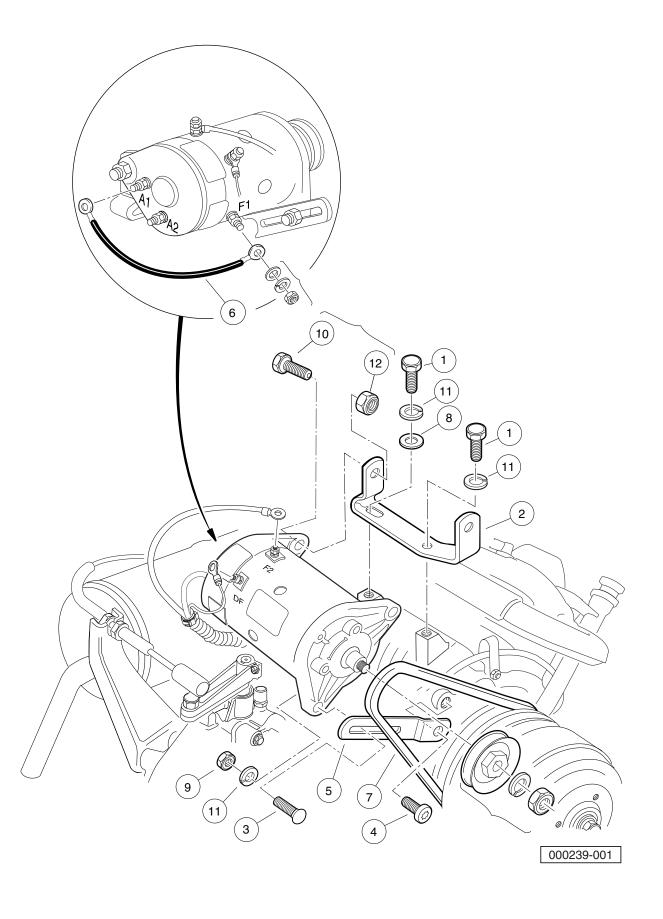









JASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012830	Screw, M8-125 X 22 Hex-Head	2
2	101524002	Bracket, Starter/Generator Mounting	1
3	1015932	Bolt, Carriage, 5/16-18	1
4	1016074	Screw, M8-1.25 X 18mm Torx	1
5	1016883	Bracket, Starter/Generator Adjustment	1
6	101837301	Wire Assy, #6 Green	1
7	101916701	V-Belt	1
8	1241	Washer, 5/16 Type A Flat	1
9	1242	Nut, 5/16-18 Hex	1
10	705	Screw, Cap-hex Hd 3/8-16x1.25	2
11	7174	Lockwasher, 5/16 Split	3
12	8754	Locknut, 3/8-16 Hex	2



 



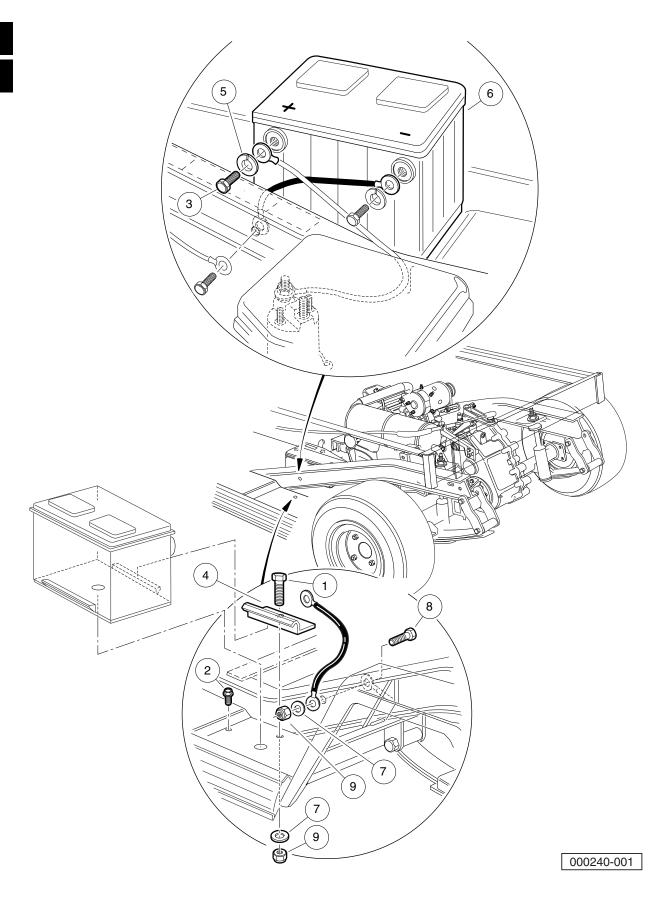






BATTERY – GASOLINE VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		Ī
1	1010934	Screw, 5/16-18 X 1.00 Hex Cap	1	
2	1014288	Screw, 5/16-18 X 0.75 Thread-Forming	1	
3	1014375	Screw, 3/8-16 X 0.50 Stainless Steel Hex-Head	2	
4	101898001	Clamp, Battery	1	
5	102355301	Lockwasher, #10 Split Ss	2	
6	103496801	Battery, Start, 12v	1	
7	1241	Washer, 5/16 Type A Flat	2	
8	7173	Screw, 5/16-18 X 0.75 Hex-Head Cap	1	
9	7473	Locknut, 5/16-18 Nylon Insert	2	
	7473	Lockitat, 37 To To Tyloit Itiscre	2	



 



KNO YOU

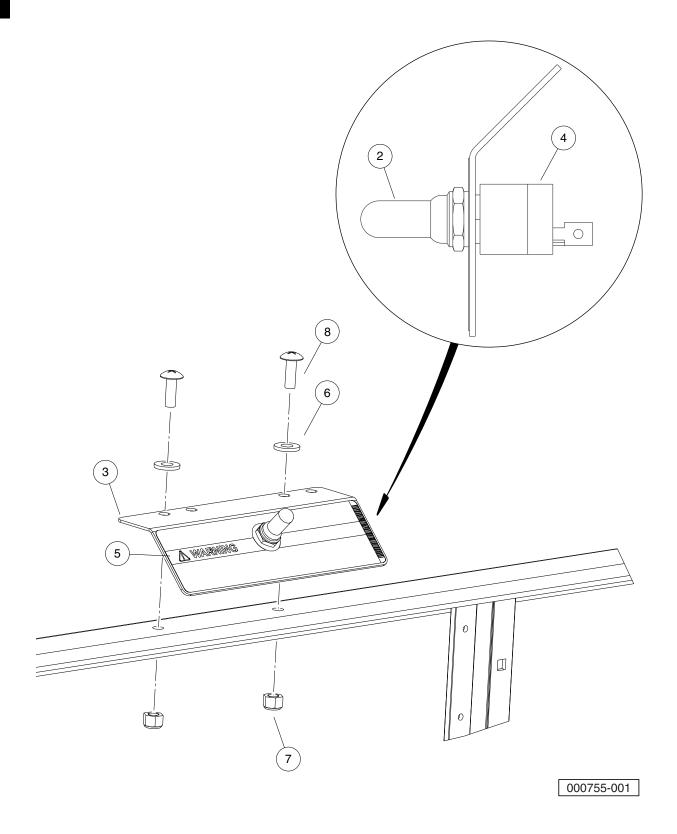







OPERATION AND MAINTENANCE SWITCH

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Switch, Operation/Maintenance (includes items 2 through 5)	1
2	101908401	Boot, Switch	
3	101922501	Bracket, Tow/Run Switch Mounting	
4	103198401	Switch, Toggle, SPDT	
5	103205501	Decal, Run/Service Switch	
6	332	Washer, 1/4 Type A Narrow Flat	
7	8233	Locknut, 1/4-20 Nylon Insert	
8	8248	Screw, 1/4-20 X 0.75 Truss-Head Machine	2









6








FE350 ENGINE - S27





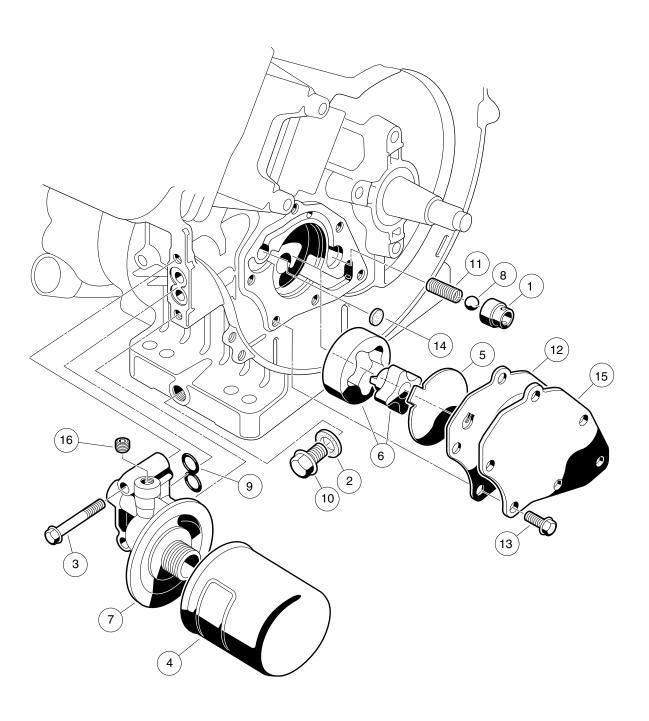








FE350 ENGINE - OIL CIRCULATION


	1	T	1
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016429	Seat, Value Oil Press Relief	1
2	1016432	Gasket, Drain Plug	1
3	1016457	Bolt, Flange Head	2
4	1016467	Filter, Oil	1
5	1016473	Plate, Oil Pump	1
6	101648203	Oil Pump And Rotor	1
7	1016502	Bracket, Oil Filter Mount	1
8	1016537	Ball, Steel, Press, Relief	1
9	1016570	O-Ring	1
10	1016576	Plug, Drain	1
11	1016581	Spring	1
12	1017442	Gasket	1
13	1017456	Bolt, Flanged	6
14	1017458	Filter	1
15	1017460	Cover, Pump	1
16	1017507	Plug	2





7

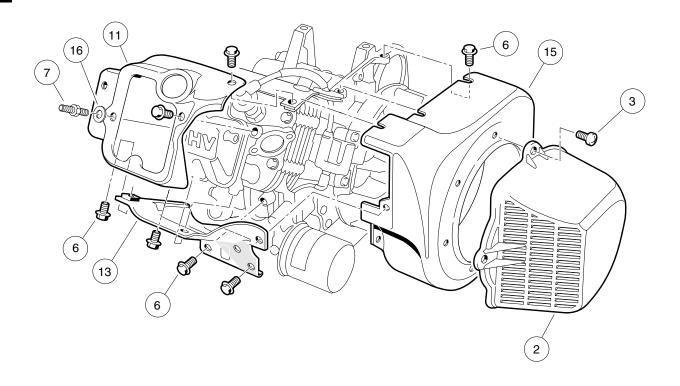

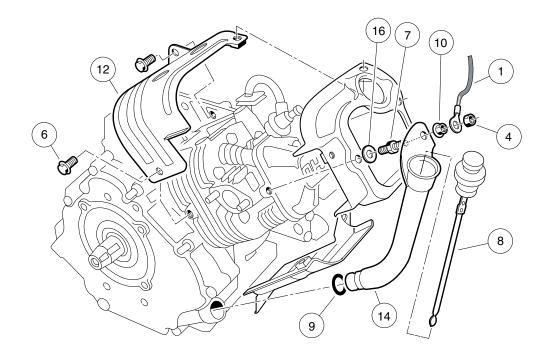









numbers from this manual. Enter the part number into our search box and it will find the part you are looking for. RELEASE) — SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QT\
		1 2 3 4	
1	1015332	Wire Assembly, #10, Uninsulated	1
2	1015649	Shroud, Fan	1
3	1015969	Screw, M6-1.00 X 10mm Pan Hd	4
4	101887601	Locknut, M6-1.00 Nylon Insert	1
5	103386202	Engine, FE350 S27 (includes items 6 through 16)	1
6	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	16
7	1016507	Bolt, Two-Ended	1
8	1016531	Dipstick	1
9	1016539	O-Ring	1
10	1016547	Nut, M6 Flange	1
11	1017474	Shroud, Engine	1
12	1017475	Shroud, Engine	1
13	1017476	Shroud, Engine	1
14	1017486	Tube, Oil Filler	1
15	101916101	Housing, FE350 Fan	1
16	N/A	Washer, 6mm Flat	1
			l



 

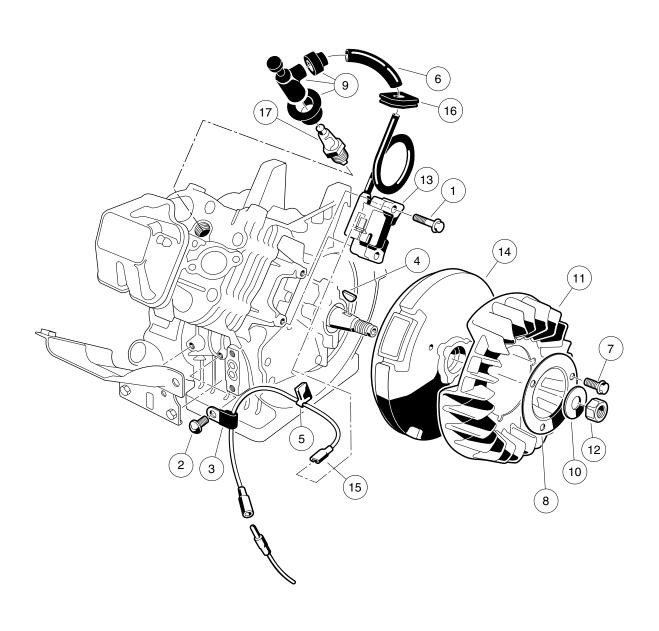








AS26 FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1016455	Bolt, Flange Head	2
2	1016544	Screw	
3	1016561	Clamp	
4	1016562	Key	1
5	1016587	Clamp	1
6	1016588	Tube, 7mm X 10mm X 70mm	1
7	1017448	Bolt, Flanged	3
8	1017455	Plate, Flywheel Fan	1
9	1017463	Cap Asm Plug	•
10	1017490	Washer, Flat	1
11	101916301	Fan (cw)	1
12	N/A	Nut, Hex, 18 mm Fine	1
13	103616501	Ignition, Coil Asm	1
14	103616601	Flywheel Comp	1
15	103616701	Ignition, Wire Lead	
16	103616801	Ignition, Grommet	1
17	AM1232301	Spark Plug, BPR2ES	1

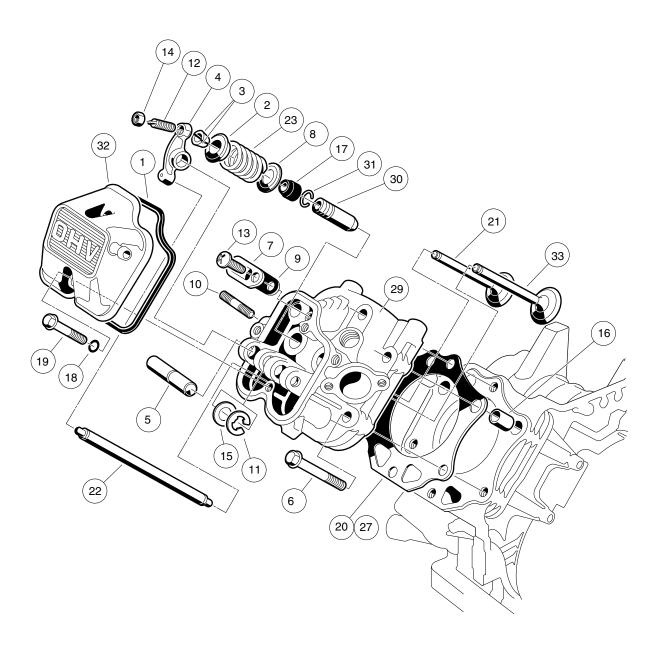









AS26 FE350 ENGINE – CYLINDER HEAD

TEM	PART NO.	DESCRIPTION
		1 2 3 4
1	1016436	Gasket, Rocker Case
2	1016449	Retainer, Valve Spring
3	1016450	Collet
4	1016451	Arm, Rocker
5	1016452	Shaft, Rocker
6	1016458	Bolt, Flange Head, M8 x 1.25 x 45 mm
7	1016474	Plate
8	1016479	Seat, Spring
9	1016483	Valve
10	1016489	Stud, Two-Ended, M8-1.25
11	1016517	Circlip, Type-E
12	1016542	Screw
13	1016544	Screw
14	1016545	Nut
15	1016549	Washer, 12.1x19x1.8
16	1016563	Pin
17	1016566	Seal, Oil
18	1016569	O-Ring
9	1016583	Bolt, 6x35
20	1017434	Gasket, Head
21	1017445	Valve, Exhaust
22	1017454	Rod, Push
23	1017473	Spring, Engine Valve
24	102304801	Kit, Gasket, FE350 (includes items 25 through 28)
25 26	1016440 1016904	Gasket, Engine to Insulator
26 27	1016904	Gasket, Head
2 <i>1</i> 28	1017434	Gasket, Crankcase Cover
20 29	103615601	Cylinder Head, Fe350 S26, S27
30	103615001	Case, Rocker, Fe350 S26 S27
31	103616301	Valve, Intake, Hard Tip
	103010301	Note: Item 24 is not a component of the FE350 engine.
		Note. Item 24 is not a component of the 1 £330 engine.



 



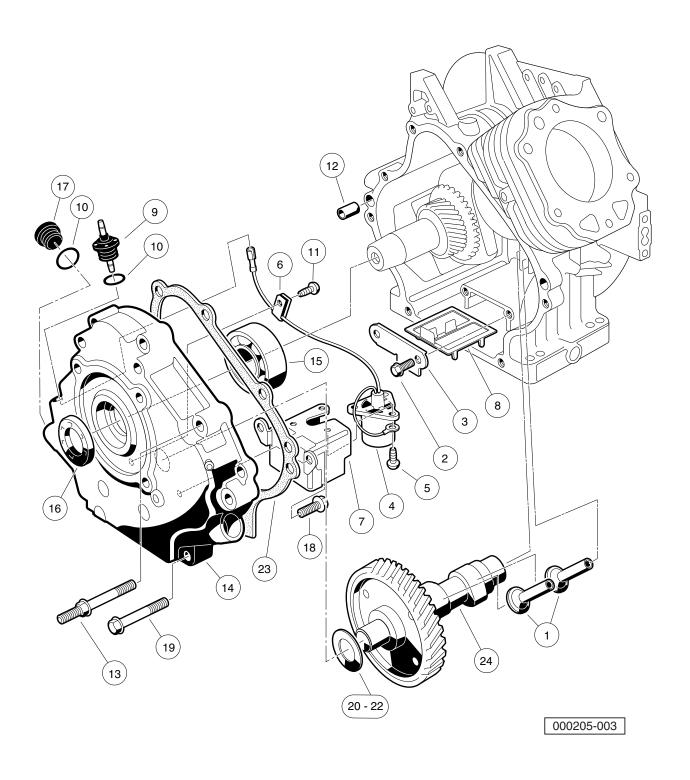




https://CartPros.com/f.html

SENSOR

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016453	Tappet	2
2	1016454	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
3	1016472	Plate, Oil Filter Screen	1
4	1016494	Sensor, Oil Level	1
5	1016496	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
6	1016506	Clamp	1
7	1016510	Bracket, Switch, Oil Level	1
8	1016521	Screen, Oil Filter	1
9	1016535	Connector, Cord	1
10	1016538	O-Ring	2
11	1016544	Screw	1
12	1016564	Pin	2
13	1016584	Bolt, Two-Ended, M8 x 1.25 x 69 mm	2
14	1017472	Cover Crankcase	1
15	1017487	Bearing, Ball	1
16	1017504	Seal, Oil	1
17	1017508	Plug	1
18	1017513	Bolt Switch Bracket	2
19	1017514	Screw, M8-1.25 X 45mm Hex	6
20	101751801	Shim, 0.3	A/R
21	101751802	Shim, 0.4	A/R
22	101751803	Shim, 0.5	A/R
23	103615901	Gasket, Crankcase Cover	1
24	103616401	Camshaft Comp	1



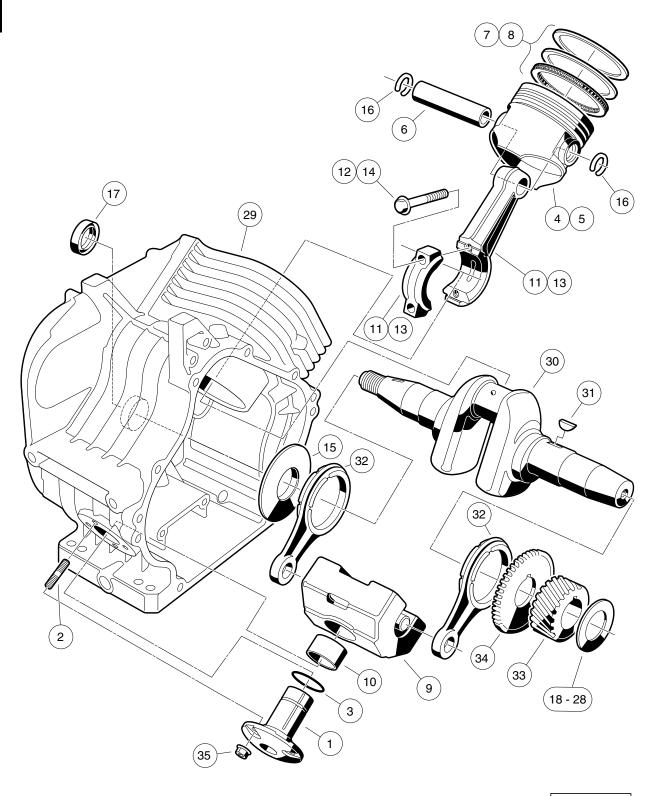








AS26 FE350 ENGINE – CRANKCASE AND CRANKSHAFT

	PART NO.	DESCRIPTION
		1 2 3 4
1	1016470	Shaft, Guide, Counterbalance
2	1016541	Stud, 6x14
3	1016571	O-Ring
4	101744901	Piston, Standard
5	101744902	Piston, 0.50 mm Oversize
6	1017450	Pin, Piston
7	101745101	Ring Set, Standard Piston
8	101745102	Ring Set, Piston, 0.50 mm Oversize
9	1017453	Fe400 Counterbalance Weight (includes item 10)
10	1017510	Bearing, Plain
11	101745701	Asm, Con. Rod Std (includes item 12)
12	1017512	Bolt
13	101745702	Rod Assembly Connnecting Rod 0.5mm (includes item 14)
14	1017512	Bolt
15	1017501	Spacer
16	1017502	Snap Ring
17	1017503	Seal, Oil
18	101773301	Shim, Crankshaft, 1.18mm
19	101773302	Shim, Crankshaft, 1.25mm
20	101773303	Shim, Crankshaft, 1.32mm
21	101773304	Shim, Crankshaft, 1.39mm
22	101773305	Shim, Crankshaft, 1.46mm
23	101773306	Shim, Crankshaft, 1.53mm
24	101773307	Shim, Crankshaft, 1.60mm
25	101773308	Shim, Crankshaft, 1.67mm
26	101773309	Shim, Crankshaft, 1.74mm
27	101773310	Shim, Crankshaft, 1.11mm
28	101773311	Shim, Crankshaft, 1.81mm
29	103615801	Crankcase, Fe350 S26 S27
30	N/A	Crankshaft, Complete (includes items 31 through 34)
31	1016562	Key
32	1017471	Rod
33	N/A	Gear, Helical
34	N/A	Gear, Spur
	103616201	Nut, M6 Flange



7

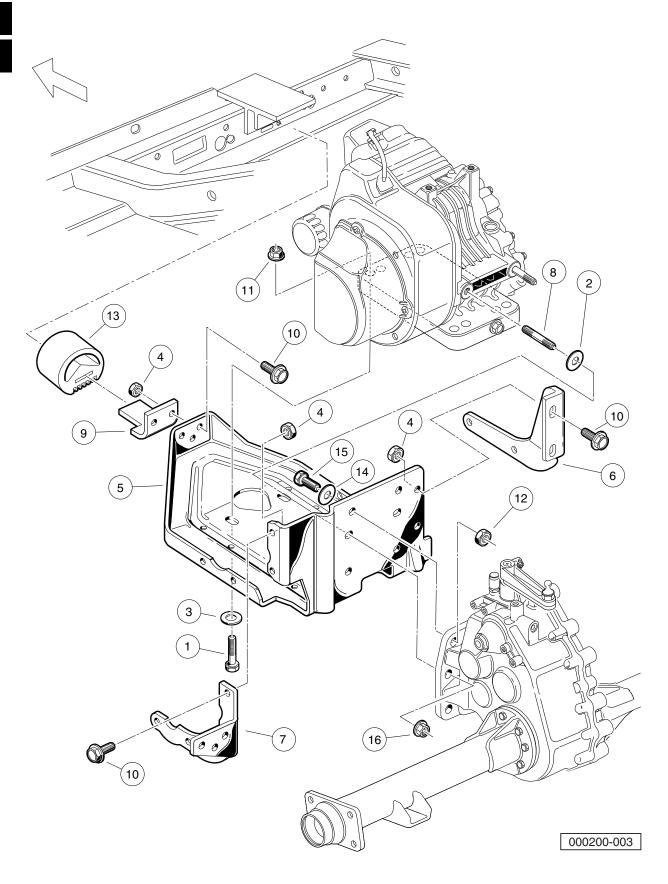





FE350 ENGINE MOUNTING

	1 L330 LINGINE MOONTING		
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010577	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	1011697	Washer, 5/16 Flat	2
3	1012571	Washer, 5/16 Extra Thick Flat	4
4	1013924	Nut, 5/16-24 Hex Head Cone	10
5	101827101	Plate, Engine Mounting	1
6	101832601	Stiffener (PTO Side)	1
7	101832701	Stiffener (Flywheel Side)	1
8	101833101	Stud, M8-1.25 X 50 mm Two-Ended	2
9	101834601	Snubber Bracket	1
10	101884801	Screw, 5/16-24 X 0.875 Grade-8	10
11	101963401	Locknut, 5/16-18 Hex Flange	4
12	102065901	Locknut, 3/8-16 Flanged Dimple	4
13	102540301	Inner Frame Snubber	1
14	334	Washer, 3/8 Type A Flat	4
15	705	Screw, Cap-hex Hd 3/8-16x1.25	4
16	96704416	Nut Flg, M8 X 1.25 Serrated	2





7








AS11 FE350 ENGINE

8





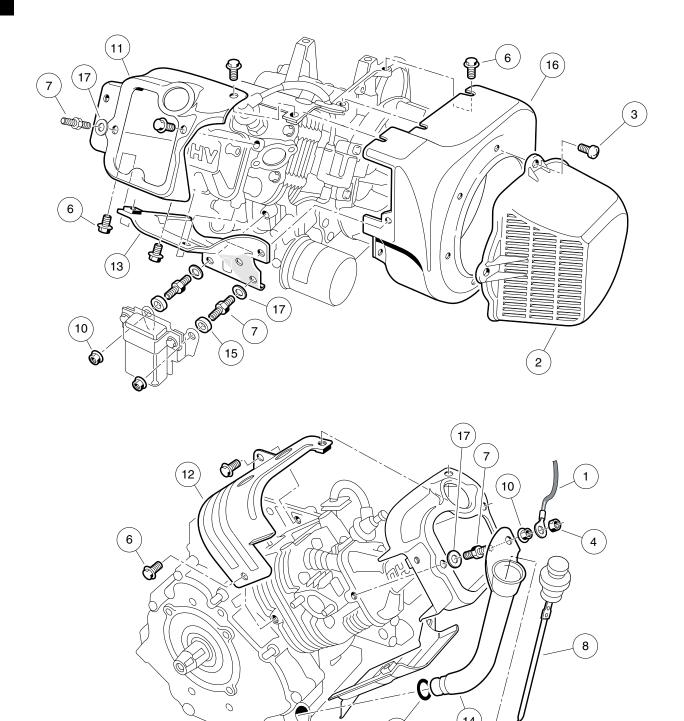

000201-001




9








TI ACK (AU FOMATIC **COMPRESSION RELEASE) – SHROUDS AND BRACKETS**

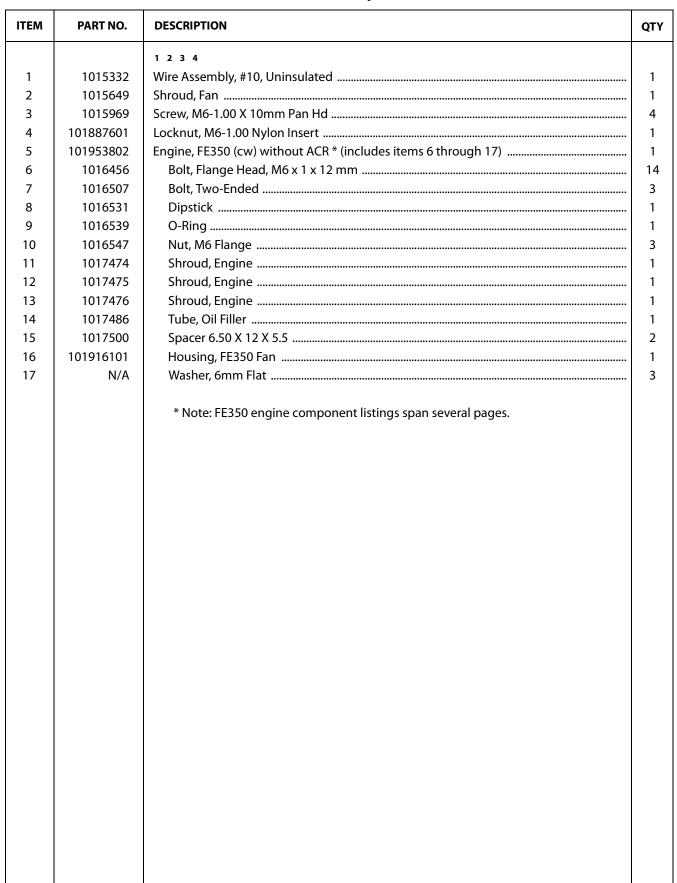



8

G

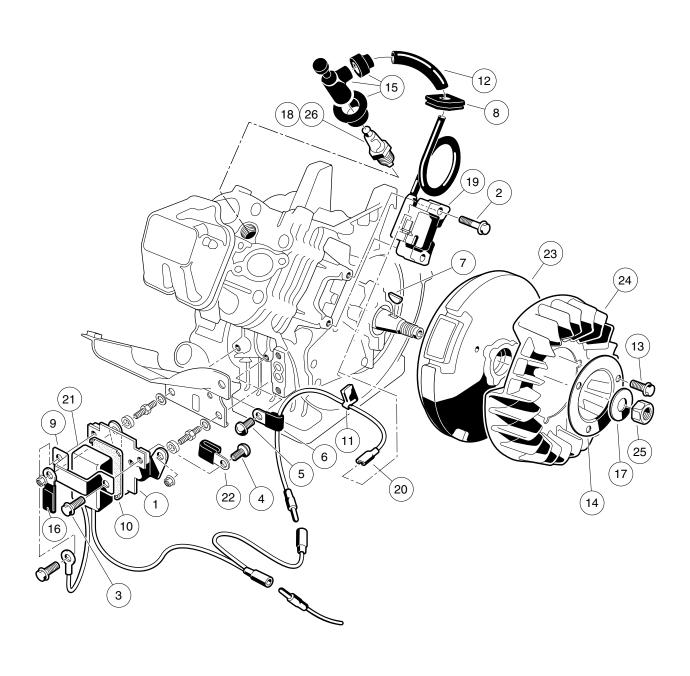








AS11 FE350 ENGINE – IGNITION COMPONENTS AND FLYWHEEL

TEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1016445	Bracket, RPM Limiter	1
2	1016455	Bolt, Flange Head	2
3	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	2
4	1016497	Screw, Pan WP Cross	1
5	1016544	Screw	1
6	1016561	Clamp	1
7	1016562	Key	1
8	1016578	Ignition, Grommet	1
9	1016579	Band, RPM Limiter Mount	1
10	1016586	Damper, RPM Limiter	1
11	1016587	Clamp	1
12	1016588	Tube, 7mm X 10mm X 70mm	1
13	1017448	Bolt, Flanged	3
14	1017455	Plate, Flywheel Fan	1
15	1017463	Cap Asm Plug	1
16	1017468	Clamp	1
17	1017490	Washer, Flat	1
18	101881101	Spark Plug, OHV (Autolite)	1
19	101909201	Coil, Ignition	1
20	101909301	Lead Wire Assy	1
21	101909401	Limiter, RPM	1
22	N/A	Clamp, Steel	1
23	101916201	Flywheel	1
24	101916301	Fan (cw)	1
25	N/A	Nut, Hex, 18 mm Fine	1
26	AM10724	Spark Plug, OHV (NGK)	1



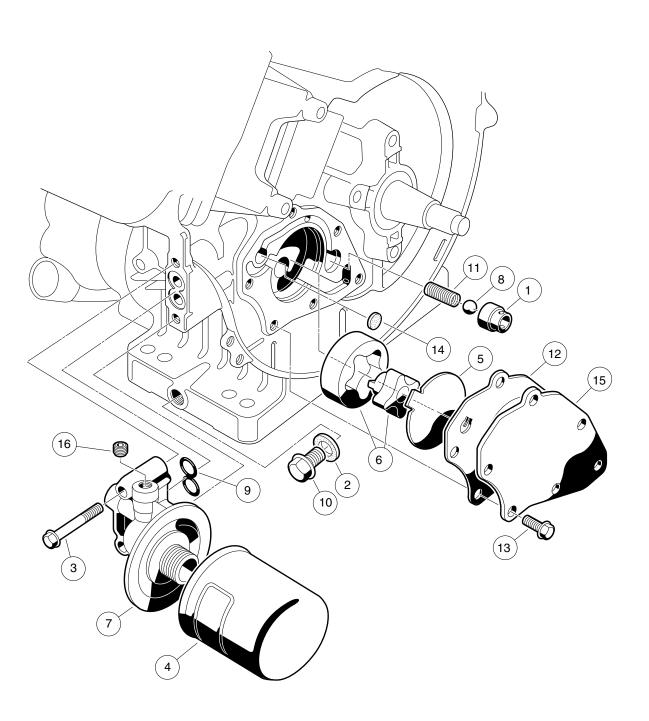









FE350 ENGINE - OIL CIRCULATION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016429	Seat, Value Oil Press Relief	1
2	1016432	Gasket, Drain Plug	1
3	1016457	Bolt, Flange Head	2
4	1016467	Filter, Oil	1
5	1016473	Plate, Oil Pump	1
6	101648203	Oil Pump And Rotor	1
7	1016502	Bracket, Oil Filter Mount	1
8	1016537	Ball, Steel, Press, Relief	1
9	1016570	O-Ring	1
10	1016576	Plug, Drain	1
11	1016581	Spring	1
12	1017442	Gasket	1
13	1017456	Bolt, Flanged	6
14	1017458	Filter	1
15	1017460	Cover, Pump	1
16	1017507	Plug	2



 

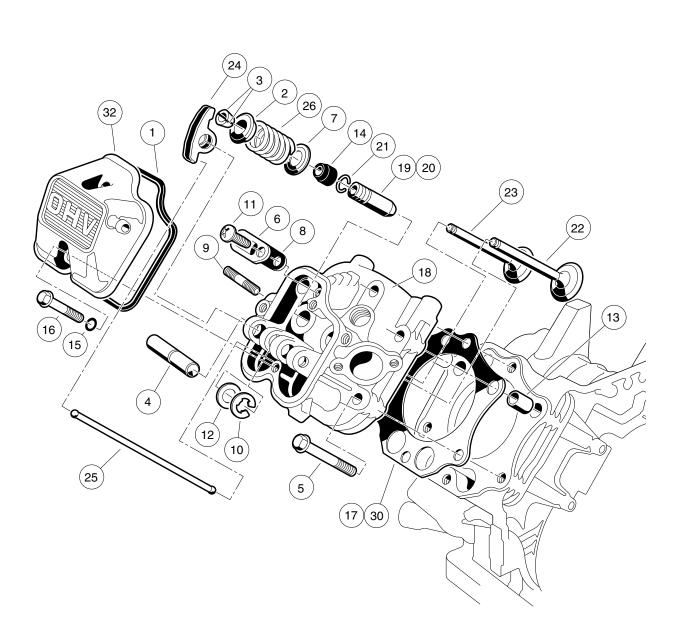








AS11 FE350 ENGINE – CYLINDER HEAD

1016436 1016449 1016450 1016452 1016458 1016474 1016479 1016483 1016489 1016517 1016544 1016549 1016563	1 2 3 4 Gasket, Rocker Case	2 4 1 6 1 2 1 2 1 1
1016449 1016450 1016452 1016458 1016474 1016479 1016483 1016489 1016517 1016544 1016549	Retainer, Valve Spring Collet Shaft, Rocker Bolt, Flange Head, M8 x 1.25 x 45 mm Plate Seat, Spring Valve Stud, Two-Ended, M8-1.25 Circlip, Type-E Screw Washer, 12.1x19x1.8	2 4 1 6 1 2 1 2 1 1
1016450 1016452 1016458 1016474 1016479 1016483 1016489 1016517 1016544 1016549	Collet	4 1 6 1 2 1 2 1 1 1
1016452 1016458 1016474 1016479 1016483 1016489 1016517 1016544 1016549	Shaft, Rocker	1 6 1 2 1 1 1
1016458 1016474 1016479 1016483 1016489 1016517 1016544 1016549	Bolt, Flange Head, M8 x 1.25 x 45 mm Plate	6 1 2 1 2 1 1
1016474 1016479 1016483 1016489 1016517 1016544 1016549	Plate	1 1 1 1 1
1016479 1016483 1016489 1016517 1016544 1016549 1016563	Seat, Spring	2 1 2 1 1
1016483 1016489 1016517 1016544 1016549	Valve	1 2 1
1016489 1016517 1016544 1016549 1016563	Stud, Two-Ended, M8-1.25 Circlip, Type-E Screw Washer, 12.1x19x1.8	2 1
1016517 1016544 1016549 1016563	Circlip, Type-E	1 1
1016544 1016549 1016563	ScrewWasher, 12.1x19x1.8	1
1016549 1016563	Washer, 12.1x19x1.8	
1016563		1
	Pin	1
1016566		
	Seal, Oil	2
1016569	O-Ring	
1016583	Bolt, 6x35	2
1017434	Gasket, Head	
1017435	• •	
1016518		
1016519	Guide, Valve	1
1016560	Snap Ring	
1017444	Valve, Intake	1
1017445	Valve, Exhaust	1
1017446	Arm, Rocker	2
1017454	Rod, Push	
1017473		
2304801		
1016440	-	
1016904		
1017434	Gasket, Head	
	Gasket, Crankcase Cover	
2753401	Case, Rocker	1
	Note: Item 28 is not a component of the FE350 engine.	
	017434 017435 016518 016519 016560 017444 017445 017446 017454 017473 2304801 016440 016904 017434 017434	017434 Gasket, Head



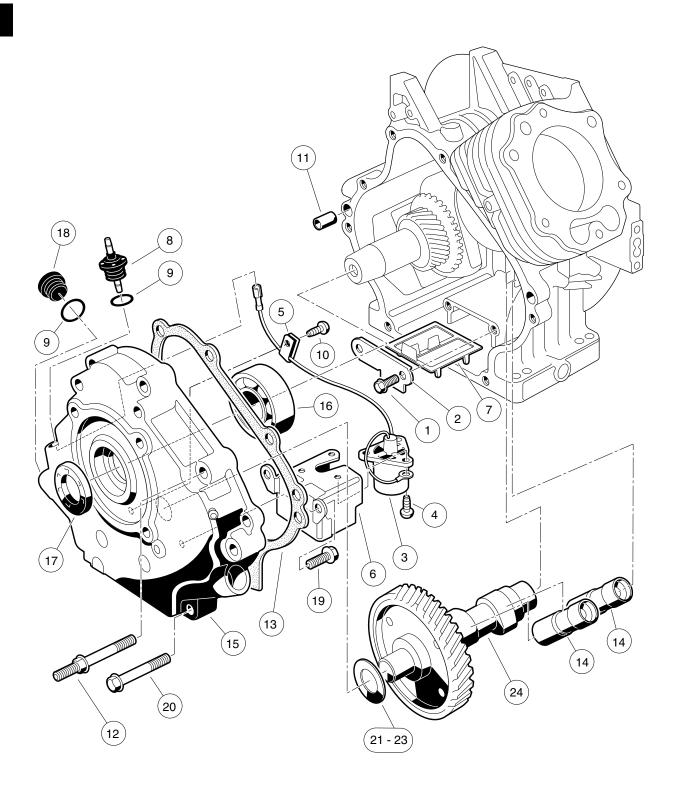











CRANKCASE, CAMSHAFT, AND OIL SENSOR

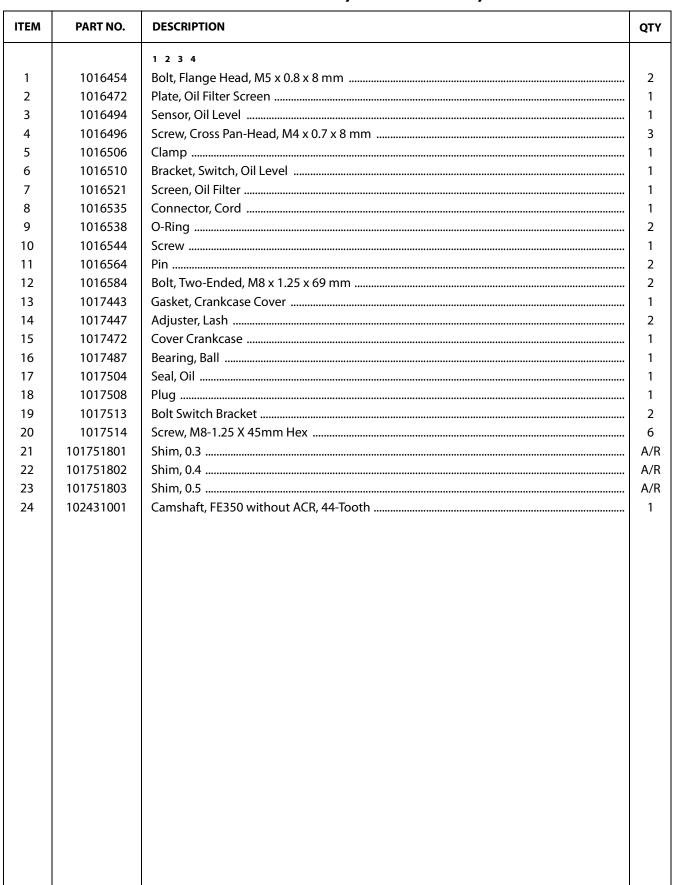



DID YOU

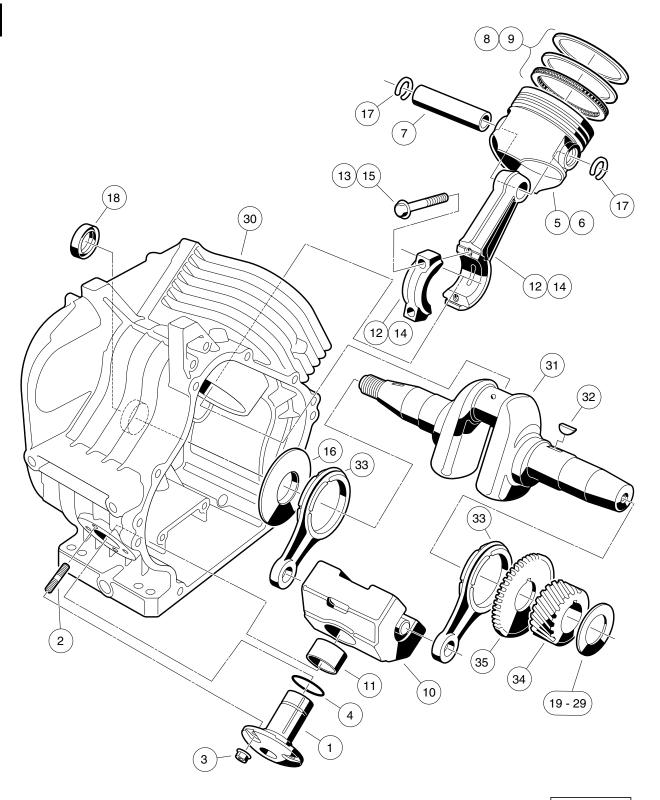

000206-001








AS11 FE350 ENGINE – CRANKCASE AND CRANKSHAFT

	PART NO.	DESCRIPTION
		1 2 3 4
1	1016470	Shaft, Guide, Counterbalance
2	1016541	Stud, 6x14
3	1016547	Nut, M6 Flange
4	1016571	O-Ring
5	101744901	Piston, Standard
6	101744902	Piston, 0.50 mm Oversize
7	1017450	Pin, Piston
8	101745101	Ring Set, Standard Piston
9	101745102	Ring Set, Piston, 0.50 mm Oversize
10	1017453	Fe400 Counterbalance Weight (includes item 11)
11	1017510	Bearing, Plain
12	101745701	Asm, Con. Rod Std (includes item 13)
13	1017512	Bolt
14	101745702	Rod Assembly Connnecting Rod 0.5mm (includes item 15)
15	1017512	Bolt
16	1017501	Spacer
17	1017502	Snap Ring
18	1017503	Seal, Oil
19	101773301	Shim, Crankshaft, 1.18mm
20	101773302	Shim, Crankshaft, 1.25mm
21	101773303	Shim, Crankshaft, 1.32mm
22	101773304	Shim, Crankshaft, 1.39mm
23	101773305	Shim, Crankshaft, 1.46mm
24	101773306	Shim, Crankshaft, 1.53mm
25	101773307	Shim, Crankshaft, 1.60mm
26	101773308	Shim, Crankshaft, 1.67mm
27	101773309	Shim, Crankshaft, 1.74mm
28	101773310	Shim, Crankshaft, 1.11mm
29	101773311	Shim, Crankshaft, 1.81mm
30	101916001	Crankcase Complete, FE350 (cw)
31	102430901	Crankshaft, FE350 Left-Hand, 22-Tooth (includes items 32 through 35)
32	1016562	Key
33	1017471	Rod
34	N/A	Gear, Helical
	N/A	Gear, Spur





8

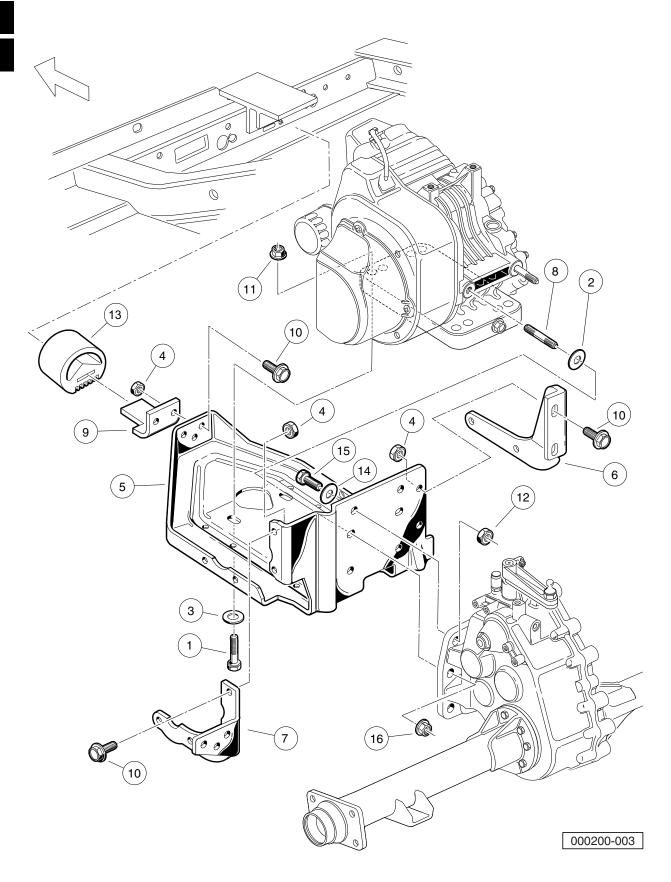





FE350 ENGINE MOUNTING

			I LOOU LINGUINE MICOINI	
	ITEM	PART NO.	DESCRIPTION	QTY
j			1 2 3 4	
	1	1010577	Bolt, Hex-Head, 5/16-18 X 1.50	4
	2	1011697	Washer, 5/16 Flat	2
	3	1012571	Washer, 5/16 Extra Thick Flat	4
	4	1013924	Nut, 5/16-24 Hex Head Cone	10
	5	101827101	Plate, Engine Mounting	1
	6	101832601	Stiffener (PTO Side)	1
	7	101832701	Stiffener (Flywheel Side)	1
	8	101833101	Stud, M8-1.25 X 50 mm Two-Ended	2
	9	101834601	Snubber Bracket	1
	10	101884801	Screw, 5/16-24 X 0.875 Grade-8	10
	11	101963401	Locknut, 5/16-18 Hex Flange	4
	12	102065901	Locknut, 3/8-16 Flanged Dimple	4
	13	102540301	Inner Frame Snubber	1
	14	334	Washer, 3/8 Type A Flat	4
	15	705	Screw, Cap-hex Hd 3/8-16x1.25	4
	16	96704416	Nut Flg, M8 X 1.25 Serrated	2







8








FUEL, INTAKE, AND GOVERNOR SYSTEMS

9





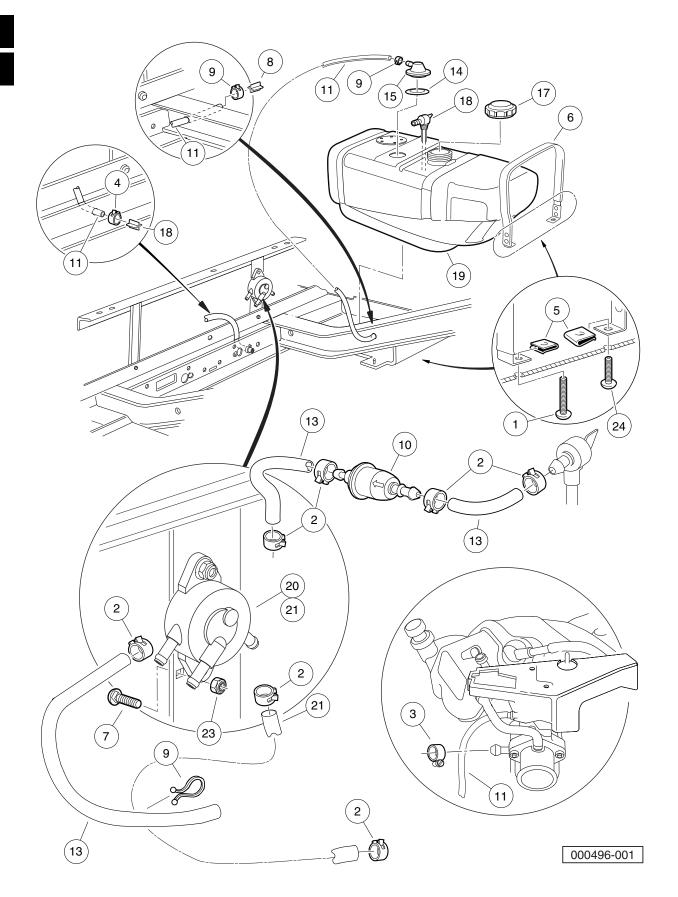






FUEL SYSTEM

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011988	Screw, 1/4-20 X 2.00 Phillips Truss-Head	1
2	1012649	Clamp, 0.460 Red Hose	7
3	1013687	Clamp, 3/8" Hose (screw type)	1
4	1013746	Clamp, 0.301 ID Hose	2
5	1014116	Nut, 1/4-20 Speed	2
6	1014928	Fuel Strap Assembly Rear	1
7	1017203	Carriage Bolt	2
8	101824401	Vent Barb	1
9	101987701	Clamp, Plastic Tie	1
10	102003201	Filter, Fuel, 30 Micron	1
11	102865101	Fuel Line	A/R
12	103651902	Asm, Tank, Ds Utl Wo/su† Nano (includes items 13 through 19)	1
13	1015137	Fuel Line (available by the foot)	A/R
14	1015139	Insulation Grommet	1
15	1015143	Vent, Fuel Tank	1
16	102406701	Bushing, Line, Return	1
17	103372101	Cap, Fuel Tank, Gas, Ratchet	1
18	103372302	Valve, Fuel, 288mm	1
19	103776902	Tank, Fuel, Top, Wo/su Nano	1
20	N/A	Kit, Fuel Pump Retrofit (includes items 21 and 22)	1
21	103010101	Pump, Fuel, Impulse, Fh	1
22	103781201	Instr, Fuel Pump Retrofit	1
23	8233	Locknut, 1/4-20 Nylon Insert	2
24	8248	Screw, 1/4-20 X 0.75 Truss-Head Machine	1
	02.10	Select, 1, 1, 20 % 61, 5 11 days 11 da	
		Note: Total fuel line length: 47 inches (119.4 cm)	
	•	1	1

9

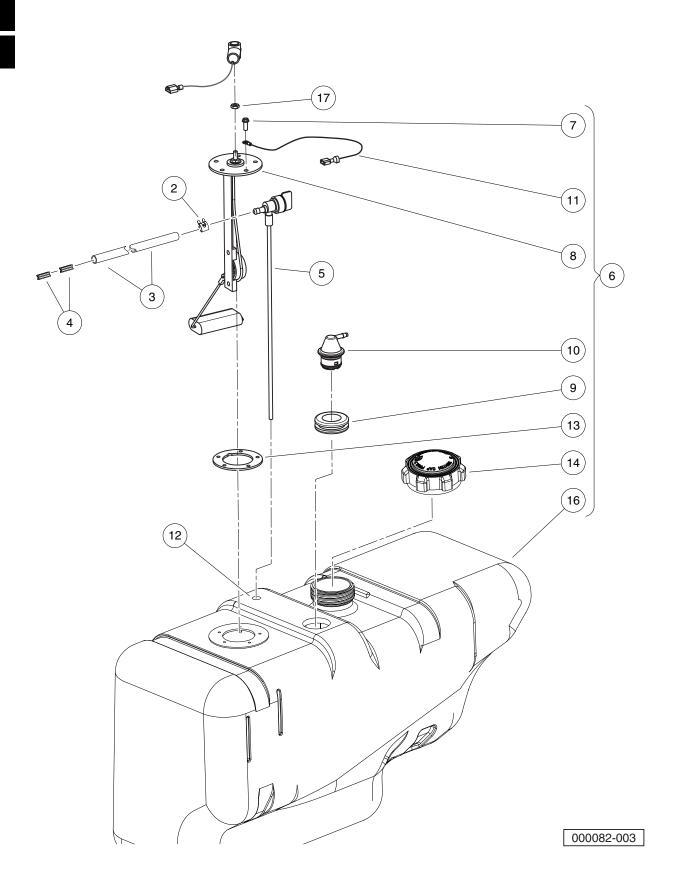






FUEL TANK WITH FUEL LEVEL SENDING UNIT

	PART NO.	DESCRIPTION
		1 2 3 4
1	1016004	Tank Kit w/Sending Unit (includes items 2 through 6)
2	1013746	Clamp, 0.301 ID Hose
3	1015137	Fuel Line (available by the foot)
ļ	101824401	Vent Barb
5	101896901	Fuel Pickup w/Shut-Off Valve
5	103651901	Asm, Tank, Ds Utl W/su† Nano (includes items 7 through 16)
7	1013461	Screw, #10-16 Hex-Head Hi-Lo
8	1013462	Sending Unit, Fuel Level *
9	1015139	Insulation Grommet
0	1015143	Vent, Fuel Tank
1	N/A	Wire Assembly #16 Black
2	102406701	Bushing, Line, Return
3	102522001	Gasket, Rubber
4	103372101	Cap, Fuel Tank, Gas, Ratchet
5	103372302	Valve, Fuel, 288mm
16	103776901	Tank, Fuel, Top, W/su Nano
17	8797	Nut, #10-32 Brass Hex



DID YOU

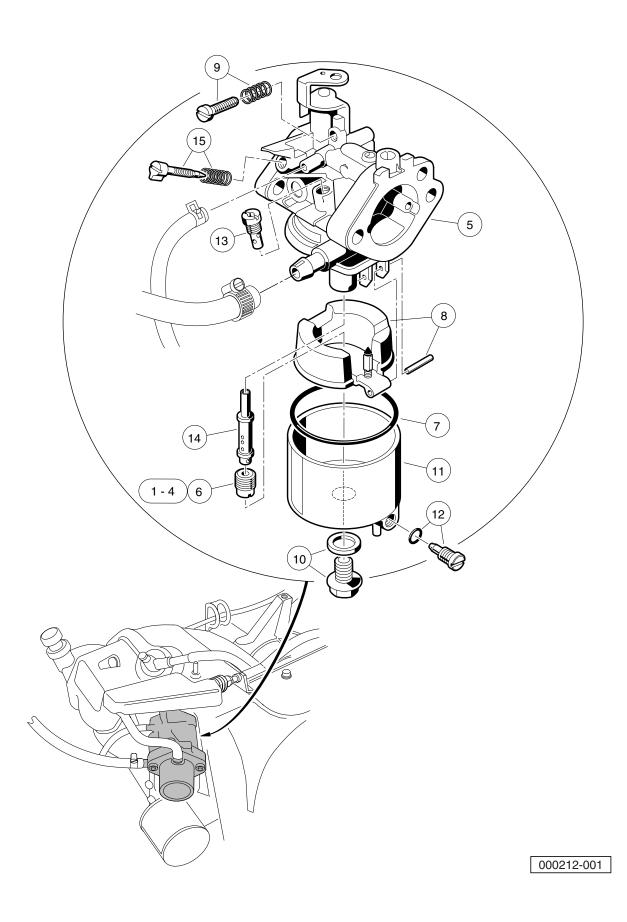








CARBURETOR ASSEMBLY – FE350

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101642575	Jet, Altitude, # 75	A/R
2	101642578	Jet, Altitude, # 78	A/R
3	101642580	Jet, Altitude, # 80	A/R
4	101642582	Jet, Altitude, # 82	A/R
5	101905901	Carburetor, FE350D (includes items 6 through 15)	1
6	101642585	Jet, Altitude, # 85	1
7	1016437	Gasket, Carburetor Bowl OHV	1
8	1016486	Float Assembly	1
9	1016501	Screw Assembly	1
10	1016585	Bolt	1
11	1017461	Chamber Assembly, Float (includes item 12)	1
12	1016499	Screw Assembly	1
13	101973101	Jet, #40 Pilot	1
14	101973101	Nozzle, Main	1
15	N/A	Assembly, Pilot Air Screw	1
		101642580 for 5,000 - 8,000 feet; 101642578 for 8,000 - 10,000 feet; 101642575 for 10,000 feet and higher.	

DID YOU

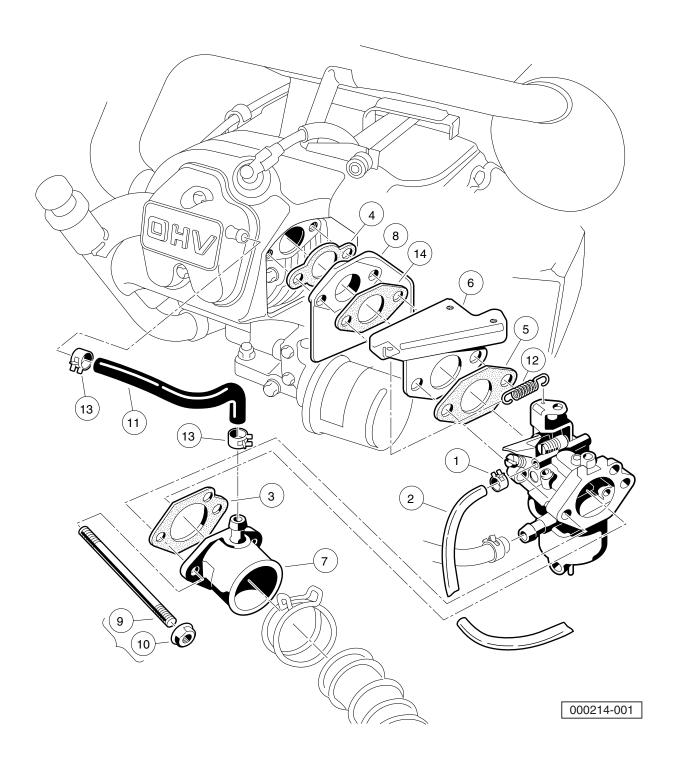








CARBURETOR INSTALLATION – FE350

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1013746	Clamp, 0.301 ID Hose	1
2	1015137	Fuel Line (available by the foot)	-
3	1016438	Gasket, Carb To Intake Manifold	
4	1016440	Gasket, Engine to Insulator	1
5	1016441	Gasket, Sprg Brkt To Carb OHV	
6	1016444	Bracket, Throttle Spring Return	1
7	1016480	Pipe, Intake Manifold	1
8	101648102	Insulator, Carburetor	1
9	101649002	Stud, M6-1.00 Two-Ended	2
10	1016547	Nut, M6 Flange	2
11	1016572	Tube, Crankcase Vent	
12	1016582	Spring, Throttle Return	1
13	1010362	Clamp	2
14	1017400	Gasket, Insulator To Bracket	1



DID YOU

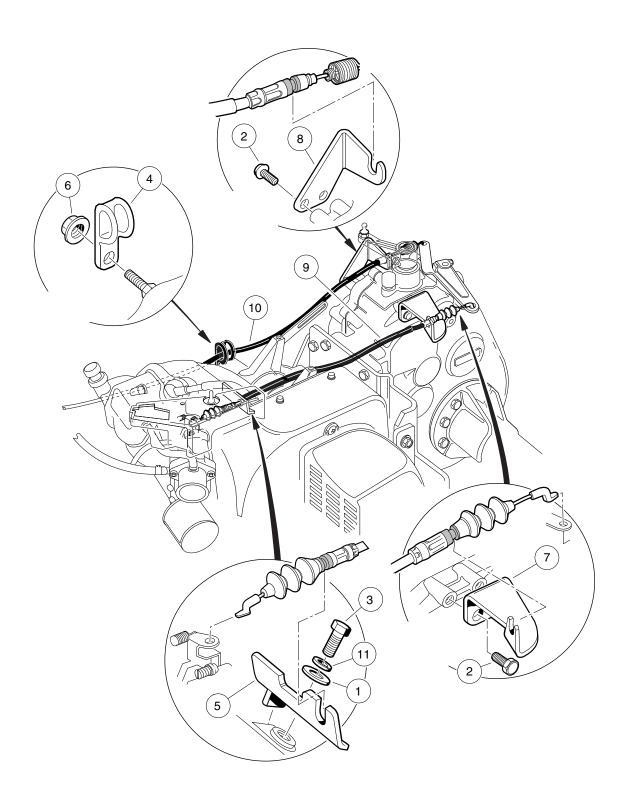

000215-001








GOVERNOR AND ACCELERATOR CABLES

		GOVERNON AND ACCELENATION CAD	LLS
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011697	Washer, 5/16 Flat	1
2	1012285	Screw, 1/4 X 0.625 Hex-Head	4
3	1012830	Screw, M8-125 X 22 Hex-Head	1
4	1013700	Clamp	2
5	101584502	Bracket, Governor Cable Snap-In	1
6	1016546	Nut	2
7	101832202	Bracket, Rear Governor Cable Snap-In	1
8	101832302	Bracket, Rear Accelerator Cable Snap-In	1
9	102336001	Cable, Governor, Snap-In	1
10	102336101	Cable, Accelerator, Snap-In	1
11	7174	Lockwasher, 5/16 Split	1



9

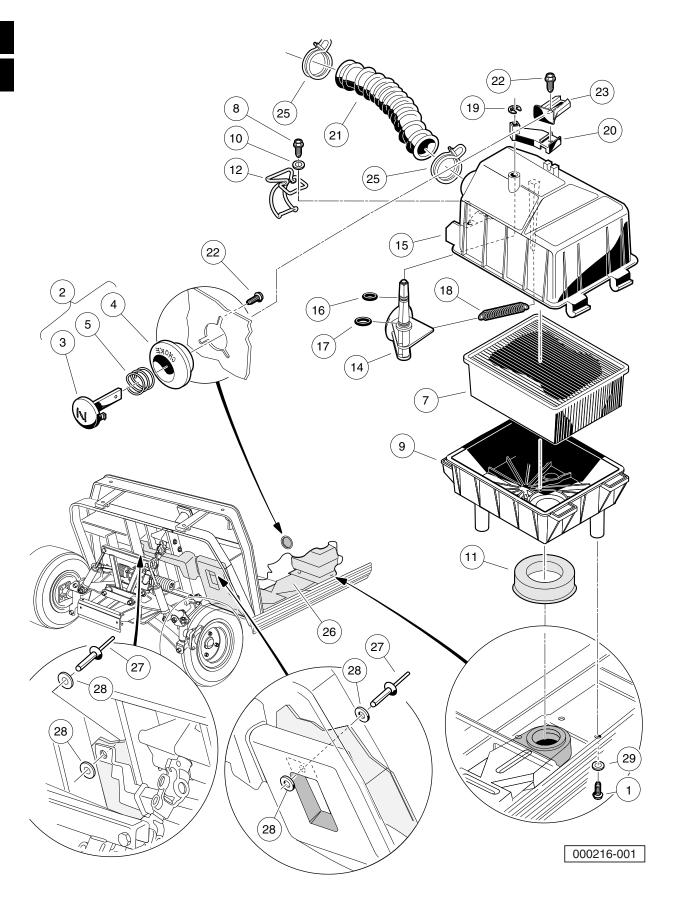








INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1015752	Screw, #12-16 X 0.625 Hi-Lo	3
2	101805701	Button Assembly, Choke (includes items 3 through 5)	1
3	101811401	Lever, Choke	1
4	101811501	Guide, Choke Lever	1
5	101856201	Compression Spring	1
6	101821501	Assembly, Air Box (includes items 7 through 13)	1
7	1015426	Filter, Air	1
8	101804301	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
9	101811901	Bottom, Air Box	1
10	101881701	Washer, #8 Stainless-Steel Flat	2
11	101921501	Seal, Intake	1
12	101925701	Latch, Wireform	2
13	101972801	Top Assy, Air Box (includes items 14 through 20)	1
14	N/A	Valve, Choke	1
15	N/A	Top, Air Box	1
16	N/A	O-Ring, 5/16	1
17	N/A	O-Ring, 3/8	1
18	101812301	Spring, Extension Return	1
19	101813001	Retaining Ring 0.25, Shaft	
20	101917601	Lever, Choke	
21	101837101	Hose, Air Intake	1
22	101850301	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	
23	101917701	Choke Positioner	
24	N/A	Tape Kit, Air Duct Repair	A/R
25	101971301	Clamp, 1.58" ID Hose	2
26	103520301	Duct, Air Intake, Ds	1
27	1606	Rivet, 3/16 X .500 Alum Pop	2
28	183	Washer, #10 Type A Flat	
29	332	Washer, 1/4 Type A Narrow Flat	3
		Note: Item 25 is not illustrated.	

GET STARTED

DID YOU

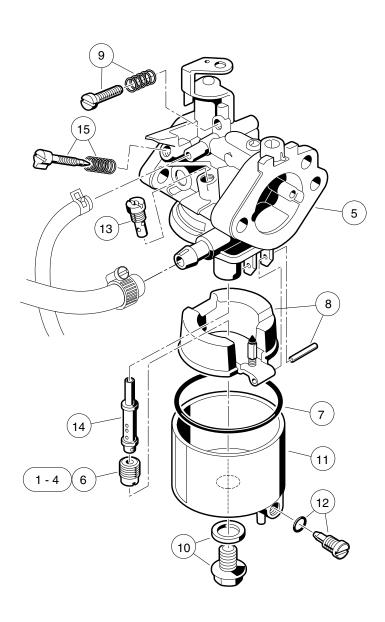

000212-002








CARBURETOR ASSEMBLY – FE350 S26

TITEM
1 101642575 Jet, Altitude, # 75 A/ 2 101642578 Jet, Altitude, # 78 A/ 3 101642580 Jet, Altitude, # 80 A/ 4 101642582 Jet, Altitude, # 82 A/ 5 103616901 Carburetor Fe350 Precedent 1 Note: 101642582 for 0 - 3,200 feet; 101642580 for 3,200 - 6,500 feet;
2 101642578 Jet, Altitude, # 78
3
4 101642582 Jet, Altitude, # 82
5 103616901 Carburetor Fe350 Precedent
Note: 101642582 for 0 - 3,200 feet; 101642580 for 3,200 - 6,500 feet;

DID YOU

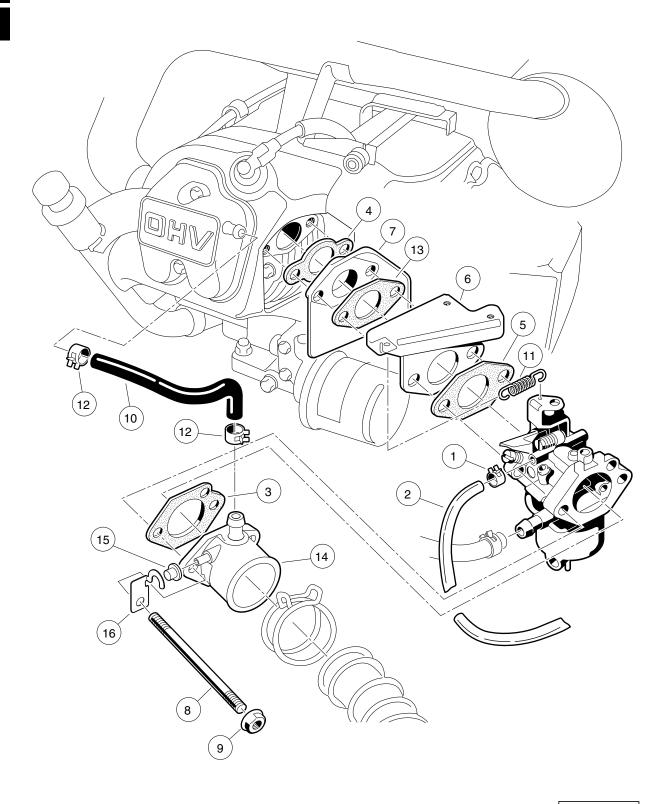

000214-002







CARBURETOR INSTALLATION – FE350 S27

		CANDONE FOR INSTALLATION - 1 L330	JLI
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1013746	Clamp, 0.301 ID Hose	1
2	1015137	Fuel Line (available by the foot)	A/R
3	1016438	Gasket, Carb To Intake Manifold	1
4	1016440	Gasket, Engine to Insulator	1
5	1016441	Gasket, Sprg Brkt To Carb OHV	1
6	1016444	Bracket, Throttle Spring Return	1
7	101648102	Insulator, Carburetor	1
8	101649002	Stud, M6-1.00 Two-Ended	2
9	1016547	Nut, M6 Flange	2
10	1016572	Tube, Crankcase Vent	1
11	1016582	Spring, Throttle Return	1
12	1017466	Clamp	2
13	101973401	Gasket, Insulator To Bracket	1
14	103507101	Carburetor Adapter w/ Tap	1
15	103507201	Plug, Intake Manifold, Carb	1
16	103507301	Bracket, Intake Manifold, Carb	1







9








EXHAUST SYSTEM

10



DID YOU

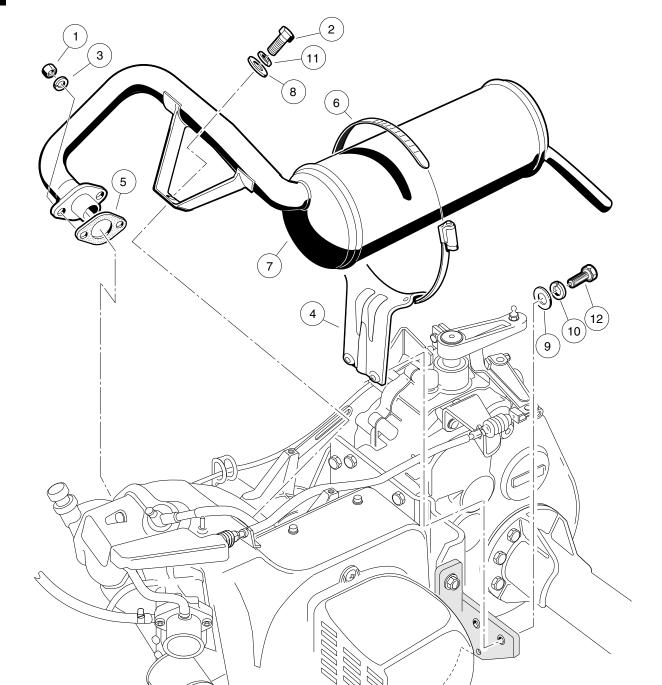

000209-001







EXHAUST SYSTEM - FE350 ENGINE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012528	Nut, M8-1.25 Hex	2
2	1012830	Screw, M8-125 X 22 Hex-Head	1
3	1013734	Lockwasher, 8mm Split	2
4	1015814	Bracket, Muffler Mounting	1
5	1016904	Gasket, Exhaust	1
6	1017689	Clamp, 5" Muffler Hose	1
7	101859401	Exhaust System, FE350	1
8	1241	Washer, 5/16 Type A Flat	1
9	332	Washer, 1/4 Type A Narrow Flat	2
10	451	Lockwasher, 1/4 Split	
11	7174	Lockwasher, 5/16 Split	
12	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2



10






TORQUE CONVERTER

11



11

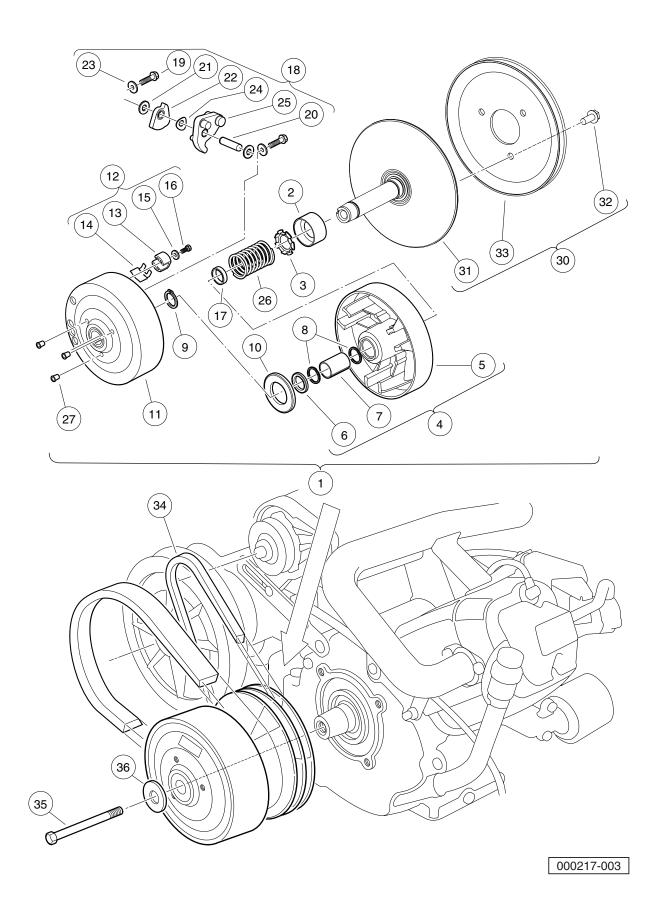








DRIVE CLUTCH

ITEM	PART NO.	DESCRIPTION	•
		1 2 3 4	
1	101833906	Drive Clutch Assy. FE 350/272 (includes items 2 through 28)	
2	1014049	Bearing, Idler	
3	1014050	Retainer, Spring	
4	1014052	Movable-Face Assembly (includes items 5 through 7)	
5	N/A	Drive Clutch Movable Face	
6	1014055	Retainer	
7	N/A	Bushing, Split, Drive Clutch	
8	1014056	Ring, Spiral Backup	
9	1014057	Ring, 0.810" Internal Retaining	
10	1014058	Thrust Washer	
11	1014059	Drive Hub Assy, Drive Clutch	
12	1014453	Kit, Drive Clutch Button (includes items 13 through 16)	
13	1014062	Driver, Drive Clutch	
14	1014287	Spring, Drive Button	
15	183	Washer, #10 Type A Flat	
16	8450	Screw, #10-24 X 0.50 Hex-Head	
17	1016289	Spacer, Fixed Face Shaft	
18	1016801	Kit, Drive Clutch Weight (includes items 19 through 25)	
19	1014063	Screw, 1/4-20 X 1.00 Hex Head	
20	N/A	Pin, 0.3752 X 1.50 Dowel	
21	1014065	Washer, 0.38" ID Delrin Flat	
22	N/A	Clutch Weight, Secondary	
23	N/A	Washer	
24	1016201	Washer, Wave	
25	N/A	Weight, Primary	
26	1016901	Spring, Drive Clutch	
27	N/A	Cap Plug	
28	101929802	Kit, Fxd Face Dr Asm Fe290/350 (includes items 29 and 30)	
29	N/A	Desiccant Bag (Not Shown)	
30	101929801	Assembly, Fixed-Face Drive (includes items 31 through 33)	
31	N/A	Fixed Face Assembly, Drive Clutch	
32	1014288	Screw, 5/16-18 X 0.75 Thread-Forming	
33	N/A	Pulley, Clutch	
34	101916701	V-Belt	
35	103345701	Screw 3/8-24x5.5 Hex Loc Ptch	
36	808	Washer, 3/8 Type B Flat	
30	000	vvasiici, 5/0 Type bi iat	
		Note: Item 29 not shown.	



11

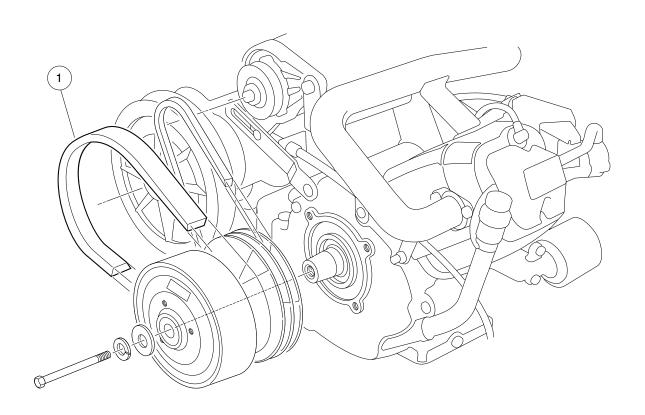

000218-001








DRIVE BELT – FE350

		DINIVE DELIT TE		
ITEM	PART NO.	DESCRIPTION	QTY	1
1	1017188	1 2 3 4 Belt, Drive (FE350)	1	(

11 G

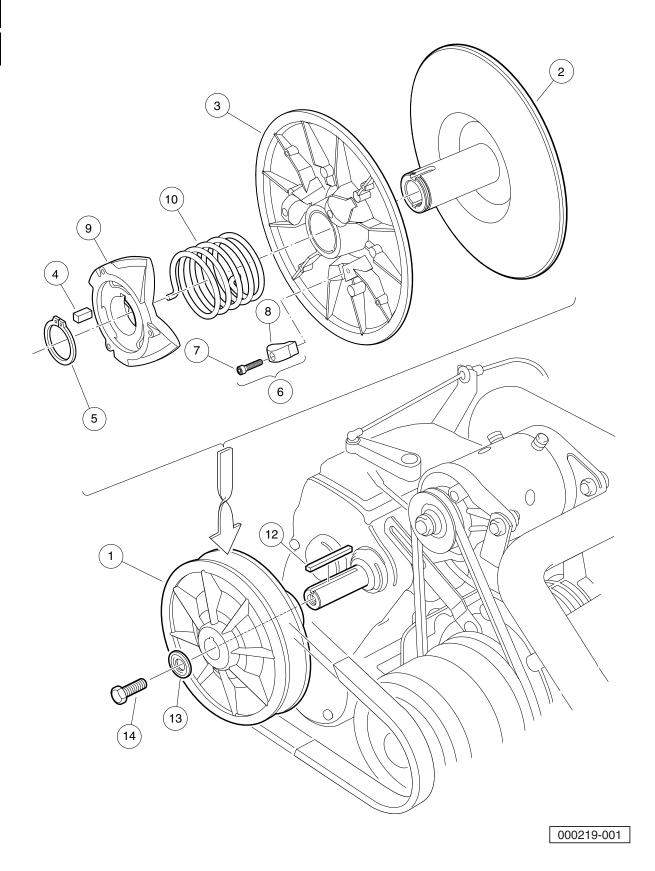

SACARTPROS





DRIVEN CLUTCH

			DRIVEN CLUIC
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101834001	Assembly, Driven Clutch (includes items 2 through 10)	1
2	1014070	Fixed Face Assy, Driven Clutch	1
3	1014072	Movable-Face Assembly with Bushing	1
4	1014078	Key, Driven Clutch	1
5	1014080	Ring, Retaining	
6	1014454	Kit, Driven Clutch Button (includes items 7 and 8)	1
7	1012836	Screw, #8-32 X 3/4 Socket-Head Cap	
8	N/A	Button, Drive	
9	1017686	Cam, Driven Clutch	1
10	101836201	Spring, Driven Clutch, Reversed	1
11	AM10419	Kit, Clutch Repair (includes items 12 through 14)	
12	101833401	Key, 3/16 Sq X 1.50"	
13	102155801	Washer, Driven Clutch	
14	102242101	Screw, 5/16-18 X 3/4 Hex-Head with Patch	



11





GET STARTED

https://CartPros.com/f.html


our search box and it will find the part you are looking for. TRANSAXLE AND FNR SHIFTER — GASOLINE VEHICLE

12

G





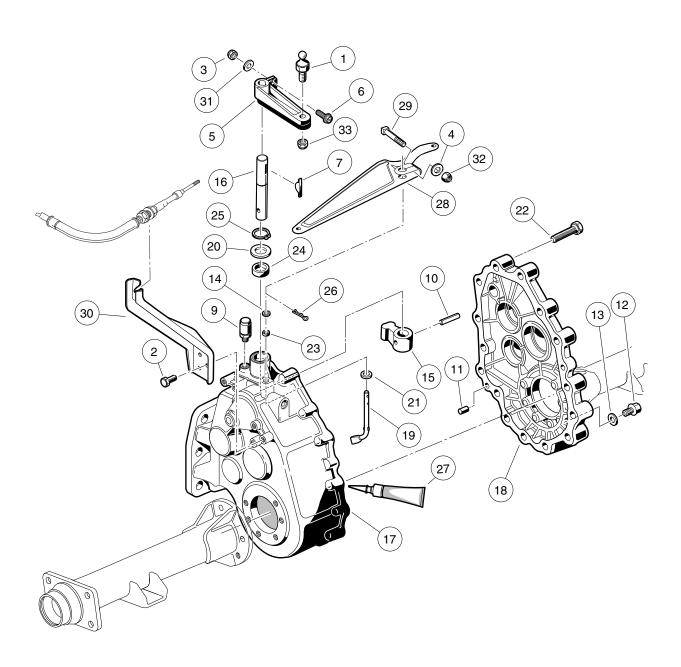








TAJOLINE VEHICLES, **GEAR CASES AND BRACKETS**

ITEM PART NO. **DESCRIPTION** QTY 1 2 3 4 Stud. 1/4-28 X 0.560 Ball Screw, 1/4 X 0.625 Hex-Head



DID YOU



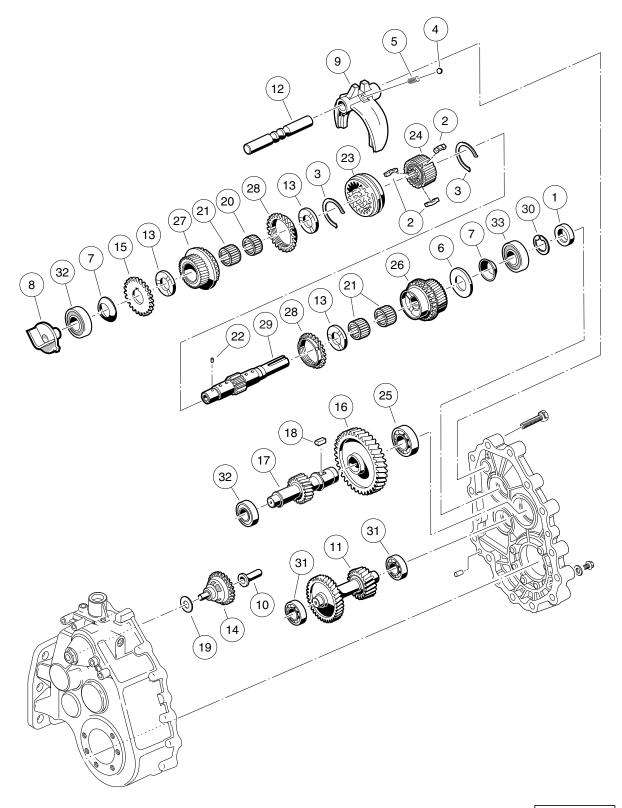










TRANSMISSION AND GEAR REDUCTION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012714	Oil Seal	1
2	1012740	Synchro Insert	3
3	1012741	Synchro Spring	2
4	1012747	Shifter Ball	1
5	1012748	Shifter Spring	1
6	1016337	Washer, Thrust	1
7	1016338	Washer, Spring	2
8	101889401	Guide	1
9	101890001	Fork - Shift	1
10	101891601	Sleeve, Governor	1
11	101891901	Gear, Cluster	1
12	101892001	Rod, Shift	1
13	101892201	Plate, Thrust	3
14	101892301	Governor Assembly	1
15	101892401	Gear, Spur	1
16	101892501	Gear, Helical (61 Tooth)	1
17	101892601	Gear, Helical (17 Tooth)	1
18	101893201	Key Sunk	1
19	101893901	Washer	1
20	101927501	Needle Bearing	1
21	101927601	Needle Bearing	3
22	101927701	Pin, .116" Dia X 0.264 Dowel	1
23	101927901	Sleeve, Synchro	1
24	101928001	Hub, Synchro Clutch	1
25	101928101	Bearing, Ball	1
26	101980801	Gear Assembly, 16-Degree Synchro (25 Tooth)	1
27	101980901	Gear Assembly, 16-Degree Rear Synchro (28 Tooth)	1
28	101981001	Ring, 16-Degree Synchronizer	2
29	102453001	Shaft, Trans, with Circlip	1
30	102453101	Circlip	1
31	7335	Bearing	2
32	AM10080	Bearing, Ball, Sealed	2
33	AM10081	Bearing, Ball, Sealed	1
		Note: Items listed on this page are components of the unitized transaxle.	

DID YOU



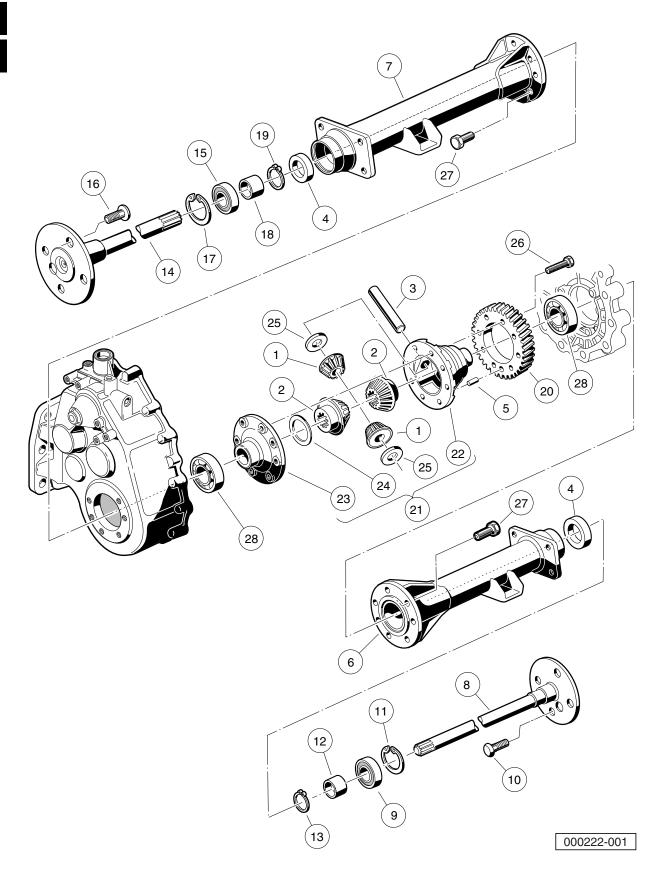






TRANSAXLE – GASOLINE VEHICLES, DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1013770	Differential Idler Gear	2
2	1013770	Gear, Differential	2
3	1013771	Pin, Differential	1
4	1013772	Axle Shaft Oil Seal	2
5	N/A	Dowel Pin	1
6	101890901	Pipe	1
7	101891001	Pipe	1
8	101891401	Axle Assembly, Passenger Side (includes items 9 through 13)	1
9	1011291	Outer Axle, Tube Bearing	1
10	1011291	Lug Stud	4
11	1013787	Circlip Type C	1
12	1013792	Bushing	1
13	1014207	Retaining Ring	1
14	1010072	Axle Assembly, Driver-Side (includes items 15 through 19)	1
15	101691301	Outer Axle, Tube Bearing	1
16	1011291		4
17	1013787	Lug Stud Circlip Type C	1
18	1013792		1
19	1014207	Bushing	1
	1016672	Retaining Ring	1
20		Gear, Helical	-
21	101910501	Kit, Differential Gear Case (includes items 22 through 25)	1
22	1013768	Differential Gear Case, Left-Hand	1
23	1013769	Differential Gear Case, Right-Hand	1
24	1013773	Plate, Thrust (Differential Gear)	1
25	1013774	Plate, Thrust (Idler Gear)	2
26	101928301	Screw, M8-1.25 X 35mm Hex Head	8
27	102031901	Bolt, M10 X 1.5 X 30mm	14
28	7330	Inner Axle Tube Bearing	2



DID YOU

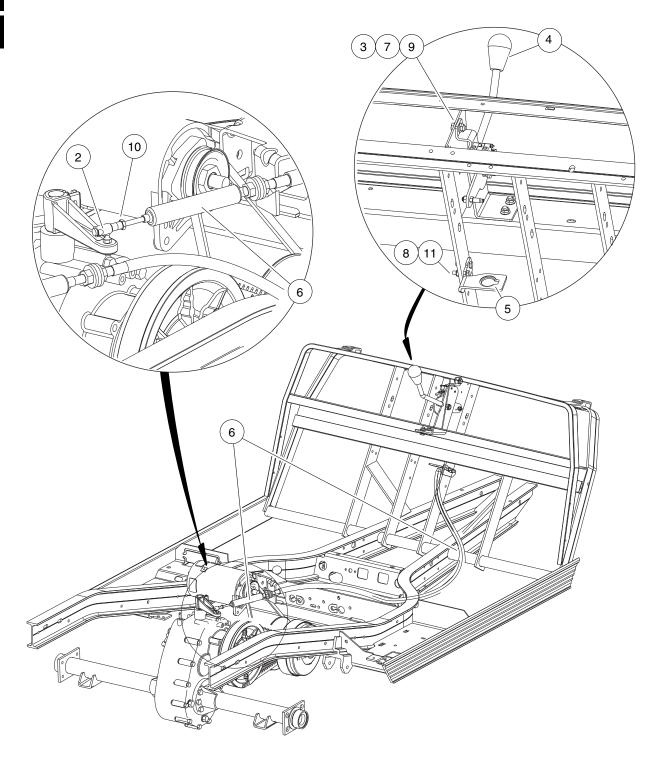








FORWARD/REVERSE SHIFTER CABLE

		TORWARD/NEVERSE SITE TER CA	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Installation, Shifter, FNR (includes items 2 through 11)	1
2	1012333	Joint, #10-32 Ball	1
3	101963401	Locknut, 5/16-18 Hex Flange	3
4	102376001	Knob, Fnr	1
5	103295101	Brkt, Spt, Cable End, Fnr	1
6	103295201	Cable, Trans, Ball End, 1550mm	1
7	1241	Washer, 5/16 Type A Flat	3
8	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	2
9	7173	Screw, 5/16-18 X 0.75 Hex-Head Cap	3
10	7893	Nut, #10-32 Hex	1
11	8233	Locknut, 1/4-20 Nylon Insert	2





12

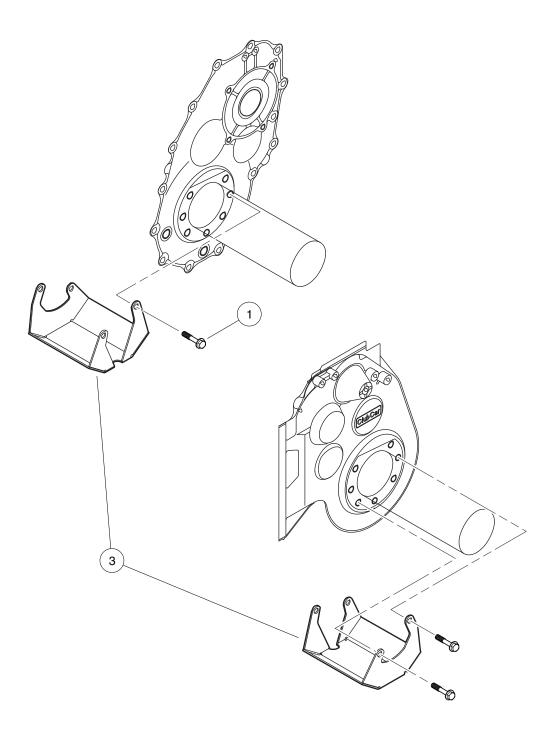







DIFFERENTIAL GUARD

1 2			
		1 2 3 4	
	101926901	Screw, M8-1.25 X 40mm Hex-Head	4
_	101932902	Diff Guard Unitized Kit (Includes Instructions) (includes item 3)	
3	N/A	Guard, Unitized Differential	1
	·		





12

G





GET STARTED

https://CartPros.com/f.html

our search box and it will find the part you are looking for. ELECTRICAL SYSTEM — ELECTRIC VEHICLES

13


5






13

Ε

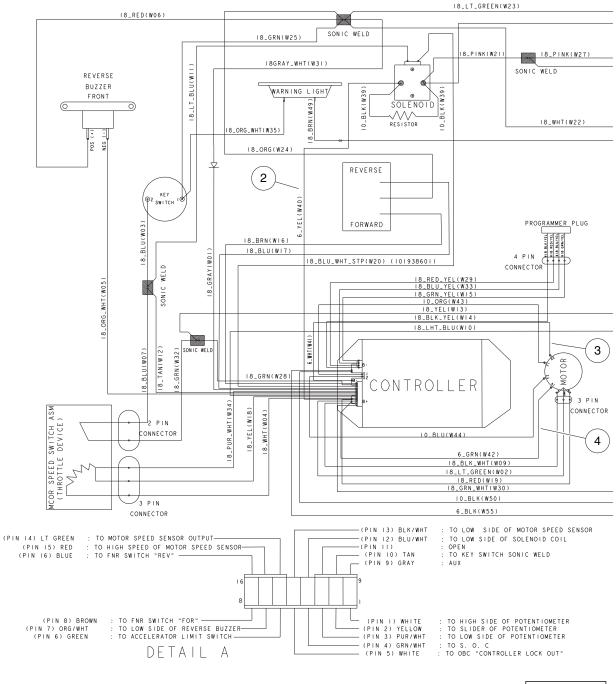



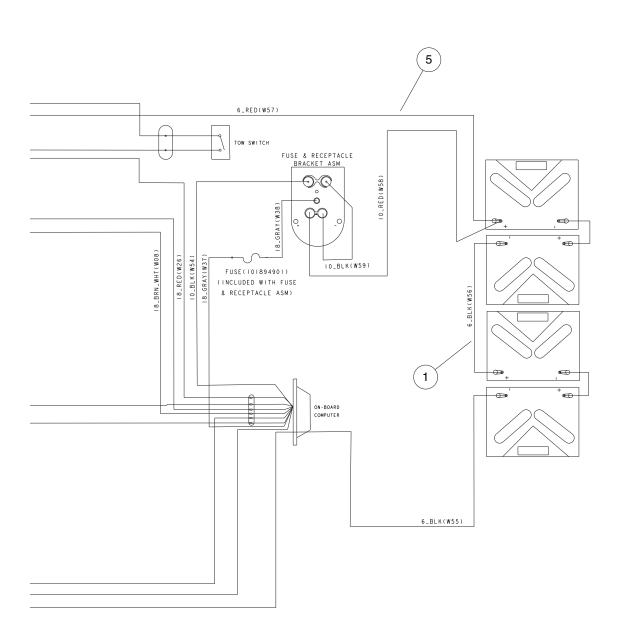





13

See previous two pages for illustration.








WIRING - ELECTRIC VEHICLE

		WINING - ELECTRIC VEH	ICLL	
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	101795701	Asm, Wire, #6blk 13in	. 5	
2	101903001	Wire Assembly #6 Yellow		
3	101968701	Wire Assy, #6 White		
4	101978001	Wire Assy, #6 Green		
5	102199601	Wire Assy, #6 Red		
6	103221801	Asm, Wire Harness, Electric		
	I		1	Ī

DID YOU

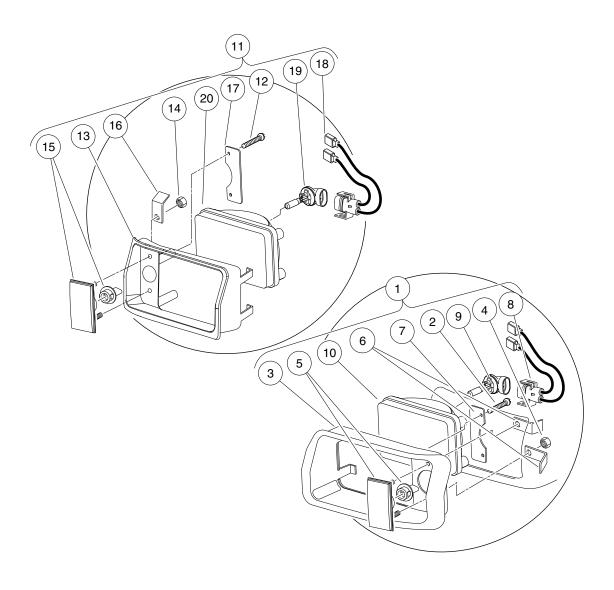








HEADLIGHTS

1	2 3 4	1013461 1016880 1017	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10) Screw, #10-16 Hex-Head Hi-Lo	
2 1013461 Screw, #10-16 Hex-Head Hi-Lo 2 3 1016880 Headlight Bezel, Left 1 4 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 5 1017062 Turn Signal Lens Assy 1 6 1017064 Mounting Bracket 2 7 1017065 Retainer, Headlight 1 8 101987901 Connector Harness Assembly, Headlight 1 9 101988101 Bulb, Headlight 1 10 101988201 Lens, Headlight 1 11 101988002 Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20) 1 12 1013461 Screw, #10-16 Hex-Head Hi-Lo 2 13 1016879 Headlight Bezel, Right 1 14 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 15 1017062 Turn Signal Lens Assy 1 16 1017064 Mounting Bracket 2 17 1017065 Retainer, Headlight 1 18 10198701 Connector Harness Assembly, Headlight 1	2 3 4	1013461 1016880 1017	Screw, #10-16 Hex-Head Hi-Lo	
3 1016880 Headlight Bezel, Left 1 4 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 5 1017062 Turn Signal Lens Assy 1 6 1017064 Mounting Bracket 2 7 1017065 Retainer, Headlight 1 8 101987901 Connector Harness Assembly, Headlight 1 9 101988101 Bulb, Headlight 1 10 101988201 Lens, Headlight 1 11 101988002 Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20) 1 12 1013461 Screw, #10-16 Hex-Head Hi-Lo 2 13 1016879 Headlight Bezel, Right 1 14 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 15 1017062 Turn Signal Lens Assy 1 16 1017064 Mounting Bracket 2 17 1017065 Retainer, Headlight 1 18 101987901 Connector Harness Assembly, Headlight 1 19 101988101 Bulb, Headlight 1	3 4	1016880 1017		
4 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 5 1017062 Turn Signal Lens Assy 1 6 1017064 Mounting Bracket 2 7 1017065 Retainer, Headlight 1 8 101987901 Connector Harness Assembly, Headlight 1 9 101988101 Bulb, Headlight 1 10 101988201 Lens, Headlight 1 11 101988002 Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20) 1 12 1013461 Screw, #10-16 Hex-Head Hi-Lo 2 13 1016879 Headlight Bezel, Right 1 14 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 15 1017062 Turn Signal Lens Assy 1 16 1017064 Mounting Bracket 2 17 1017065 Retainer, Headlight 1 18 101987901 Connector Harness Assembly, Headlight 1 19 101988101 Bulb, Headlight 1	4	1017		2
5 1017062 Turn Signal Lens Assy 1 6 1017064 Mounting Bracket 2 7 1017065 Retainer, Headlight 1 8 101987901 Connector Harness Assembly, Headlight 1 9 101988101 Bulb, Headlight 1 10 101988201 Lens, Headlight 1 11 101988002 Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20) 1 12 1013461 Screw, #10-16 Hex-Head Hi-Lo 2 13 1016879 Headlight Bezel, Right 1 14 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 15 1017062 Turn Signal Lens Assy 1 16 1017064 Mounting Bracket 2 17 1017065 Retainer, Headlight 1 18 101987901 Connector Harness Assembly, Headlight 1 19 101988101 Bulb, Headlight 1	-		Headlight Bezel, Left	1
6 1017064 Mounting Bracket 2 7 1017065 Retainer, Headlight 1 8 101987901 Connector Harness Assembly, Headlight 1 9 101988101 Bulb, Headlight 1 10 101988201 Lens, Headlight 1 11 101988002 Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20) 1 12 1013461 Screw, #10-16 Hex-Head Hi-Lo 2 13 1016879 Headlight Bezel, Right 1 14 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 15 1017062 Turn Signal Lens Assy 1 16 1017064 Mounting Bracket 2 17 1017065 Retainer, Headlight 1 18 101987901 Connector Harness Assembly, Headlight 1 19 101988101 Bulb, Headlight 1	5	1017062	Nut, #10-24 Stainless-Steel Hex Machine	2
7 1017065 Retainer, Headlight 1 8 101987901 Connector Harness Assembly, Headlight 1 9 101988101 Bulb, Headlight 1 10 101988201 Lens, Headlight 1 11 101988002 Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20) 1 12 1013461 Screw, #10-16 Hex-Head Hi-Lo 2 13 1016879 Headlight Bezel, Right 1 14 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 15 1017062 Turn Signal Lens Assy 1 16 1017064 Mounting Bracket 2 17 1017065 Retainer, Headlight 1 18 101987901 Connector Harness Assembly, Headlight 1 19 101988101 Bulb, Headlight 1		1017002	Turn Signal Lens Assy	1
8 101987901 Connector Harness Assembly, Headlight 1 9 101988101 Bulb, Headlight 1 10 101988201 Lens, Headlight 1 11 101988002 Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20) 1 12 1013461 Screw, #10-16 Hex-Head Hi-Lo 2 13 1016879 Headlight Bezel, Right 1 14 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 15 1017062 Turn Signal Lens Assy 1 16 1017064 Mounting Bracket 2 17 1017065 Retainer, Headlight 1 18 101987901 Connector Harness Assembly, Headlight 1 19 101988101 Bulb, Headlight 1	6	1017064	Mounting Bracket	2
9 101988101 Bulb, Headlight	7	1017065	Retainer, Headlight	1
10 101988201 Lens, Headlight	8	101987901	Connector Harness Assembly, Headlight	1
11 101988002 Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20) 1 12 1013461 Screw, #10-16 Hex-Head Hi-Lo 2 13 1016879 Headlight Bezel, Right 1 14 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 15 1017062 Turn Signal Lens Assy 1 16 1017064 Mounting Bracket 2 17 1017065 Retainer, Headlight 1 18 101987901 Connector Harness Assembly, Headlight 1 19 101988101 Bulb, Headlight 1	9	101988101	Bulb, Headlight	1
12 1013461 Screw, #10-16 Hex-Head Hi-Lo 2 13 1016879 Headlight Bezel, Right 1 14 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 15 1017062 Turn Signal Lens Assy 1 16 1017064 Mounting Bracket 2 17 1017065 Retainer, Headlight 1 18 101987901 Connector Harness Assembly, Headlight 1 19 101988101 Bulb, Headlight 1	10	101988201	Lens, Headlight	1
13 1016879 Headlight Bezel, Right 1 14 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 15 1017062 Turn Signal Lens Assy 1 16 1017064 Mounting Bracket 2 17 1017065 Retainer, Headlight 1 18 101987901 Connector Harness Assembly, Headlight 1 19 101988101 Bulb, Headlight 1	11	101988002	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
14 1017 Nut, #10-24 Stainless-Steel Hex Machine 2 15 1017062 Turn Signal Lens Assy 1 16 1017064 Mounting Bracket 2 17 1017065 Retainer, Headlight 1 18 101987901 Connector Harness Assembly, Headlight 1 19 101988101 Bulb, Headlight 1	12	1013461	Screw, #10-16 Hex-Head Hi-Lo	2
15 1017062 Turn Signal Lens Assy	13	1016879	Headlight Bezel, Right	1
16 1017064 Mounting Bracket	14	1017	Nut, #10-24 Stainless-Steel Hex Machine	2
16 1017064 Mounting Bracket	15	1017062	Turn Signal Lens Assy	1
17 1017065 Retainer, Headlight	16	1017064		
18 101987901 Connector Harness Assembly, Headlight	17	1017065		
19 101988101 Bulb, Headlight	18	101987901		
	19	101988101	·	
	20			

13

E

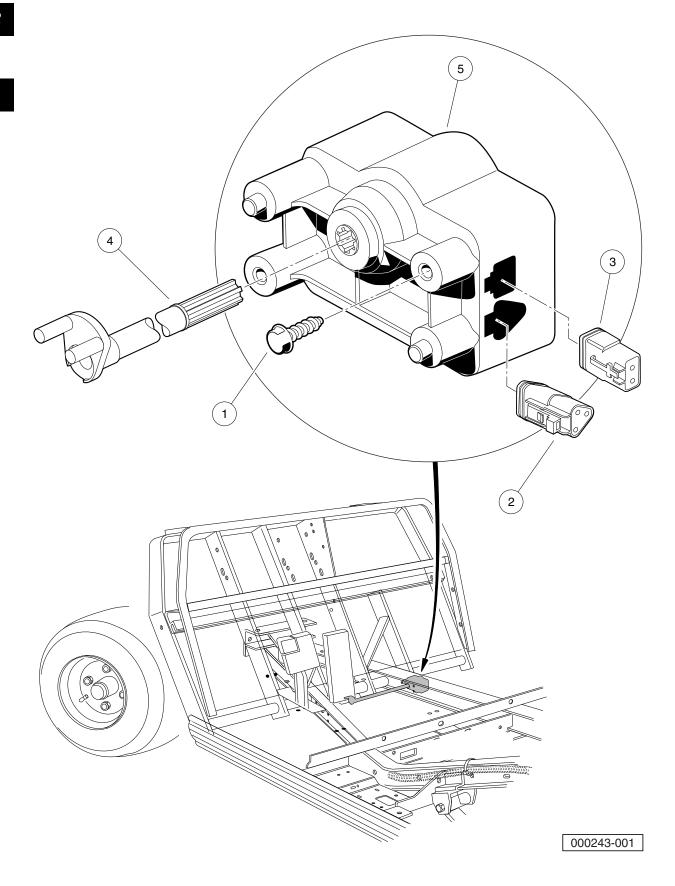








MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)

	1	TOTOR CONTROLLER GOTT OT REGULATOR (INC	<u> </u>	
ITEM	PART NO.	DESCRIPTION	QTY	
1 2 3 4 5	1015752 101920101 101936801 102101001 102101101	1 2 3 4 Screw, #12-16 X 0.625 Hi-Lo Kit, 3-Pin Wedge Lock Kit, 2-Pin Wedge Lock Bar, Drive, Cast MCOR	1 1 1	
5	102101101	MCOR	1	



13

E

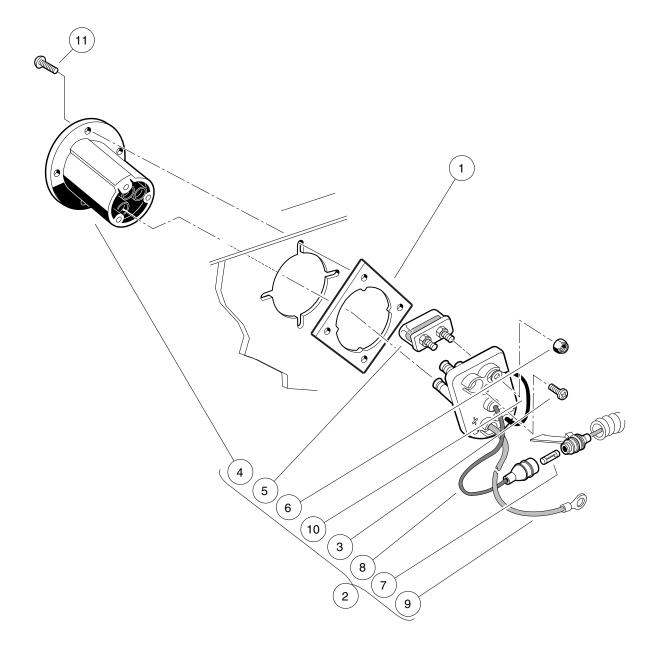








BATTERY CHARGER RECEPTACLE

ITEM	PART NO.	DESCRIPTION	Q
		1 2 3 4	
1	101801001	Plate, Receptacle Backing	
2	101802101	Fuse and Receptacle Assembly (includes items 3 through 10)	
3	1017705	Screw, #8 X 5/8 Phillips Pan-Head Type AB	
4	101796501	Receptacle	
5	101796801	Fuse Assembly (includes item 6)	
6	1013061	Locknut, #10-32 Nylon Insert	
7	101894901	Fuse, 3/8-Amp	
8	N/A	Wire Assembly, Sense Lead, Gray	
9	N/A	Wire Assembly, #10 Red	
10	N/A	Wire Assembly, #10 Black	
11	101832001	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	
			1

13

DID YOU

Ε

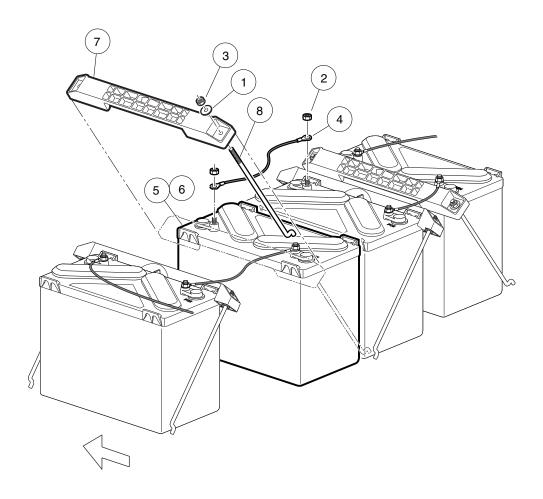








BATTERIES, ELECTRIC VEHICLE

		DATTERIES, ELECTRIC VEH	ICLL	
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	1011697	Washer, 5/16 Flat	8	
2	1014304	Nut, 5/16-18 Stainless-Steel Hex		
3	1015072	Locknut, 5/16-18 Nylon Insert	8	
4	101795701	Asm, Wire, #6blk 13in	3	
5	102511301	Battery, Ventmaster 12-Volt (Wet)		
6	102511302	Battery, Ventmaster 12-Volt (Dry, also known as moist)		
7	102777401	Battery Hold-Down	4	
8	102832601	Bolt, Battery, J		



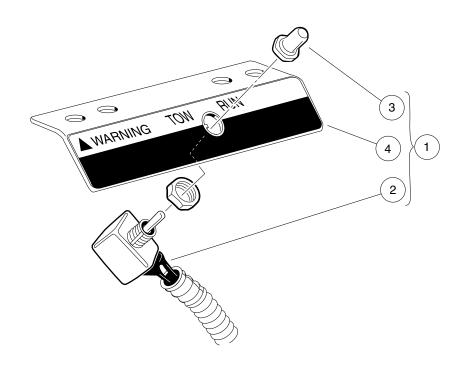








TOW/RUN SWITCH

		IOW/RON 3V	VIICII
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Tow Switch Assembly (includes items 2 through 4)	1
2	101908101	Switch Assembly, Tow/Run	
3	101908401	Boot, Switch	1
4	101922501	Bracket, Tow/Run Switch Mounting	1

DID YOU

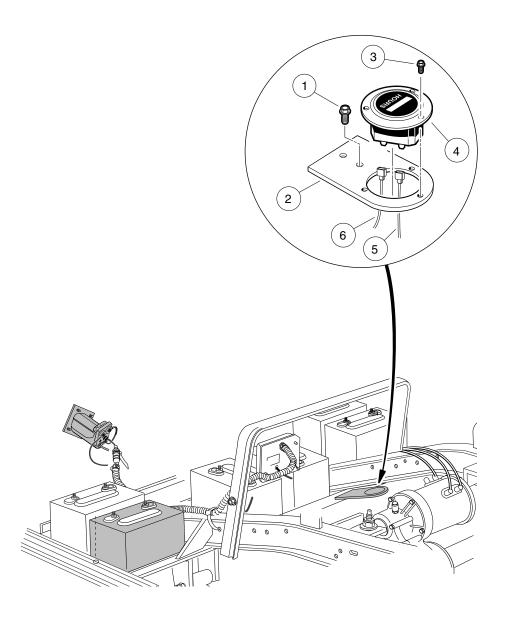








HOUR METER


			HOOK WIETER
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012285	Screw, 1/4 X 0.625 Hex-Head	1
2	1013547	Hour Meter Bracket	1
3	1014540	Screw, #6-32 X 3/8 Taptite	
4	1016877	Hour Meter	
5	101997802	Wire Assembly #18 Yellow	
6	N/A	Wire Assy, #18 Blue	
Ü	14/74	111 (1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	

13

E

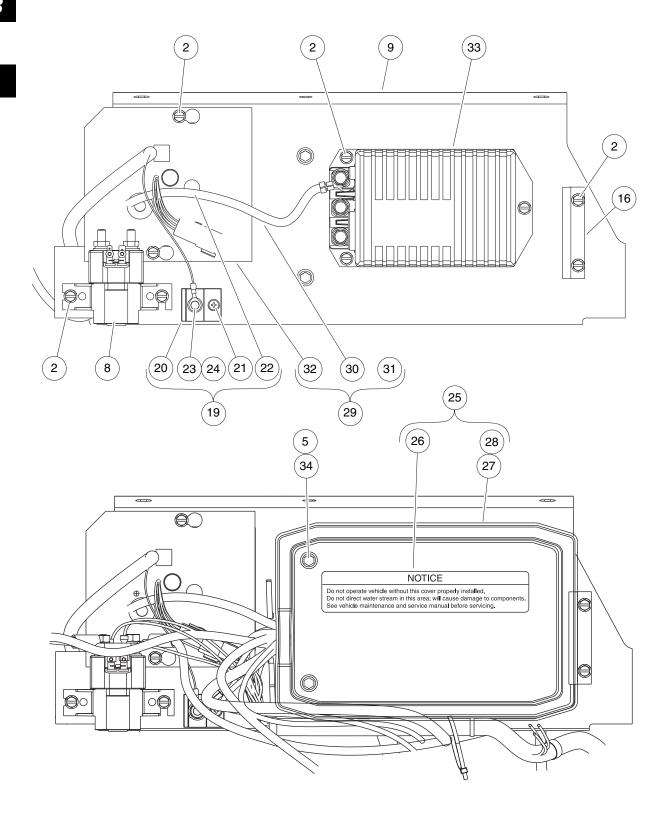



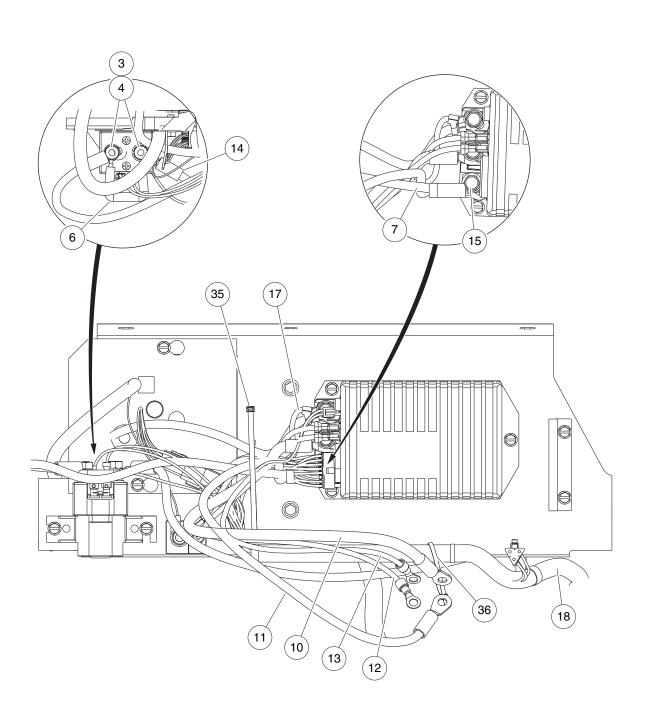







13

See previous two pages for illustration.







ELECTRICAL COMPONENTS – TURF/CARRYALL 1

1 2 3 4	N/A 1012285 1012528	1 2 3 4 Asm, Electrical Component Box (includes items 2 through 36) Screw, 1/4 X 0.625 Hex-Head	
2 3	1012285		
3		Screw, 1/4 X 0.625 Hex-Head	9
	1012528		
4	1012320	Nut, M8-1.25 Hex	2
	1013734	Lockwasher, 8mm Split	2
5	1014063	Screw, 1/4-20 X 1.00 Hex Head	2
6	1014947	Resistor Assembly	1
7	101903001	Wire Assembly #6 Yellow	1
8	101908703	Solenoid, 48v W/ Diode	1
9	101965202	Plate, Component Mounting	1
10	101968701	Wire Assy, #6 White	1
11	101978001	Wire Assy, #6 Green	1
12	101978101	Asm, Wire, #10 Orange 5/16	1
13	101978201	Wire Assy, #10 Blue	1
14	102199601	Wire Assy, #6 Red	1
15	102240501	Bolt, Controller, Terminal	3
16	****	Extrusion, Cover Support	1
17	102263601	Wire Assy, #10 Black	1
18	103221801	Asm, Wire Harness, Electric	1
19	103282701	Kit, Terminal Block Ground (includes items 20 through 24)	1
20	102259801	Terminal Block	1
21	102263701	Screw, #10-24 X 0.75 Phillips, Thread-Forming	1
22	103282601	Wire Assembly Black #10	
23	1242	Nut, 5/16-18 Hex	1
24	7174	Lockwasher, 5/16 Split	1
25	103316901	Cover Asm - Controller (includes items 26 through 28)	1
26	101931501	Decal, Component Cover	1
27	103316701	Cover - Controller, Deep	1
28	103316801	Gasket - Controller Cover	1
29	103359401	Kit, OBC, DS and Util IQ (includes items 30 through 32)	1
30	103282601	Wire Assembly Black #10	
31	N/A	Instr Obc Ds Pre 01-28-2007	
32	N/A	Asm, Obc, Iq, V3.0	1
33	103390201	Controller, Modified, 48v lq	1
34	332	Washer, 1/4 Type A Narrow Flat	
35	8639	Tie Wrap, 11" Nylon	1
36	8990	Tie Wrap, 8" Nylon	1
		**** Special order item available upon request.	





13

:







ELECTRIC MOTOR


14

5



14

E

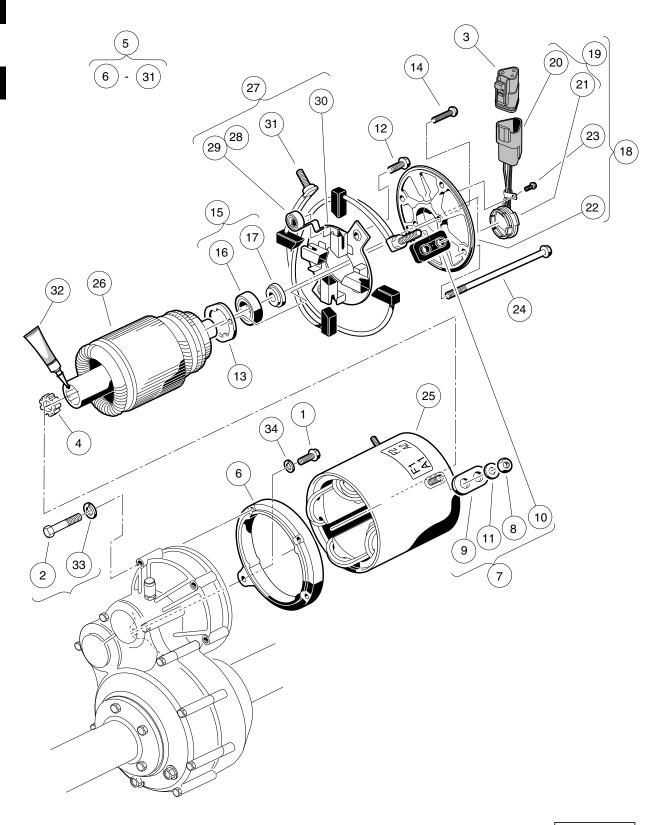








MOTOR (MODEL 5BC59JBS6390) – ELECTRIC VEHICLE

TEM	PART NO.	DESCRIPTION
		1 2 3 4
1	1010934	Screw, 5/16-18 X 1.00 Hex Cap
2	1014201	Screw, 1/4-20 X 2.25 Hex Cap
3	101920101	Kit, 3-Pin Wedge Lock
4	102235201	Bumper, Drive Unit
5	N/A	Motor, 48-Volt Non-Skew IQ * (includes items 6 through 27)
6	1017944	End Shield
7	1017947	Hardware Package (includes items 8 through 11)
8	1011280	Locknut, 5/16-18
9	N/A	Insulator Bushing
10	N/A	Insulated Bushing
11	1241	Washer, 5/16 Type A Flat
12	1017949	Screw, #6-32 X 0.480 Hex-Head
13	1017950	Bearing Retainer
14	1017953	Screw, Bearing Retainer
15	102265701	Kit, Bearing and Magnet (includes items 16 and 17)
16	1011290	Ball Bearing
17	102265801	Magnet
18	102265901	Motor End Shield Asm (includes items 19 through 23)
19	102265601	Speed Sensor Assembly (includes items 20 and 21)
20	101942301	Kit, 3-Pin Wedge Lock
21	N/A	Sensor, Speed, without Connector
22	102266001	End Shield, Motor
23	102267001	Screw, #8-32 X 0.375 Hex-Head
24	102266101	Screw, #10 - 32 X 8.250
25	103325701	Stator Shell and Winding
26	103325801	Non Skew Armature
27	103337601	Brush Assembly, IQ Motor, Non-Skew (includes items 28 through 31)
28	1011411	Kit, Brush Spring (ge Motor) (includes item 29)
29	N/A	Brush Spring
30	103325501	Brush Rigging, Non-Skew Motor
31	103325601	Brush Set, Non-Skew
32	102243403	Lubricant, Moly-Teflon (Single-Use Tube)
33	451	Lockwasher, 1/4 Split
34	7174	Lockwasher, 5/16 Split
		* Note: The model 5BC59JBS6390 motor has been discontinued. To replace the motor, use motor model EJ8-4001A.

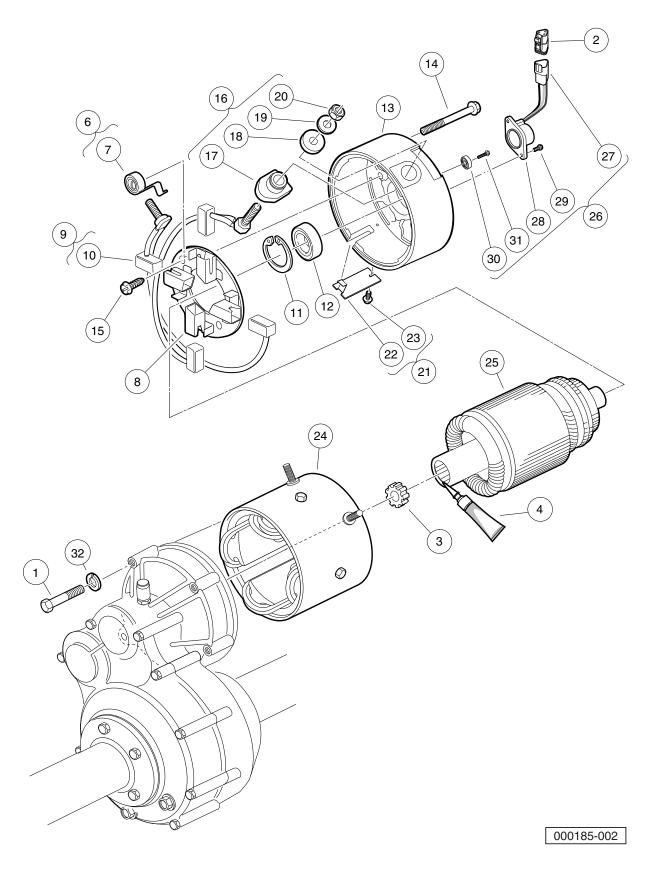





MOTOR (MODEL EJ8-4001A) – ELECTRIC VEHICLE

3 1 4 1 5 1 6 1 7 8 1	1014201 101920101 102235201 102243403 103572501 102186001 N/A	1 2 3 4 Screw, 1/4-20 X 2.25 Hex Cap Kit, 3-Pin Wedge Lock Bumper, Drive Unit Lubricant, Moly-Teflon (Single-Use Tube) IQ Electric Motor, 48-VDC 3.3 hp (includes items 6 through 26) Spring Kit, Motor Brush (includes item 7) Spring, Brush, S-g	3 1 1 1 1
2 1 3 1 4 1 5 1 6 1 7 8 1	101920101 102235201 102243403 103572501 102186001	Kit, 3-Pin Wedge Lock Bumper, Drive Unit Lubricant, Moly-Teflon (Single-Use Tube) IQ Electric Motor, 48-VDC 3.3 hp (includes items 6 through 26) Spring Kit, Motor Brush (includes item 7)	1 1 1 1
3 1 4 1 5 1 6 1 7 8 1	102235201 102243403 103572501 102186001	Bumper, Drive Unit Lubricant, Moly-Teflon (Single-Use Tube) IQ Electric Motor, 48-VDC 3.3 hp (includes items 6 through 26) Spring Kit, Motor Brush (includes item 7)	1 1 1
4 1 5 1 6 1 7 8 1	102243403 103572501 102186001	Lubricant, Moly-Teflon (Single-Use Tube)	1 1
5 1 6 1 7 8 1	103572501 102186001	IQ Electric Motor, 48-VDC 3.3 hp (includes items 6 through 26)	1
6 1 7 8 1	102186001	Spring Kit, Motor Brush (includes item 7)	-
7 8 1			1
8 1	N/A	Spring Pruch C a	
-		3pmg, Brush, 3-g	4
_	102186101	Brush Box Assembly	1
9 1	102186201	Brush Kit, Motor (includes item 10)	1
10	N/A	Assembly, Brush and Terminal	2
11 1	102186301	Ring, 2.24" Internal Retaining	1
12 1	102186401	Bearing, Ball	1
13 1	102186701	End Cap, Motor	1
14	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
15 1	102186901	Screw, #8-32 X .5 Hex-Head	2
16 1	102187101	Hardware Kit, Motor Terminal (includes items 17 through 20)	2
17	N/A	Bushing, Nylon	2
18	N/A	Washer, Nylon Flat	2
19	N/A	Washer, Flat, 5/16 Steel	2
20	N/A	Nut, Brass Hex, 5/16 - 18	2
21	N/A	Plate Kit, Motor Cover (includes items 22 and 23)	1
22	N/A	Assembly, Cover Plate	1
23	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
24 1	102704701	Frame and Field Assembly	1
25 1	102704801	Armature Assembly	1
26 1	102704901	Kit, Speed Sensor (includes items 27 through 31)	1
27 1	101942301	Kit, 3-Pin Wedge Lock	1
28	N/A	Sensor, Motor Speed, ADC	1
29	N/A	Screw, #8-32, Taptite Thread	2
30	N/A	Magnet, ADC Motor	1
31	N/A	Screw, 1/4-20 x 0.5	1
32	451	Lockwasher, 1/4 Split	3



14

:








TRANSAXLE - ELECTRIC VEHICLES

15

3



DID YOU

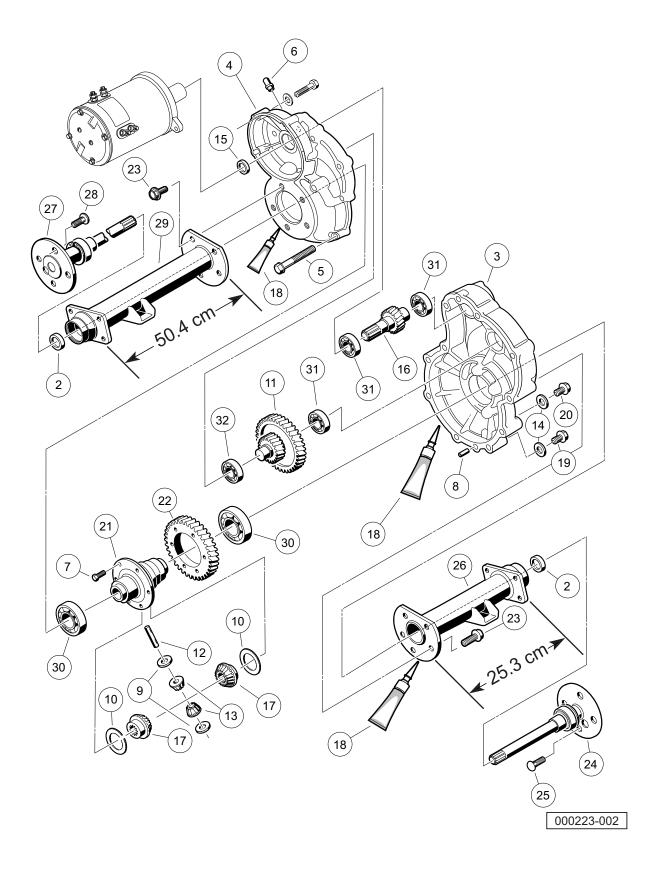








TRANSAXLE - ELECTRIC VEHICLES

1	PART NO.	DESCRIPTION	QTY
1		1 2 3 4	
	102771701	Transaxle, Electric (includes items 2 through 32)	1
2	1013794	Axle Shaft Oil Seal	2
3	101895401	Gear Case, Left-Hand	1
4	101895501	Gear Case, Passenger-Side	1
5	101897001	Screw, M8-1.25 X 60mm Hex-Head	11
6	101897201	Breather	1
7	101897401	Screw, M10-1.25 X 25mm	6
8	101897601	Pin, 11mm OD X 8.5mm ID X 10mm	2
9	101903601	Washer, Thrust	2
10	101903701	Washer, Thrust	2
11	101906901	Intermediate Shaft Assembly	1
12	101922101	Pin, 15.99mm X 88.7mm Dowel	1
13	101923001	Gear, Differential Idler	2
14	101923201	Gasket	2
15	101923501	Seal, Lip	1
16	101923701	Shaft, Input	1
17	101923901	Gear, Differential	2
18	101928701	Liquid Gasket (Transaxle case)	A/I
19	101972101	Plug, M14-1.5 X 12mm Magnetic	1
20	101972201	Plug, M14-1.5 X 12mm Hex	1
21	102356601	Housing, Differential, 6 Bolt	1
22	102356801	Gear, Differential Output, 6-Bolt	1
23	102357001	Screw, Flg Hd M10 X 1.5 X 30	10
24	102886301	Axle Assembly, Driver-Side (includes item 25)	1
25	101922201	Lug Stud	4
26	102886401	Tube, Axle, Driver-Side	1
27	102886501	Axle Assembly, Passenger-Side (includes item 28)	1
28	101922201	Lug Stud	4
29	102886601	Tube, Axle, Passenger-Side	1
30	7330	Inner Axle Tube Bearing	2
31	7335	Bearing	3
32	7336	Bearing	1

15

E

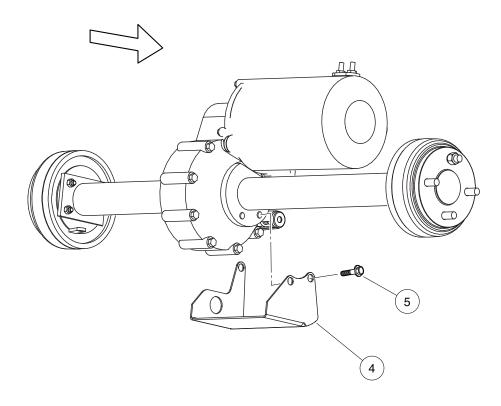

000365-001







DIFFERENTIAL GUARD

DITTERENTA			
ITEM	PART NO.	DESCRIPTION	QTY
1 2 3 4 5	101611402 N/A 101936101 101978601 102357001	1 2 3 4 Differential Guard Kit (includes items 2 through 4)	1 2 2 1 3





15

1







BATTERY CHARGER


16

3





E

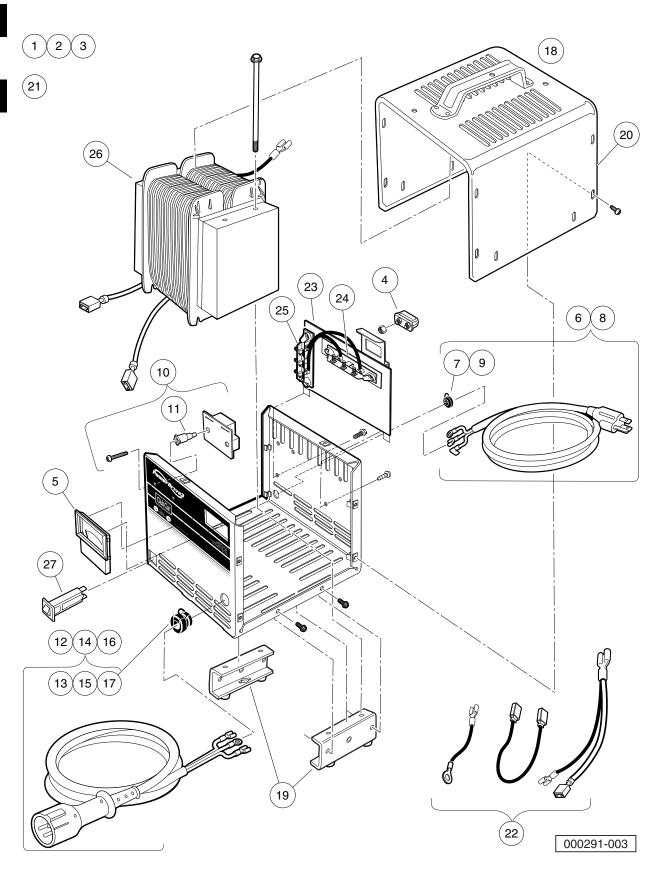






POWERDRIVE 3 BATTERY CHARGER, DOMESTIC

ITEM	PART NO.	DESCRIPTION	Qī
		1 2 3 4	
1	103717001	Chgr, Pd3 Stnry, 9Dc6'Ac'	
2	103717002	Chgr, Pd3 Stnry, 12Dc9'Ac'	
3	103717003	Chgr, Pd3 Stnry, 20Dc9'Ac'(includes items 4 through 27)	
4	102273701	PD2 Fuse Asm	
5	102273801	PD2 Ammeter	
6	103428501	Kit, PD3 Cordset - AC 80" (includes item 7)	
7	102273901	PD2 AC Cord Bushing	
8	103428601	Kit, PD3 Cordset, - AC 114" (includes item 9)	
9	102273901	PD2 AC Cord Bushing	
10	103428701	Asm, PD3 Board Relay (includes item 11)	
11	103429701	PD3 Plastic Stand-Offs	
12	103429001	PD3 Cordset - DC 113" (includes item 13)	
13	1012098	Bushing, DC Cord	
14	103429101	PD3 Cordset - DC 154" (includes item 15)	
15	1012098	Bushing, DC Cord	
16	103429201	PD3 Cordset - DC 205" (includes item 17)	
17	1012098	Bushing, DC Cord	
18	1012090	Asm, PD3 Case (includes items 19 and 20)	
19	103434001	Asm, PD3 Legs	
20	103439901	PD3Case Top (Includes Handle)	
21	103429501	Kit, PD3 Hardware	
22	103429601	Kit, PD3 Wires	
23	103517401	Kit Pd3 Button Diode (includes items 24 and 25)	•
24	N/A	Asm Diode Top	,
25	N/A	Asm Diode Side	•
26	103779601	Transformer, Pd3, Al	,
27	CCX8506	Circuit Breaker, 15-Amp/120-Volt	,
		•	

16

DID YOU

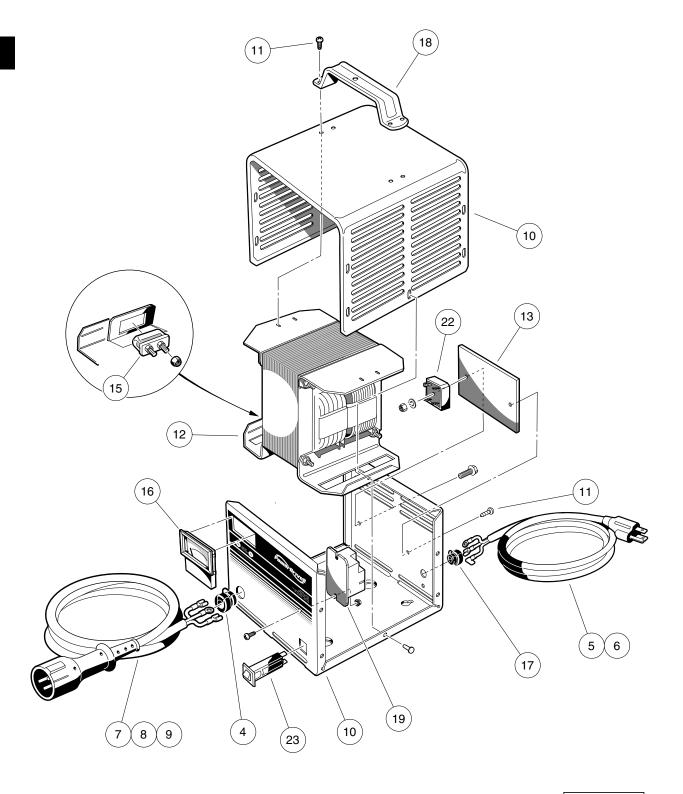

000291-001








16

POWERDRIVE 2 BATTERY CHARGER (MODEL 22110), DOMESTIC

1
2 N/A 48-V/13-A PowerDrive 2 (12-ft. DC, 9-ft. AC) 3 N/A 48-V/13-A PowerDrive 2 (20-ft. DC, 9-ft. AC) (includes items 4 through 23) 4 1012098 Bushing, DC Cord 5 101828801 Cord, AC, 80-Inch (203 cm) 6 101828802 Cord, AC, 108-Inch (274 cm) 7 101828904 PD2 DC Cordset, 113-inch 8 101828905 PD2 DC Cordset, 154-inch 9 101828906 Pd2 Dc Cordset, 250 Inch 10 102273201 PD2 Case (includes item 11) 11 7577 Screw, #10 X 0.50 Phillips Pan-Head 12 102273301 PD2 Transformer Asm 13 102273401 PD2 Heatsink 14 102273601 PD2 Heatsink 15 102273701 PD2 Fuse Asm 16 102273801 PD2 Ammeter 17 102273901 PD2 Ac Cord Bushing 18 102274001 PD2 Handle 19 103414901 Kit, Relay, 48v 30a W/instr (includes items 20 and 21) 20 103397901 Relay, Spst No, 48v 30a, Pmt 21 N/A Kit, Relay, 48v 30a Instr
3 N/A 48-V/13-A PowerDrive 2 (20-ft. DC, 9-ft. AC) (includes items 4 through 23) 4 1012098 Bushing, DC Cord 5 101828801 Cord, AC, 80-Inch (203 cm) 6 101828802 Cord, AC, 108-Inch (274 cm) 7 101828904 PD2 DC Cordset, 113-inch 8 101828905 PD2 DC Cordset, 154-inch 9 101828906 Pd2 Dc Cordset 250 Inch 10 102273201 PD2 Case (includes item 11) 11 7577 Screw, #10 X 0.50 Phillips Pan-Head 12 102273301 PD2 Transformer Asm 13 102273401 PD2 Heatsink 14 102273601 PD2 Wire Asm 15 102273701 PD2 Fuse Asm 16 102273801 PD2 Ammeter 17 102273901 PD2 AC Cord Bushing 18 102274001 PD2 Handle 19 103414901 Kit, Relay, 48v 30a W/instr (includes items 20 and 21) 20 103397901 Relay, Spst No, 48v 30a, Pmt 21 N/A Kit, Relay, 48v 30a Instrns 22 103517601 Pd2 Rectifier Kit
4 1012098 Bushing, DC Cord 5 101828801 Cord, AC, 80-Inch (203 cm) 6 101828802 Cord, AC, 108-Inch (274 cm) 7 101828904 PD2 DC Cordset, 113-inch 8 101828905 PD2 DC Cordset, 154-inch 9 101828906 Pd2 Dc Cordset 250 Inch 10 102273201 PD2 Case (includes item 11) 11 7577 Screw, #10 X 0.50 Phillips Pan-Head 12 102273301 PD2 Transformer Asm 13 102273401 PD2 Heatsink 14 102273601 PD2 Wire Asm 15 102273701 PD2 Fuse Asm 16 102273801 PD2 Ammeter 17 102273901 PD2 AC Cord Bushing 18 102274001 PD2 Handle 19 103414901 Kit, Relay, 48v 30a W/instr (includes items 20 and 21) 20 103397901 Relay, Spst No, 48v 30a, Pmt 21 N/A Kit, Relay, 48v 30a Instrns 22 103517601 Pd2 Rectifier Kit 23 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Item 16 not s
5 101828801 Cord, AC, 80-Inch (203 cm) 6 101828802 Cord, AC, 108-Inch (274 cm) 7 101828904 PD2 DC Cordset, 113-inch 8 101828905 PD2 DC Cordset, 154-inch 9 101828906 Pd2 Dc Cordset 250 Inch 10 102273201 PD2 Case (includes item 11) 11 7577 Screw, #10 X 0.50 Phillips Pan-Head 12 102273301 PD2 Transformer Asm 13 102273401 PD2 Heatsink 14 102273601 PD2 Wire Asm 15 102273701 PD2 Fuse Asm 16 102273801 PD2 Ammeter 17 102273901 PD2 AC Cord Bushing 18 102274001 PD2 Handle 19 103414901 Kit, Relay, 48v 30a Winstr (includes items 20 and 21) 20 103397901 Relay, Spst No, 48v 30a, Pmt 21 N/A Kit, Relay, 48v 30a Instrns 22 103517601 Pd2 Rectifier Kit 23 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Item 16 not shown. Level 1 Battery Charger part numbers include one
6 101828802 Cord, AC, 108-Inch (274 cm) 7 101828904 PD2 DC Cordset, 113-inch 8 101828905 PD2 DC Cordset, 154-inch 9 101828906 Pd2 Dc Cordset 250 Inch 10 102273201 PD2 Case (includes item 11) 11 7577 Screw, #10 X 0.50 Phillips Pan-Head 12 102273301 PD2 Transformer Asm 13 102273401 PD2 Heatsink 14 102273601 PD2 Wire Asm 15 102273701 PD2 Fuse Asm 16 102273801 PD2 Ammeter 17 102273901 PD2 AC Cord Bushing 18 102274001 PD2 Handle 19 103414901 Kit, Relay, 48v 30a W/instr (includes items 20 and 21) 20 103397901 Relay, Spst No, 48v 30a, Pmt 21 N/A Kit, Relay, 48v 30a Instrns 22 103517601 Pd2 Rectifier Kit 23 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Item 16 not shown. Level 1 Battery Charger part numbers include one
7 101828904 PD2 DC Cordset, 113-inch 8 101828905 PD2 DC Cordset, 154-inch 9 101828906 Pd2 Dc Cordset 250 Inch 10 102273201 PD2 Case (includes item 11) 11 7577 Screw, #10 X 0.50 Phillips Pan-Head 12 102273301 PD2 Transformer Asm 13 102273401 PD2 Heatsink 14 102273601 PD2 Wire Asm 15 102273701 PD2 Fuse Asm 16 102273801 PD2 Ammeter 17 102273901 PD2 AC Cord Bushing 18 102274001 PD2 Handle 19 103414901 Kit, Relay, 48v 30a W/instr (includes items 20 and 21) 20 103397901 Relay, Spst No, 48v 30a, Pmt 21 N/A Kit, Relay, 48v 30a Instrns 22 103517601 Pd2 Rectifier Kit 23 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Item 16 not shown. Level 1 Battery Charger part numbers include one
8 101828905 PD2 DC Cordset, 154-inch 9 101828906 Pd2 Dc Cordset 250 Inch 10 102273201 PD2 Case (includes item 11) 11 7577 Screw, #10 X 0.50 Phillips Pan-Head 12 102273301 PD2 Transformer Asm 13 102273401 PD2 Heatsink 14 102273601 PD2 Wire Asm 15 102273701 PD2 Fuse Asm 16 102273801 PD2 Ammeter 17 102273901 PD2 AC Cord Bushing 18 102274001 PD2 Handle 19 103414901 Kit, Relay, 48v 30a W/instr (includes items 20 and 21) 20 103397901 Relay, Spst No, 48v 30a, Pmt 21 N/A Kit, Relay, 48v 30a Instrns 22 103517601 Pd2 Rectifier Kit 23 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Item 16 not shown. Level 1 Battery Charger part numbers include one
9 101828906 Pd2 Dc Cordset 250 Inch 10 102273201 PD2 Case (includes item 11) 11 7577 Screw, #10 X 0.50 Phillips Pan-Head 12 102273301 PD2 Transformer Asm 13 102273401 PD2 Heatsink 14 102273601 PD2 Wire Asm 15 102273701 PD2 Fuse Asm 16 102273801 PD2 Ammeter 17 102273901 PD2 Handle 18 102274001 PD2 Handle 19 103414901 Kit, Relay, 48v 30a W/instr (includes items 20 and 21) 20 103397901 Relay, Spst No, 48v 30a, Pmt 21 N/A Kit, Relay, 48v 30a Instrns 22 103517601 Pd2 Rectifier Kit 23 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Item 16 not shown. Level 1 Battery Charger part numbers include one
10 102273201 PD2 Case (includes item 11) 11 7577 Screw, #10 X 0.50 Phillips Pan-Head 12 102273301 PD2 Transformer Asm 13 102273401 PD2 Heatsink 14 102273601 PD2 Wire Asm 15 102273701 PD2 Fuse Asm 16 102273801 PD2 Ammeter 17 102273901 PD2 AC Cord Bushing 18 102274001 PD2 Handle 19 103414901 Kit, Relay, 48v 30a W/instr (includes items 20 and 21) 20 103397901 Relay, Spst No, 48v 30a, Pmt 21 N/A Kit, Relay, 48v 30a Instrns 22 103517601 Pd2 Rectifier Kit 23 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Item 16 not shown. Level 1 Battery Charger part numbers include one
11 7577 Screw, #10 X 0.50 Phillips Pan-Head 12 102273301 PD2 Transformer Asm 13 102273401 PD2 Heatsink 14 102273601 PD2 Wire Asm 15 102273701 PD2 Fuse Asm 16 102273801 PD2 Ammeter 17 102273901 PD2 AC Cord Bushing 18 102274001 PD2 Handle 19 103414901 Kit, Relay, 48v 30a W/instr (includes items 20 and 21) 20 103397901 Relay, Spst No, 48v 30a, Pmt 21 N/A Kit, Relay, 48v 30a Instrns 22 103517601 Pd2 Rectifier Kit 23 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Item 16 not shown. Level 1 Battery Charger part numbers include one
12 102273301 PD2 Transformer Asm 13 102273401 PD2 Heatsink 14 102273601 PD2 Wire Asm 15 102273701 PD2 Fuse Asm 16 102273801 PD2 Ammeter 17 102273901 PD2 AC Cord Bushing 18 102274001 PD2 Handle 19 103414901 Kit, Relay, 48v 30a W/instr (includes items 20 and 21) 20 103397901 Relay, Spst No, 48v 30a, Pmt 21 N/A Kit, Relay, 48v 30a Instrns 22 103517601 Pd2 Rectifier Kit 23 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Item 16 not shown. Level 1 Battery Charger part numbers include one
13 102273401 PD2 Heatsink
14 102273601 PD2 Wire Asm
15 102273701 PD2 Fuse Asm
16 102273801 PD2 Ammeter
17 102273901 PD2 AC Cord Bushing
18 102274001 PD2 Handle
19 103414901 Kit, Relay, 48v 30a W/instr (includes items 20 and 21) 20 103397901 Relay, Spst No, 48v 30a, Pmt 21 N/A Kit, Relay, 48v 30a Instrns 22 103517601 Pd2 Rectifier Kit 23 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Item 16 not shown. Level 1 Battery Charger part numbers include one
20 103397901 Relay, Spst No, 48v 30a, Pmt 21 N/A Kit, Relay, 48v 30a Instrns 22 103517601 Pd2 Rectifier Kit 23 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Item 16 not shown. Level 1 Battery Charger part numbers include one
21 N/A Kit, Relay, 48v 30a Instrns
Pd2 Rectifier Kit
22 103517601 Pd2 Rectifier Kit
CCX8506 Circuit Breaker, 15-Amp/120-Volt
Note: Item 16 not shown. Level 1 Battery Charger part numbers include one

16



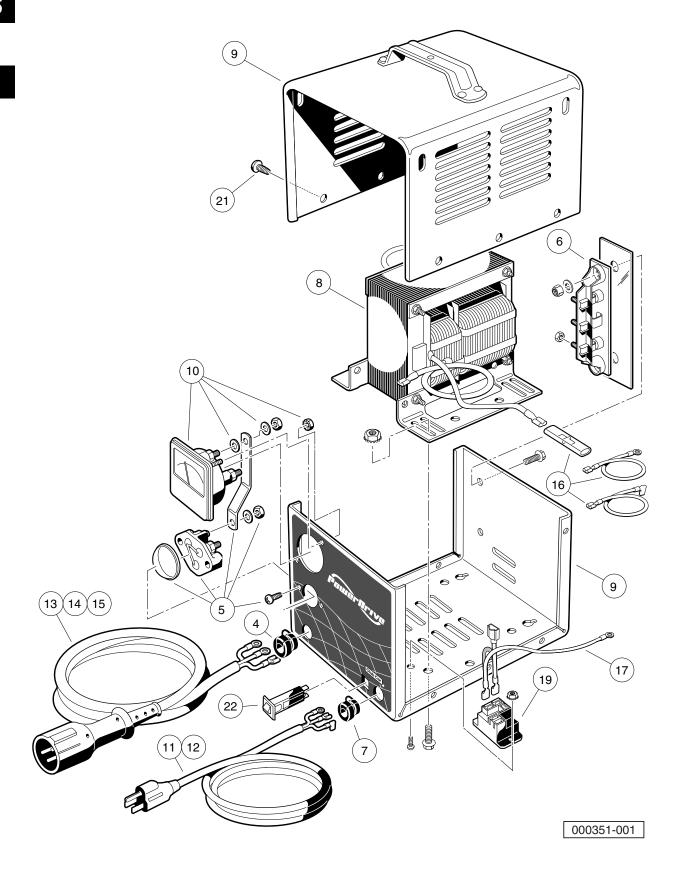






16

POWERDRIVE BATTERY CHARGER (MODEL 17930), DOMESTIC

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	101802201	48V/17A PowerDrive (9-ft DC, 6-ft AC Cord)	1
2	101802202	48V/17A PowerDrive (12-ft DC, 9-ft AC Cord)	1
3	101802203	48V/17A PowerDrive (20-ft DC, 9-ft AC Cord) (includes items 4 through 22)	1
4	1012098	Bushing, DC Cord	1
5	1012101	Fuse Assembly	1
6	1015914	Rectifier with Heatsink Assembly	1
7	1015917	Bushing, AC Cord	1
8	***	Transformer, Battery Charger	1
9	101828301	Case Assembly	1
10	101828501	Ammeter	1
11	101828801	Cord, AC, 80-Inch (203 cm)	1
12	101828802	Cord, AC, 108-Inch (274 cm)	1
13	101828901	Cord, DC, 113-Inch (287 cm)	1
14	101828902	Cord, DC, 154-Inch (391 cm)	
15	101828903	Cord, DC, 250-Inch (635 cm)	1
16	101831101	Wire Assembly Kit	1
17	101914401	Assembly, Voltage Suppressor	
18	103414901	Kit, Relay, 48v 30a W/instr (includes items 19 and 20)	1
19	103397901	Relay, Spst No, 48v 30a, Pmt	1
20	N/A	Kit, Relay, 48v 30a Instrns	1
21	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
22	CCX8506	Circuit Breaker, 15-Amp/120-Volt	1
		**** Special order item available upon request.	
		Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.	
		They do not include all of the level 2 colds listed.	

16

E

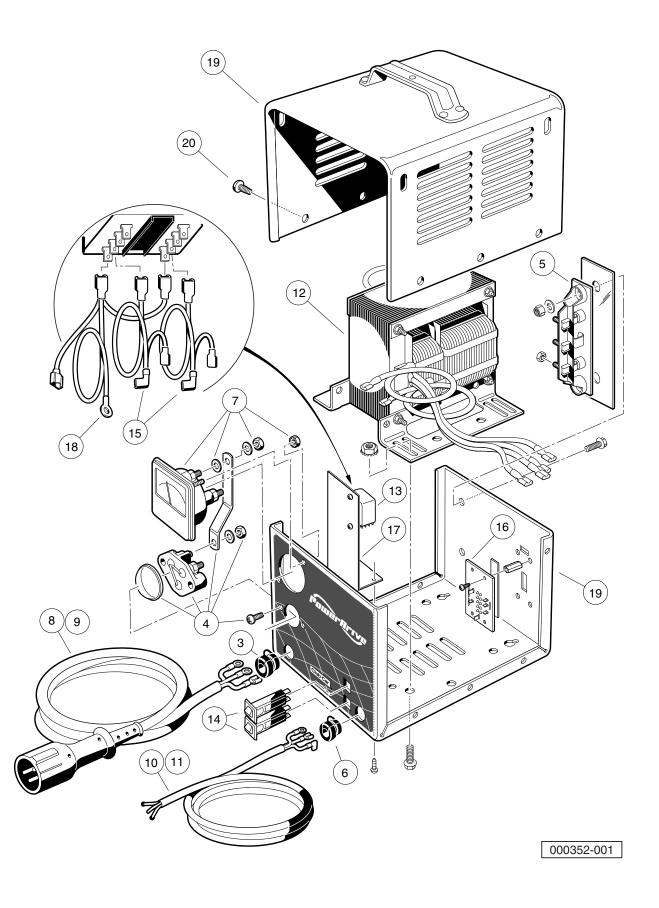






16

POWERDRIVE BATTERY CHARGER (MODEL 18780), EXPORT

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	101831503	Battery Charger, 48-Volt DC (8.5-ft DC, 6-ft AC)	1
2	101831504	Battery Charger, 48-Volt DC (12-ft DC, 9-ft AC) (includes items 3 through 20)	1
3	1012098	Bushing, DC Cord	1
4	1012101	Fuse Assembly	1
5	1015914	Rectifier with Heatsink Assembly	1
6	1015917	Bushing, AC Cord	1
7	101828501	Ammeter	1
8	101828901	Cord, DC, 113-Inch (287 cm)	1
9	101828902	Cord, DC, 154-Inch (391 cm)	1
10	101831701	Cord, AC, 80-Inch (203 cm), without Plug	1
11	***	Cord, AC, 118-Inch (203 cm), without Plug	1
12	101838201	Transformer, Export Battery Charger	1
13	101838301	Relay, Export Charger	1
14	101838401	Circuit Breaker	2
15	101838501	Kit, Wire Assembly	1
16	101838601	Four-Position Switch	1
17	***	Mounting Bracket, Relay	1
18	101914401	Assembly, Voltage Suppressor	1
19	N/A	Case, Charger	1
20	7577	Screw, #10 X 0.50 Phillips Pan-Head	1
		Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.	

DID YOU

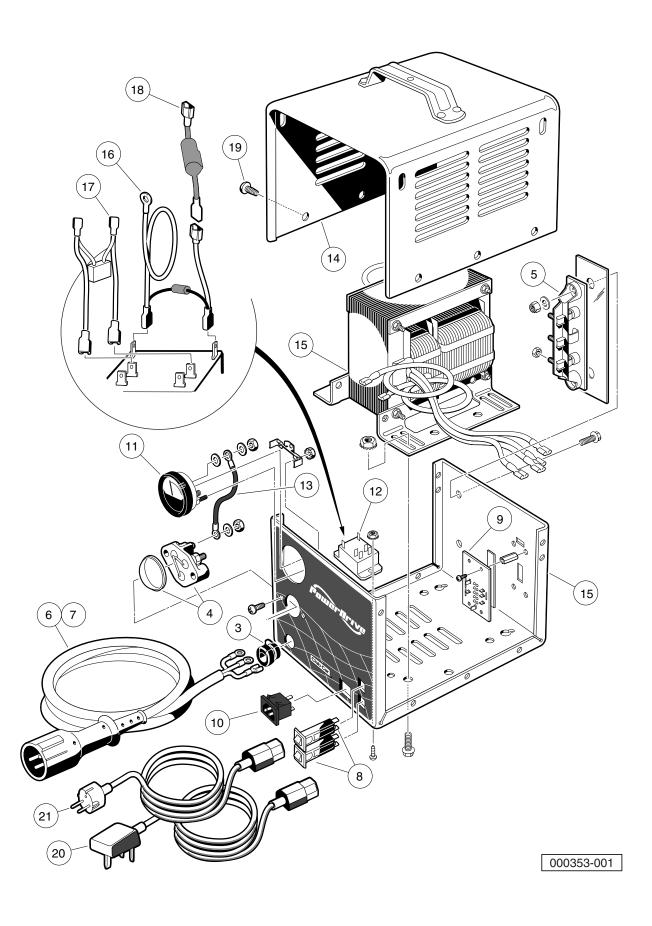








POWERDRIVE BATTERY CHARGER (MODEL 20310), EUROPEAN

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101956201	Battery Charger, 48-Volt w/ 4-Position Switch (8.5-ft DC)	1
2	101956202	Battery Charger, 48-Volt w/ 4-Pos. Switch (12-ft DC) (includes items 3 through 19)	1
3	1012098	Bushing, DC Cord	1
4	1012101	Fuse Assembly	1
5	1015914	Rectifier with Heatsink Assembly	1
6	101828901	Cord, DC, 113-Inch (287 cm)	1
7	101828902	Cord, DC, 154-Inch (391 cm)	1
8	101838401	Circuit Breaker	2
9	101838601	Four-Position Switch	1
10	101973501	Receptacle, AC Cord	1
11	101976601	Ammeter with Mounting Bracket	1
12	101987501	Relay	1
13	N/A	Wire, Jumper	1
14	N/A	Case, Charger	1
15	***	Transformer, European Battery Charger	1
16	***	Suppressor, AC Voltage	1
17	***	Assembly, Wire	1
18	***	Limiter, Current	1
19	7577	Screw, #10 X 0.50 Phillips Pan-Head	10
20	101958201	Cord, UK, AC, Battery Charger	1
21	101958301	Cord, European AC, Battery Charger	1
		**** Special order item available upon request.	
		Note: Level 1 Battery Charger part numbers include one AC and one DC cord. They do not include all of the level 2 cords listed.	

 



16

:







MAINTENANCE AND SERVICE TOOLS

17


G

E

D





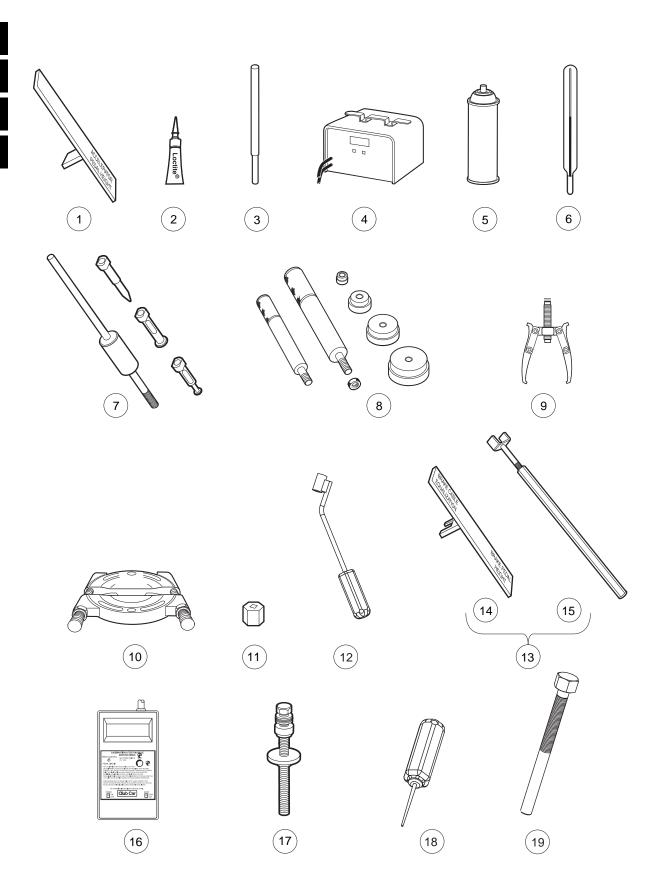






MAINTENANCE AND SERVICE TOOLS

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC
		1 2 3 4			
		The following tool list includes all tools available from Club Car for			
		maintenance and service procedures for gasoline, electric, and/or			
		diesel vehicles, both past and present models. Be sure to carefully			
		examine the tool list for applicability to your vehicle before ordering.			
1	101871001	Accelerator Pedal Adjustment Tool		1	1
2	101813202	Adhesive, Guide Ring, 3-Gram Tube			1
3	101641202	Arbor		1	
4	101831901	Battery Discharge Machine, 36/48 Volt			1
5	1014305	Battery Terminal Protector Spray		1	1
6	1011767	Battery Thermometer		1	1
7	1016417	Bearing and Oil Seal Remover Assembly		1	1
8	1016416	Bearing Driver Set	1	1	1
9	1010410	Bearing Puller	1	1	1
10	1012811	Bearing Puller Wedge Attachment	1	1	1
10	1012812	Brake Adjustment Tool (used only on vehicles with	1	1	'
11	1013362	manually adjusted mechanical brakes)		1	1
12	102555501	Brake Cable Release Tool	1	1	1
			'	'	'
13	102249901	Brake Pedal Adjustment Tool Kit (used for the Carryall Electric Industrial Truck only) (includes items 14 and 15)			1
14	****	Brake Pedal Adjustment Tool			1
15	****	Brake Pedal Tension Tool			
					1
16	101887101	Calibration Test Module		1	1
17	101808401	Cam Installation Tool		1	_
18	102562401	Charger Bezel Tool		_	1
19	102686101	Clutch Removal Tool (for 4x4 vehicles)	1	1	
		Please refer to the maintenance and service manual for proper tool application.			
	***	Special order item available upon request			

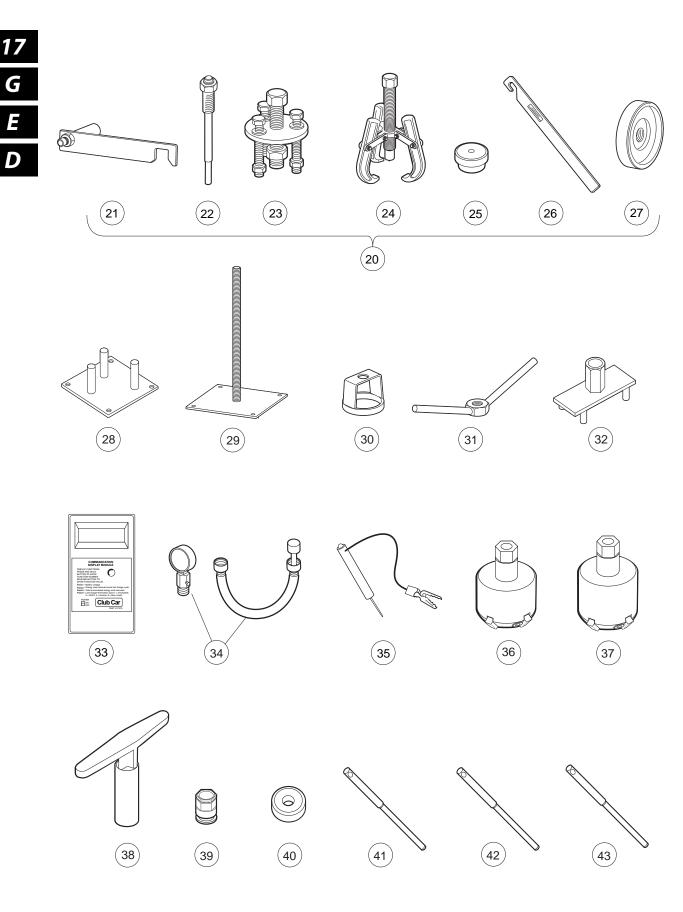





MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY	QTY	QTY
	. ,		DIESEL	GAS	ELEC
		1 2 3 4			
20	1014510	Clutch Tool Kit (includes items 21 - 27)		1	
21	1014498	Clutch Alignment Tool (for pre-unitized transaxle			
		vehicles built prior to 1997 model year)		1	
22	1014496	Drive Clutch Puller (for Kawasaki engines only)		1	
23	1014497	Drive Clutch Hub Puller (for Kawasaki engines only)		1	
24	1014508	Driven Clutch Cam Puller (for Kawasaki engines only)		1	
25	1014507	Driven Clutch Puller Plug (for Kawasaki engines only)		1	
26	1015524	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)		1	
27	101809101	Press Weldment (for Kawasaki engines only)		1	
28	102601501	Drive ClutchFixed Sheave Tool			
		(for 4x4 vehicles)	1	1	
29	102603501	Driven Clutch Spring Compression Base (for use with items 30			
		and 31) (for 4x4 vehicles)	1	1	
30	102605201	Driven Clutch Spring Compression Collar (for use with items 29			
		and 31) (for 4x4 vehicles)	1	1	
31	102606101	Driven Clutch Spring Compression Nut (for use with items 29			
		and 30) (for 4x4 vehicles)	1	1	
32	102607501	Drive Clutch Spider Removal Tool			
		(for 4x4 vehicles)	1	1	
33	101831801	Communication Display Module			1
34	101641002	Compression Gauge and Adapter		1	
35	1011273	Continuity Tester		1	1
36	102773801	Cutter, Valve Seat, #122		1	
37	102773901	Cutter, Valve Seat #115		1	
38	102774101	Wrench, T, #505		1	
39	102774101	Adapter, T-Wrench		1	
40	102675401	Cutter, Valve Seat, 60 Degree (requires item 51)			
		(for Honda GX620 Gasoline Engines)		1	
41	102774201	Pilot, 6.6 MM		1	
42	102774301	Pilot, 6.62 MM		1	
43	102774401	Pilot, 6.65 MM		1	
		Please refer to the maintenance and service manual			
		for proper tool application.			
ĺ					







 
(48)




 
45

 


46




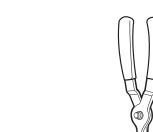


 


 




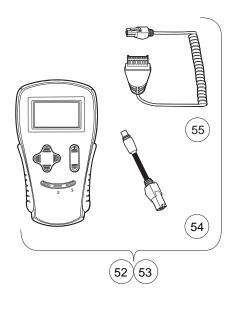

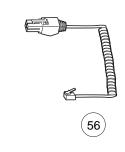





(59)(60)





(57)

Liquid Gasket

(58)






MAINTENANCE AND SERVICE TOOLS, CONTINUED

45 46 10 47 48 10 49 10 50 51	1012151 1016627 02669901 1016418 01933101 02169401	1 2 3 4 Dry Moly Lubricant	1	1 1 1 1	1
45 46 10 47 48 10 49 10 50 51	1016627 02669901 1016418 01933101 02169401 1011478	Flywheel Puller Kit (for Kawasaki Engines)		1	
46 10 47 48 10 49 10 50 51	1016418 01933101 02169401 1011478	Gauge, Carburetor Float Level (for Honda GX620 Gasoline Engines)	1	1	1
47 48 10 49 10 50 51	1016418 01933101 02169401 1011478	(for Honda GX620 Gasoline Engines)	1	-	1
48 10 49 10 50 51	01933101 02169401 1011478	Gear YokeGovernor Shaft Installation Tool (for Kawasaki Engine Vehicles)	1	-	1
48 10 49 10 50 51	01933101 02169401 1011478	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles) Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200,	1	1	1
49 10 50 51)2169401 1011478	Hydraulic Brake Adjuster (for Turf/CA 272/472, Pioneer/XRT 1200,			
50 51	1011478			1	
51					
51		Bobcat 2100, HUV 4213)			1
	1012502	Hydrometer	1	1	1
52 10	1013593	Internal Retaining Ring Pliers	1	1	1
)2248803	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)			1
		(includes items 54 and 55)			
53 10)2248804	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)			1
		(includes items 54 and 55)			
54 10)2251501	Adaptor, Cable			1
55 10)2241502	IQDM Series 2 Cable			1
56 10)2241501	IQDM Series 1 Cable (replacement)			1
57 10)1928701	Liquid Gasket (transaxle case)	1	1	1
58 10)2243402	Moly-Teflon Lubricant (4-oz. (113-gram) tube)			1
59 10	01997201	Paint, Touch-Up – Beige*		1	1
59 10)1997207	Paint, Touch-Up – Black*		1	1
59 10)1997212	Paint, Touch-Up – Burgundy*		1	1
59 10)1997211	Paint, Touch-Up – Classic Blue (Navy)*		1	1
59 10)1997205	Paint, Touch-Up – Dark Gray*	1	1	1
59 10)1997209	Paint, Touch-Up – Dark Green*	1	1	1
59 10	01997204	Paint, Touch-Up – Gray*	1	1	1
59 10	01997203	Paint, Touch-Up – Red*	1	1	1
59 10	01997206	Paint, Touch-Up – Royal Blue (Pacific Blue)*		1	1
)1997202	Paint, Touch-Up – White*	1	1	1
60 10	02562301	Paint, Precedent Underbody – Gray		1	1
	02587201	Paint Pen, Touch-Up, Precedent Underbody – Black		1	1
		Please refer to the maintenance and service manual for proper tool application.			
		* Item 59 is not for use on Surlyn $^{\circ}$ body material, which is used on Precedent vehicles.			



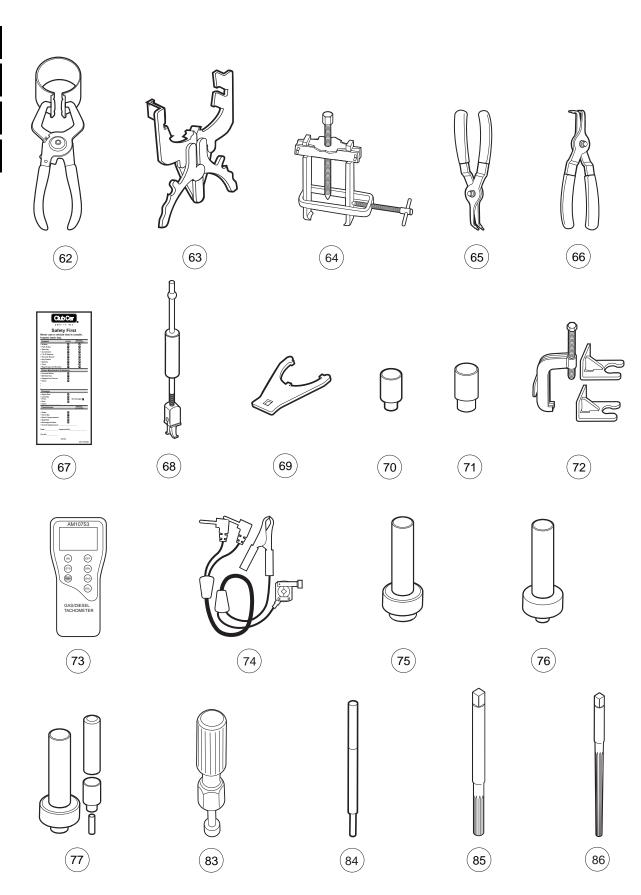





MAINTENANCE AND SERVICE TOOLS, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC
		1 2 3 4			
62	1016414	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)		1	
63	1016415	Piston Ring Pliers (for Kawasaki Engines)		1	
64	102668801	Puller, Special Use (for Kubota D722 Diesel Engines)	1		
65	1012549	Retaining Ring Pliers, 45° External	1	1	1
66	1012560	Retaining Ring Pliers, 90° Internal	1	1	1
67	101823101	Safety First Card (50 per pack)	1	1	1 '
68	1012809	Seal Puller	1	1	1
69	102330901	Spanner Wrench (for coil over shock front suspension vehicles only)	1	1	
70	1014264	Steering Column Bearing Press Tool		1	1
71	1014259	Steering Column Retaining Ring Tool		1	1
72	102061201	Steering Wheel Puller Tool	1	1	1
73	AM10753	Tachometer (includes gasoline engine pick up lead only)	1	1	
74	AM10771	Tachometer Diesel Probe (for use with item 73)	1		
75	1014162	Transaxle Axle Seal Tool		1	
76	1014161	Transaxle Pinion Seal Tool		1	
77	1014115	Transmission Tool Kit		1	
78	101611003	Tune-Up Kit, All OHV (for FE290, FE350, FE400 only) (includes			
		air filter, spark plug, oil filter, fuel filters) (not shown)		1	
79	AM11804	Tune-Up Kit, Gx620 (for Honda Engines) (includes air filter,			
		spark plug, oil filter, fuel filters) (not shown)		1	
80	AM11805	Tune-Up Kit, D722 (for Kubota Engines) (includes air filter,			
0.1	A N A 1 2 2 0 2 0 1	oil filter, fuel filters, water separator filter) (not shown)	1		
81	AM1220301	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air		4	
02	A M 1 2 2 2 4 0 1	filter, spark plug, oil filter, fuel filters) (not shown)		1	
82	AM1232401	Tune-Up Kit, FH680D (for Kawasaki V-Twin Engines) (includes oil		1	
83	1016413	filter, fuel filter, air filter, and spark plugs) (not shown)		1	
84	1016413	Valve Guide Driver		'	
04	102074001	(for Honda GX620 Gasoline Engines)		1	
85	101641201	Valve Guide Reamer (FE290, FE350, and FE400 only)		1	
86	102674401	Valve Guide Reamer, 6.6 mm		•	
	102071101	(for Honda GX620 Gasoline Engines)		1	
		(10) Horida Groza dasonile Engines, illinininininininininininininininininin		, i	


90

17

G

E

D

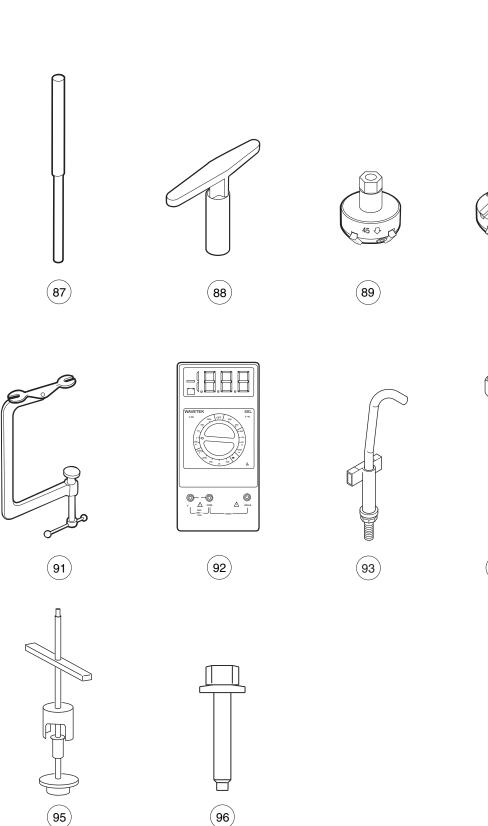





MAINTENANCE AND SERVICE TOOLS, CONTINUED

	MAINTENANCE AND SERVICE 100ES, CONTINUED					
ITEM	PART NO.	DESCRIPTION	QTY DIESEL	QTY GAS	QTY ELEC	
		1 2 3 4				
87	1016552	Valve Seat Cutter Guide		1		
88	1016551	Valve Seat Cutter T-Wrench		1		
89	1016553	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)		1		
90	1016554	Valve Seat Cutter, 45°/30° (35 mm diameter)		1		
91	101641101	Valve Spring Compressor		1		
92	1011480	Volt Ohm Meter	1	1	1	
93	102570401	Tool, Tensioning, Starter Generator (For Precedent vehicles)		1		
94	103601401	Puller, Drive Clutch, XRT 950*		1		
95	103601701	Tool, Disassembly, Driven Clutch, XRT 950		1		
96	103600501	Screw, Driven Clutch Disassembly, M6, XRT 950		1		
		*Note: The XRT 950 Drive Clutch Puller requires the use of Screw, Driven Clutch Disassembly, CCI Part Number 103600501.				










GET STARTED https://CartPros.com/f.html

Part Number and <i>Page</i>	7973 <i>1-15, 1-17</i>	1011478 <i>17-7</i>
AM10753 <i>17-9</i>	8057 6-9	1011480 <i>17-11</i>
AM10771 <i>17-9</i>	8058 6-9	1011553 <i>3-3, 3-5</i>
AM10080 12-5	8067 <i>5-7</i>	1011578 1-3, 5-3
AM10081 12-5	8233 1-5, 1-11, 1-13, 1-21, 1-23, 1-25, 1-27,	1011652 1-31, 1-33, 1-35, 1-37
AM10419 11-7	1-29, 1-39, 4-9, 4-11, 5-19, 6-17, 9-3, 12-3, 12-9	1011694 4-9, 4-11
AM10622 1-43	8248 <i>6-17</i> , <i>9-</i> 3	1011697 1-43, 5-3, 5-9, 7-15, 8-15, 9-11, 13-13
AM10724 8-5	8251 1-11, 1-21	1011700 4-9, 4-11
AM10821 2-3	8450 11-3	1011734 <i>4-13</i>
AM10822 2-3	8639 1-15, 1-17, 13-21	1011767 <i>17-</i> 3 1011779 <i>4-7</i>
AM1205602 1-43	8717 <i>4-9, 4-11, 6-9, 12-3</i>	1011779 4-7
AM1232301 <i>7-7</i>	8745 <i>5-13</i>	101186302 1-23, 1-25, 1-27, 1-29 101186302 1-23, 1-25, 1-27, 1-29
CCX8506 16-3, 16-5, 16-7	8754 4-7, 4-9, 4-11, 5-3, 5-5, 5-11, 5-13, 5-15,	101187702 4-5
SVP147801 3-3, 3-5	5-21, 6-13	1011878 1-23, 1-25, 1-27, 1-29
183 9-13, 11-3, 12-3	8755 <i>5-13, 5-21</i>	1011895 5-5, 5-13
304 1-23, 1-25, 1-27, 1-29, 12-9	8797 <i>9-5</i>	1011930 5-5, 5-13
332 1-5, 1-11, 1-13, 1-21, 1-23, 1-25, 1-27, 1-29,	8861 <i>5-13, 5-19</i>	1011931 4-9, 4-11
1-31, 1-33, 1-35, 1-37, 1-39, 6-17, 9-13, 10-3, 13-21	8935 1-3	1011988 1-39, 9-3
334 4-9, 4-11, 5-3, 5-5, 5-11, 5-13, 7-15, 8-15	8963 1-23, 1-27, 1-43	1012008 1-23, 1-27
343 1-25, 1-29	8990 5-5, 5-11, 6-9, 13-21	1012030 <i>5-13</i>
357 5-15, 5-19	1010028 <i>5-13</i>	1012098 16-3, 16-5, 16-7, 16-9, 16-11
451 <i>1-23, 1-25, 1-27, 1-29, 10-3, 14-3, 14-5</i>	1010124 <i>5-15</i>	1012101 <i>16-7, 16-9, 16-11</i>
705 6-13, 7-15, 8-15	1010138 5-13	1012151 <i>17-7</i>
706 5-13	1010142 <i>5-17</i>	1012285 <i>9-11, 12-3, 13-17, 13-21</i>
808 5-19, 11-3	1010144 5-17	1012295 <i>6-9</i>
1017 <i>6-7, 13-7</i>	1010145 <i>5-17</i>	1012303 <i>5-13, 5-21</i>
1028 <i>4-5</i>	1010150 <i>5-13</i>	1012333 <i>12-9</i>
1032 4-5	1010237 1-23, 1-25, 1-27, 1-29	1012396 <i>1-17</i>
1035 <i>4-7, 5-5, 5-13</i>	1010434	1012412 <i>1-11, 1-21</i>
1241 1-13, 1-23, 1-27, 1-39, 4-5, 4-7, 4-9, 4-11,	1010577 1-23, 1-23, 1-27, 1-29	1012431 6-9
6-9, 6-13, 6-15, 10-3, 12-9, 14-3	1010805 4-5	1012467 <i>5-5, 5-13</i>
1242 4-7, 6-9, 6-13, 13-21	1010829 4-7	1012505 <i>1-15, 1-17</i>
1606 1-13, 9-13	1010850 4-3	1012528 <i>10-3, 13-21</i>
1624 4-9, 4-11, 5-5, 5-11, 5-13	1010877 4-5	1012549 <i>17-9</i>
1703	1010878 4-5	1012560 <i>17-9</i>
2402 5-13	1010921 <i>4-5</i>	1012571 7-15, 8-15
7048 <i>5-7</i> 7173 1-13, 5-19, 6-15, 12-9	1010927 <i>4-5</i>	1012604 5-3
7174 5-3, 5-13, 5-19, 6-13, 9-11, 10-3, 13-21,	1010932 <i>4-5</i>	1012605 5-3
14-3	1010933 4-5	1012649 <i>9-3</i> 1012711 <i>12-3</i>
7310 <i>2-</i> 3	1010934 <i>1-43, 6-15, 14-3</i>	1012714 12-5
7311 <i>1-23, 1-27, 1-39, 5-19</i>	1010954 <i>6-9, 12-3</i>	1012714 12-5
7330 <i>12-7, 15-3</i>	1010984 2-3	1012741 12-5
7335 <i>12-5, 15-3</i>	1010993 <i>1-11, 1-21</i>	1012747 12-5
7336 <i>15-3</i>	1011084 <i>4-13</i>	1012748 <i>12-5</i>
7473 1-3, 1-23, 1-27, 1-39, 1-43, 4-5, 4-7, 4-9,	1011273 <i>17-5</i>	1012752 12-3
4-11, 5-19, 6-9, 6-15	1011280 <i>14-3</i>	1012809 <i>17-9</i>
7540 <i>5-5</i>	1011290 <i>14-</i> 3	1012811 <i>17-</i> 3
7555 <i>5-5</i> , <i>5-11</i> , <i>5-13</i>	1011291 <i>12-7</i>	1012812 <i>17-3</i>
7577 16-5, 16-7, 16-9, 16-11	1011382 1-15, 1-17	1012830 <i>6-13</i> , <i>9-11</i> , <i>10-3</i>
7602 5-5, 5-13	1011402 4-5	1012836 <i>11-7</i>
7716 4-5, 4-9, 4-11	1011411 14-3	1012896 <i>12-3</i>
7818 6-9	1011415 5-17	1013001 <i>6-11</i>
7847 1-5, 1-19, 10-3	1011418 4-5	1013003 6-11
7893 <i>6-9, 12-9</i>	1011466 <i>4-3</i>	1013005 6-11

 



DID YOU	CartPros directs you to the right part
KNOW?	numbers from this manual. Enter the p our search box and it will find the part yo

101301102 <i>6-11</i>	1014072 <i>11-7</i>	1015372 6-9
101303202 <i>1-11, 1-21</i>	1014078 <i>11-7</i>	1015373 <i>6-9</i>
1013035 <i>5-5</i> , <i>5-11</i>	1014080 <i>11-7</i>	1015405 <i>6-9</i>
1013042 <i>5-5</i> , <i>5-11</i>	1014115 <i>17-9</i>	1015426 <i>9-13</i>
1013044 <i>5-5</i> , <i>5-11</i>	1014116 9-3	1015453 <i>5-19</i>
1013051 <i>5-5</i> , <i>5-11</i>	1014119 6-9	1015457 <i>5-19</i>
1013052 <i>5-5, 5-11</i>	1014125 <i>5-3</i>	101547601 <i>3-5</i>
1013061 <i>12-3, 13-11</i>	1014126 <i>5-3</i>	1015524 <i>17-5</i>
1013343 <i>1-15, 1-17</i>	1014145 <i>6-9</i>	1015528 <i>1-15, 1-17</i>
1013344	1014153 <i>4-3</i>	101553901 <i>3-3, 3-5</i>
1013461 <i>6-7</i> , <i>9-5</i> , <i>13-7</i>	1014161 <i>17-9</i>	1015583 <i>5-13, 5-21</i>
1013462 <i>9-5</i>	1014162 <i>17-9</i>	1015597 <i>5-5</i> , <i>5-7</i>
1013494	1014201 <i>14-3, 14-5</i>	1015608 <i>1-3</i>
1013531 4-7	1014207 <i>12-7</i>	1015613 <i>5-19</i>
1013547 <i>13-17</i>	1014213 <i>5-3</i>	1015614 <i>5-19</i>
1013582 <i>17-3</i>	1014214 <i>5-</i> 3	1015649 <i>7-5</i> , 8-3
1013589 <i>6-9</i>	1014217 <i>5-</i> 3	1015737 <i>6-9</i>
1013593 <i>17-7</i>	1014259 <i>17-9</i>	1015741 <i>6-9</i>
1013609 <i>6-9</i>	1014264 <i>17-9</i>	1015752 6-9, 9-13, 13-9
1013677 3-3	1014276 <i>5-15</i>	1015760 <i>5-19</i>
1013687 9-3	1014287 11-3	1015814 <i>10-3</i>
1013700 9-11	1014288 5-3, 6-15, 11-3	101584502 <i>9-11</i>
1013734 10-3, 13-21	1014289 6-11	1015878 6-9
1013746 9-3, 9-5, 9-9, 9-17	1014304 13-13	1015914 16-7, 16-9, 16-11
1013760 <i>12-3</i>	1014305 17-3	1015917 16-7, 16-9
1013768 12-7	1014306 1-11, 1-21	1015932 6-13
1013769 12-7	1014375 <i>6-15</i>	1015969 <i>7-5</i> , 8-3
1013770 <i>12-7</i>	1014453 11-3	1016004 9-5
1013771 12-7	1014454 11-7	1016074 <i>6-13</i>
1013772 <i>12-7</i>	1014496 <i>17-5</i>	101611003 <i>17-9</i>
1013773 <i>12-7</i>	1014497 <i>17-5</i>	101611402 <i>15-5</i>
1013774 <i>12-7</i>	1014498 <i>17-5</i>	1016183 5-3
1013787 <i>12-7</i>	1014507 <i>17-5</i> 1014508 <i>17-5</i>	1016201 <i>11-3</i> 1016269 <i>5-</i> 3
1013792 <i>12-7</i> 1013794 <i>12-7, 15-3</i>	1014509 <i>1-23</i>	
1013794 <i>12-7, 15-3</i> 1013832 <i>5-15</i>	101450902 <i>1-23</i>	1016289 <i>11-3</i> 1016337 <i>12-5</i>
1013869 4-5	1014510 <i>17-5</i>	1016338 12-5
1013870 4-5	1014540 13-17	1016341 <i>12-3</i>
1013871 4-9, 4-11	1014555 5-19	1016346 5-13
1013872 1-25, 1-29	1014807 6-9	1016349 <i>5-13</i>
1013876 4-5	1014808 6-9	1016350 <i>5-13</i>
1013884 1-25, 1-29	1014902 <i>5-19</i>	1016353 <i>5-13</i>
1013924 4-3, 7-15, 8-15	1014928 9-3	1016384 <i>5-13</i>
1014007 4-9, 4-11, 12-3	1014947 13-21	1016385 <i>5-13</i>
1014049 11-3	1014948 6-9	1016386 5-13
1014050 11-3	101503202 1-41	1016387 5-13, 5-15
1014052 11-3	1015059 1-39	1016389 <i>5-13</i>
1014055 11-3	1015072 1-39, 13-13	101641002 <i>17-5</i>
1014056 <i>11-3</i>	1015091 <i>1-23, 1-25, 1-27, 1-29</i>	101641101 <i>17-11</i>
1014057 11-3	1015137 <i>9-3, 9-5, 9-9, 9-17</i>	101641201 <i>17-9</i>
1014058 11-3	1015139 9-3, 9-5	101641202 <i>17-3</i>
1014059 <i>11-3</i>	1015143 <i>9-3</i> , <i>9-5</i>	1016413 <i>17-9</i>
1014062 <i>11-3</i>	101524002 <i>6-13</i>	1016414 <i>17-9</i>
1014063 <i>11-3, 13-21</i>	1015332 <i>7-5</i> , <i>8-3</i>	1016415 <i>17-9</i>
1014065 <i>6-9</i> , <i>11-3</i>	1015345 6-9	1016416 <i>17-3</i>
1014070 <i>11-7</i>	1015371 <i>6-9</i>	1016417 <i>17-3</i>





1016418 <i>17-7</i>	1016538	7-11, 8-11	1017082 <i>12-3</i>
1016423 6-9	1016539	7-5, 8-3	101708301 <i>1-19</i>
101642575 <i>9-7, 9-15</i>	1016541	7-13, 8-13	1017141 1-11, 1-21
101642578 <i>9-7, 9-15</i>	1016542	7-9	1017188 <i>11-5</i>
101642580 <i>9-7, 9-15</i>	1016544	7-7, 7-9, 7-11, 8-5, 8-9, 8-11	1017203 <i>9-3</i>
101642582 <i>9-7, 9-15</i>	1016545	7-9	1017226 <i>5-3</i> , <i>5-13</i>
101642585 9-7	1016546		1017231 <i>12-3</i>
1016429 <i>7-3</i> , <i>8-7</i>		7-5, 8-3, 8-13, 9-9, 9-17	1017266 <i>5-13</i>
1016432 <i>7-3, 8-7, 12-3</i>	1016549	·	1017273 <i>5-9</i>
1016436 <i>7-9</i> , <i>8-9</i>	1016551	17-11	1017313 <i>5-3</i>
1016437 9-7	1016552		1017314 <i>5-3</i>
1016438 9-9, 9-17	1016553		1017315 <i>5-3</i>
1016440 7-9, 8-9, 9-9, 9-17	1016554		1017317 <i>5-3</i>
1016441 <i>9-9, 9-17</i>	1016560		1017378 4-9, 4-11
1016444 9-9, 9-17	1016561	·	1017380 4-9, 4-11
1016445 8-5		7-7, 7-13, 8-5, 8-13	1017424 4-9, 4-11
1016449 <i>7-9</i> , 8-9	1016563	·	1017434 <i>7-9</i> , 8-9
1016450 <i>7-9</i> , <i>8-9</i>		7-11, 8-11	1017435 8-9
1016451 <i>7-9</i>	1016566	•	1017442 <i>7-3, 8-7</i>
1016452 <i>7-9</i> , 8-9		7-9, 8-9	1017443 <i>7-9</i> , 8-9, 8-11
1016453 <i>7-11</i>		7-3, 8-7	1017444 8-9
1016454 <i>7-11</i> , <i>8-11</i>	1016571	7-13, 8-13	1017445 <i>7-9</i> , 8-9
1016455 <i>7-7</i> , <i>8-5</i>		9-9, 9-17	1017446 8-9
1016456 <i>7-5</i> , <i>8-3</i> , <i>8-5</i>	1016576	7-3, 8-7	1017447 <i>8-11</i>
1016457 <i>7-3</i> , <i>8-7</i>	1016578		1017448 <i>7-7</i> , <i>8-5</i>
1016458 <i>7-9</i> , <i>8-9</i>	1016579	8-5	101744901 <i>7-13, 8-13</i>
1016467 <i>7-3</i> , <i>8-7</i>		7-3, 8-7	101744902 <i>7-13, 8-13</i>
1016470 <i>7-13</i> , <i>8-13</i>		9-9, 9-17	1017450 <i>7-13, 8-13</i>
1016472 <i>7-11</i> , <i>8-11</i>	1016583		101745101 <i>7-13, 8-13</i>
1016473 <i>7-3</i> , <i>8-7</i>	1016584	7-11, 8-11	101745102 <i>7-13, 8-13</i>
1016474 7-9, 8-9	1016585	9-7	1017453 <i>7-13</i> , 8-13
1016479 <i>7-9</i> , 8-9	1016586	8-5	1017454 <i>7-9</i> , 8-9
1016480 9-9	1016587	7-7, 8-5	1017455 <i>7-7</i> , 8-5
101648102 <i>9-9, 9-17</i>	1016588	7-7, 8-5	1017456 <i>7-3</i> , 8-7
101648203 <i>7-3</i> , <i>8-7</i>	1016627	17-7	101745701 <i>7-13</i> , <i>8-13</i>
1016483 <i>7-9</i> , <i>8-9</i>	1016630	1-17	101745702 <i>7-13</i> , <i>8-13</i>
1016486 <i>9-7</i>	1016672	12-7	1017458 <i>7-3, 8-7</i>
1016489 <i>7-9</i> , 8-9	1016801	11-3	1017460 <i>7-3</i> , <i>8-7</i>
101649002 <i>9-9, 9-17</i>	1016811	1-19	1017461 <i>9-7</i>
1016494 <i>7-11</i> , <i>8-11</i>	1016813	5-19	1017463 <i>7-7</i> , 8-5
1016496 <i>7-11</i> , <i>8-11</i>	1016814	5-19	1017466 <i>9-9, 9-17</i>
1016497 8-5	1016849	1-15, 1-17	1017468 <i>8-5</i>
1016499 <i>9-7</i>	1016851	1-15, 1-17	1017471 <i>7-13, 8-13</i>
1016501 <i>9-7</i>	1016877	13-17	1017472 <i>7-11,</i> 8-11
1016502 <i>7-3</i> , <i>8-7</i>	1016879	6-7, 13-7	1017473 <i>7-9</i> , 8-9
1016506 <i>7-11</i> , 8-11	1016880	6-7, 13-7	1017474 <i>7-5</i> , 8-3
1016507 <i>7-5</i> , 8-3	1016883	6-13	1017475 <i>7-5</i> , 8-3
1016510 <i>7-11</i> , <i>8-11</i>	1016901	11-3	1017476 <i>7-5</i> , 8-3
1016513 <i>12-3</i>	1016904	7-9, 8-9, 10-3	1017486 <i>7-5</i> , 8-3
1016517 <i>7-9</i> , 8-9	1016916	1-31, 1-33, 1-35, 1-37	1017487 <i>7-11,</i> 8-11
1016518 <i>8-9</i>	1016952	1-11, 1-19, 1-21	1017490 <i>7-7</i> , <i>8-5</i>
1016519 <i>8-9</i>	1016967	5-9	1017500 8-3
1016521 <i>7-11,8-11</i>	1017029	4-5	1017501 <i>7-13</i> , 8-13
1016531 <i>7-5</i> , <i>8-3</i>	1017062	6-7, 13-7	1017502 <i>7-13</i> , 8-13
1016535 <i>7-11</i> , <i>8-11</i>	1017064	6-7, 13-7	1017503 <i>7-13, 8-13</i>
1016537 <i>7-3</i> , <i>8-7</i>	1017065	6-7, 13-7	1017504 <i>7-11,</i> 8- <i>11</i>




DID YOU	
KNOW	13
MIACA	

1017507 <i>7-3</i> , <i>8-7</i>	101816301	4-3	101838301	16-9
1017508 <i>7-11, 8-11</i>	101816501	4-3	101838401	16-9, 16-11
1017510 <i>7-13</i> , <i>8-13</i>	101816502	4-3	101838501	16-9
1017512 <i>7-13</i> , <i>8-13</i>	101817401	4-9, 4-11	101838601	16-9, 16-11
1017513 <i>7-11, 8-11</i>	101818801	4-9	101841201	1-39
1017514 <i>7-11, 8-11</i>	101821501	9-13	101841202	1-39
101751801 <i>7-11</i> , <i>8-11</i>	101823101	17-9	101841301	1-39
101751802 <i>7-11</i> , <i>8-11</i>	101823201	4-3	101850301	9-13
101751803 <i>7-11,8-11</i>	101823301	4-3	101851101	1-15, 1-17
1017653 <i>6-11</i>	101823302	4-3	101856002	1-15
1017686 <i>11-7</i>	101823801	4-3	101856102	6-9
1017689 <i>10-3</i>	101823901	4-3	101856201	9-13
1017696 <i>4-9, 4-11</i>	101824001	4-3	101859401	10-3
1017705 13-11	101824002	4-3	101861901	4-9, 4-11
101773301 <i>7-13</i> , <i>8-13</i>	101824401	9-3, 9-5	101862001	4-11
101773302 <i>7-13</i> , <i>8-13</i>	101825101	1-15, 1-17, 3-3, 3-5	101869302	6-11
101773303 <i>7-13</i> , <i>8-13</i>	101826201	1-15	101871001	17-3
101773304 <i>7-13</i> , <i>8-13</i>	101826301	1-17	101874901	6-11
101773305 <i>7-13</i> , <i>8-13</i>	101827101	7-15, 8-15	101875001	6-11
101773306 <i>7-13</i> , <i>8-13</i>	101828301	16-7	101875101	6-11
101773307 <i>7-13</i> , 8-13	101828501	16-7, 16-9	101875102	6-11
101773308 <i>7-13</i> , <i>8-13</i>	101828801	16-5, 16-7	101875201	6-11
101773309 <i>7-13</i> , <i>8-13</i>	101828802	16-5, 16-7	101875301	6-11
101773310 <i>7-13</i> , <i>8-13</i>	101828901	16-7, 16-9, 16-11	101875401	6-11
101773311 <i>7-13</i> , <i>8-13</i>	101828902	16-7, 16-9, 16-11	101875501	6-11
1017760 <i>1-43</i>	101828903	16-7	101875601	6-11
1017774 <i>1-39</i>	101828904	16-5	101875701	6-11
101791101 4-3	101828905	16-5	101875802	6-11
1017936 <i>1-5</i>	101828906	16-5	101876001	6-11
1017944 <i>14-</i> 3	101830601	1-15, 1-17	101876202	6-11
1017947 14-3	101830701	1-15, 1-17	101876301	6-11
1017949 14-3	101831101	16-7	101876402	6-11
1017950 14-3	101831503	16-9	101876501	6-11
1017953 14-3	101831504	16-9	101877601	6-11
101795701 13-5, 13-13	101831701	16-9	101877701	6-11
101796201 4-9, 4-11	101831801	17-5	101878101	6-11
101796501 13-11	101831901	17-3	101878201	
101796801 13-11	101832001	13-11	101878302	5-5
101801001 13-11	101832202	9-11	101879001	6-11
101802101 13-11	101832302	9-11	101879401	5-5, 5-11
101802201 16-7	101832601	7-15, 8-15	101879501	5-5, 5-11
101802202 16-7	101832701	7-15, 8-15	101879601	5-5, 5-11
101802203 16-7	101833101	7-15, 8-15	101879701	5-5, 5-11
101804301 1-17, 9-13	101833401	11-7	101879801	5-5, 5-11
101805701 9-13	101833601	12-3	101879901	5-5, 5-11
101806901 1-11	101833701	6-11	101880001	5-5, 5-11
101808401 17-3	101833906	11-3	101880101	5-5, 5-11
101809101 17-5	101834001	11-7	101880201	5-5, 5-11
101811401 9-13	101834502	1-15, 1-17	101880301	5-5, 5-11
101811501 <i>9-13</i>	101834601	7-15, 8-15	101881101	8-5
101811901 <i>9-13</i>	101834801	12-3	101881701	9-13
101812301 9-13	101836201	11-7	101884801	7-15, 8-15
101813001 <i>9-13</i>	101837001	1-21	101886101	12-3
101813202 <i>17-</i> 3	101837101	9-13	101887101	17-3
101815501 4-3	101837301	6-13	101887601	7-5, 8-3
101815502 4-3	101838201	16-9	101889401	12-5



GET STARTED https://CartPros.com/f.html

101890001	12-5	101917601	9-13	101972006	17-7
101890101	12-3	101917701	9-13	101972007	17-7
101890201	12-3	101918501	4-5	101972009	17-7
101890501	12-3	101920101	13-9, 14-3, 14-5	101972011	17-7
101890601	12-3	101921501	9-13	101972012	17-7
101890901	12-7	101922101	15-3	101972101	15-3
101891001	12-7	101922201	15-3	101972201	15-3
101891301	12-3	101922501	6-17, 13-15	101972801	9-13
101891401	12-7	101923001	15-3	101973101	9-7
101891501	12-7	101923201	15-3	101973301	9-7
101891601	12-5	101923501	15-3	101973401	9-9, 9-17
101891901	12-5	101923701	15-3	101973501	16-11
101892001	12-5	101923901	15-3	101976601	16-11
101892201	12-5	101925701	9-13	101978001	13-5, 13-21
101892301	12-5	101926501	5-19	101978101	13-21
101892401	12-5	101926901	12-3, 12-11	101978201	13-21
101892501	12-5	101927101	12-3	101978601	15-5
101892601	12-5	101927201	12-3	101980801	12-5
101892701	12-7	101927301	12-3	101980901	12-5
101892901	12-3	101927501	12-5	101981001	12-5
101893201	12-5	101927601	12-5	101984801	5-3
101893801	12-3	101927701	12-5	101985502	1-31, 1-33, 1-35, 1-37
101893901	12-5	101927901	12-5	101987501	16-11
101894901	13-11	101928001	12-5	101987602	1-31, 1-33, 1-35, 1-37
101895401	15-3	101928101	12-5	101987701	9-3
101895501	15-3	101928301	12-7	101987901	6-7, 13-7
101896501	6-11	101928601	12-3	101988001	6-7, 13-7
101896901	9-5	101928701	12-3, 15-3, 17-7	101988002	6-7, 13-7
101897001	15-3	101929401	5-19	101988101	6-7, 13-7
101897201	15-3	101929801	11-3	101988201	6-7, 13-7
101897401	15-3	101929802	11-3	101990801	4-7
101897601	15-3	101931501	3-3, 13-21	101997802	13-17
101898001	6-15	101932902	12-11	101998204	1-37
101903001	13-5, 13-21	101933101	17-7	101998205	1-35
101903101	5-13	101936101	15-5	101998501	1-31, 1-33, 1-35, 1-37
101903601	15-3	101936801	13-9	102003201	9-3
101903701	15-3	101939901	6-11	102004101	5-13
101905901	9-7	101942301	14-3, 14-5	102004201	5-21
101906901	15-3	101953101	4-7	102009402	2-3
101908101	13-15	101953802	8-3	102009502	
101908401	6-17, 13-15	101954301	1-13, 1-31, 1-33, 1-35, 1-37	102022101	4-7
101908601	3-3	101956201	16-11		5-11
101908703	13-21	101956202	16-11	102025801	1-13
101909201	8-5	101958201	16-11	102026001	4-9, 4-11
101909301	8-5	101958301	16-11	102031901	12-7
101909401	8-5	101960501	1-11, 3-5	102045001	1-13
101910401	1-39	101960601	3-3, 3-5	102045901	12-3
101910501	12-7	101963401	7-15, 8-15, 12-9	102046501	3-7
101912401	4-13	101965202	13-21	102048401	1-13
101914401	16-7, 16-9	101968701	13-5, 13-21	102061201	17-9
101915201	3-5	101971301	9-13	102065901	7-15, 8-15
101916001	8-13	101972001	1-43, 17-7	102066201	4-7, 5-21
101916101	7-5, 8-3	101972002	17-7	102075801	3-3, 3-5
101916201	8-5	101972003	17-7	102076701	1-43
101916301	7-7, 8-5	101972004	17-7	102101001	13-9
101916701	6-13, 11-3	101972005	17-7	102101001	13-9
	•				

 

DID YOU



102155801	11-7	102353401	5-7	102704701	14-5
102169401	17-7	102353101	5-7	102704801	14-5
102186001	14-5	102354204	<i>5-7</i>	102704901	14-5
102186101	14-5	102355301	6-15	102711201	6-9
102186201	14-5	102356601	15-3	102753401	8-9
102186301	14-5	102356801	15-3	102771701	15-3
102186401	14-5	102357001	15-3, 15-5	102777401	13-13
102186701	14-5	102357701	5-7	102778501	1-7
102186901	14-5	102376001	12-9	102778502	1-7
102187101	14-5	102406701	9-3, 9-5	102778503	1-7
102196901	1-15	102430901	8-13	102778504	1-7
102199601	13-5, 13-21	102431001	8-11	102778505	1-7
102235201	14-3, 14-5	102453001	12-5	102778507	1-7
102240501	13-21	102453101	12-5	102778509	1-7
102241501	17-7	102503211	1-31, 1-39	102778601	1-13
102241502	17-7	102503212		102824402	1-23, 1-25, 1-27, 1-29
102242101	11-7	102503214	1-35, 1-39	102830401	5-15
102243402	17-7	102503215	1-37, 1-39	102830501	1-3
102243403	14-3, 14-5	102508701	1-15	102832601	13-13
102248803	17-7	102511301	13-13	102854301	1-23, 1-25, 1-27, 1-29
102249901	17-3	102511302	13-13	102854302	1-23, 1-25, 1-27, 1-29
102251501	17-7	102518001	1-15	102865101	9-3
102259801	13-21	102522001	9-5	102871801	5-19
102263601	13-21	102537802	5-9	102886301	15-3
102263701	13-21	102538101	3-5	102886401	15-3
102265601	14-3	102538201	3-3	102886501	15-3
102265701	14-3	102540301	7-15, 8-15	102886601	15-3
102265801	14-3	102540802	5-9	102977001	1-17
102265901	14-3	102541425	1-39	102977002	1-15
102266001	14-3	102541445	1-39	103010101	9-3
102266101	14-3	102541465	1-39	103197001	6-5, 6-9
102267001	14-3	102541501	1-39	103198301	1-15
102273201	16-5	102555501	17-3	103198401	6-17
102273301	16-5	102562401	17-3	103199001	1-17
102273401	16-5	102570401	17-11	103199101	1-17
102273601	16-5	102572401	1-15	103205401	1-17
102273701	16-3, 16-5	102582401	1-39	103205501	6-17
102273801	16-3, 16-5	102601501	17-5	103210201	1-17
102273901	16-3, 16-5	102603501	17-5	103210301	1-15
102274001	16-5	102605201	17-5	103218601	1-15
102278001	1-15, 1-17, 5-3	102606101	17-5	103221801	13-5, 13-21
102289002	1-3	102607501	17-5	103282601	13-21
102289201	5-11	102618601	1-3, 1-39	103282701	13-21
102296020	5-9	102668801	17-9	103295101	12-9
102296530	1-31, 1-33, 1-35, 1-37, 1-39	102669901	17-7	103295201	12-9
102298240	1-3	102674001	17-5	103313301	1-13
102298720	1-3	102674101	17-5	103316701	13-21
102304801	7-9, 8-9	102674201	17-5	103316801	13-21
102323101	4-5	102674401	17-9	103316901	13-21
102323201	4-5	102674601	17-9	103325501	14-3
102324901	1-39	102675001	17-5	103325601	14-3
102330901	17-9	102675101	17-5	103325701	14-3
102336001	9-11	102675201	17-5	103325801	14-3
102336101	9-11	102675301	17-5	103337601	14-3
102353201	5-7	102675401	17-5	103345701	11-3
102353301	5-7	102686101	17-3	103348201	1-17



GET STARTED

https://CartPros.com/f.html

103348501	1-17	103429101 <i>16-3</i>	adapter
103348601	1-17	103429201 16-3	cable (IQDM) 17-7
103351001	5-13	103429301 <i>16-3</i>	adhesive, guide ring 17-3
	5-17	103429501 <i>16-3</i>	adjuster
103359401	13-21	103429601 <i>16-3</i>	hydraulic brake 17-7
103364101	1-13	103429701 <i>16-3</i>	adjuster, lash 8-11
103364201	1-13	103434001 <i>16-3</i>	air box <i>9-13</i>
103364801	5-19	103439901 <i>16-3</i>	air box top 9-13
103365401	1-21	103477901 <i>5-7</i>	air filter 9-13
103365402	1-21	103496801 <i>6-15</i>	air intake hose 9-13
103365403	1-21	103507101 <i>9-17</i>	ammeter 16-3, 16-5, 16-7, 16-9, 16-11
103365404	1-21	103507201 <i>9-17</i>	anti-sway bar 5-19
103365405	1-21	103507301 <i>9-17</i>	A-plate strap 5-13
103365407	1-21	103517401 <i>16-3</i>	A-plate, delta 5-13
103365409	1-21	103517601 <i>16-5</i>	arbor <i>17-3</i>
103365501	1-11	103520301 <i>9-13</i>	arm
103365502	1-11	103572501 <i>14-5</i>	governor 12-3
103365503	1-11	103601501 <i>5-11</i>	pivot 12-3
103365504	1-11	103601601 <i>5-3</i>	rocker <i>7-9</i> , 8-9
103365505	1-11	103615601 7-9	armature 6-11, 14-3, 14-5
103365507	1-11	103615701 7-9	armature conversion kit 6-11
103365509	1-11	103615801 <i>7-13</i>	armrest 1-31, 1-33, 1-35, 1-37, 1-39
103372101	•	103615901 <i>7-11</i>	assembly
103372302	•	103616201 <i>7-13</i>	accelerator bracket and bearing 4-9, 4-11
103377201	4-7	103616301 7-9	accelerator pivot rod 4-9, 4-11
103377301	4-7	103616401 <i>7-11</i>	air box 9-13
103378301	1-39	103616501 7-7	air box top 9-13
103378302	1-39	103616601 7-7	armature 6-11
103386202	7-5	103616701 7-7	axle 12-7
103389101	3-7	103616801 7-7	backrest 1-35, 1-39
103389201	3-7	103616901 <i>9-15</i>	bearing, steering shaft 5-3
103389301	3-7	103651901 <i>9-5</i>	bell crank and shaft 6-9
103389401 103390201	3-7	103651902 9-3	brake lever 4-3 brush connector 6-11
	13-21	103653401 <i>5-11</i> 103717001 <i>16-3</i>	brush holder 6-11
103390801 103395101	1-17 1-13	103717001 <i>16-3</i> 103717002 <i>16-3</i>	carburetor 9-7
103393101		103717002 76-3 103717003 16-3	connecting rod 7-13, 8-13
	1-9	103776901 <i>9-5</i>	cylinder head 8-9
	1-9	103776902 9-3	delta A-plate 5-13
103405501	5-9	103779601 16-3	delta shock and gear support 5-13
103410401	1-27	103781201 9-3	drive hub 11-3
103410501	1-23	96704416 7-15, 8-15	driven clutch 11-7
103410601	1-29	36761116 7 1376 13	driven clutch fixed-face 11-7
103410701	1-25	Α	field coil 6-11
103410803	1-29		float 9-7
	1-25, 1-29	AC cord 16-5, 16-7, 16-9, 16-11 AC cord bushing 16-3, 16-5	frame and field (motor) 14-5
	1-23, 1-27	AC cord bushing 76-3, 76-3	fuel tank vent 9-3, 9-5
	1-23, 1-25, 1-27, 1-29	AC cordset 16-3	governor 12-5
	1-23, 1-25, 1-27, 1-29	accelerator bracket and bearing assembly 4-9,	headlight <i>6-7,13-7</i>
103411501	1-3	4-11	headlight harness 6-7, 13-7
	1-3	accelerator cable 9-11	idle screw 9-7
103414901	16-5, 16-7	accelerator pedal 4-9, 4-11	inner ball joint 5-5, 5-11
103428501	16-3	accelerator pedal adjustment tool 17-3	kingpin <i>5-13</i>
103428601	16-3	accelerator pivot rod 4-9, 4-11	moveable-face <i>11-3, 11-7</i>
103428701	16-3	accelerator return spring 4-9, 4-11	pilot air screw 9-7
103429001	16-3	accelerator rod 4-13	plug cap 7-7, 8-5



GET STARTED

rcn	DOX	and	II WIII	Tina	tne	part	you	are	looking
								IN	

bearing puller wedge 17-3
bearing retainer 14-3
bearing seat 5-3
bed, box 1-43
bell crank and shaft 6-9
bellows 5-5, 5-11
belt, drive 11-5
belt, starter/generator 6-13, 11-3
beverage holder 1-19
bezel, headlight 6-7, 13-7
block, brake-mounting 4-5
block, fuse 6-9
body kick plate 1-11, 1-21
body, front 1-7, 1-23, 1-25, 1-27, 1-29
bolt, J- 13-13
bolt, U- 5-19
boot, steering column 1-15, 1-17, 5-3
boot, switch 6-17, 13-15
bottom, air box 9-13
box
air <i>9-13</i>
electrical component 6-9
steering gear 5-5, 5-11
box bed <i>1-43</i>
box, electrical component 6-9, 13-21
brace, canopy 1-13
bracket 5-19
accelerator cable 9-11
adjustable starter/generator 6-13
governor cable 9-11
headlight mounting 6-7, 13-7
hour meter 13-17
muffler mounting 10-3
oil filter mount 7-3, 8-7
oil level switch 7-11, 8-11
relay mounting 16-9
RPM limiter 8-5
shifter 12-3
snubber <i>7-15</i> , <i>8-15</i>
stabilizer bar mounting 5-19
starter/generator mounting 6-13
steering column 5-3
steering column mounting 5-3
throttle spring return 9-9, 9-17
Tow/Run switch 6-17, 13-15
bracket, carburetor intake manifold 9-17
brake adjusting mechanism 4-3
brake adjustment tool 17-3
brake backing plate 4-3
brake cable 4-7
brake cable equalizer 4-7
brake cable release tool 17-3
brake cluster 4-3
brake drum 4-3
brake lever 4-3
brake mounting block 4-5

brake pedal 4-5
brake pedal adjustment tool 17-3
brake pedal pad 4-5
brake pedal tension tool 17-3
brake return spring 4-7
brake self-adjusting mechanism 4-3
brake shoe 4-3
brake spring 4-3
breaker, circuit 16-3, 16-5, 16-7, 16-9, 16-11
breather 12-3, 15-3
brush 14-3, 14-5
brush and screw set 6-11
brush box assembly 14-5
brush connector 6-11
brush guard support 5-15
brush holder 6-11
brush inspection port cover 6-11
brush port cover 6-11
brush rigging 14-3, 14-5
brush spring 14-3, 14-5
brush spring set 6-11
bulb, headlight <i>6-7</i> , <i>13-7</i>
bumper
cast <i>1-3</i>
drive unit (motor) 14-3, 14-5
rubber 4-5
spring return 4-9, 4-11
bushing 11-3
AC cord 16-3, 16-5
bronze <i>5-7</i>
nylon <i>4-5</i>
return line 9-3, 9-5
spindle 5-7
stabilizer bar 5-19
steel 5-13, 5-21
urethane <i>5-13, 5-21</i>
bushing support 5-19
bushing, insulated 14-3
button, choke 9-13
button, drive 11-7
buzzer, reverse 1-15, 1-17
c
cable
accelerator 9-11
brake 4-7
FNR shifter 12-9
governor 9-11
IQDM 17-7
calibration test module 17-3
cam
driven clutch 11-7

electrical component box 6-9

cam installation tool 17-3

camshaft shim 7-11, 8-11

camshaft 8-11

bearing puller 17-3



GET STARTED


canopy 1-23, 1-27
canopy brace 1-13
canopy support 1-23, 1-25, 1-27, 1-29
canopy trim plate 1-23, 1-25, 1-27, 1-29
cap
dust <i>1-15</i>
key switch 1-15, 1-17
plug <i>7-7</i> , 8-5
carburetor 9-7
carburetor adapter 9-17
carburetor float level tool 17-7
carburetor gasket 9-9, 9-17
carburetor insulator 9-9, 9-17, 14-3
carburetor mounting gasket 9-9, 9-17
card, safety first 17-9
cargo box 1-43
case
battery charger 16-5, 16-7, 16-9, 16-11
differential gear 12-7
_
gear <i>12-3, 15-3</i> rocker <i>8-9</i>
case, charger 16-3
cast bumper 1-3
charger bezel tool 17-3
charger board relay 16-3
charger case 16-3
charger hardware 16-3
charger legs 16-3
charger receptacle 13-11
charger wires 16-3
charger, battery 16-5, 16-7
choke button 9-13
choke lever 9-13
choke lever guide 9-13
choke positioner 9-13
choke valve 9-13
circuit breaker 16-3, 16-5, 16-7, 16-9, 16-11
clamp
battery 6-15
cable retaining 9-11
hose 9-3, 9-5, 9-9, 9-13, 9-17
muffler hose 10-3
clevis, upper delta 5-13
clip, meter 1-17
cluster idler gear 12-5
cluster, brake 4-3
clutch alignment tool 17-5
clutch pulley 11-3
clutch removal tool 17-3
clutch repair kit 11-7
clutch tool kit 17-5
clutch weight 11-3
clutch, drive 11-3
clutch, driven 11-7
coil, field 6-11

coil, ignition 8-5

collet 7-9, 8-9
column, steering 5-3
communication display module 17-5
component box, electrical 6-9
component mounting plate 13-21
compression gauge 17-5
compression mount 5-19
compression spring 9-13
compressor, piston ring 17-9
compressor, valve spring 17-11
computer, onboard 13-21
connecting rod <i>7-13, 8-13</i>
connector, a- 6-11
continuity tester 17-5
controller cover 13-21
controller cover gasket 13-21
cord connector 7-11, 8-11
cord set. DC 16-5
cord, AC 16-5, 16-7, 16-9, 16-11
cord, DC 16-7, 16-9, 16-11
Cordset
PD3, AC 114" <i>16-3</i>
PD3, AC 80" 16-3
PD3, DC 113" 16-3
PD3, DC 154" 16-3
PD3, DC 205" 16-3
counterbalance guide shaft 7-13, 8-13
counterbalance weight 7-13, 8-13
cover
brush inspection port 6-11
brush port 6-11
crankcase 7-11, 8-11
dust 4-3
electrical box 6-9
oil pump 7-3, 8-7
screw head 1-15, 1-17 steering column 5-3
5 · · · · · ·
cover gasket, controller 13-21 cover plate 14-5
cover, controller 13-21
cover, controller 13-21 cover, speed controller 13-21
cover, controller 13-21 cover, speed controller 13-21 cowl 1-7, 1-23, 1-25, 1-27, 1-29
cover, controller 13-21 cover, speed controller 13-21 cowl 1-7, 1-23, 1-25, 1-27, 1-29 cowl support 1-13
cover, controller 13-21 cover, speed controller 13-21 cowl 1-7, 1-23, 1-25, 1-27, 1-29 cowl support 1-13 crankcase 8-13
cover, controller 13-21 cover, speed controller 13-21 cowl 1-7, 1-23, 1-25, 1-27, 1-29 cowl support 1-13 crankcase 8-13 crankcase cover 7-11, 8-11
cover, controller 13-21 cover, speed controller 13-21 cowl 1-7, 1-23, 1-25, 1-27, 1-29 cowl support 1-13 crankcase 8-13 crankcase cover 7-11, 8-11 crankcase vent tube 9-9, 9-17
cover, controller 13-21 cover, speed controller 13-21 cowl 1-7, 1-23, 1-25, 1-27, 1-29 cowl support 1-13 crankcase 8-13 crankcase cover 7-11, 8-11 crankcase vent tube 9-9, 9-17 crankshaft 7-13, 8-13
cover, controller 13-21 cover, speed controller 13-21 cowl 1-7, 1-23, 1-25, 1-27, 1-29 cowl support 1-13 crankcase 8-13 crankcase cover 7-11, 8-11 crankcase vent tube 9-9, 9-17 crankshaft 7-13, 8-13 crankshaft rod 7-13, 8-13
cover, controller 13-21 cover, speed controller 13-21 cowl 1-7, 1-23, 1-25, 1-27, 1-29 cowl support 1-13 crankcase 8-13 crankcase cover 7-11, 8-11 crankcase vent tube 9-9, 9-17 crankshaft 7-13, 8-13 crankshaft rod 7-13, 8-13 crankshaft shim 7-13, 8-13
cover, controller 13-21 cover, speed controller 13-21 cowl 1-7, 1-23, 1-25, 1-27, 1-29 cowl support 1-13 crankcase 8-13 crankcase cover 7-11, 8-11 crankcase vent tube 9-9, 9-17 crankshaft 7-13, 8-13 crankshaft rod 7-13, 8-13 C-type stop ring 5-5, 5-11
cover, controller 13-21 cover, speed controller 13-21 cowl 1-7, 1-23, 1-25, 1-27, 1-29 cowl support 1-13 crankcase 8-13 crankcase cover 7-11, 8-11 crankcase vent tube 9-9, 9-17 crankshaft 7-13, 8-13 crankshaft rod 7-13, 8-13 crankshaft shim 7-13, 8-13 C-type stop ring 5-5, 5-11 cup holder 1-19
cover, controller 13-21 cover, speed controller 13-21 cowl 1-7, 1-23, 1-25, 1-27, 1-29 cowl support 1-13 crankcase 8-13 crankcase cover 7-11, 8-11 crankcase vent tube 9-9, 9-17 crankshaft 7-13, 8-13 crankshaft rod 7-13, 8-13 crankshaft shim 7-13, 8-13 C-type stop ring 5-5, 5-11 cup holder 1-19 cup, spring 4-9, 4-11
cover, controller 13-21 cover, speed controller 13-21 cowl 1-7, 1-23, 1-25, 1-27, 1-29 cowl support 1-13 crankcase 8-13 crankcase cover 7-11, 8-11 crankcase vent tube 9-9, 9-17 crankshaft 7-13, 8-13 crankshaft rod 7-13, 8-13 crankshaft shim 7-13, 8-13 C-type stop ring 5-5, 5-11 cup holder 1-19 cup, spring 4-9, 4-11 current limiter 16-11
cover, controller 13-21 cover, speed controller 13-21 cowl 1-7, 1-23, 1-25, 1-27, 1-29 cowl support 1-13 crankcase 8-13 crankcase cover 7-11, 8-11 crankcase vent tube 9-9, 9-17 crankshaft 7-13, 8-13 crankshaft rod 7-13, 8-13 crankshaft shim 7-13, 8-13 C-type stop ring 5-5, 5-11 cup holder 1-19 cup, spring 4-9, 4-11

D
damper, RPM limiter 8-5
dash 1-15, 1-17
dash component 1-15, 1-17
dash panel 1-15, 1-17
DC cord 16-7, 16-9, 16-11
DC cord set 16-5
DC cordset 16-3
decal
battery danger 3-3
bed load warning 3-3, 3-5
box bed warning 1-43
Club Car 3-7
component cover 3-3, 13-21
dash warning 3-3, 3-5
driver/passenger 3-5
FNR 1-15, 1-17
frame ground 3-5
on/off 1-15, 1-17, 3-3, 3-5
operating instructions 3-3, 3-5
operating instructions (electric) 1-15
rollover warning 1-17
rotating parts 1-11, 3-5
run/service switch 6-17
Tow/Run switch warning 3-3 trailer hitch 3-3, 3-5
young driver warning 3-3, 3-5
delta A-plate 5-13
delta A-plate sub-assembly 5-13
delta shock and gear support 5-13
desiccant bag 11-3
DF-terminal insulator 6-11
diagnostic port 1-15
diesel tachometer probe 17-9
differential
drive unit 15-3
differential gear 12-7, 15-3
differential gear case 12-7
differential guard 12-11, 15-5
differential housing 15-3
differential idler gear 12-7
differential pin 12-7
diode 6-9
dipstick 7-5, 8-3 drain plug 7-3, 8-7
drain plug
drink holder 1-19
drive bar 13-9
drive belt 11-5
drive button 11-7
drive clutch 11-3
drive clutch button 11-3
drive clutch fixed sheave tool 17-5
drive clutch fixed-face 11-3
drive clutch holder tool 17-5

 GET STARTED _



drive clutch hub puller 17-5	fill plug 12-3	gauge, fuel-hour 1-17
drive clutch puller 17-5	filter	gear
drive clutch spider removal tool 17-5	air <i>9-13</i>	case 12-3, 15-3
drive clutch spring 11-3	fuel 9-3	cluster idler 12-5
drive clutch weight 11-3	oil <i>7-3</i> , 8-7	differential 12-7, 15-3
drive hub 11-3	oil pump 7-3, 8-7	differential idler 12-7, 15-3
drive unit bumper 14-3, 14-5	fitting, thread-forming grease 5-5, 5-7	differential output 15-3
drive unit guard 12-11, 15-5	fixed-face, drive clutch 11-3	helical 7-13, 8-13, 12-5, 12-7
driven clutch 11-7	fixed-face, driven clutch 11-7	spur <i>7-13</i> , <i>8-13</i> , <i>12-5</i>
driven clutch button 11-7	float 9-7	synchro 12-5
driven clutch cam 11-7	floor mat 1-41	gear yoke 17-7
driven clutch cam puller 17-5	flywheel 8-5	governor 12-5
driven clutch fixed-face assembly 11-7	flywheel fan 7-7, 8-5	governor arm 12-3
driven clutch puller plug 17-5	flywheel fan plate 7-7, 8-5	governor cable 9-11
driven clutch spring compression base tool	flywheel puller 17-7	governor cable bracket 9-11
17-5	FNR closeout brush 1-17	governor shaft installation tool 17-7
driven clutch spring compression collar tool	FNR shifter cable 12-9	grommet <i>9-3, 9-5</i>
17-5	foam, seat 1-31, 1-33, 1-35, 1-37	guard, differential 12-11, 15-5
driven clutch spring compression nut tool	fork, shift 12-5	guide
17-5	frame and field assembly (motor) 14-5	choke lever 9-13
driver, drive clutch 11-3	front body 1-7, 1-23, 1-25, 1-27, 1-29	intake valve 8-9
drum, brake 4-3	front body support 1-11, 1-21	valve 8-9
dry moly lubricant 17-7	front hub 5-7	valve seat cutter 17-11
dust cap 1-15	front spring retainer plate 5-15	guide ring adhesive 17-3
dust cover 4-3	F-terminal hardware 6-11	ggg
	f-terminal insulator 6-11	н
E	fuel filter 9-3	
eccentric adjustment screw 5-13	fuel gauge sending unit 9-5	handle, battery charger 16-5
E-clip 4-7	fuel line 9-3, 9-5, 9-9, 9-17	hardware kit, charger 16-3
electrical box cover 6-9	fuel meter 1-17	hardware, F-terminal 6-11
electrical component box 6-9, 13-21	fuel tank 9-5	harness, wire 6-5, 6-9, 13-5, 13-21
end bell, commutator 6-11	fuel tank strap 9-3	head gasket 7-9, 8-9
end bell, output shaft 6-11	fuel tank vent 9-3, 9-5	head, cylinder 8-9
end cap, motor 14-3, 14-5	fuse 13-11, 16-7, 16-9, 16-11	headlight assembly 6-7, 13-7
end shield	10-amp 6-9	headlight bulb 6-7, 13-7
motor 14-3	20-amp <i>6-9</i>	headlight harness 6-7, 13-7
engine mounting plate 7-15, 8-15	'	headlight retainer 6-7, 13-7
engine shroud 7-5, 8-3	3/8-amp 13-11	heatsink 16-5
engine, FE350 CW without ACR 8-3	charger 16-3, 16-5	heatsink and rectifier 16-7, 16-9, 16-11
engine, FE350 S27 7-5	fuse block 6-9	helical gear 7-13, 8-13, 12-5, 12-7
equalizer rod 4-7	•	hill brake rod 4-5
equalizer, brake cable 4-7	G	hill brake weld assembly 4-5
exhaust system 10-3	gasket <i>15-3</i>	hinge plate 1-11, 1-21, 1-31, 1-33, 1-35, 1-37
exhaust valve 7-9, 8-9	carburetor 9-9, 9-17	hold-down, battery, 12-volt 13-13
extrusion 13-21	carburetor mounting 9-7, 9-9, 9-17	holder, cup 1-19
extrusion, fender 1-3	crankcase cover 7-9, 8-9, 8-11	hole plug 1-15
extrasion, remacr	drain plug 7-3, 8-7, 12-3	hose, air intake 9-13
F	exhaust 7-9, 8-9, 10-3	hose, fuel 9-3
		h 1 17 13 17
	head <i>7-9</i> , 8-9	hour meter 1-17, 13-17
face, moveable 11-3, 11-7	head <i>7-9, 8-9</i> insulator <i>7-9, 8-9, 9-9, 9-17</i>	housing
face, moveable 11-3, 11-7 fan housing 7-5, 8-3 fan shroud 7-5, 8-3	•	

differential 15-3

fan 7-5, 8-3

hub 5-7

field coil 6-11

hub and spindle 5-7

fan, flywheel 7-7, 8-5

fender extrusion 1-3

field coil housing 6-11

fender, inner 1-5

field coil 6-11

sending unit 9-5

gasket kit, FE350 7-9, 8-9

gauge, compression 17-5

seat 1-31, 1-33, 1-35, 1-37

gasket, controller cover 13-21



hub, front 5-7

hub, synchronizer clutch 12-5

CartPros directs you to the right part using the part numbers from this manual. Enter the part number into

GET STARTED

https://CartPros.com/f.html

earch	pox	and	It Will	find	the	part	you	are	100	ang
								ΙN	U	E)

hubcap <i>5-7</i>
hydraulic brake adjuster 17-7
hydrometer 17-7
,
1
1
idle screw assembly 9-7
idler bearing 11-3
idler gear, differential 15-3
ignition coil 8-5
inner frame snubber 7-15, 8-15
input shaft 15-3
insert, synchronizer 12-5
instrument panel 1-15, 1-17
insulated bushing 14-3
insulator gasket 7-9, 8-9, 9-9, 9-17
insulator, battery 1-21
insulator, carburetor <i>9-9</i> , <i>9-17</i> , <i>14-3</i>
intake pipe 9-9
intake valve 8-9
intermediate shaft 15-3
internal retaining ring pliers 17-7
IQ display module (IQDM) 17-7
J
_
J-bolt 13-13
jet, main 9-7, 9-15
jet, pilot 9-7
joint
ball 4-5, 4-13, 12-9
left-hand thread ball 5-5
steering 5-13
steering 5-15
17
K
key
crankshaft 7-7, 7-13, 8-5, 8-13
driven clutch 11-7
On/Off 1-15, 1-17
•
square 11-7
starter/generator 6-11
woodruff 12-3
key switch 1-17
key switch cap 1-15, 1-17
key switch, On/Off 1-15
KEV SWIICH, CIH/CIH 1-13
,
kick plate, body 1-11, 1-21
kick plate, body 1-11, 1-21 kingpin 5-13
kick plate, body 1-11, 1-21 kingpin 5-13 kit
kick plate, body 1-11, 1-21 kingpin 5-13
kick plate, body 1-11, 1-21 kingpin 5-13 kit
kick plate, body 1-11, 1-21 kingpin 5-13 kit 2-pin housing 13-9
kick plate, body 1-11, 1-21 kingpin 5-13 kit 2-pin housing 13-9 3-pin housing 13-9, 14-3, 14-5 accelerator pivot rod 4-9, 4-11
kick plate, body 1-11, 1-21 kingpin 5-13 kit 2-pin housing 13-9 3-pin housing 13-9, 14-3, 14-5 accelerator pivot rod 4-9, 4-11 air duct repair tape 9-13
kick plate, body 1-11, 1-21 kingpin 5-13 kit 2-pin housing 13-9 3-pin housing 13-9, 14-3, 14-5 accelerator pivot rod 4-9, 4-11 air duct repair tape 9-13 brake cable 4-7
kick plate, body 1-11, 1-21 kingpin 5-13 kit 2-pin housing 13-9 3-pin housing 13-9, 14-3, 14-5 accelerator pivot rod 4-9, 4-11 air duct repair tape 9-13

brake shoe retainer 4-3
clutch repair 11-7
differential gear case 12-7
drive clutch button 11-3
drive clutch weight 11-3
driven clutch button 11-7
front hub replacement 5-7
fuel tank 9-5
IQ display module (IQDM) 17-7
magnet and bearing 14-3
motor brush 14-5
motor brush spring 14-5
motor cover plate 14-5
motor speed sensor 14-5
motor terminal hardware 14-5
park brake latch 4-5
park brake pedal 4-5
PD3 Cordest, AC 114" 16-3
PD3 Cordest, AC 80" 16-3
PD3 Cordest, DC 113" 16-3
PD3 Cordest, DC 154" 16-3
PD3 Cordest, DC 205" 16-3
PD3 hardware 16-3
PD3 wiring 16-3
shock absorber cushion 5-17
tune-up <i>17-9</i>
knob, forward/reverse 12-9
•
L
lash adjuster 8-11
lash adjuster 8-11 latch, air box 9-13
latch, air box 9-13 latch, park brake 4-5
latch, air box 9-13
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19 legs, charger 16-3
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19 legs, charger 16-3 lens, headlight 6-7, 13-7 lever
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19 legs, charger 16-3 lens, headlight 6-7, 13-7 lever change 12-3
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19 legs, charger 16-3 lens, headlight 6-7, 13-7 lever change 12-3 choke 9-13
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19 legs, charger 16-3 lens, headlight 6-7, 13-7 lever change 12-3
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19 legs, charger 16-3 lens, headlight 6-7, 13-7 lever change 12-3 choke 9-13 transmission shifter 12-3 light
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19 legs, charger 16-3 lens, headlight 6-7, 13-7 lever change 12-3 choke 9-13 transmission shifter 12-3 light battery 1-15
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19 legs, charger 16-3 lens, headlight 6-7, 13-7 lever change 12-3 choke 9-13 transmission shifter 12-3 light battery 1-15 oil 1-17
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19 legs, charger 16-3 lens, headlight 6-7, 13-7 lever change 12-3 choke 9-13 transmission shifter 12-3 light battery 1-15 oil 1-17 limit switch 6-9
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19 legs, charger 16-3 lens, headlight 6-7, 13-7 lever change 12-3 choke 9-13 transmission shifter 12-3 light battery 1-15 oil 1-17 limit switch 6-9 limiter
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19 legs, charger 16-3 lens, headlight 6-7, 13-7 lever change 12-3 choke 9-13 transmission shifter 12-3 light battery 1-15 oil 1-17 limit switch 6-9 limiter current 16-11
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19 legs, charger 16-3 lens, headlight 6-7, 13-7 lever change 12-3 choke 9-13 transmission shifter 12-3 light battery 1-15 oil 1-17 limit switch 6-9 limiter current 16-11 RPM 8-5
latch, air box 9-13 latch, park brake 4-5 leaf spring 5-13, 5-19 legs, charger 16-3 lens, headlight 6-7, 13-7 lever change 12-3 choke 9-13 transmission shifter 12-3 light battery 1-15 oil 1-17 limit switch 6-9 limiter current 16-11

link, stabilizer bar 5-19 liquid gasket 12-3, 15-3, 17-7 low oil warning light 1-17 lubricant, dry moly 17-7

lug stud 5-7, 12-7, 15-3

lug nut 2-3

lubricant, moly-teflon 14-3, 14-5, 17-7

M
magnet and bearing kit 14-3
magnet, speed sensor 14-3, 14-5
main jet 9-7, 9-15
maintenance/operation switch 6-17
mat, floor 1-41
MCOR 13-9
mechanism, brake adjusting 4-3
meter clip 1-17
meter, hour 13-17
meter, volt ohm 17-11
module
calibration test 17-3
communication display 17-5
moly-teflon lubricant 17-7
motor
48-volt <i>14-3</i>
48-volt IQ <i>14-5</i>
motor armature 14-3
motor brush 14-3
motor brush kit 14-5
motor brush spring kit 14-5
motor bumper 14-3, 14-5
motor end cap 14-3, 14-5
motor end shield 14-3
motor magnet, speed sensor 14-3, 14-5
motor speed sensor 14-3, 14-5 motor speed sensor kit 14-5
motor stator shell and winding 14-3
motor terminal hardware kit 14-5
mount, compression 5-19
mounting block, brake 4-5
moveable-face 11-3, 11-7
muffler hose clamp 10-3
P
N
needle bearing 12-5
nozzle, main 9-7
nut, lug <i>2-3</i>
, 3
0
OBC 13-21
OBC, onboard computer 13-21
oil filler tube 7-5, 8-3
oil filter 7-3, 8-7
oil filter mount bracket 7-3, 8-7
oil filter screen 7-11, 8-11
oil filter screen plate 7-11, 8-11
oil level sensor 7-11, 8-11
oil level switch bracket 7-11, 8-11
oil pump and rotor 7-3, 8-7
oil pump cover 7-3, 8-7

oil pump filter 7-3, 8-7

oil pump plate 7-3, 8-7

oil seal 7-9, 7-11, 7-13, 8-9, 8-11, 8-13, 12-3,



INDEX

GET STARTED

12-5
oil warning light, low 1-17
onboard computer 13-21
operation/maintenance switch 6-17
O-ring 7-5, 7-9, 7-11, 7-13, 8-3, 8-9, 8-11, 8-13
P
pad
accelerator pedal 4-9, 4-11
brake pedal 4-5
park brake 4-5
paint, touch-up 17-7
panel, instrument 1-15, 1-17
park brake latch 4-5
park brake pedal 4-5
park brake rod sleeve 4-5
park brake spacer 4-5
park brake torsion spring 4-5
pawl <i>4-5</i>
pedal, accelerator 4-9, 4-11
pedal, brake 4-5
pedal, park brake 4-5
pilot air screw assembly 9-7
pilot jet 9-7
pin, differential 12-7
pin, piston 7-13, 8-13
pinion, steering 5-5, 5-11
pipe, intake 9-9
piston 7-13, 8-13
piston pin 7-13, 8-13
piston ring 7-13, 8-13
piston ring compressor 17-9
piston ring pliers 17-9
piston ring set 7-13, 8-13
pivot arm 12-3
pivot support bearing 4-9, 4-11 plate
backing (brake) 4-3
body kick 1-11, 1-21
component mounting 13-21
cover 14-5
engine mounting <i>7-15</i> , <i>8-15</i>
flywheel fan 7-7, 8-5
front spring retainer 5-15
hinge 1-11, 1-21, 1-31, 1-33, 1-35, 1-37
oil filter screen 7-11, 8-11
oil pump 7-3, 8-7
receptacle backing 13-11
spring mounting 5-15
thrust 12-5, 12-7
plate, canopy trim 1-23, 1-25, 1-27, 1-29
plate, steering wheel center 5-9
pliers
internal retaining ring 17-7
piston ring 17-9

plug
drain <i>7-3, 8-7</i>
driven clutch puller 17-5
fill 12-3
hole <i>1-15</i>
spark 8-5
plug cap 7-7, 8-5
plug, carburetor intake manifold 9-17
plug, spark 7-7
pole set 6-11
port, diagnostic 1-15
positioner, choke 9-13
press weldment 17-5
protector spray, battery terminal 17-3
puller
bearing 17-3
clutch 17-3
drive clutch 17-5
drive clutch hub 17-5
driven clutch cam 17-5
flywheel 17-7
seal <i>17-9</i>
special use tool 17-9
pulley
clutch 11-3
starter-generator 6-11
push rod 7-9, 8-9
R
R rack and pinion drag link 5-5, 5-13
R rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11
R rack and pinion drag link 5-5, 5-13
R rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5
R rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9
R rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5
R rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9
R rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11
R rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11 rectifier with heatsink 16-7, 16-9, 16-11
R rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11 rectifier with heatsink 16-7, 16-9, 16-11 regulator, voltage 6-9
R rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11 rectifier with heatsink 16-7, 16-9, 16-11 regulator, voltage 6-9 relay 16-9, 16-11
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11 rectifier with heatsink 16-7, 16-9, 16-11 regulator, voltage 6-9 relay 16-9, 16-11 relay mounting bracket 16-9
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11 rectifier with heatsink 16-7, 16-9, 16-11 regulator, voltage 6-9 relay 16-9, 16-11 relay mounting bracket 16-9 relay, charger board 16-3
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11 rectifier with heatsink 16-7, 16-9, 16-11 regulator, voltage 6-9 relay 16-9, 16-11 relay mounting bracket 16-9 relay, charger board 16-3 remover, bearing and oil seal 17-3
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11 rectifier with heatsink 16-7, 16-9, 16-11 regulator, voltage 6-9 relay 16-9, 16-11 relay mounting bracket 16-9 relay, charger board 16-3 remover, bearing and oil seal 17-3 resistor assembly 13-21
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11 rectifier with heatsink 16-7, 16-9, 16-11 regulator, voltage 6-9 relay 16-9, 16-11 relay mounting bracket 16-9 relay, charger board 16-3 remover, bearing and oil seal 17-3 resistor assembly 13-21 retainer
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11 rectifier with heatsink 16-7, 16-9, 16-11 regulator, voltage 6-9 relay 16-9, 16-11 relay mounting bracket 16-9 relay, charger board 16-3 remover, bearing and oil seal 17-3 resistor assembly 13-21 retainer accelerator pedal spring 4-9, 4-11
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11 rectifier with heatsink 16-7, 16-9, 16-11 regulator, voltage 6-9 relay 16-9, 16-11 relay mounting bracket 16-9 relay, charger board 16-3 remover, bearing and oil seal 17-3 resistor assembly 13-21 retainer accelerator pedal spring 4-9, 4-11 bearing 14-3
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11 rectifier with heatsink 16-7, 16-9, 16-11 regulator, voltage 6-9 relay 16-9, 16-11 relay mounting bracket 16-9 relay, charger board 16-3 remover, bearing and oil seal 17-3 resistor assembly 13-21 retainer accelerator pedal spring 4-9, 4-11 bearing 14-3 brake shoe 4-3
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11 rectifier with heatsink 16-7, 16-9, 16-11 regulator, voltage 6-9 relay 16-9, 16-11 relay mounting bracket 16-9 relay, charger board 16-3 remover, bearing and oil seal 17-3 resistor assembly 13-21 retainer accelerator pedal spring 4-9, 4-11 bearing 14-3 brake shoe 4-3 headlight 6-7, 13-7
rack and pinion drag link 5-5, 5-13 rack guide pressure spring 5-5, 5-11 rack, steering 5-5, 5-11 ratchet, park brake 4-5 reamer, valve guide 17-9 rear spring shackle 5-21 receptacle 13-11 receptacle backing plate 13-11 receptacle, AC cord 16-11 receptacle, battery charger 13-11 rectifier with heatsink 16-7, 16-9, 16-11 regulator, voltage 6-9 relay 16-9, 16-11 relay mounting bracket 16-9 relay, charger board 16-3 remover, bearing and oil seal 17-3 resistor assembly 13-21 retainer accelerator pedal spring 4-9, 4-11 bearing 14-3 brake shoe 4-3 headlight 6-7, 13-7 shock absorber cushion 5-17

return spring bumper 4-9, 4-11
reverse buzzer 1-15, 1-17
rigging, brush 14-3
rim, wheel, black 2-3
rim, wheel, silver 2-3
ring
piston <i>7-13</i> , 8-13
retaining 5-3, 6-9, 11-3, 11-7
snap 5-5, 5-11, 7-13, 8-9, 8-13
spiral backup 11-3
synchronizer 12-5
ring, C-type stop 5-5, 5-11
ring, piston 7-13, 8-13
rivet, blind push 5-9
rock guard 12-11, 15-5
rocker arm 7-9, 8-9
rocker case 8-9
rocker case gasket 7-9, 8-9
rocker shaft 7-9, 8-9
rocker switch 1-15
rod
accelerator 4-13
accelerator pivot 4-9, 4-11
connecting 7-13, 8-13
crankshaft 7-13, 8-13
equalizer <i>4-7</i>
hill brake 4-5
push 7-9, 8-9
shift <i>12-5</i>
tie <i>5-13</i>
rotor, oil pump and 7-3, 8-7
RPM limiter 8-5
RPM limiter bracket 8-5
RPM limiter damper 8-5
RPM limiter mount band 8-5
S
safety decal 3-3, 3-5

```
safety first card 17-9
score card plate 5-9
screen, oil filter 7-11, 8-11
screw, eccentric adjustment 5-13
screw, valve clearance adjuster 17-9
seal
   intake 9-13
   lip 15-3
   oil 7-9, 7-11, 7-13, 8-9, 8-11, 8-13, 12-3,
           12-5, 12-7, 15-3
   steering pinion dust 5-5, 5-11
   vertical socket dust 5-5, 5-13
seal puller 17-9
sealant 12-3, 15-3
   spring 7-9, 8-9
   valve 7-3, 8-7
```

seat bottom assembly 1-35, 1-37



retaining ring 17-9

retaining ring pliers 17-9

GET STARTED

CITC	Pui	c you	u ui c	
				 ΕX
				$ \wedge$

seat cover, vinyl 1-35, 1-37
•
seat foam 1-31, 1-33, 1-35, 1-37
seat gasket 1-31, 1-33, 1-35, 1-37
seat, bearing 5-3
sending unit, fuel gauge 9-5
sensor, motor speed 14-3, 14-5
sensor, oil level 7-11, 8-11
sensor, speed 14-3
set, brush and screw 6-11
set, pole 6-11
shackle, rear spring 5-21
shaft
change <i>12-3</i>
counterbalance guide 7-13, 8-13
input <i>15-3</i>
intermediate 15-3
rocker 7-9, 8-9
steering column 5-3
transmission 12-5
shift fork 12-5
shift rod 12-5
shifter bracket 12-3
shim, camshaft 7-11, 8-11
shim, crankshaft 7-13, 8-13
shock absorber 5-13, 5-17
,
shock absorber cushion 5-17
shock absorber cushion retainer 5-17
shoe, brake 4-3
shroud 7-5, 8-3
shroud, engine 7-5, 8-3
shroud, fan 7-5, 8-3
sleeve
delta A-plate 5-13
governor 12-5
park brake rod 4-5
synchronizer 12-5
snap ring 5-5, 5-11, 7-13, 8-9, 8-13
snubber bracket 7-15, 8-15
snubber, inner frame 7-15, 8-15
socket 5-5, 5-13
solenoid 13-21
solenoid, 12-volt 6-9
spacer 1-3
accelerator pivot rod 4-9, 4-11
park brake 4-5
spanner wrench 17-9
spark plug 7-7, 8-5
speed controller cover 13-21
speed sensor 14-3, 14-5
speed sensor magnet 14-3, 14-5
speed sensor, motor 14-3, 14-5
spindle 5-7
spindle and hub 5-7
spiral backup ring 11-3
spray, battery terminal protector 17-3
spring
, ,

accelerator return 4-9, 4-11
brake 4-3
brake return 4-7
brush 6-11, 14-3, 14-5
compression 9-13
drive button 11-3
drive clutch 11-3
driven clutch 11-7
extension return 9-13
leaf 5-13, 5-19
park brake torsion 4-5
rack guide pressure 5-5, 5-11
shifter 12-5
steering shaft compression 5-3
synchronizer 12-5
throttle return 9-9, 9-17
valve <i>7-9</i> , <i>8-9</i>
spring cup 4-9, 4-11
spring mounting plate 5-15
spur gear 7-13, 8-13, 12-5
stabilizer bar 5-19
stabilizer bar link 5-19
stabilizer bar mounting bracket 5-19
stand-offs, plastic 16-3
starter/generator 6-11
starter/generator belt 6-13, 11-3
starter/generator pulley 6-11
stator shell and winding 14-3
steel bushing 5-13, 5-21
steel pressure relief ball 7-3, 8-7
steering column 5-3
steering column bearing press tool 17-9
steering column retaining ring tool 17-9
steering gear box 5-5, 5-11
steering joint 5-13
steering pinion 5-5, 5-11
steering pinion 5-5, 5-77 steering pinion dust seal 5-5, 5-11
steering pinion dust seal 3-3, 3-11
steering tack 3-3, 3-11 steering shaft assembly 5-3
· · · · · · · · · · · · · · · · · · ·
steering shaft compression spring 5-3
steering wheel 5-9
steering wheel puller tool 17-9
stem, valve 2-3
stiffener, flywheel side 7-15, 8-15
stiffener, PTO side 7-15, 8-15
strap, A-plate 5-13
strap, fuel tank 9-3
stud 7-15, 8-15
lug 5-7, 12-7, 15-3
stud, ball 6-9, 12-3
support
brush guard 5-15
cowl <i>1-13</i>
support yoke (steering) 5-5, 5-11
support, bushing 5-19
support, front body 1-11, 1-21

tachometer probe, diesel 17-9 tank, fuel 9-5 tappet 7-11 terminal block 13-21 tester, continuity 17-5 thermometer, battery 17-3 thread-forming grease fitting 5-5, 5-7 throttle return spring 9-9, 9-17 throttle spring return bracket 9-9, 9-17 thrust bearing 5-13 thrust plate 12-5, 12-7 tie rod 5-13 tie wrap 1-15, 1-17, 5-5, 5-11, 6-9, 13-21 tire 2-3 tire and wheel assembly 2-3 toggle switch 6-17 tool accelerator pedal adjustment 17-3 belt tensioning, starter/generator 17-11 brake adjustment 17-3 brake cable release 17-3 brake pedal adjustment 17-3 brake pedal tension 17-3 cam installation 17-3 carburetor float level 17-7 charger bezel 17-3 clutch alignment 17-5 cT-wrench 17-5 drive clutch fixed sheave 17-5 drive clutch holder 17-5 drive clutch spider removal 17-5 driven clutch spring compression base 17-5

driven clutch spring compression collar

driven clutch spring compression nut 17-5

17-5



INDEX

governor shaft installation 17-7 puller, special use 17-9 steering column bearing press 17-9 steering column retaining ring steering wheel puller 17-9 transaxle axle seal 17-9 transaxle pinion seal 17-9 transmission 17-9 valve guide driver 17-9 valve seat cutter 17-5 tool kit, clutch 17-5 touch-up paint 17-7 Tow/Run switch 13-15 Tow/Run switch bracket 6-17, 13-15 transaxle 15-3 transaxle axle seal tool 17-9 transaxle guard 12-11, 15-5 transaxle housing 15-3 transaxle pinion seal tool 17-9 transaxle, unitized 12-3 transformer, battery charger 16-5, 16-7, 16-9, 16-11 transmission shaft 12-5 transmission tool 17-9 tube crankcase vent 9-9, 9-17 oil filler 7-5, 8-3 tune-up kit 17-9 turn signal lens 6-7, 13-7 T-wrench tool 17-5

U

U-bolt 5-19
unitized transaxle 12-3
upper delta clevis 5-13
urethane bushing 5-13, 5-21

V

valve choke 9-13 exhaust 7-9, 8-9 fuel pickup tube 9-5 intake 8-9 reed 7-9, 8-9 valve clearance adjuster screw 17-9 valve guide 8-9 valve guide driver tool 17-9 valve guide reamer 17-9 valve guide, intake 8-9 valve seat 7-3, 8-7 valve seat cutter 17-5, 17-11 valve seat cutter guide 17-11 valve seat cutter tool 17-5 valve seat t-wrench 17-11 valve spring 7-9, 8-9 valve spring compressor 17-11

```
valve spring retainer 7-9, 8-9
valve stem 2-3
vent barb 9-3, 9-5
vertical socket dust seal 5-5, 5-13
volt ohm meter 17-11
voltage regulator 6-9
voltage suppressor 16-7, 16-9, 16-11
warning light, low oil 1-17
wedge, bearing puller 17-3
weight
  clutch 11-3
  counterbalance 7-13, 8-13
  secondary clutch 11-3
weldment
  press 17-5
wheel and tire assembly 2-3
wheel rim, black 2-3
wheel rim, silver 2-3
wheel, steering 5-9
wire harness 6-5, 6-9, 13-5, 13-21
wiring, charger 16-3
woodruff key 12-3
wrap, tie 1-15, 1-17, 5-5, 5-11, 6-9, 13-21
wrench, spanner 17-9
```

Υ

yoke, gear 17-7 yoke, support (steering) 5-5, 5-11































