






2013 Carryall 242 & XRT 800 Illustrated Parts List

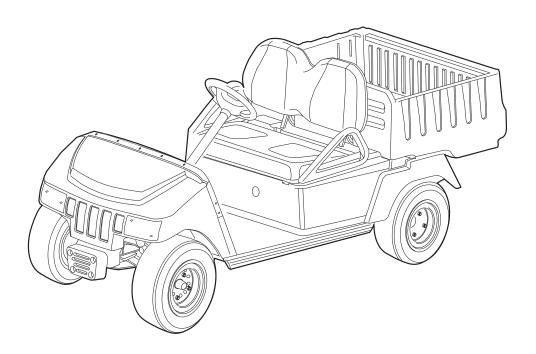

Gasoline and Electric Vehicles

Manual Number 103897326 Edition Code 0712C0912B











USING THE ILLUSTRATED PARTS LIST

A WARNING

• This manual is to be used only for identification and ordering of service parts. Be sure to read and use the maintenance and service manual before attempting any vehicle repairs.

This manual covers all 2013 Carryall 242 and XRT 800 gasoline and electric vehicles.

The manual is divided into sections. Note that there are flags on the outside edge of each page. The first flag contains the section number of which that page is a part. The other flags contain the letters G or E, signifying that the page pertains to either the gasoline vehicle, the electric vehicle, or both.

Use the Table of Contents to find the sections and pages that contain the parts and assemblies you seek. The Table of Contents lists section numbers, and under them, the individual page titles and numbers to be found in that section. The index can be used to find specific parts and assemblies. The index is divided into numerical and alphabetical listings with the page numbers in italic text.

There is a two-page spread for each individual page title in the Table of Contents. On the left-hand page is an illustration showing the parts in their relative positions; the parts are each tagged with an item number in a balloon. The right-hand page is the parts list page, and gives the page title at the top, then the item numbers (corresponding to the numbers on the illustration), part descriptions, and quantity of parts used.

Note that a part description may be indented. This indention corresponds to a parts assembly level indicated by the numbers 1, 2, 3, and 4 at the top left corner of the parts description area of the parts list page. A part that is indented to *level 2* is a component of the *level 1* part (assembly) that it is listed under. A *level 3* part is a component of the *level 2* part that it is listed under, and a *level 4* part is a component of the *level 3* part preceding it. In each case, the part quantity given for a level 2, 3, or 4 part *is the quantity used per next higher level assembly of which it is a component*. A part that is not indented is a *level 1* part. This means that the quantity given is the quantity used per the portion of the vehicle illustrated on that particular spread.

HOW TO ORDER PARTS

Replacement parts and accessories can be obtained from our network of authorized dealers and distributors. You can obtain the name and phone number of your closest authorized Club Car dealer or distributor by visiting our web site at www.clubcar.com and clicking on the "Distributor Search" link or by calling our toll-free Service Parts and Technical Assistance hotline at (800) 872-2246 or (706) 863-3000, extension 3887.



P. O. Box 204658

Augusta, Georgia 30917-4658 USA

Telephone 706-863-3000

Service Parts Fax 706-855-7413

www.clubcar.com







NOTE: This illustrated parts list represents the most current information at the time of publication. Club Car, LLC. is continually working to further improve its vehicles and other products. These improvements may affect the parts used to service the vehicle. Any modification and/or significant change in specifications will be forwarded to all Club Car and Carryall distributors/dealers and will, when applicable, appear in future editions of this illustrated parts list.

Club Car, LLC. reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.

Copyright © 2012 Club Car, LLC. Club Car and ArmorFlex are registered trademarks of Club Car, LLC. This manual effective July 18, 2012.







SECTION 1 – BODY AND TRIM	
Bumper – Gasoline Vehicles	
Bumpe – Electric Vehicles	
Brush Guard	
Front Body	
Side Trim	
Nerf Bar (Optional)	
Dash Components	
Dash Trim	
Rear Body and Fender – Gasoline Vehicle	
Rear Body and Fender – Electric Vehicle	
Access Panel	
Front Seat Bottom and Armrests	
Seat Back	
Bed Hinge	
Cargo Bed	
Wheels and Tires	
SECTION 3 – DECALS	
Safety Decals – Gasoline Vehicles	
Safety Decals – Gasoline Vehicles, Continued	
Safety Decals – Electric Vehicles	
Safety Decals – Electric Vehicles, Continued	
Logo Decals – Carryall 242	
Logo Decals – XRT 800	
SECTION 4 – BRAKE SYSTEMS	_
Rear Brake Assembly	
Brake Pedal Assembly	
Brake Cables, Equalizer, and Equalizer Rod	
Accelerator Pedal Assembly – Gasoline Vehicles	
Accelerator Pedal Assembly – Electric Vehicles	
Accelerator Pod	






Steering Column	
Steering Wheel	
Steering Gear Assembly	
Front Suspension, Upper	
Front Suspension, Lower-Gasoline Vehicles	
Front Suspension, Lower-Electric Vehicles	
Front Spindles and Hubs	
Rear Suspension	
SECTION 6 – ELECTRICAL SYSTEM – GASOLINE VEHICLES	
Wiring – Gasoline Vehicles	
Headlights	
Taillights	
Electrical Component Box-Gasoline Vehicles	
Controls and Indicators – Gasoline Vehicles	
Starter/Generator Assembly – Gasoline Vehicles	
FE350 Starter/Generator Mounting – Gasoline Vehicles	
Battery – Gasoline Vehicles	
ECTION 7 – FE350 ENGINE – S27	
FE350 Engine (AS26) – Ignition Components and Flywheel	
FE350 Engine (AS26) – Oil Circulation	
FE350 Engine (AS26) – Cylinder Head	
FE350 Engine (AS26)- Crankcase, Camshaft and Oil Sensor	
FE350 Engine (AS26) – Crankcase and Crankshaft	
FE350 Engine (AS26) – Mounting	
FE350 Engine without ACR (Automatic Compression Release) – Shrouds and Brackets	
SECTION 8 – FUEL, INTAKE, AND GOVERNOR SYSTEMS	
Fuel System	
Fuel Tank with Fuel Level Sending Unit	
Carburetor Assembly – FE350 (AS26)	
Carburetor Installation – FE350	
Governor and Accelerator Cables	
Intake Duct, Choke, and Air Box Assembly	



KNO KNO



SECTION 9 – EXHAUST SYSTEM	
Exhaust System – FE350	9-3
SECTION 10 – TORQUE CONVERTER	
Driven Clutch	10-3
Drive Clutch	10-5
SECTION 11 – TRANSAXLE AND FNR SHIFTER- GASOLINE VEHICLE	
Graziano Transaxle – Gear Cases and Levers	11-3
Graziano Transaxle – F&R Transmission and Gear Reduction	11-5
Graziano Transaxle -Differential and Axles	11-7
Forward/Reverse Shifter Assembly – Gasoline Vehicles	11-9
Forward/Reverse Shifter Cable – Gasoline Vehicles	11-11
Differential Guard	11-13
SECTION 12 – ELECTRICAL SYSTEM – ELECTRIC VEHICLES	
Wiring	12-5
Headlights	12-7
Instrument Panel Components	12-9
Motor Controller Output Regulator (MCOR)	12-1
Battery Charger Receptacle	12-13
Taillights	12-15
Batteries – 6 X 8V, Electric Vehicle	12-17
OBC, Controller, and Solenoid – Electric Vehicle	12-19
Forward/Reverse Switch, Tow/Run Switch	12-21
SECTION 13 – ELECTRIC MOTOR	
Motor (Model EJ8-4001A) – Electric Vehicle	13-3
SECTION 14 – TRANSAXLE – ELECTRIC VEHICLES	
Transaxle – Electric Vehicles	14-3
Differential Guard	14-5
SECTION 15 – BATTERY CHARGER	
PowerDrive 3 Battery Charger, Domestic	15-3
PowerDrive Battery Charger (Model 17930), Domestic	15-5
PowerDrive Rattery Charger (Model 18780) Export	15_7

 



6-3
6-5
6-7
6





BODY AND TRIM


G

1

E





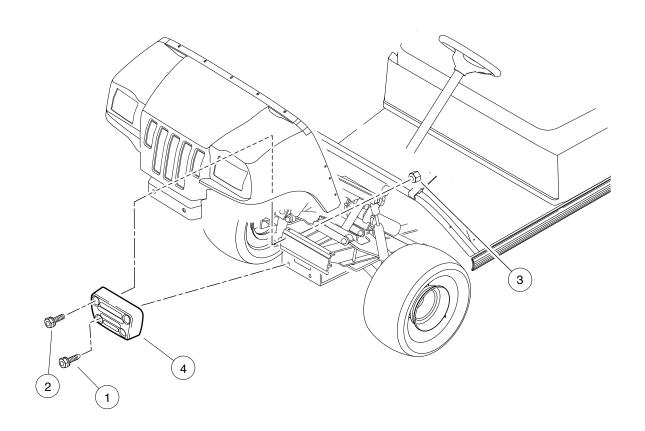







BUMPER – GASOLINE VEHICLES


		DESCRIPTION .	
TEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102289002	Screw, M8 X 1.25 X 30 Tri, Blk	2
2	102298240	Bolt, Flange Head, M8-1.25 X 40	
3	102618601	Lock Nut, Flg M8 X 1.25 Nylon	
4	102830501	Bumper, Cast	1



1

G

E

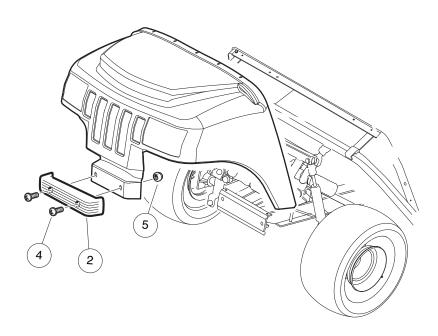








BUMPE - ELECTRIC VEHICLES

	BOMPE - ELECTRIC VEHICL		
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017080	Kit, Front Bumper (includes items 2 through 5)	1
2	1016868	Front Bumper	1
3	1016967	Blind Rivet, Push Type	2
4	7251	Screw, 5/16-18 x 1.0 Truss-Head	2
5	7473	Locknut, 5/16-18 Nylon Insert	2
	, 1, 3	Locking, 5, 10 10 Nyion insert	_
		Note: Item 3 is not used in this application.	



1

E

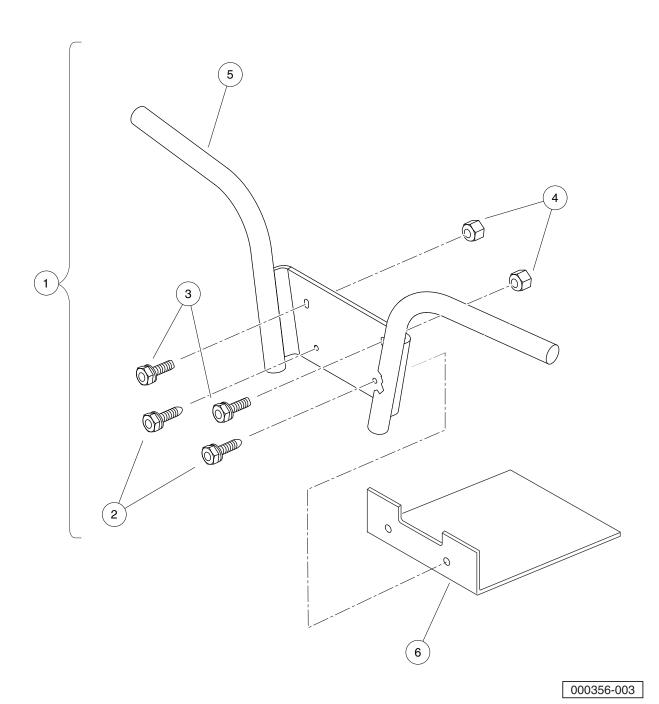








BRUSH GUARD

	DRO3FI GOA	
TEM PART NO.	DESCRIPTION	QTY
	1 2 3 4	
1 102852401	Kit, Brush Guard (includes items 2 through 6)	1
2 102289002		
3 102298240		
4 102618601	Lock Nut, Flg M8 X 1.25 Nylon	
5 102830201	Guard, Brush	
6 102830401	Support, Brush Guard	

 




DID YOU

G

Ε

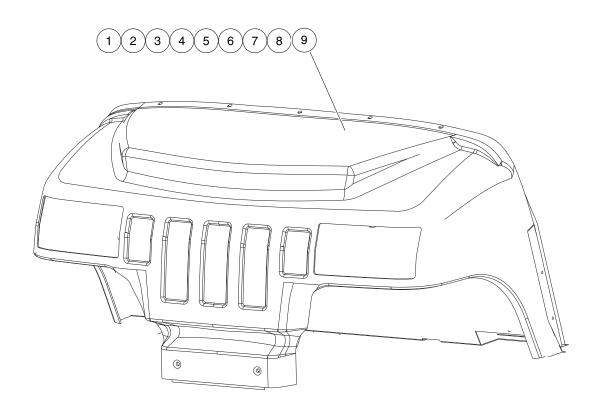








FRONT BODY

FNOINT		· ····································	
ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	103984401	Cowl, Red, Common	1
2	103984402	Cowl, Dk Green, Common	
3	103984404	Cowl, Cl Blue, Common	
4	103984405	Cowl, Black, Common	
5	103984407	Cowl, Camo Hwhd, Common	
6	103984409	Cowl, Silver, Common	
7	103984410	Cowl, White, Common	
8	103984411	Cowl, Dk Gray, Common	
9	103984412	Cowl, Beige, Common	
,	103707712	Cowi, Beige, Common	

 




DID YOU

G

E

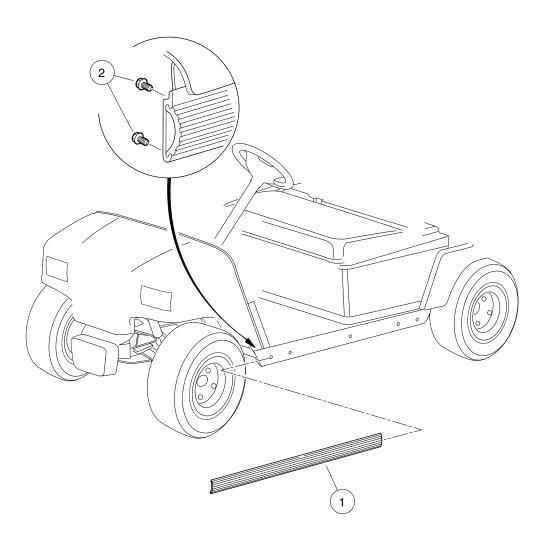







SIDE TRIM


		JIDE I		
ITEM	PART NO.	DESCRIPTION	QTY	
1	1013983	1 2 3 4 Bumper, Side Trim		
2	102310701	Screw, #8-18 x 0.375, Hex-Head Washer	8	



DID YOU

G



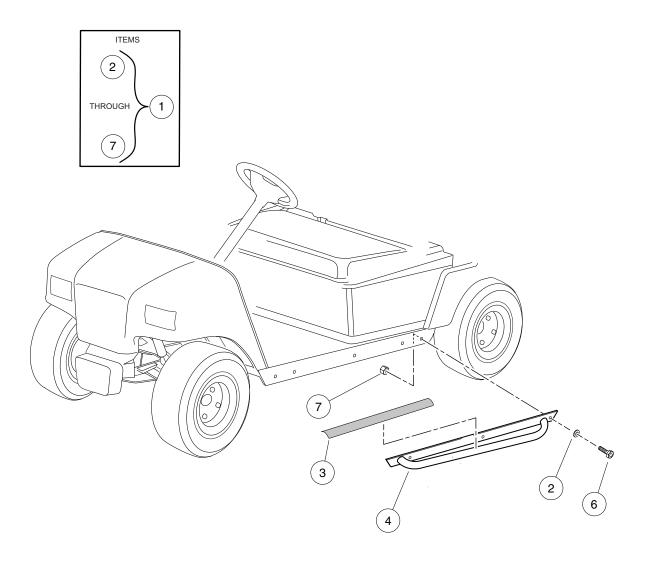








NERF BAR (OPTIONAL)

NEM BAR (OF 110			
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102829802	Kit, Nerf Bar (black) (includes items 2 through 7)	1
2	1011990	Washer, 3/8 Flat	6
3	102355102	Tape, Non-skid	2
4	102829703	Nerf Bar Assy, Driver	
5	102829704	Nerf Bar Assy, Passngr	
6	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	
7	8754	Locknut, 3/8-16 Hex	

1

G

E

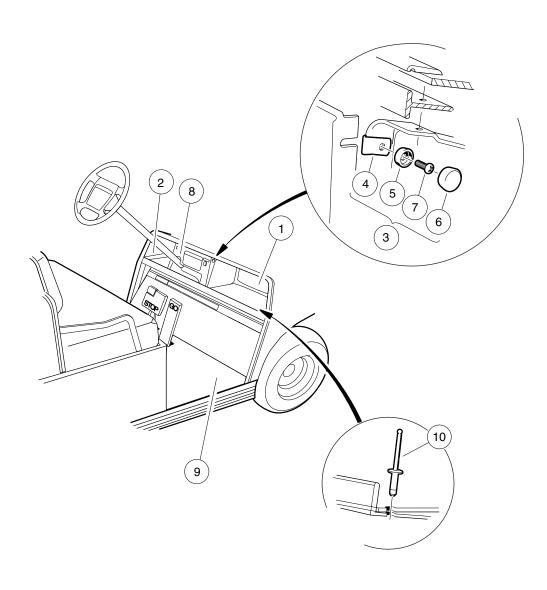








DASH COMPONENTS

ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		١
1	1013343	Dash Component, Passenger-Side, Black	1	
2	1013344	Dash Component, Driver-Side	1	H
3	1014645	Snap Washer Kit, Black (includes items 4 through 7)	2	Н
4	1011019	Nut, Speed	1	
5	1011382	Washer, #10 Pan-Head Screw	1	
6	1013494	Cover, Screw Head	1	
7	1620	Screw, #10-16 X 0.75 Pan-Head Tap	1	
8	101660404	Dash Panel, Black Center	1	
9	103939201	Floor Mat, Ds/utl, Std	1	
10	7973	Rivet, 3/16 X .400 Blind	5	

1

G

Ε

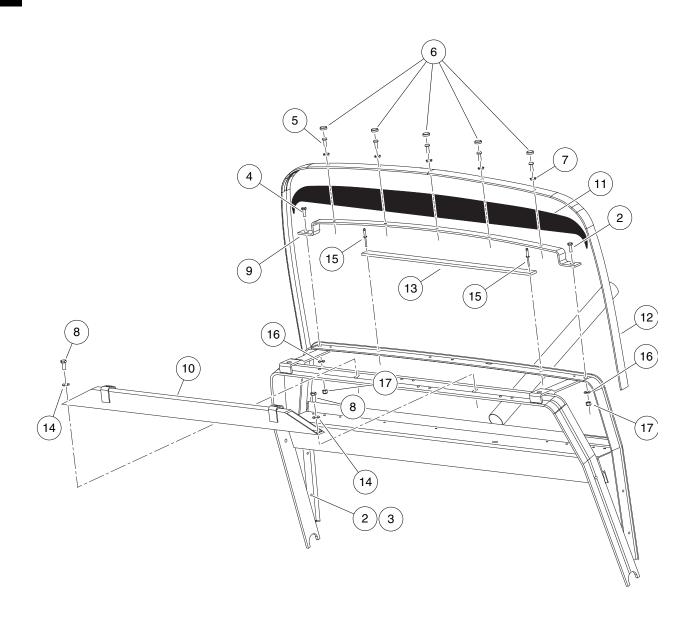








DASH TRIM

ITEA.	DARTHO	DESCRIPTION	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	N/A	Instl, Closeout, Dash (includes items 2 through 17)	1
2	1011017	Screw, #8-32 X 0.375	4
3	1011659	#8-32 Unc-2b Slub Base Teenut	4
4	101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap	2
5	102025801	Screw, 1/4-20 X .75 Torx Pn Hd	5
6	102045001	Cap, 1/4" Plastic Screw Head	5
7	102048401	Washer, 1/4 Id Scalloped Plast	5
8	102242101	Screw, 5/16-18 X 3/4 Hex-Head with Patch	2
9	102778601	Support, Upper Cowl	1
10	103313301	Asm, Brace, Canopy, Tube, Xrt	1
11	103364101	Panel, Closeout, Dash	1
12	103364201	Strip, Trim, Dash, Black	1
13	103395101	Plate, Retention, Closeout	1
14	1241	Washer, 5/16 Type A Flat	2
15	1606	Rivet, 3/16 X .500 Alum Pop	2
16	332	Washer, 1/4 Type A Narrow Flat	2
17	8233	Locknut, 1/4-20 Nylon Insert	2

1 **G**

E

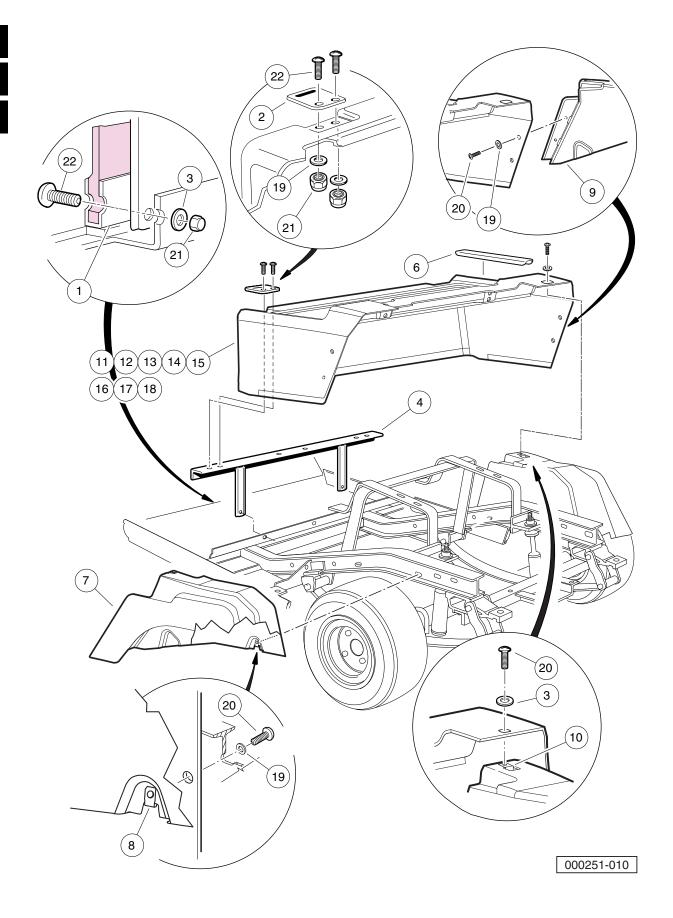








REAR BODY AND FENDER – GASOLINE VEHICLE

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010993	Body Kick Plate	1
2	1012412	Body, Hinge Plate	2
3	1014306	Washer, 1/4" Type B Flat	8
4	1017141	Body Support Weldment	1
5	101855801	Cable Retainer	1
6	102221201	Wear Pad	2
7	102777601	Fender, Driver Side (includes item 8)	1
8	1016952	U-Nut, 1/4-20	4
9	102777602	Fender, Passenger Side (includes item 10)	1
10	1016952	U-Nut, 1/4-20	4
11	102796801	Body, Rear, Gas, Red	1
12	102796803	Body, Rear, Gas, Green	1
13	102796804	Body, Rear, Gas, Classic Blue	1
14	102796806	Body, Rear, Gas, Cut, Black	1
15	102796807	Body, Rear, Gas, Cut, White	1
16	102796808	Body, Rear, Gas, Cut, Gray	1
17	102796809	Body, Rear, Gas, Cut, Beige	1
18	102796810	Body, Rear, Gas, Cut, Camo	1
19	332	Washer, 1/4 Type A Narrow Flat	6
20	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	8
21	8233	Locknut, 1/4-20 Nylon Insert	6
22	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	6

1

E

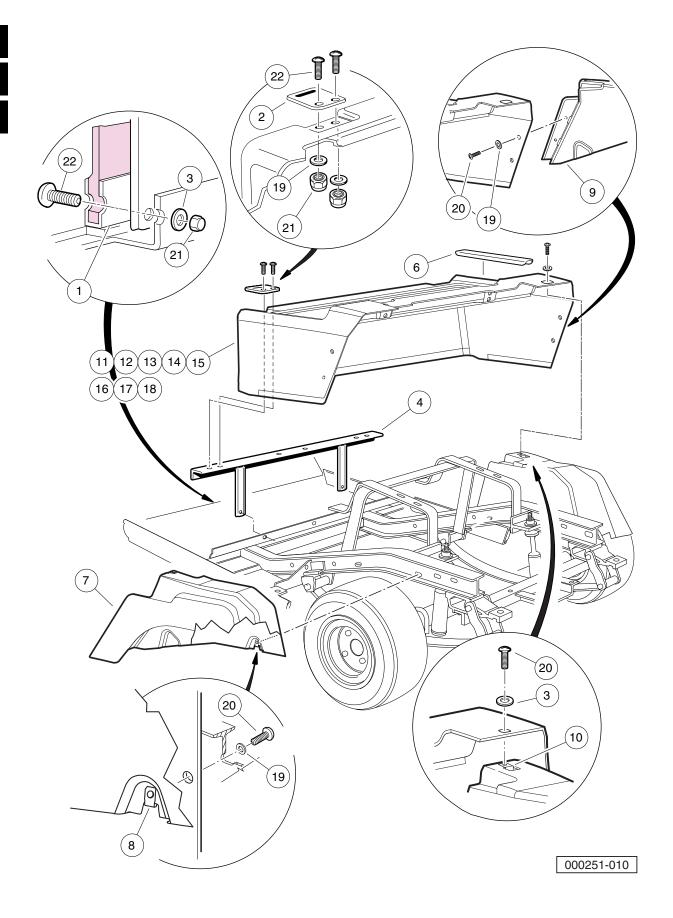







REAR BODY AND FENDER – ELECTRIC VEHICLE


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010993	Body Kick Plate	1
2	1012412	Body, Hinge Plate	2
3	1014306	Washer, 1/4" Type B Flat	8
4	1017141	Body Support Weldment	1
5	101855801	Cable Retainer	1
6	102221201	Wear Pad	2
7	102777601	Fender, Driver Side (includes item 8)	1
8	1016952	U-Nut, 1/4-20	4
9	102777602	Fender, Passenger Side (includes item 10)	1
10	1016952	U-Nut, 1/4-20	4
11	103698901	Body, Rear, Cut, El, Red	1
12	103698903	Body, Rear, Cut, El, Grn	1
13	103698904	Body, Rear, Cut, El, Cl Blue	1
14	103698906	Body, Rear, Cut, El, Black	1
15	103698907	Body, Rear, Cut, El, White	1
16	103698908	Body, Rear, Cut, El, Gray	1
17	103698909	Body, Rear, Cut, El, Beige	1
18	103698910	Body, Rear, Cut, El, Camo	1
19	332	Washer, 1/4 Type A Narrow Flat	6
20	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	8
21	8233	Locknut, 1/4-20 Nylon Insert	6
22	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	6



1

G

E

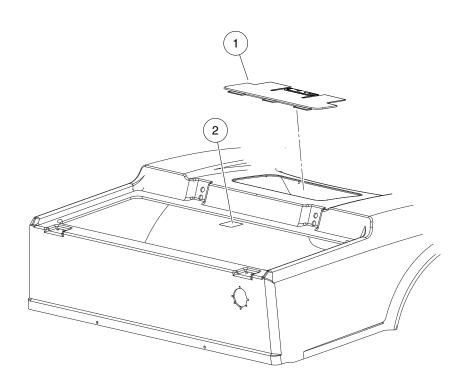








ACCESS PANEL

		ACCESS PA		
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	101303202	Access Panel - Black, Cut	1	
2	101960501	Decal, Rotating Parts/Hot Manifold	1	

1 G

E

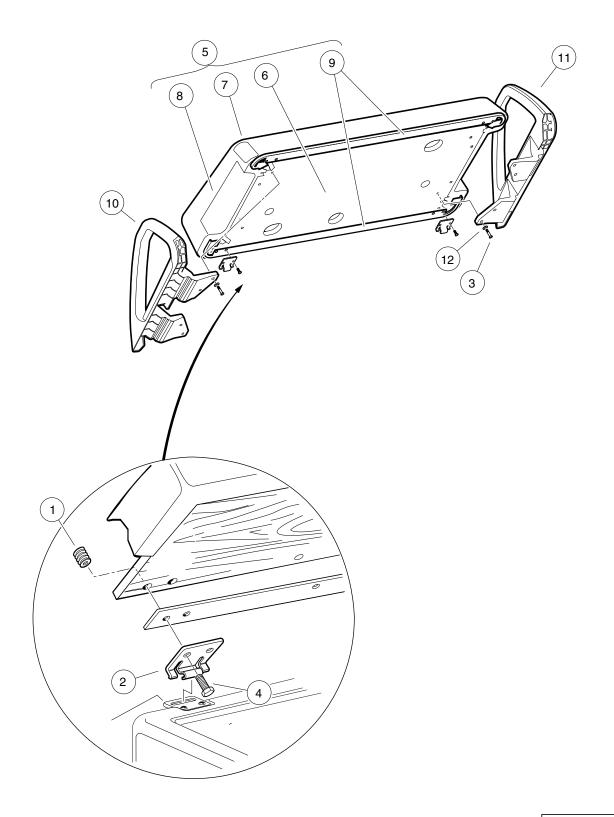








FRONT SEAT BOTTOM AND ARMRESTS

	DESCRIPTION	QTY
	1 2 3 4	
1 1010543	Insert - Wood	4
2 1011652	Hinge Plate	2
3 1016916	Screw, 1/4-20 X 1.50 Hex-Head Cap	8
4 101954301	Screw, 1/4-20 X 0.75 Hex-Head Cap	4
5 102174205	Seat Bottom Assembly, Gray (includes items 6 through 9)	1
6 N/A	Plywood Assy	1
7 101998215	Vinyl Cover, Seat Bottom, Gray	1
8 N/A	Foam, Seat	1
9 101998501	Gasket, Seat	2
10 103246701	Hip Restraint, Drvr Side	1
11 103246801	Hip Restraint, Pass Side	1
12 332	Washer, 1/4 Type A Narrow Flat	8


E

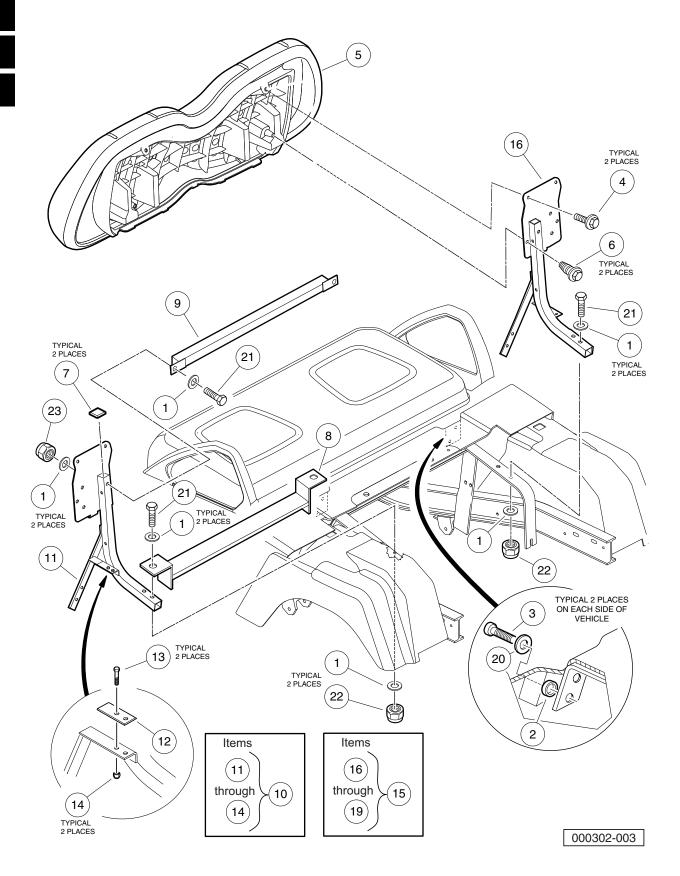



SEAT BACK

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1011931	Washer, 1/4 Flat	12
2	1017774	Body Spacer	4
3	101910401	Screw, 5/16-18 X 1.25 Thrd Frm	4
4	102296530	Screw - M6 X 1.0 X 30 Sems	2
5	102503224	Service Backrest Asm, Gray	1
6	102544201	Screw, M6 Hex	2
7	102581201	Plug, Square - 25.4 mm	2
8	102796101	Weldment, Bed Support	1
9	102816201	Seat Support, Cross Brace	1
10	102913101	Seat Support W/striker, Drv (includes items 11 through 14)	1
11	102796301	Seat Support, Driver-Side	1
12	102840301	Striker Plate	1
13	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2
14	8233	Locknut, 1/4-20 Nylon Insert	2
15	102913102	Support, Seat, Right (passenger) (includes items 16 through 19)	1
16	102796302	Seat Support, Passenger-Side	1
17	102840301	Striker Plate	1
18	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2
19	8233	Locknut, 1/4-20 Nylon Insert	2
20	1241	Washer, 5/16 Type A Flat	4
21	7311	Screw, 1/4-20 X 2.00 Hex-Head Cap	6
22	7473	Locknut, 5/16-18 Nylon Insert	2
23	8233	Locknut, 1/4-20 Nylon Insert	6
24	8963	Screw, 5/16-18 X 1.75 Hex-Head Cap	2
-	0703	Sciew, 3, 10 10 X 17, 3 Fick Fiedd Cup	_

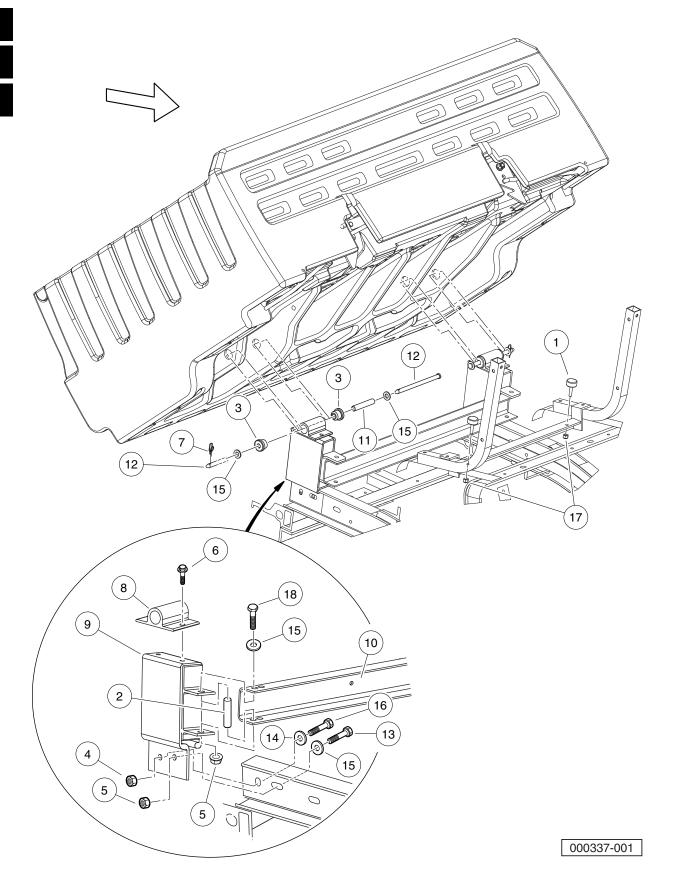








BED HINGE

2 1012303 Bushing, Steel 2 3 1015583 Bushing, Urethane 4 4 101835601 Locknut, 1/4-20 Hex Whiz 2 5 102065901 Locknut, 3/8-16 Flanged Dimple 4 6 102289001 Screw, M8X1.25X30, Hex 4 7 102289301 Rue Ring - 1/2" 2 8 102797201 Hinge, Roto Bed 2 9 102820301 Support, Hinge 2 10 102820501 Stiffener, Bed Support 1 11 102821101 Bushing, Steel 2 12 102823201 Pin, Clevis, 3/8 2 13 320 Screw, 3/8-16 X 1.00 Hex-Head Cap 2 14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2				
2 1012303 Bushing, Steel 2 3 1015583 Bushing, Urethane 4 4 101835601 Locknut, 1/4-20 Hex Whiz 2 5 102065901 Locknut, 3/8-16 Flanged Dimple 4 6 102289001 Screw, M8X1.25X30, Hex 4 7 102289301 Rue Ring - 1/2" 2 8 102797201 Hinge, Roto Bed 2 9 102820301 Support, Hinge 2 10 102820501 Stiffener, Bed Support 1 11 102821101 Bushing, Steel 2 12 102823201 Pin, Clevis, 3/8 2 13 320 Screw, 3/8-16 X 1.00 Hex-Head Cap 2 14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2			1 2 3 4	
2 1012303 Bushing, Steel 2 3 1015583 Bushing, Urethane 4 4 101835601 Locknut, 1/4-20 Hex Whiz 2 5 102065901 Locknut, 3/8-16 Flanged Dimple 4 6 102289001 Screw, M8X1.25X30, Hex 4 7 102289301 Rue Ring - 1/2" 2 8 102797201 Hinge, Roto Bed 2 9 102820301 Support, Hinge 2 10 102820501 Stiffener, Bed Support 1 11 102821101 Bushing, Steel 2 12 102823201 Pin, Clevis, 3/8 2 13 320 Screw, 3/8-16 X 1.00 Hex-Head Cap 2 14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2	1	1010878	Bumper, Rubber	2
4 101835601 Locknut, 1/4-20 Hex Whiz 2 5 102065901 Locknut, 3/8-16 Flanged Dimple 4 6 102289001 Screw, M8X1.25X30, Hex 4 7 102289301 Rue Ring - 1/2" 2 8 102797201 Hinge, Roto Bed 2 9 102820301 Support, Hinge 2 10 102820501 Stiffener, Bed Support 1 11 102821101 Bushing, Steel 2 12 102823201 Pin, Clevis, 3/8 2 13 320 Screw, 3/8-16 X 1.00 Hex-Head Cap 2 14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2	2	1012303	Bushing, Steel	2
5 102065901 Locknut, 3/8-16 Flanged Dimple 4 6 102289001 Screw, M8X1.25X30, Hex 4 7 102289301 Rue Ring - 1/2" 2 8 102797201 Hinge, Roto Bed 2 9 102820301 Support, Hinge 2 10 102820501 Stiffener, Bed Support 1 11 102821101 Bushing, Steel 2 12 102823201 Pin, Clevis, 3/8 2 13 320 Screw, 3/8-16 X 1.00 Hex-Head Cap 2 14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2	3	1015583	Bushing, Urethane	4
6 102289001 Screw, M8X1.25X30, Hex 4 7 102289301 Rue Ring - 1/2" 2 8 102797201 Hinge, Roto Bed 2 9 102820301 Support, Hinge 2 10 102820501 Stiffener, Bed Support 1 11 102821101 Bushing, Steel 2 12 102823201 Pin, Clevis, 3/8 2 13 320 Screw, 3/8-16 X 1.00 Hex-Head Cap 2 14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2	4	101835601	Locknut, 1/4-20 Hex Whiz	2
7 102289301 Rue Ring - 1/2" 2 8 102797201 Hinge, Roto Bed 2 9 102820301 Support, Hinge 2 10 102820501 Stiffener, Bed Support 1 11 102821101 Bushing, Steel 2 12 102823201 Pin, Clevis, 3/8 2 13 320 Screw, 3/8-16 X 1.00 Hex-Head Cap 2 14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2	5	102065901	Locknut, 3/8-16 Flanged Dimple	4
8 102797201 Hinge, Roto Bed 2 9 102820301 Support, Hinge 2 10 102820501 Stiffener, Bed Support 1 11 102821101 Bushing, Steel 2 12 102823201 Pin, Clevis, 3/8 2 13 320 Screw, 3/8-16 X 1.00 Hex-Head Cap 2 14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2	6	102289001		4
9 102820301 Support, Hinge 2 10 102820501 Stiffener, Bed Support 1 11 102821101 Bushing, Steel 2 12 102823201 Pin, Clevis, 3/8 2 13 320 Screw, 3/8-16 X 1.00 Hex-Head Cap 2 14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2	7	102289301	Rue Ring - 1/2"	2
10 102820501 Stiffener, Bed Support 1 11 102821101 Bushing, Steel 2 12 102823201 Pin, Clevis, 3/8 2 13 320 Screw, 3/8-16 X 1.00 Hex-Head Cap 2 14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2	8	102797201	Hinge, Roto Bed	2
11 102821101 Bushing, Steel 2 12 102823201 Pin, Clevis, 3/8 2 13 320 Screw, 3/8-16 X 1.00 Hex-Head Cap 2 14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2	9	102820301	Support, Hinge	2
12 102823201 Pin, Clevis, 3/8 2 13 320 Screw, 3/8-16 X 1.00 Hex-Head Cap 2 14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2	10	102820501	Stiffener, Bed Support	1
13 320 Screw, 3/8-16 X 1.00 Hex-Head Cap 2 14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2	11	102821101		2
14 332 Washer, 1/4 Type A Narrow Flat 2 15 334 Washer, 3/8 Type A Flat 8 16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap 2 17 8233 Locknut, 1/4-20 Nylon Insert 2	12	102823201	Pin, Clevis, 3/8	2
15 334 Washer, 3/8 Type A Flat	13	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	2
16 7847 Screw, 1/4-20 X 0.75 Hex-Head Cap	14	332	Washer, 1/4 Type A Narrow Flat	2
17 8233 Locknut, 1/4-20 Nylon Insert	15	334	Washer, 3/8 Type A Flat	8
	16	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2
18 8755 Screw, 3/8-16 X 3.375 Hex Cap	17	8233	Locknut, 1/4-20 Nylon Insert	2
	18	8755	Screw, 3/8-16 X 3.375 Hex Cap	2

E

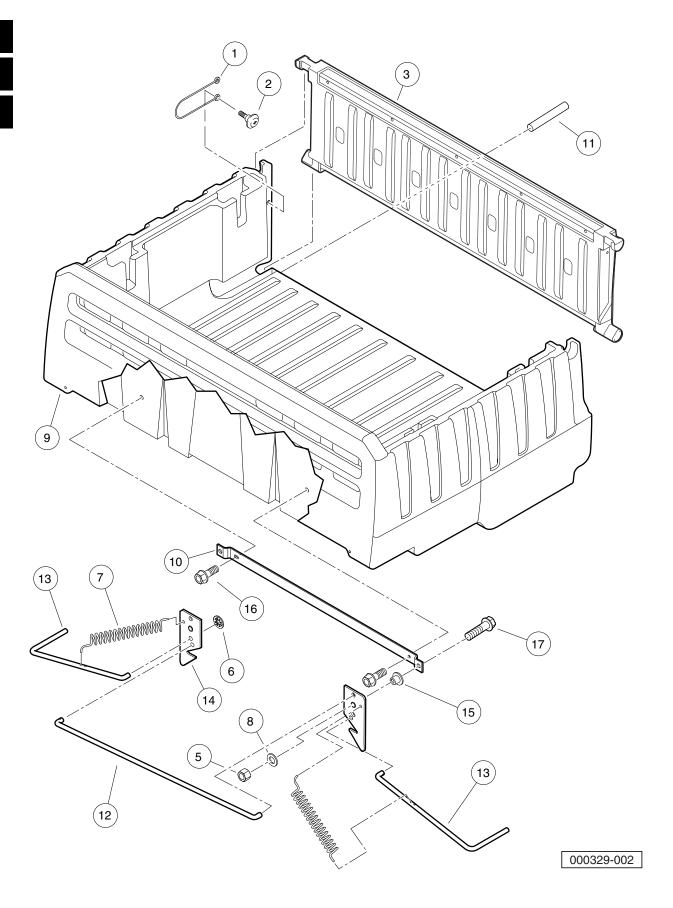







CARGO BED

TEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	102779001	Lanyard, Tailgate	2
2	102779401	Bolt Lanyard	2
3	102779501	Tailgate	1
4	103189901	Bed Assembly (includes items 5 through 17)	1
5	1010138	Locknut, 3/8-16 Dimpled	2
6	1013876	Pushnut, 3/8	4
7	1015391	Extension, Spring Latch	2
8	N/A	Washer, 3/8 Flat Type A	:
9	N/A	Bed	
10	102778901	Support, Latch Link	
11	N/A	Pin, Support	
12	102779201	Rod, Long Link	
3	102779301	Rod, Bed Lift, Short Bent	
4	102779601	Catch, Tilt Bed	
15	102830701	Bearing, Bronze, 1/2x9/32	
6	304	Screw, 1/4-20 X 1.0 Hex-Head Cap	
7	320	Screw, 3/8-16 X 1.00 Hex-Head Cap	
8	103317501	Kit, Plastic Bed Box Latch (includes items 19 through 21)	
9	1010545	Screw, Hex Washer Head 1/4-14 X .75	
20	1011578	Washer, 5/16 Type B Flat	
21	103293501	Spring, Tilt Latch 3.4 Lb/in	



1

G





WHEELS AND TIRES

G

2


E

 


2

G

E

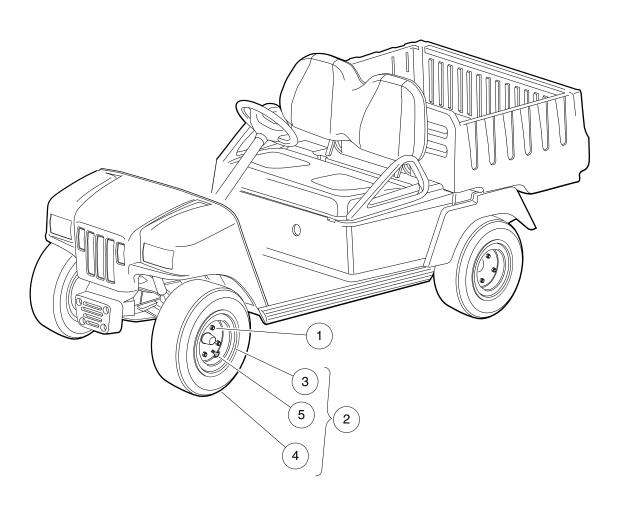










WHEELS AND TIRES

		WHEELS AND II	ILL
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010984	.500-20 Unf Lug Nut	16
2	102819101	Tire Assembly, All Trail II (includes items 3 through 5)	4
3	102815801		
		Wheel Rim, Gray	1
4	102815901	Tire, Unmounted, All Trail II	1
5	7310	Valve Stem	1

 




DID YOU

G

=

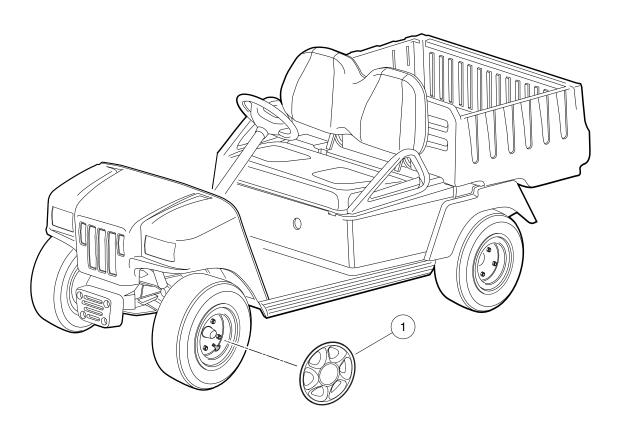







HUBCAP (OPTIONAL)

		HUBCAP (OPTIONAL	
ITEM	PART NO.	DESCRIPTION	QTY
1 2	102559901 103694501	1 2 3 4 Hub Cap Kit, Prec (includes item 2)	



2

G

F





DECALS

3


G

E



3

Ξ

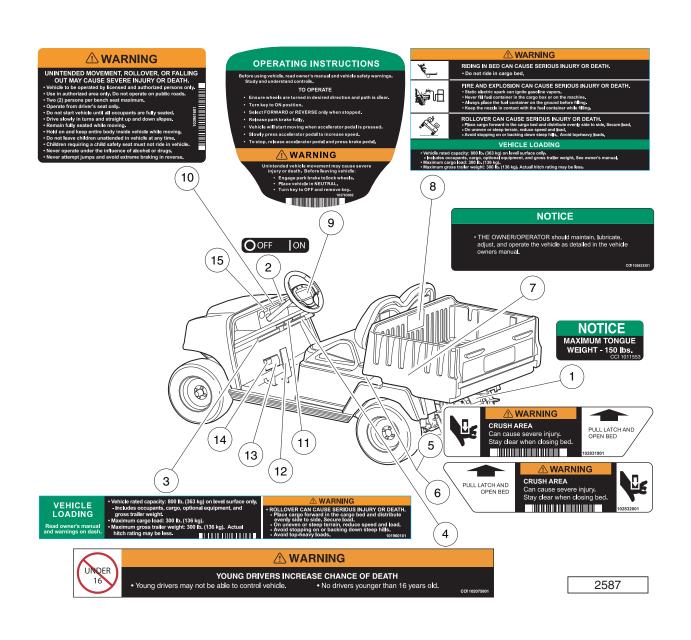






SAFETY DECALS – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1011553	Decal, Trailer Hitch	1
2	101825101	Decal, Off/On	1
3	101960101	Decal, Vehicle Loading	1
4	102075801	Decal, Young Driver Warning	1
5	102831901	Decal, Crush Warning, Driver-Side	1
6	102831901	Decal, Crush Warning, Passenger-Side	1
7	102832001	Decal, Maintenance	1
-	N/A	Decal, Plastic Bed Load Warn	1
8			
9	103783002	Decal, Op Instr, Gas Ps	1
10	103961601	Decal, Warn, Rollover, Ds Utl	1

3

G E

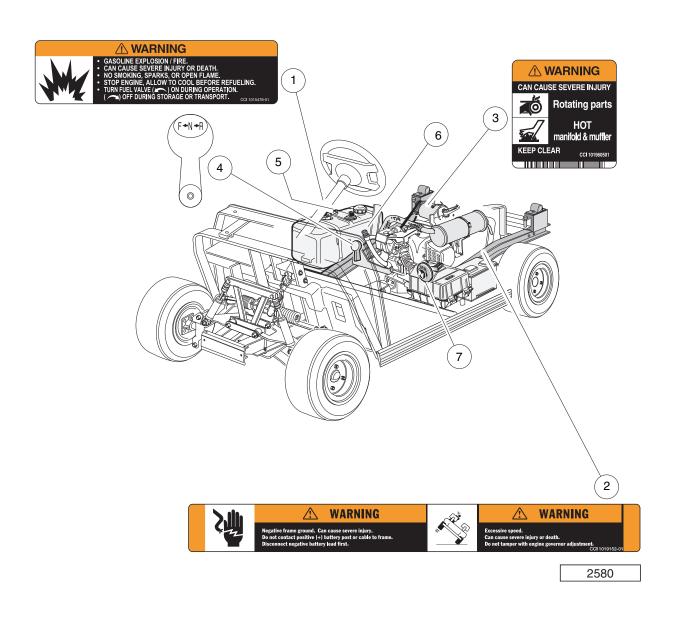






SAFETY DECALS – GASOLINE VEHICLES, CONTINUED

	1	THE TOTAL STATE OF THE PROPERTY OF THE PROPERT		
ITEM	PART NO.	DESCRIPTION	QTY	3
		1 2 3 4		(
1	101547601	Decal, Gasoline Explosion/Fire Warning		
2	101915201	Decal, Frame Ground and Governor Warning		
3	101960501	Decal, Rotating Parts/Hot Manifold	1	

3

E

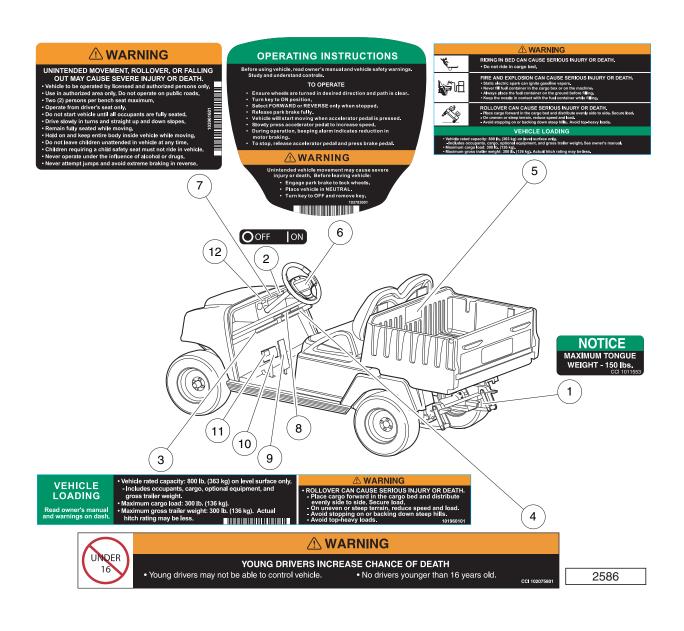






SAFETY DECALS – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011553		1
1		Decal, Trailer Hitch	
2	101825101	Decal Vehicle Leading	
3	101960101	Decal, Vehicle Loading	
4	102075801	Decal, Young Driver Warning	
5	N/A	Decal, Plastic Bed Load Warn	1
6	103783001	Decal, Op Instr, Ele	1
7	103961601	Decal, Warn, Rollover, Ds Utl	1
			1

DID YOU

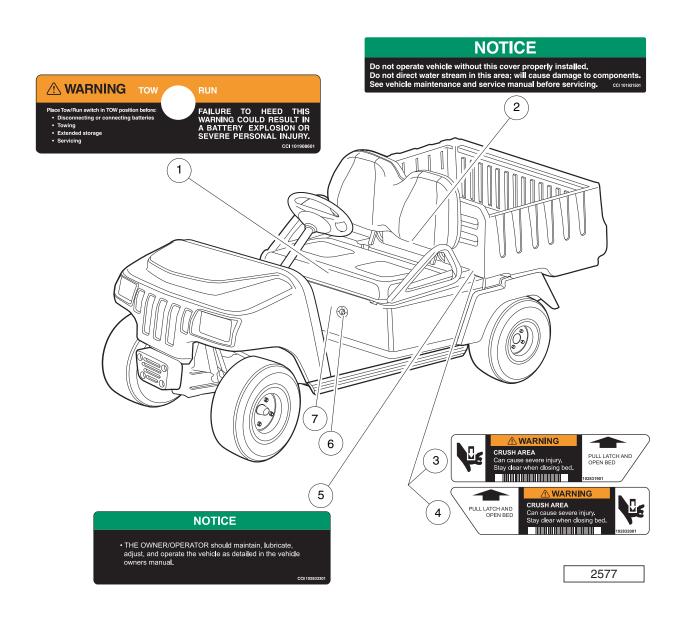





SAFETY DECALS – ELECTRIC VEHICLES, CONTINUED


ITEM	PART NO.	DESCRIPTION	OTV
I I EIVI	PARI NU.	DESCRIPTION	QTY
		1 2 3 4	
1	101908601	Decal, Tow/Run Switch Warning	1
2	101931501	Decal, Component Cover	
3	102831901	Decal, Crush Warning, Driver-Side	1
4	102832001	Decal, Crush Warning, Passenger-Side	
5	102833301	Decal, Maintenance	1




3

G

=

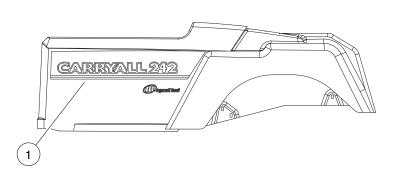

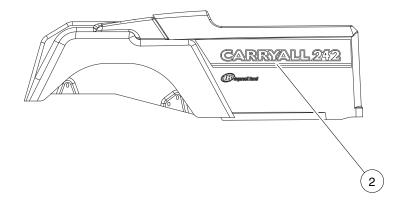







LOGO DECALS – CARRYALL 242


	LOGO DECALS - CARRIALL		3 - CARR I ALL 242	
ITEM	PART NO.	DESCRIPTION	ДТҮ	
		1 2 3 4		
1 2	103974601 103974701	Decal, Ca242, Drv Decal, Ca242, Pass		




3

G

E

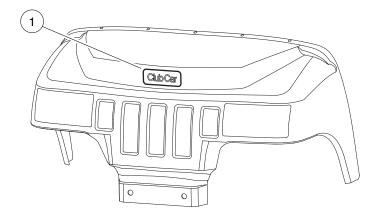

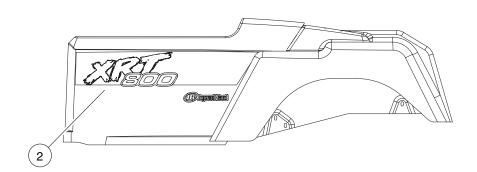







LOGO DECALS – XRT 800

		LOGO DECALS - XIII		
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	102278801	Decal, Club Car	1	
2	102850801	Decal, 800 Drv	1	
3	102850901	Decal, 800 Pass	1	
3	102030901	Decal, 600 1 ass	'	



https://CartPros.com/f.html

3

G





 


BRAKE SYSTEMS

G


4





4

E

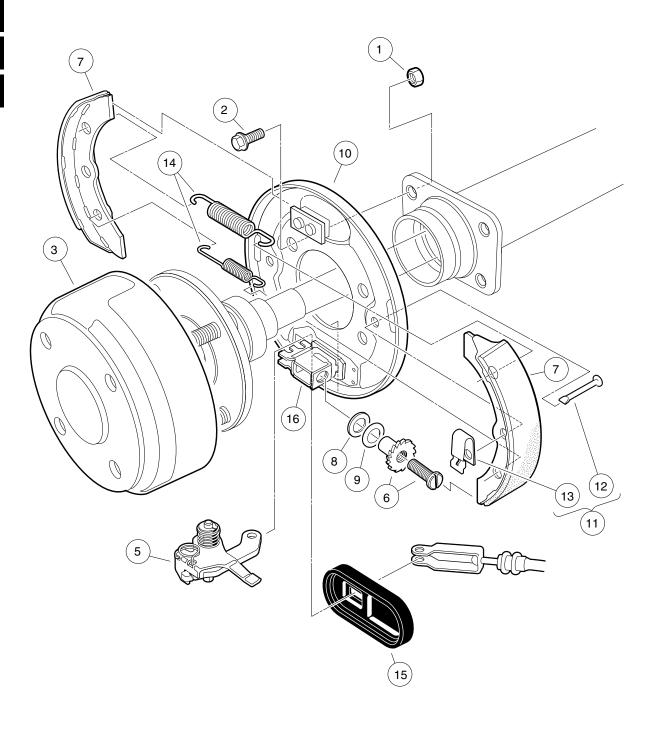








REAR BRAKE ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1013924	Nut, 5/16-24 Hex Head Cone	8
2	1014153	Bolt, Brake Cluster Mounting	8
3	101791101	Drum without Center Hole, Brake	2
4	103380201	Asm, Brake Cluster, Mech, Drvr (includes items 5 through 16)	1
5	101815502	Lever Assembly, Self-Adjusting Brake, Left	1
6	101816502	Adjusting Mechanism, Self-Adjusting Brake, Left	1
7	101823201	Package, Brake Shoe, Self-Adjusting	1
8	101823801	Plate, Washer, Brake, Self-Adjusting	1
9	101823901	Washer, Brake, Self-Adjusting	1
10	103483102	Back Plate, Lh	1
11	103483201	Kit, Shoe Retainer (includes items 12 and 13)	1
12	N/A	Pin	2
13	N/A	Spring, Shoe, Clamp	2
14	103483401	Package Brake Spring Self Adj	1
15	103483601	Cover, Dust	
16	103483701	Brake Block	
17	103380202	Asm, Brake Cluster, Mech, Pass (includes items 18 through 29)	
18	101815501	Lever Assembly, Self-Adjusting Brake, Right (Passenger)	
19	101816501	Adj Mechanism, S.A. Brakes, Right (Passenger)	
20	101823201	Package, Brake Shoe, Self-Adjusting	
21	101823801	Plate, Washer, Brake, Self-Adjusting	
22	101823901	Washer, Brake, Self-Adjusting	
23	N/A	Back Plate, Rh	
24	103483201	Kit, Shoe Retainer (includes items 25 and 26)	
25	N/A	Pin	
26	N/A	Spring, Shoe, Clamp	
27	103483401	Package Brake Spring Self Adj	
28	103483601	Cover, Dust	
29	103483701	Brake Block	1
		Note: Driver-side brake cluster not shown. Components have a similar appearance to passenger-side brake cluster components.	

4 G

E

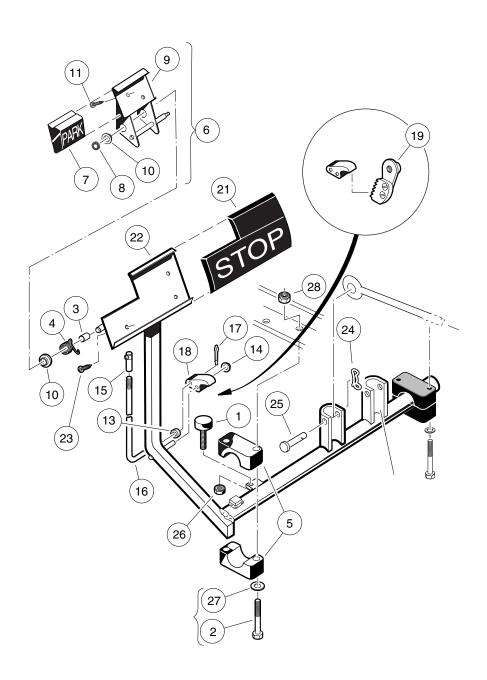








BRAKE PEDAL ASSEMBLY

ITEM PAR	DESCRIPTION
	1 2 3 4
1 101	Bumper, Rubber
2 101	Screw, 5/16-18 X 2.50 Hex Cap
3 101	Hill Brake Spacer
4 101	Spring, Hill Brake Torsion1
5 101	Package, Brake Mounting Block1
6 101	Kit, Hill Brake Pedal (includes items 7 through 11)
7 101	Pad, Hill Brake1
8 101	Pushnut, 3/8 1
9	Hill Brake Weld Assembly1
10	Bushing, Nylon
11	Screw, #10-16 Type AB, Sheet Metal
12 10118	Kit, Hill Brake Latch (includes items 13 through 19)
13 101	Sleeve, Hill Brake Rod1
14 101	Pushnut, 3/8 1
15 101	Ball Joint, 1/4-28
16	Rod, Hill Brake1
17 101	
18	Pawl, Hill Brake 1
19 10191	Ratchet Assembly 1
20 10187	Brake Pedal Kit (includes items 21 through 23)1
21 101	
22	Weldment, Brake Pedal 4wb Std1
23	Screw, #10-16 Type AB, Sheet Metal
24 10232	
25 10232	
26	Nut, 1/4-20 Hex
27	Washer, 5/16 Type A Flat
28	Locknut, 5/16-18 Nylon Insert

4

G

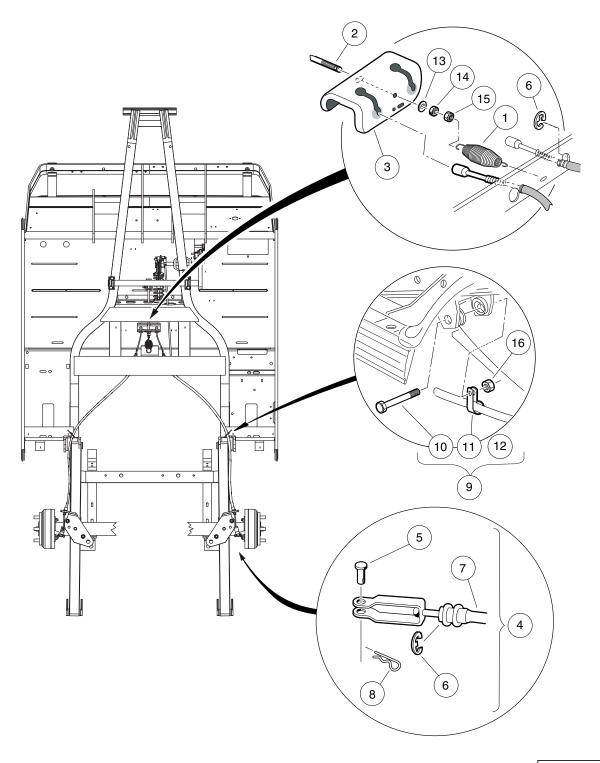








BRAKE CABLES, EQUALIZER, AND EQUALIZER ROD

ITEM	PART NO.	DESCRIPTION
		1 2 3 4
1	1013531	Spring, Brake Return
2	101953101	Rod, Equalizer, 8.91"
3	101990801	Equalizer Bracket
4	102022101	Brake Cable Kit (includes items 5 through 8)
5	1010829	Pin, Clevis, 5/16 X 3/4
6	1011779	E-Clip, 1/2
7	N/A	Cable, Brake, 41"
8	1035	Cotter Pin, 3/32 x 1
9	103377301	Kit, Field P-clamp, Brake Line (includes items 10 through 12)
10	102066201	Screw, 3/8-16 X 3.50 Hex Cap
11	103377201	P-clamp, Brake Line
12	N/A	Instr Fd. P-clamp, Brake Line
13	1241	Washer, 5/16 Type A Flat
14	1242	Nut, 5/16-18 Hex
15	7473	Locknut, 5/16-18 Nylon Insert
16	8754	Locknut, 3/8-16 Hex





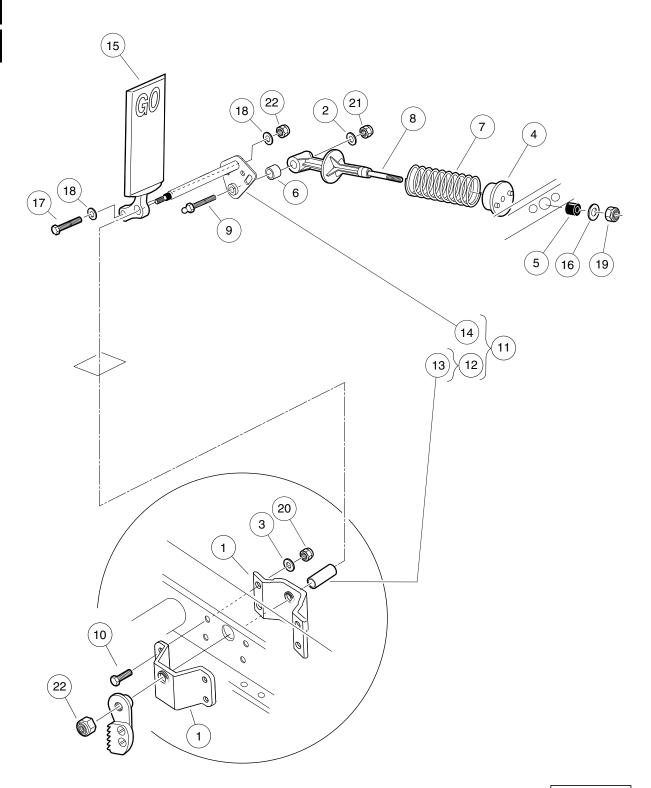








ACCELERATOR PEDAL ASSEMBLY – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011694	Accelerator Bracket and Bearing Assembly	2
2	1011931	Washer, 1/4 Flat	1
3	1014007	Washer, 1/4 Flat	4
4	1017378	Cup, Spring	1
5	1017380	Bumper, Spring Return	1
6	1017424	Bearing, Pivot Support	1
7	101796201	Spring, Accelerator Return	1
8	101817401	Retainer, Spring	1
9	101818801	Stud, 1/4-28 X 1.35 Ball	1
10	101861901	Screw, 1/4-20 X 1.125 Hex Cap	4
11	102026001	Kit, Accelerator Pivot Rod Assembly (includes items 12 through 14)	1
12	1011700	Spacer Assembly (includes item 13)	1
13	101919801	Spacer, Accelerator	1
14	102158901	Pivot Rod Weldment	1
15	103865101	Pedal, Accel, Insert	1
16	1241	Washer, 5/16 Type A Flat	1
17	1624	Screw, 3/8-16 X 1.50 Hex-Head Cap	1
18	334	Washer, 3/8 Type A Flat	2
19	7473	Locknut, 5/16-18 Nylon Insert	1
20	8233	Locknut, 1/4-20 Nylon Insert	4
21	8717	Locknut, 1/4-28 Nylon Insert	1
22	8754	Locknut, 3/8-16 Hex	2



G

E

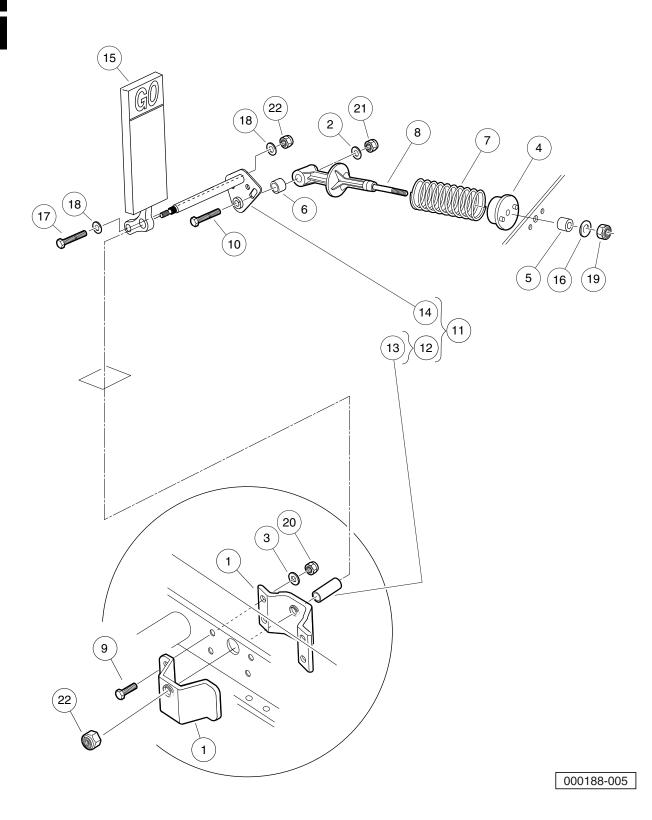








ACCELERATOR PEDAL ASSEMBLY – ELECTRIC VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011694	Accelerator Bracket and Bearing Assembly	2
2	1011931	Washer, 1/4 Flat	1
3	1014007	Washer, 1/4 Flat	4
4	1017378	Cup, Spring	1
5	1017380	Bumper, Spring Return	1
6	1017424	Bearing, Pivot Support	1
7	101796201	Spring, Accelerator Return	1
8	101817401	Retainer, Spring	1
9	101861901	Screw, 1/4-20 X 1.125 Hex Cap	4
10	101862001	Screw, 1/4-20 X 1.500 Flange	1
11	102026001	Kit, Accelerator Pivot Rod Assembly (includes items 12 through 14)	1
12	1011700	Spacer Assembly (includes item 13)	1
13	101919801	Spacer, Accelerator	
14	102158901	Pivot Rod Weldment	
15	103865101	Pedal, Accel, Insert	1
16	1241	Washer, 5/16 Type A Flat	1
17	1624	Screw, 3/8-16 X 1.50 Hex-Head Cap	
18	334	Washer, 3/8 Type A Flat	2
19	7473	Locknut, 5/16-18 Nylon Insert	
20	8233	Locknut, 1/4-20 Nylon Insert	
21	8717	Locknut, 1/4-28 Nylon Insert	1
22	8754	Locknut, 3/8-16 Hex	2

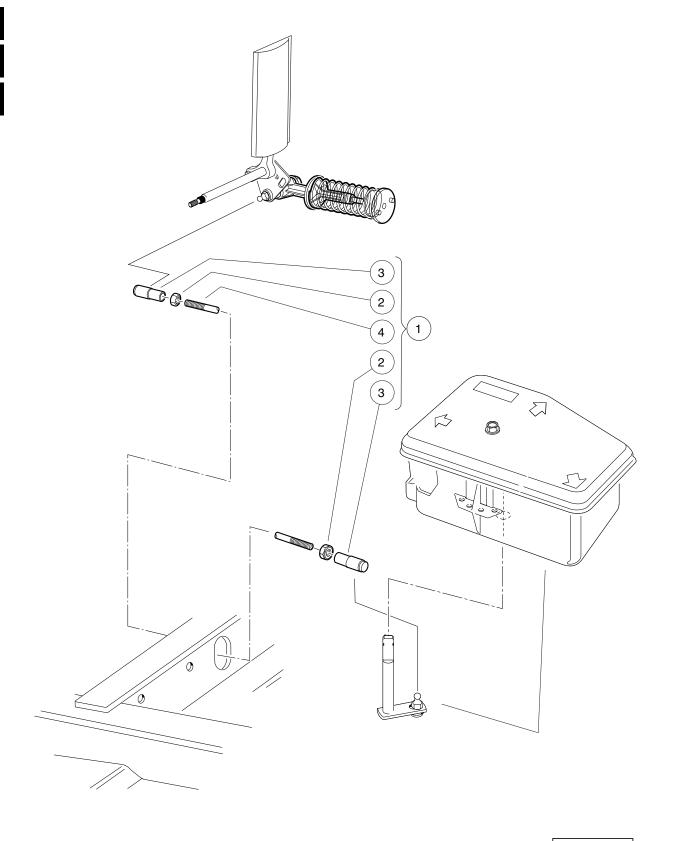







ACCELERATOR ROD

	ACCLLINATION INC		
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101912401	Rod, Accelerator (includes items 2 through 4)	1
2	1011084	Nut, 1/4-28 Hex Jam	2
3	1011734	Joint, Ball	2
4	N/A	Accelerator Rod	1
4	IN/A	Accelerator Rod	'



https://CartPros.com/f.html

4

G

7=





STEERING AND SUSPENSION

G


5

F



5

В

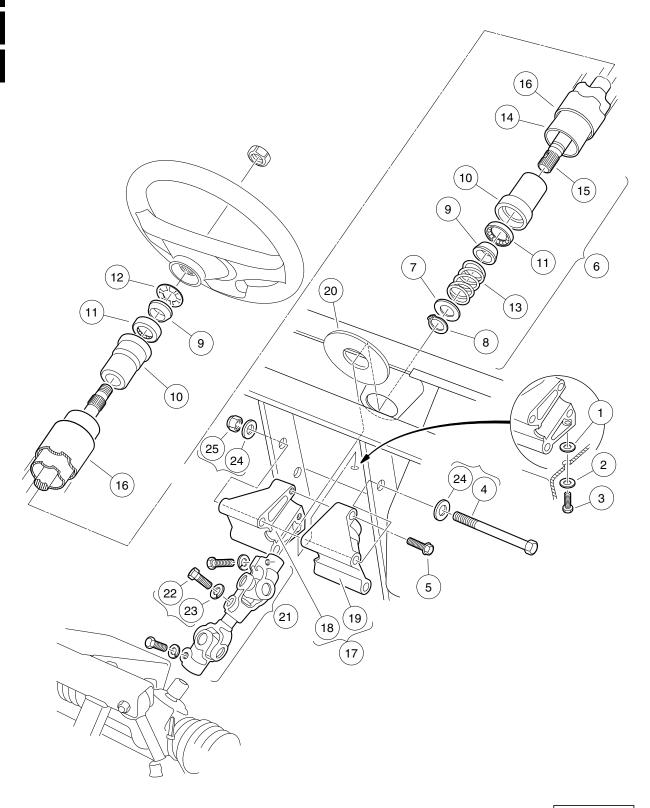








STEERING COLUMN

	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011578	Washer, 5/16 Type B Flat	1
2	1011697	Washer, 5/16 Flat	1
3	1014288	Screw, 5/16-18 X 0.75 Thread-Forming	1
4	1016183	Screw, 3/8-16 X 7.00 Hex Cap	2
5	1016269	Screw, 5/16-18 Thrd Forming	2
6	1017313	Steering Shaft Assembly (includes items 7 through 15)	1
7	1012604	Washer, 0.675 ID X 1.19 OD	1
8	1012605	Ring, 0.579 Internal Retaining	1
9	1014125	Wedge, Molded	2
10	1014126	Seat, Plastic Bearing	2
11	1014213	Bearing, Ball	2
12	1014214	Ring, Retaining	1
13	1014217	Spring, Steering Shaft	1
14	1017314	Column, Aluminum Steering	1
15	1017315	Shaft Steering Column	1
16	1017317	Tube Cover, Steering Column	1
17 10	1984801	Kit, Steering Column Mounting Bracket (includes items 18 and 19)	1
18	N/A	Bracket, RH Steering Column Mount	1
19	N/A	Bracket, LH Steering column mount	1
20 10	2278001	Boot, Steering Column Round	1
21 10	3601601	Shaft, Intermediate Steering (includes items 22 and 23)	1
22	1017226	Bolt, Hex-Head, 8mm X 1.25 - 30	3
23	7174	Lockwasher, 5/16 Split	3
24	334	Washer, 3/8 Type A Flat	4
25	8754	Locknut, 3/8-16 Hex	2

 




DID YOU

G

E

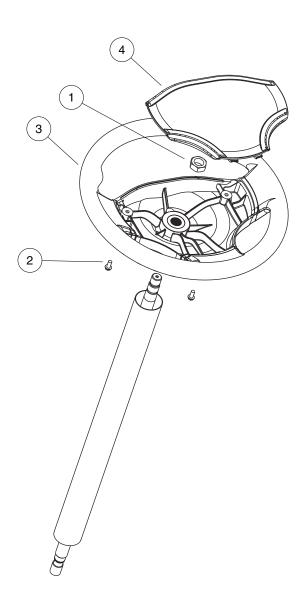








STEERING WHEEL

	SIEERING WHE		
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1017273	Nut, 5/8-18 Nylon Insert Jam	1
2	101850301	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	
3	101030301		
		Steering Wheel, Spl	
4	103724602	Cover, Steering Wheel, Generic	1



5 G

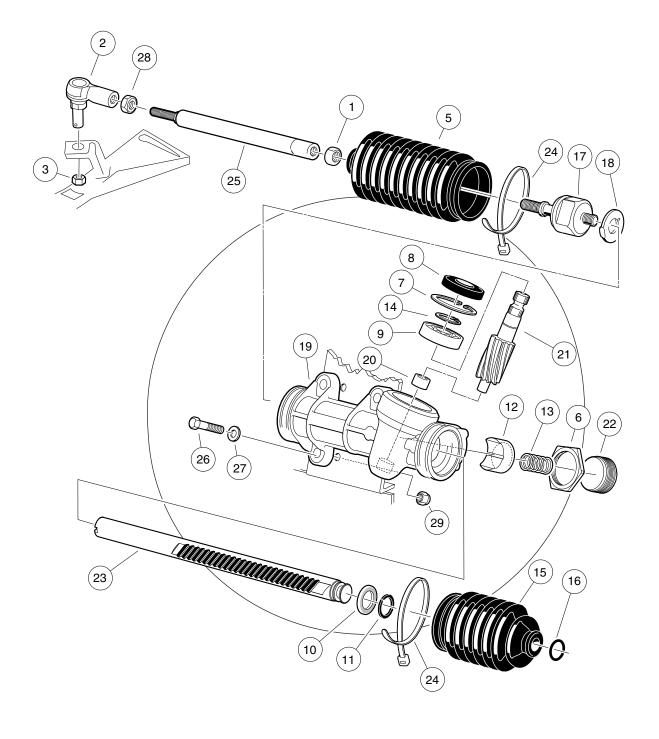








STEERING GEAR ASSEMBLY

PART NO.	DESCRIPTION	QTY
	1 2 3 4	
1013042	Nut, 12mm Hex	1
102022602	End, Tie Rod, M12 X 1.25, Lh	1
102289201	Nut - Hex Locking, M12 X 1.25	3
103601501	Asm, Steering Rack And Pinion (includes items 5 through 24)	1
1013035	Bellows, Long	1
1013044	Rack Screw Locknut	1
1013051	Snap Ring	1
1013052	Seal, Steering Pinion Dust	1
101879401	Bearing, Ball	1
101879501	Stop Washer	1
101879601	Stop Ring, C-Type	1
101879701	Support Yoke	1
101879801	Rack Guide Pressure Spring	1
101879901	Ring, Stop, C-Type	1
101880001	Bellows, Short	1
101880101		1
101880201	Inner Ball Joint Asm	1
101880301	Washer, Tab	1
N/A		1
8990	1	2
103653401		1
1624	Screw, 3/8-16 X 1.50 Hex-Head Cap	3
334	Washer, 3/8 Type A Flat	3
7555		1
8754		3
	1013042 102022602 102289201 103601501 1013035 1013044 1013051 101879401 101879501 101879601 101879701 101879801 101880001 101880101 101880201 101880301 N/A N/A N/A N/A N/A N/A 8990 103653401 1624 334	1 2 3 4 1013042 Nut, 12mm Hex

5 G

E

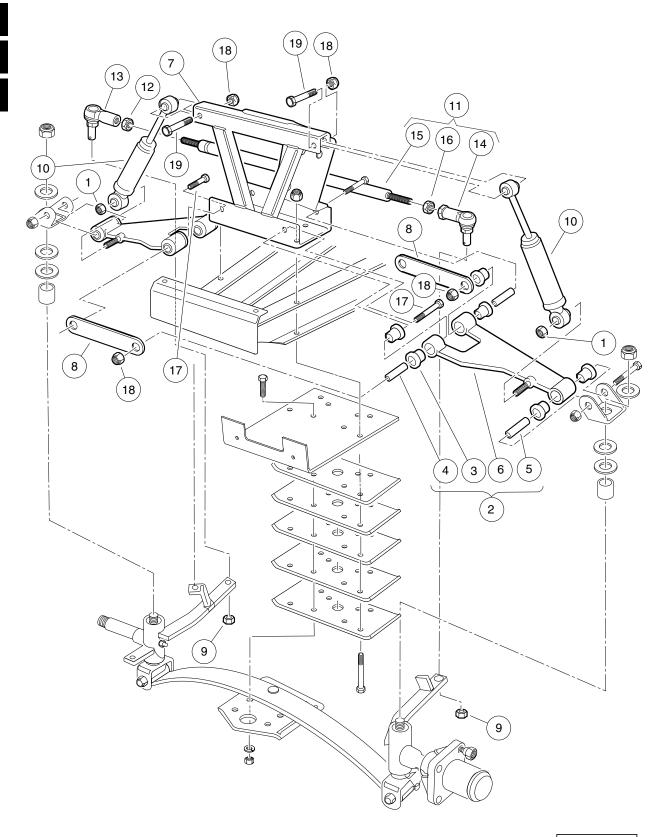








FRONT SUSPENSION, UPPER

ITEM	DA DT NO	DESCRIPTION	
IIEWI	PART NO.	DESCRIPTION	(
		1 2 3 4	
1	1010138	Locknut, 3/8-16 Dimpled	
2	1016353	Sub-Assembly, Delta A-Plate (includes items 3 through 6)	
3	1016346	Bushing, Urethane	
4	1016349	Sleeve, Delta Inner	
5	1016350	Sleeve, Delta Outer	
6	1016351	Delta A-Plate	
7	1016385	Delta Shock and Gear Support Assembly	
8	1017266	A-Plate Strap	
9	102289201	Nut - Hex Locking, M12 X 1.25	
10	103351001	Shock Absorber, Front, Common	
11	N/A	Asm, Tie Rod (includes items 12 through 16)	
12	1013042	Nut, 12mm Hex	
13	102022601	End, Tie Rod M12 X 1.25 Rh	
14	102022602	End, Tie Rod, M12 X 1.25, Lh	
15	103354701	Rod, Tie, Male Thd	
16	103653501	Nut, Jam, M12-1.25, Lh	
17	2402	Screw, 3/8-16 X 2.25 Hx Hd Cap	
18	8754	Locknut, 3/8-16 Hex	-
19	8861	Bolt, 3/8-16 X 1.75 Hex	

5

E

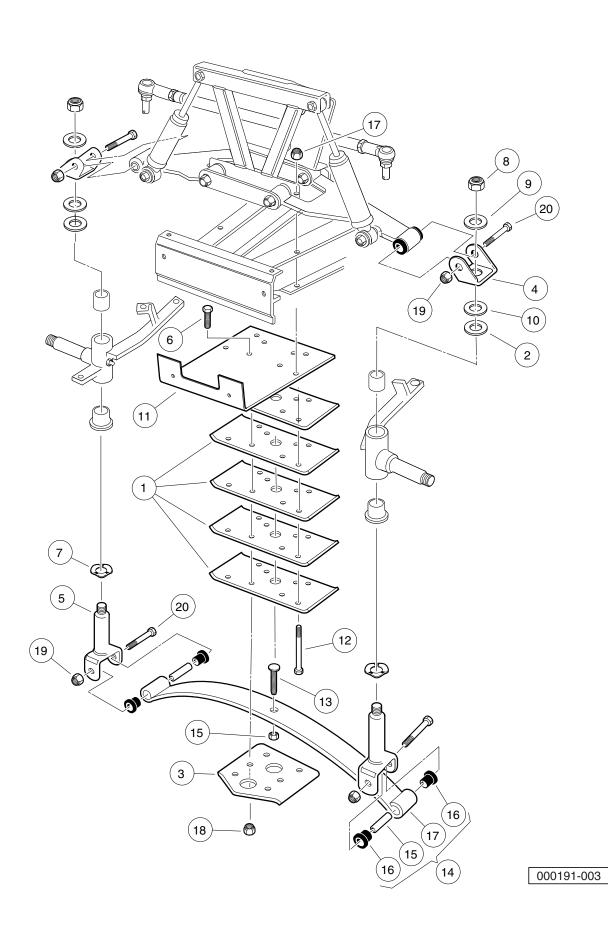








FRONT SUSPENSION, LOWER-GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010124	Plate, Spring Mount	5
2	1010150	Bearing, Thrust	2
3	1014276	Plate, Front Spring Retainer	1
4	1016384	Clevis, Delta Upper	2
5	1016386	King Pin Assembly	2
6	1016387	Screw, 3/8-16 X 2.75 Hx Hd Cap	6
7	1016389	Washer, 1.125 Od Wave	2
8	101903101	Locknut, 1/2-20 Nylon Insert	2
9	102564002	Washer-1/2 Conical, Yellow	2
10	102684501	Washer, M12 Hard Regular	2
11	102830401	Support, Brush Guard	1
12	102913601	Screw, 3/8-16 X 5.50 Hx Hd Cap	4
13	103507001	Eccentric Bolt Common	1
14	103628701	Spring Asm, Front, 1 Leaf (includes items 15 through 17)	1
15	1012303	Bushing, Steel	2
16	1015583	Bushing, Urethane	4
17	103502601	Spring, Front, 1 Leaf	1
18	706	Nut, Hex 3/8-16	1
19	8754	Locknut, 3/8-16 Hex	8
20	8755	Screw, 3/8-16 X 3.375 Hex Cap	2

5 G

E

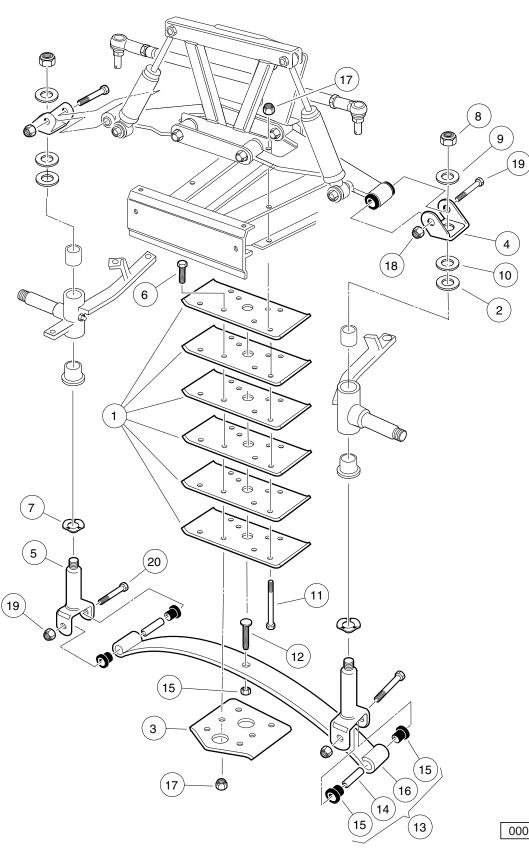








FRONT SUSPENSION, LOWER-ELECTRIC VEHICLES

1 2 3 4 1 1010124 Plate, Spring Mount	1 2
2 1010150 Bearing, Thrust	2 1 2
3 1014276 Plate, Front Spring Retainer 4 1016384 Clevis, Delta Upper 5 1016386 King Pin Assembly	1 2
4 1016384 Clevis, Delta Upper	2
5 1016386 King Pin Assembly	
6 1016387 Screw, 3/8-16 X 2.75 Hx Hd Cap	2
	6
7 1016389 Washer, 1.125 Od Wave	2
8 101903101 Locknut, 1/2-20 Nylon Insert	
9 102564002 Washer-1/2 Conical, Yellow	2
10 102684501 Washer, M12 Hard Regular	2
11 102913601 Screw, 3/8-16 X 5.50 Hx Hd Cap	4
12 103507001 Eccentric Bolt Common	
13 103628701 Spring Asm, Front, 1 Leaf (includes items 14 through 16)	
14 1012303 Bushing, Steel	2
15 1015583 Bushing, Urethane	4
16 103502601 Spring, Front, 1 Leaf	1
17 706 Nut, Hex 3/8-16	1
18 8754 Locknut, 3/8-16 Hex	8
19 8755 Screw, 3/8-16 X 3.375 Hex Cap	2

5 G

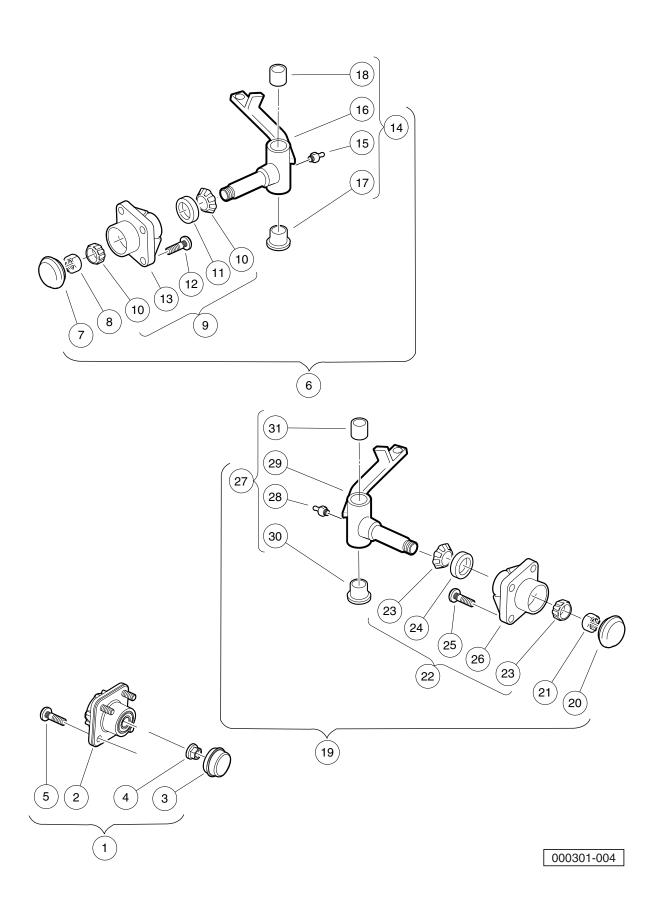






FRONT SPINDLES AND HUBS


ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102357701	Replacement Kit, Front Hub (includes items 2 through 5)	1
2	N/A	Front Hub, Ball Bearing	1
3	102353201	Cap, Front Hub	1
4	102353301	Hex Nut, Locking Flange, M14x2	1
5	102353401	Lug Stud, 1/2-20 UNF, 4037 Stl	
6	103667302	Asm, Frt Hub & Spndle, Rh, Ext (includes items 7 through 14)	1
7	102353201	Cap, Front Hub	1
8	102353301	Hex Nut, Locking Flange, M14x2	1
9	N/A	Asm, Front Hub, Bb, Long Stud (includes items 10 through 13)	1
10	N/A	Bearing, Ball, 6204	2
11	N/A	Spacer, Bearing, Front Hub, Pm	1
12	103477901	Lug Stud, 1/2-20 Unf, 4037	4
13	N/A	Front Hub, Ball Brg, Long Stud	1
14	103667102	Asm, Spindle, Rh, Ext (includes items 15 through 18)	1
15	1015597	Fitting, 1/4-28 Thread-Forming Grease	1
16	103666102	Subasm, Spndle, Rh 2wb Ext	1
17	7048	Bushing, Flanged Bronze	1
18	8067	Bushing, Bronze Spindle	1
19	103667402	Asm, Frt Hub & Spndle, Lh, Ext (includes items 20 through 27)	1
20	102353201	Cap, Front Hub	1
21	102353301	Hex Nut, Locking Flange, M14x2	1
22	N/A	Asm, Front Hub, Bb, Long Stud (includes items 23 through 26)	1
23	N/A	Bearing, Ball, 6204	2
24	N/A	Spacer, Bearing, Front Hub, Pm	1
25	103477901	Lug Stud, 1/2-20 Unf, 4037	4
26	N/A	Front Hub, Ball Brg, Long Stud	1
27	103667202	Asm, Spindle, Lh, Ext (includes items 28 through 31)	1
28	1015597	Fitting, 1/4-28 Thread-Forming Grease	1
29	103666202	Subasm, Spndle, Lh, 2wb Ext	1
30	7048	Bushing, Flanged Bronze	1
31	8067	Bushing, Bronze Spindle	1
31	8067	виsning, Bronze Spinale	



5 G

 Items
3
through
4



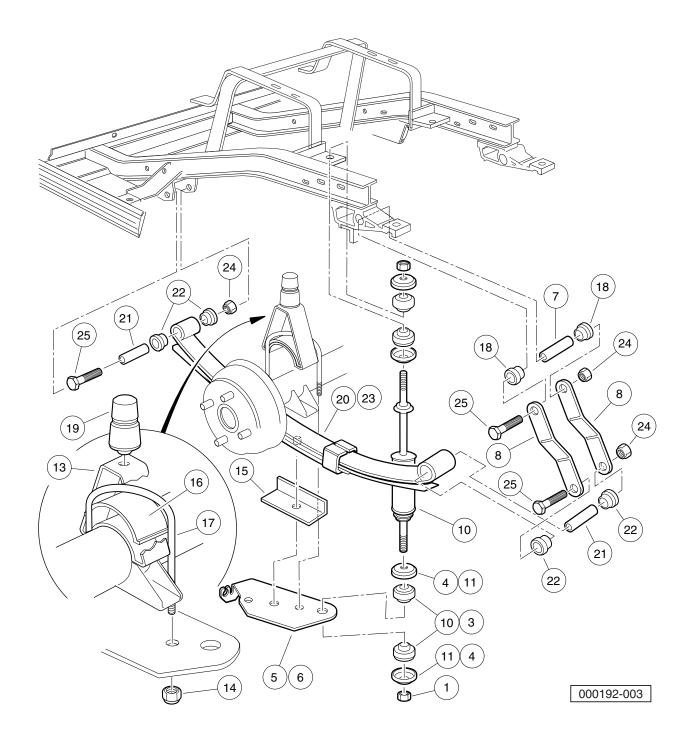





REAR SUSPENSION

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010145	Nut, 3/8-24 Hex	4
2	1011415	Kit, Shock Absorber Cushion (includes items 3 and 4)	4
3	N/A	Cushion, Shock Absorber	2
4	N/A	Retainer, Shock Absorber Cushion	2
5	1012181	Bracket, Shock Mounting, Right (Passenger)	1
6	1012182	Bracket, Shock Mounting, Left (Driver)	1
7	1012303	Bushing, Steel	2
8	1012304	Shackle, Rear Spring	4
9	1013164	Shock Absorber Kit (includes items 10 through 12)	1
10	N/A	Cushion, Shock Absorber	8
11	N/A	Retainer, Shock Absorber Cushion	8
12	102588501	Shock Absorber Rear Prv Spd	2
13	101454902	Bumper Mount, Angled	2
14	1014555	Locknut, 7/16-14 Nylon Hex	4
15	1014573	Spring Retainer	2
16	1014901	Spacer, Overload Bumper	2
17	1014902	U-Bolt	2
18	1015583	Bushing, Urethane	4
19	1017235	Bumper, Jounce	2
20	1017233	Asm-rear Leaf Spring, Ca1-vill (includes items 21 through 23)	2
21	103933201		2
		Bushing, Steel	
22	1015583	Bushing, Urethane	4
23	N/A	Leaf Spring, Rear, Ca1-vill	1
24	8754	Locknut, 3/8-16 Hex	6
25	8755	Screw, 3/8-16 X 3.375 Hex Cap	6



HERE https://CartPros.com/f.html

5

G





GET STARTED

https://CartPros.com/f.html


our search box and it will find the part you are looking for. ELECTRICAL SYSTEM – GASOLINE VEHICLES

6

G




KNOV

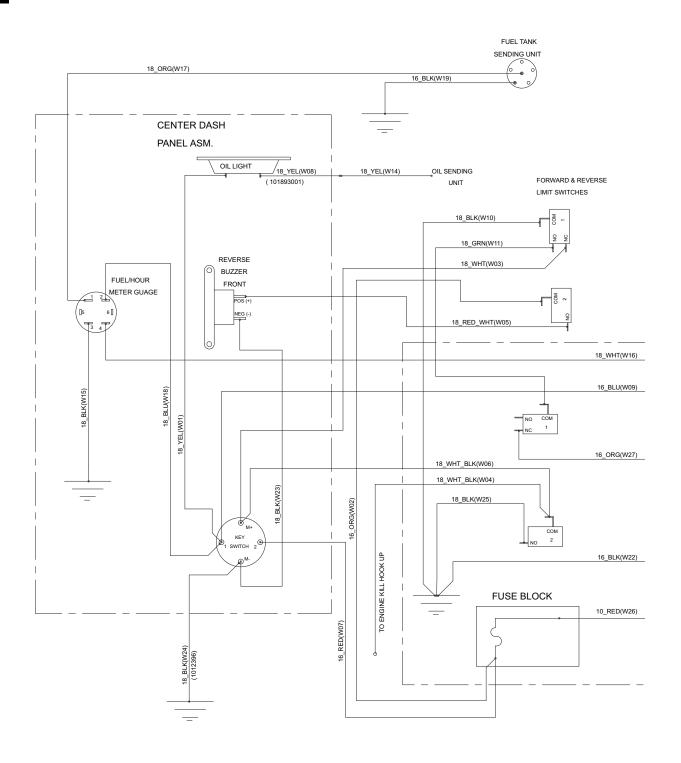



KNO YOU

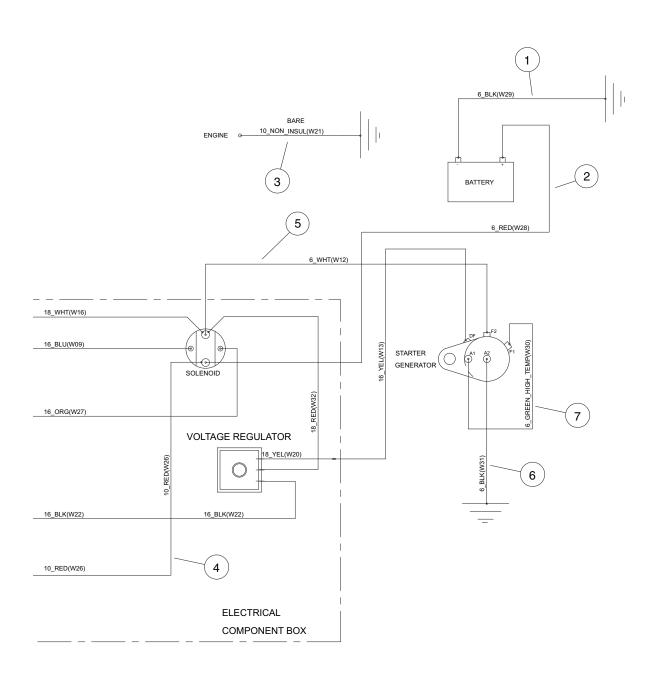





6

G

See previous two pages for illustration.








WIRING – GASOLINE VEHICLES

	WINING - GASOLINE VEHICLE			
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	1012382	Wire Assy, #6 Black	1	
2	1014119	Wire Assembly #6 Red	1	
3	1015332	Wire Assembly, #10, Uninsulated	1	
4	1015737	Wire Assy, #10 Red	1	
5	1015769	Wire Assy, #6 White	1	
6	1015920	Ground Wire Assembly	1	
7	103332402	Assy Wire Harness Gas V4 Kit	1	

6

G

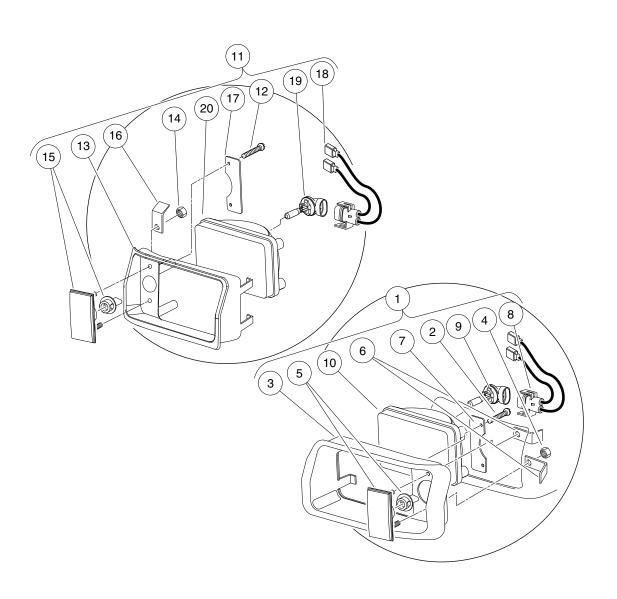








HEADLIGHTS

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	101988001	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	1013461	Screw, #10-16 Hex-Head Hi-Lo	2
3	1016880	Headlight Bezel, Left	1
4	1017	Nut, #10-24 Stainless-Steel Hex Machine	2
5	1017062	Turn Signal Lens Assy	1
6	1017064	Mounting Bracket	2
7	1017065	Retainer, Headlight	1
8	101987901	Connector Harness Assembly, Headlight	1
9	101988101	Bulb, Headlight	1
10	101988201	Lens, Headlight	1
11	101988002	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	1013461	Screw, #10-16 Hex-Head Hi-Lo	2
13	1016879	Headlight Bezel, Right	1
14	1017	Nut, #10-24 Stainless-Steel Hex Machine	2
15	1017062	Turn Signal Lens Assy	1
16	1017064	Mounting Bracket	2
17	1017065	Retainer, Headlight	
18	101987901	Connector Harness Assembly, Headlight	
19	101988101	Bulb, Headlight	1
20	101988201	Lens, Headlight	

6

G

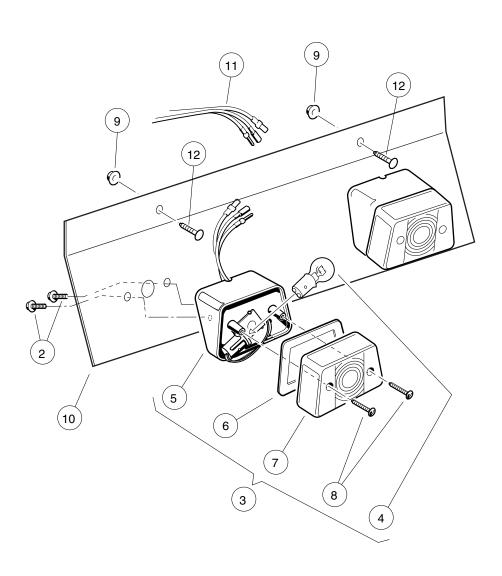








TAILLIGHTS

IAIL			
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102852501	Kit, Tail Lights (includes items 2 through 12)	1
2	1015752	Screw, #12-16 X 0.625 Hi-Lo	
3	1016717	Light Assembly, Stop/Taillight (includes items 4 through 8)	
4	1011582	Taillight Bulb	
5	N/A	Housing, Taillight	
6	N/A	Gasket, Taillight	
7	N/A	Lens, Taillight	
8	N/A	Screw, Taillight Lens	
9	101835601	Locknut, 1/4-20 Hex Whiz	
10	102909901	Support, Tail Light	
11	102903301	Asm, Wire Harness	
12	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	
12	7047	3Clew, 1/4-20 λ 0./3 nex-nead Cap	2
		Note: Taillights are optional for Carryall 242 and XRT 800 vehicles.	

DID YOU

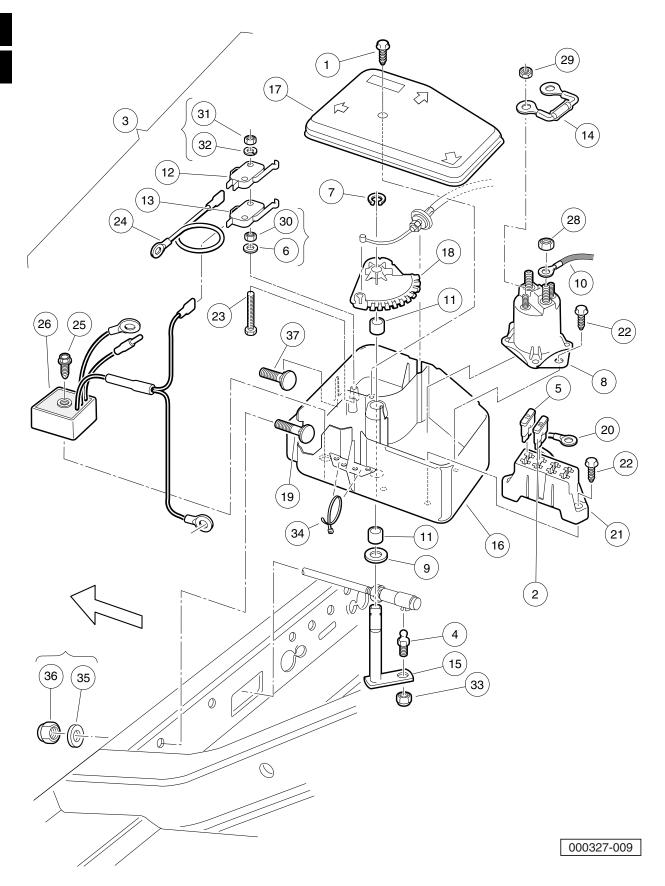








ELECTRICAL COMPONENT BOX-GASOLINE VEHICLES

	PART NO.	DESCRIPTION	C
		1 2 3 4	
1	1015752	Screw, #12-16 X 0.625 Hi-Lo	
2	1016423	Fuse, 20-Amp	
3	103936601	Asm, Ele Comp Box, 800 Gas Ps (includes items 4 through 34)	
4	1010954	Stud, 1/4-28 X 0.560 Ball	
5	1012295	Fuse, 10-Amp	
6	1012431	Washer, #4 Flat	
7	1013589	Ring, 0.338" Internal Retaining	
8	1013609	Solenoid, 12-Volt	
9	1014065	Washer, 0.38" ID Delrin Flat	
10	1014119	Wire Assembly #6 Red	
11	1014145	Bushing, Secondary Weight, Split	
12	1014807	Switch, Limit	
13	1014808	Switch, Limit	
14	1014948	Diode	
15	1015345	Bell Crank and Shaft Assembly	
16	1015371	Box, Electrical Component	
17	1015372	Cover, Electric Box	
18	1015373	Cam, Electric Box	
19	1015405	Bolt, Carriage, 5/16-18 X 2.0	
20	1015737	Wire Assy, #10 Red	
21	1015741	Fuse Block	
22	1015752	Screw, #12-16 X 0.625 Hi-Lo	
23	1015878	Screw, #4-40 Hex Head Machine	
24	1016401	Wire Assy, #16 Orange	
25	101856102	Screw, 1/4-15 X 1.50 Hi-lo Hex	
26	102711201	Voltage Regulator	
27	N/A	Washer, Nylon Retaining *	
28	103332401	Assy Wire Harness Gas V4	
29	1242	Nut, 5/16-18 Hex	
30	7893	Nut, #10-32 Hex	
31	8057	Nut, #4-40 Hex Machine	
32	8058	Lockwasher, #4 Split	
33	8717	Locknut, 1/4-28 Nylon Insert	
34	8990	Tie Wrap, 8" Nylon	
35	1241	Washer, 5/16 Type A Flat	
36	7473	Locknut, 5/16-18 Nylon Insert	
37	7818	Bolt, Carriage, 5/16-18 X 1.5	
		* Note: Not used. Item is for shipping purposes only.	

DID YOU

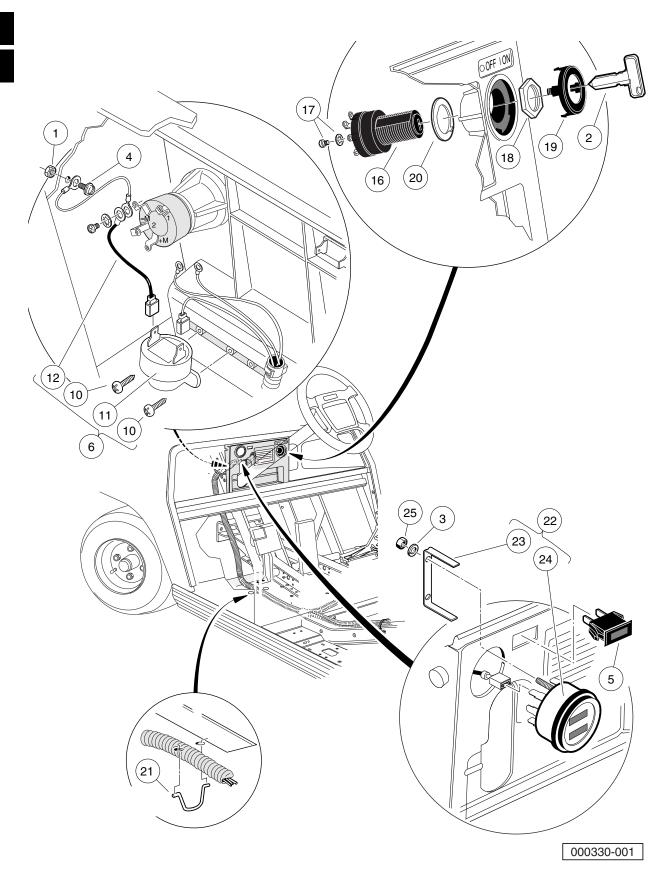





CONTROLS AND INDICATORS – GASOLINE VEHICLES


TEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1011229	Locknut, #6-32 Whiz	1
2	1012505	Keys (set of 2)	2
3	1012986	Lockwasher, M4	2
4	1015720	Screw, #6-32 X 1/2 Hex Washer-Head	1
5	1016630	Light, Oil	1
6	1016859	Kit, Reverse Buzzer (includes items 7 through 15)	1
7	1011229	Locknut, #6-32 Whiz	1
8	1012431	Washer, #4 Flat	2
9	1015720	Screw, #6-32 X 1/2 Hex Washer-Head	1
10	1016849	Screw, #4-24 X 0.33 Pan-Head Machine	2
11	1016851	Buzzer, Reverse (9-48 VDC)	1
12	1016857	Wire Assembly Black #18	1
13	8056	Screw, #4-40 X 0.75 Round-Head Machine	2
14	8057	Nut, #4-40 Hex Machine	2
15	8058	Lockwasher, #4 Split	2
16	101826301	Key Switch, 12-Volt, Off/On	
17	101830601	Screw and Washer Assembly	4
18	101830701	Nut, Key Switch	
19	101834502	Cap, Black Key Switch	
20	101851101	Washer, Key Switch	
21	101900901	Harness Retainer	
22	101990703	Gauge, Fuel/Hour, with Bracket (includes items 23 and 24)	
23	102025901	Bracket, Fuel Gauge/Hour Meter	
24	N/A	Gauge, Fuel/Hour	
25	101991101	Nut, M4-0.7	1
		Note: Items 7 through 9, and 13 through 15 are included in the reverse buzzer kit, but are not used in this application.	

6 G





G

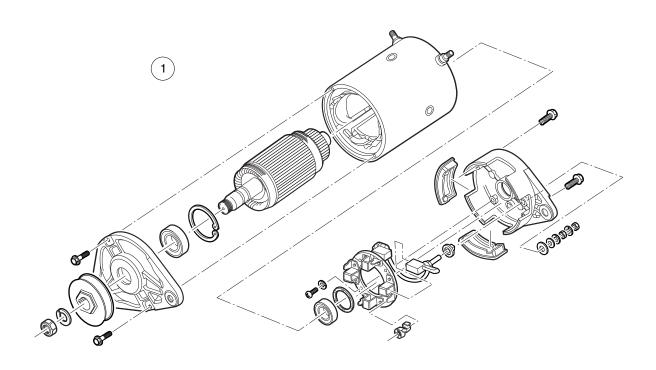






https://CartPros.com/f.html

MIDE I - JASOLINE **VEHICLES**

ITEM PART NO. DESCRIPTION QTY 1 2 3 4 Asm, St/gen, Bi-rot, Ks, Svc (includes items 2 and 3) Decal, Rotating Parts/Hot Manifold St/gen, Bi-rot, Util, Ks (includes items 4 through 24) N/A Wire Assy, #6 Green Pulley, V-Belt Nut, Hex, M14x2, S/G Retainer, Front, S/G Bearing, Ball, Front, S-g Bearing, Ball, Front, S-g Washer, Lock M14x2, S-g Washer, Wave, S-g Asm, Armature, Starter/Generator Head, Drive End, S-g Asm, Frame and Field, Starter/Generator Kit, Spring Brush, Starter/Generator (includes item 16) Spring, Brush, S-g N/A Set, Brush Term, S-g Head, Comm End, S-g Set, Fastener, Ceh Deh, S-g Set, Term Hardware, S/G Kit, Cover, Brush Insp, Starter/Generator (includes items 22 and 23) Plug, Rubber Drain, Start/Generator N/A N/A Cover, Inspection, S-g Kit, Brush And Brush Holder

DID YOU

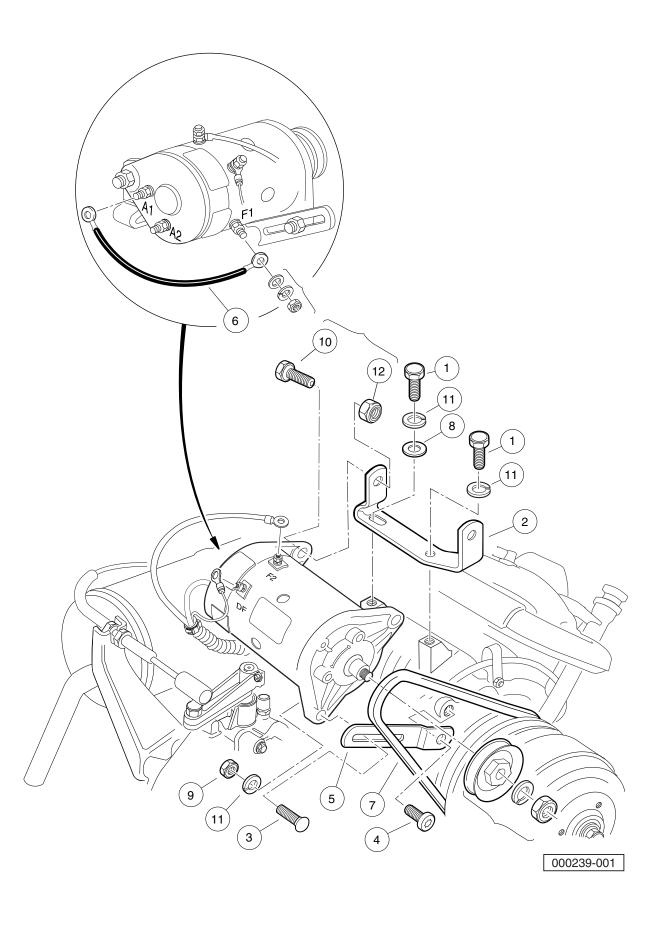






GET STARTED

https://CartPros.com/f.html JASOLINE **VEHICLES**

		V2	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1012830	Screw, M8-125 X 22 Hex-Head	2
2	101524002	Bracket, Starter/Generator Mounting	1
3	1015932	Bolt, Carriage, 5/16-18	1
4	1016074	Screw, M8-1.25 X 18mm Torx	1
5	1016883	Bracket, Starter/Generator Adjustment	1
6	101837301	Wire Assy, #6 Green	1
7	101916701	V-Belt	1
8	1241	Washer, 5/16 Type A Flat	1
9	1242	Nut, 5/16-18 Hex	1
10	705	Screw, Cap-hex Hd 3/8-16x1.25	2
11	7174	Lockwasher, 5/16 Split	3
12	8754	Locknut, 3/8-16 Hex	2
i	1	1	



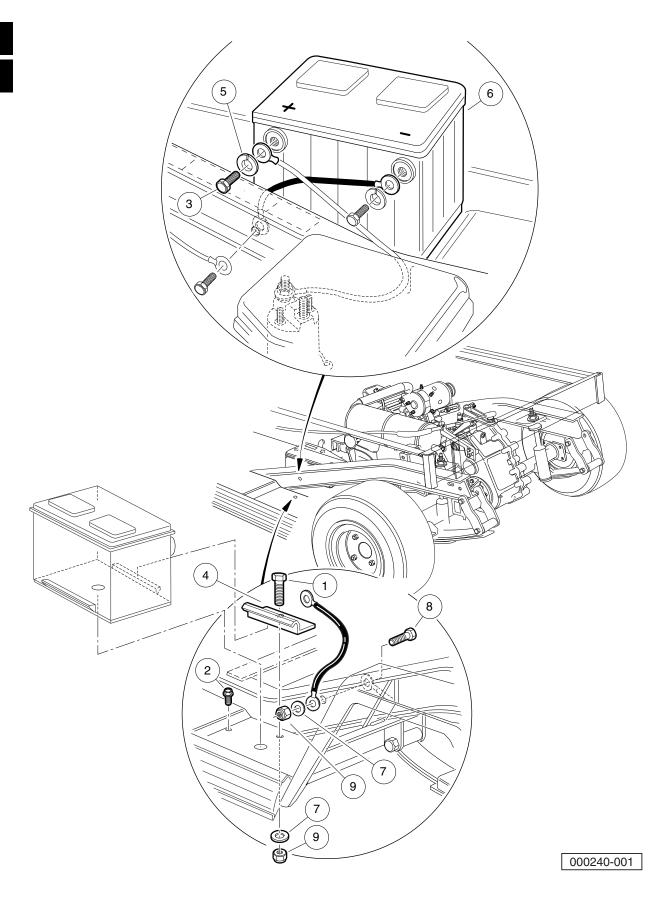





BATTERY – GASOLINE VEHICLES

		DATTERT - GASOLINE VEHIC	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010934	Screw, 5/16-18 X 1.00 Hex Cap	1
2	1014288	Screw, 5/16-18 X 0.75 Thread-Forming	1
3	1014375	Screw, 3/8-16 X 0.50 Stainless Steel Hex-Head	1
4	101898001	Clamp, Battery	
5	102355301	Lockwasher, #10 Split Ss	1
6	103496801	Battery, Start, 12v	1
7	1241	Washer, 5/16 Type A Flat	
8	7173	Screw, 5/16-18 X 0.75 Hex-Head Cap	
9	7473	Locknut, 5/16-18 Nylon Insert	
1			
Ì			1





6








FE350 ENGINE – S27





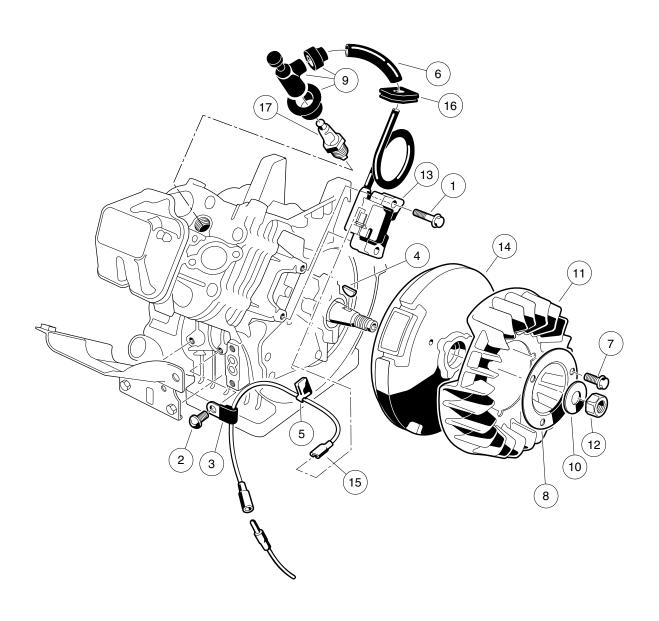






GET STARTED HERE

https://CartPros.com/f.html

r search box and it will find the part you are looking for. FLYWHEEL

1 1 1016455 Bolt, Flange Head	2 1 1 1 1 3 1 1 1 1 1 1 1 1
2 1016544 Screw 3 1016561 Clamp 4 1016562 Key 5 1016587 Clamp 6 1016588 Tube, 7mm X 10mm X 70mm 7 1017448 Bolt, Flanged 8 1017455 Plate, Flywheel Fan 9 1017463 Cap Asm, Plug 10 1017490 Washer, Flat 11 101916301 Fan (cw) 12 102838401 Nut, Hex, 18 mm Fine 13 103616501 Coil Asm, Ignition 14 103616601 Flywheel, Complete 15 103616701 Wire Lead, Ignition 16 103616801 Grommet	1 1 1 1 3 1 1 1 1 1 1 1
2 1016544 Screw 3 1016561 Clamp 4 1016562 Key 5 1016587 Clamp 6 1016588 Tube, 7mm X 10mm X 70mm 7 1017448 Bolt, Flanged 8 1017455 Plate, Flywheel Fan 9 1017463 Cap Asm, Plug 10 1017490 Washer, Flat 11 101916301 Fan (cw) 12 102838401 Nut, Hex, 18 mm Fine 13 103616501 Coil Asm, Ignition 14 103616601 Flywheel, Complete 15 103616701 Wire Lead, Ignition 16 103616801 Grommet	1 1 1 3 1 1 1 1 1 1 1
4 1016562 Key 5 1016587 Clamp 6 1016588 Tube, 7mm X 10mm X 70mm 7 1017448 Bolt, Flanged 8 1017455 Plate, Flywheel Fan 9 1017463 Cap Asm, Plug 10 1017490 Washer, Flat 11 101916301 Fan (cw) 12 102838401 Nut, Hex, 18 mm Fine 13 103616501 Coil Asm, Ignition 14 103616601 Flywheel, Complete 15 103616701 Wire Lead, Ignition 16 103616801 Grommet	1 1 1 3 1 1 1 1 1 1 1
5 1016587 Clamp 6 1016588 Tube, 7mm X 10mm X 70mm 7 1017448 Bolt, Flanged 8 1017455 Plate, Flywheel Fan 9 1017463 Cap Asm, Plug 10 1017490 Washer, Flat 11 101916301 Fan (cw) 12 102838401 Nut, Hex, 18 mm Fine 13 103616501 Coil Asm, Ignition 14 103616601 Flywheel, Complete 15 103616701 Wire Lead, Ignition 16 103616801 Grommet	1 1 3 1 1 1 1 1 1 1
6 1016588 Tube, 7mm X 10mm X 70mm 7 1017448 Bolt, Flanged 8 1017455 Plate, Flywheel Fan 9 1017463 Cap Asm, Plug 10 1017490 Washer, Flat 11 101916301 Fan (cw) 12 102838401 Nut, Hex, 18 mm Fine 13 103616501 Coil Asm, Ignition 14 103616601 Flywheel, Complete 15 103616701 Wire Lead, Ignition 16 103616801 Grommet	1 3 1 1 1 1 1 1 1 1
7 1017448 Bolt, Flanged	3 1 1 1 1 1 1 1 1
8 1017455 Plate, Flywheel Fan 9 1017463 Cap Asm, Plug 10 1017490 Washer, Flat 11 101916301 Fan (cw) 12 102838401 Nut, Hex, 18 mm Fine 13 103616501 Coil Asm, Ignition 14 103616601 Flywheel, Complete 15 103616701 Wire Lead, Ignition 16 103616801 Grommet	1 1 1 1 1 1 1
9 1017463 Cap Asm, Plug 10 1017490 Washer, Flat 11 101916301 Fan (cw) 12 102838401 Nut, Hex, 18 mm Fine 13 103616501 Coil Asm, Ignition 14 103616601 Flywheel, Complete 15 103616701 Wire Lead, Ignition 16 103616801 Grommet	1 1 1 1 1 1 1
10 1017490 Washer, Flat 11 101916301 Fan (cw) 12 102838401 Nut, Hex, 18 mm Fine 13 103616501 Coil Asm, Ignition 14 103616601 Flywheel, Complete 15 103616701 Wire Lead, Ignition 16 103616801 Grommet	1 1 1 1 1
11 101916301 Fan (cw) 12 102838401 Nut, Hex, 18 mm Fine 13 103616501 Coil Asm, Ignition 14 103616601 Flywheel, Complete 15 103616701 Wire Lead, Ignition 16 103616801 Grommet	1 1 1 1 1
12 102838401 Nut, Hex, 18 mm Fine 13 103616501 Coil Asm, Ignition 14 103616601 Flywheel, Complete 15 103616701 Wire Lead, Ignition 16 103616801 Grommet	1 1 1 1
12 102838401 Nut, Hex, 18 mm Fine 13 103616501 Coil Asm, Ignition 14 103616601 Flywheel, Complete 15 103616701 Wire Lead, Ignition 16 103616801 Grommet	1 1 1 1
14 103616601 Flywheel, Complete 15 103616701 Wire Lead, Ignition 16 103616801 Grommet	 1 1 1
15 103616701 Wire Lead, Ignition 16 103616801 Grommet	 1 1
15 103616701 Wire Lead, Ignition 16 103616801 Grommet	 1
16 103616801 Grommet	
	1



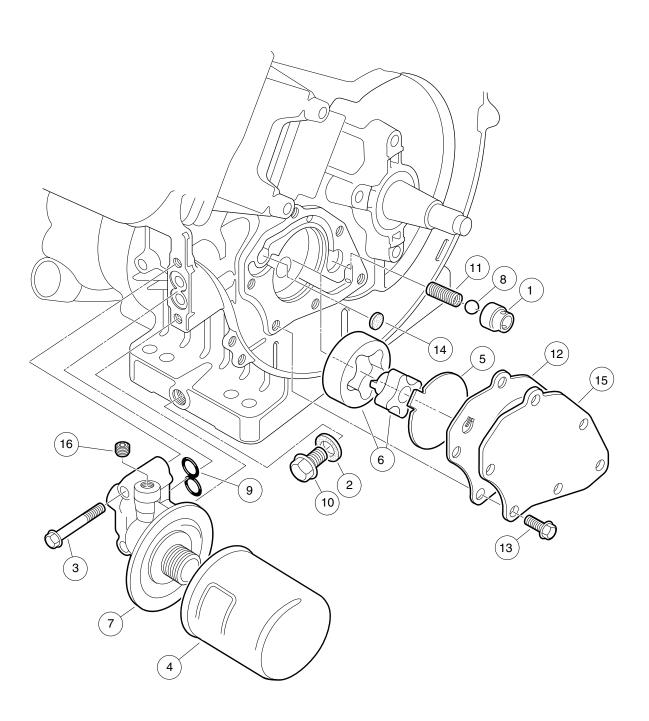








FE350 ENGINE (AS26) – OIL CIRCULATION

ITEA4	DARTNA	DESCRIPTION	077
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1016429	Seat, Value Oil Press Relief	1
2	1016432	Gasket, Drain Plug	
3	1016457	Bolt, Flange Head	2
4	1016467	Filter, Oil	
5	1016473	Plate, Oil Pump	1
6	101648203	Oil Pump And Rotor	1
7	1016502	Bracket, Oil Filter Mount	1
8	1016537	Ball, Steel, Press, Relief	1
9	1016570	O-Ring	1
10	1016576	Plug, Drain	1
11	1016581	Spring	1
12	1017442	Gasket	1
13	1017456	Bolt, Flanged	6
14	1017458	Filter	1
15	1017460	Cover, Pump	1
16	1017507	Plug	2



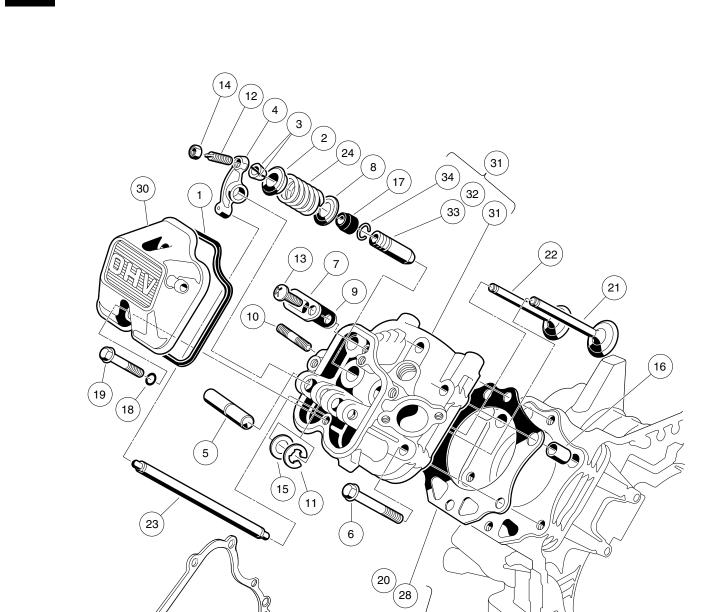

29

27

26

(25)








FE350 ENGINE (AS26) – CYLINDER HEAD

1		1016449 1016450 1016451
2 1016449 Retainer, Valve Spring 3 1016450 Collet 4 1016451 Arm, Rocker 5 1016452 Shaft, Rocker 6 1016458 Bolt, Flange Head, M8 x 1.25 x 45 mm 7 1016474 Plate 8 1016479 Seat, Spring 9 1016483 Stud, Two-Ended, M8-1.25 10 1016499 Stud, Two-Ended, M8-1.25 11 1016517 Circlip, Type-E 12 1016542 Screw 13 1016543 Nut 14 1016544 Screw 15 1016549 Washer, 12.1x19x1.8 16 1016563 Pin 17 1016566 Seal, Oil 18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017435 Rod, Push 23 1017473 Spring, Engine Valve 25 1016440		1016449 1016450 1016451
3 1016450 Collet 4 1016451 Arm, Rocker 5 1016452 Shaft, Rocker 6 1016458 Bolt, Flange Head, M8 x 1.25 x 45 mm 7 1016474 Plate 8 1016479 Seat, Spring 9 1016483 Valve 10 1016489 Stud, Two-Ended, M8-1.25 11 1016517 Circlip, Type-E 12 1016542 Screw 13 1016544 Screw 14 1016545 Nut 15 1016549 Washer, 12.1x19x1.8 16 1016563 Pin 17 1016566 Seal, Oil 18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017454 Rod, Push 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Exhaust 27 1017434 Gasket, Crankcase Cover 29 103615601 <td></td> <td>1016450 1016451</td>		1016450 1016451
4 1016451 Arm, Rocker 5 1016452 Shaft, Rocker 6 1016458 Bolt, Flange Head, M8 x 1.25 x 45 mm 7 1016474 Plate 8 1016479 Seat, Spring 9 1016483 Valve 10 1016489 Stud, Two-Ended, M8-1.25 11 1016517 Circlip, Type-E 12 1016542 Screw 13 1016544 Screw 14 1016545 Nut 15 1016549 Washer, 12.1x19x1.8 16 1016563 Pin 17 1016566 Seal, Oil 18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017445 Rod, Push 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Engine to Insulator 27 1017434 Gasket, Crankcase Cover 29 103615601 Guide, Valve, Exhaust <t< td=""><td></td><td>1016451</td></t<>		1016451
5 1016452 Shaft, Rocker 6 1016458 Bolt, Flange Head, M8 x 1.25 x 45 mm 7 1016474 Plate 8 1016479 Seat, Spring 9 1016483 Valve 10 1016489 Stud, Two-Ended, M8-1.25 11 1016517 Circlip, Type-E 12 1016542 Screw 13 1016544 Screw 14 1016545 Nut 15 1016549 Washer, 12.1x19x1.8 16 1016563 Pin 17 1016566 Seal, Oil 18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017445 Rod, Push 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Exhaust 26		
6 1016458 Bolt, Flange Head, M8 x 1.25 x 45 mm 7 1016474 Plate 8 1016479 Seat, Spring 9 1016483 Valve 10 1016489 Stud, Two-Ended, M8-1.25 11 1016517 Circlip, Type-E 12 1016542 Screw 13 1016544 Screw 14 1016545 Nut 15 1016549 Washer, 12.1x19x1.8 16 1016563 Pin 17 1016566 Seal, Oil 18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017445 Rod, Push 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Engine to Insulator 27 1017434 Gasket, Crankcase Cover 29 103615601 Guide, Valve, Exhaust 31 1016519 Guide, Valve, Exhaust 32 1016560 Snap Ring <tr< td=""><td></td><td>1016452</td></tr<>		1016452
7 1016474 Plate 8 1016479 Seat, Spring 9 1016483 Valve 10 1016489 Stud, Two-Ended, M8-1.25 11 1016517 Circlip, Type-E 12 1016542 Screw 13 1016544 Screw 14 1016545 Nut 15 1016549 Washer, 12.1x19x1.8 16 1016563 Pin 17 1016566 Seal, Oil 18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017445 Valve, Exhaust 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Engine to Insulator 27 1017434 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016560 Snap Ring 32 1016560 Snap Ring <		
8 1016479 Seat, Spring 9 1016483 Valve 10 1016489 Stud, Two-Ended, M8-1.25 11 1016517 Circlip, Type-E 12 1016542 Screw 13 1016544 Screw 14 1016545 Nut 15 1016549 Washer, 12.1x19x1.8 16 1016563 Pin 17 1016566 Seal, Oil 18 1016580 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017454 Rod, Push 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Exhaust 27 1017434 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016519 Guide, Valve, Exhaust 32 1016560 Snap Ring 33 103615701 Case, Rocker <td></td> <td>1016458</td>		1016458
9 1016483 Valve		1016474
10 1016489 Stud, Two-Ended, M8-1.25 11 1016517 Circlip, Type-E 12 1016542 Screw 13 1016544 Screw 14 1016545 Nut 15 1016549 Washer, 12.1x19x1.8 16 1016563 Pin 17 1016566 Seal, Oil 18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017454 Rod, Push 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Exhaust 27 1017434 Gasket, Head 28 1017443 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016500 Snap Ring 32 1016560 Snap Ring 33 103615701 Case, Rocker		1016479
11 1016517 Circlip, Type-E 12 1016542 Screw 13 1016544 Screw 14 1016545 Nut 15 1016549 Washer, 12.1x19x1.8 16 1016563 Pin 17 1016566 Seal, Oil 18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017454 Rod, Push 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Engine to Insulator 27 1017434 Gasket, Head 28 1017443 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016509 Snap Ring 32 1016560 Snap Ring 33 103615701 Case, Rocker		1016483
12 1016542 Screw 13 1016544 Screw 14 1016545 Nut 15 1016549 Washer, 12.1x19x1.8 16 1016563 Pin 17 1016566 Seal, Oil 18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017454 Rod, Push 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Engine to Insulator 27 1017434 Gasket, Head 28 1017443 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016509 Snap Ring 32 1016560 Snap Ring 33 103615701 Case, Rocker		1016489
13 1016544 Screw 14 1016545 Nut 15 1016549 Washer, 12.1x19x1.8 16 1016563 Pin 17 1016566 Seal, Oil 18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017454 Rod, Push 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Exhaust 26 1016904 Gasket, Exhaust 27 1017434 Gasket, Head 28 1017443 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016519 Guide, Valve 32 1016560 Snap Ring 33 103615701 Case, Rocker		1016517
14 1016545 Nut 15 1016549 Washer, 12.1x19x1.8 16 1016563 Pin 17 1016566 Seal, Oil 18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017454 Rod, Push 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Exhaust 27 1017434 Gasket, Head 28 1017443 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 101650 Snap Ring 32 1016560 Snap Ring 33 103615701 Case, Rocker		1016542
15 1016549 Washer, 12.1x19x1.8 16 1016563 Pin 17 1016566 Seal, Oil 18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017474 Rod, Push 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Exhaust 27 1017434 Gasket, Head 28 1017443 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016519 Guide, Valve 32 1016560 Snap Ring 33 103615701 Case, Rocker		1016544
16 1016563 Pin 17 1016566 Seal, Oil 18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017454 Rod, Push 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Exhaust 27 1017434 Gasket, Head 28 1017443 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016519 Guide, Valve 32 1016560 Snap Ring 33 103615701 Case, Rocker		1016545
17 1016566 Seal, Oil		1016549
18 1016569 O-Ring 19 1016583 Bolt, 6x35 20 1017434 Gasket, Head 21 1017445 Valve, Exhaust 22 1017454 Rod, Push 23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Exhaust 27 1017434 Gasket, Head 28 1017443 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016519 Guide, Valve 32 1016560 Snap Ring 33 103615701 Case, Rocker		1016563
19 1016583 Bolt, 6x35		1016566
20 1017434 Gasket, Head		1016569
21 1017445 Valve, Exhaust		1016583
22 1017454 Rod, Push		1017434
23 1017473 Spring, Engine Valve 24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Exhaust 27 1017434 Gasket, Head 28 1017443 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016519 Guide, Valve 32 1016560 Snap Ring 33 103615701 Case, Rocker		1017445
24 102304801 Kit, Gasket, FE350 (includes items 25 through 28) 25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Exhaust 27 1017434 Gasket, Head 28 1017443 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016519 Guide, Valve 32 1016560 Snap Ring 33 103615701 Case, Rocker		1017454
25 1016440 Gasket, Engine to Insulator 26 1016904 Gasket, Exhaust 27 1017434 Gasket, Head 28 1017443 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016519 Guide, Valve 32 1016560 Snap Ring 33 103615701 Case, Rocker		1017473
26 1016904 Gasket, Exhaust 27 1017434 Gasket, Head 28 1017443 Gasket, Crankcase Cover 29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016519 Guide, Valve 32 1016560 Snap Ring 33 103615701 Case, Rocker	l l	102304801
27 1017434 Gasket, Head		1016440
28 1017443 Gasket, Crankcase Cover		1016904
29 103615601 Cylinder Head (includes items 30 through 32) 30 1016518 Guide, Valve, Exhaust 31 1016519 Guide, Valve 32 1016560 Snap Ring 33 103615701 Case, Rocker		1017434
30 1016518 Guide, Valve, Exhaust 31 1016519 Guide, Valve 32 1016560 Snap Ring 33 103615701 Case, Rocker		1017443
31 1016519 Guide, Valve 32 1016560 Snap Ring 33 103615701 Case, Rocker		103615601
32 1016560 Snap Ring		1016518
33 103615701 Case, Rocker		1016519
		1016560
34 103616301 Valve, Intake, Hard Tip		103615701
		103616301
Note: Item 25 is not a component of the FE350 engine.	0 engine.	



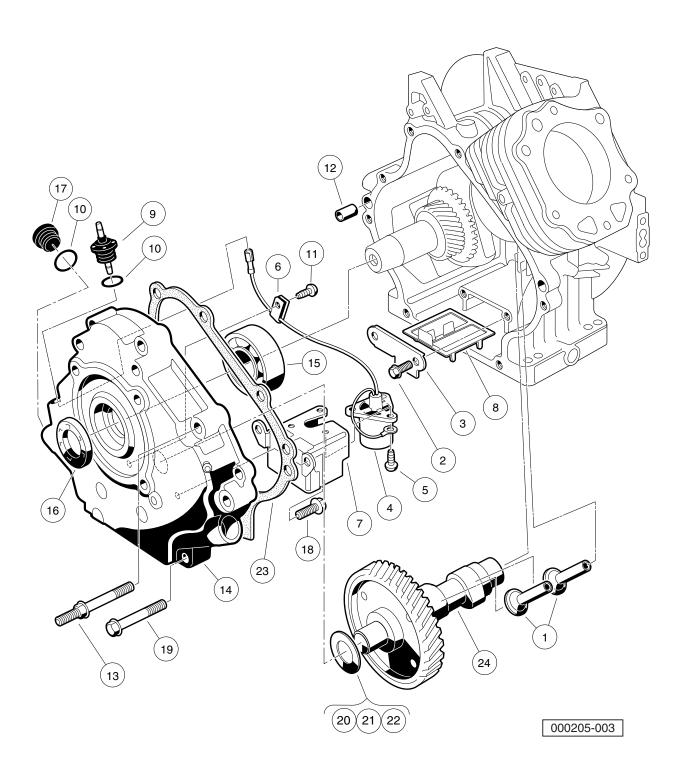






https://CartPros.com/f.html

SENSOR

TEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1016453	Tappet	2
2	1016454	Bolt, Flange Head, M5 x 0.8 x 8 mm	2
3	1016472	Plate, Oil Filter Screen	1
4	1016494	Sensor, Oil Level	1
5	1016496	Screw, Cross Pan-Head, M4 x 0.7 x 8 mm	3
6	1016506	Clamp	1
7	1016510	Bracket, Switch, Oil Level	1
8	1016521	Screen, Oil Filter	
9	1016535	Connector, Cord	
10	1016538	O-Ring	2
1	1016544	Screw	
12	1016564	Pin	2
3	1016584	Bolt, Two-Ended, M8 x 1.25 x 69 mm	-
14	1017472	Cover Crankcase	
5	1017487	Bearing, Ball	
16	1017504	Seal, Oil	
17	1017508	Plug	
18	1017513	Bolt Switch Bracket	:
19	1017513	Screw, M8-1.25 X 45mm Hex	
20	1017514	Shim, 0.3	
21	101751801	Shim, 0.4	
22			
23	101751803 103615901	Shim, 0.5	
-		Gasket, Crankcase Cover	
24	103616401	Camshaft, Complete	•



7

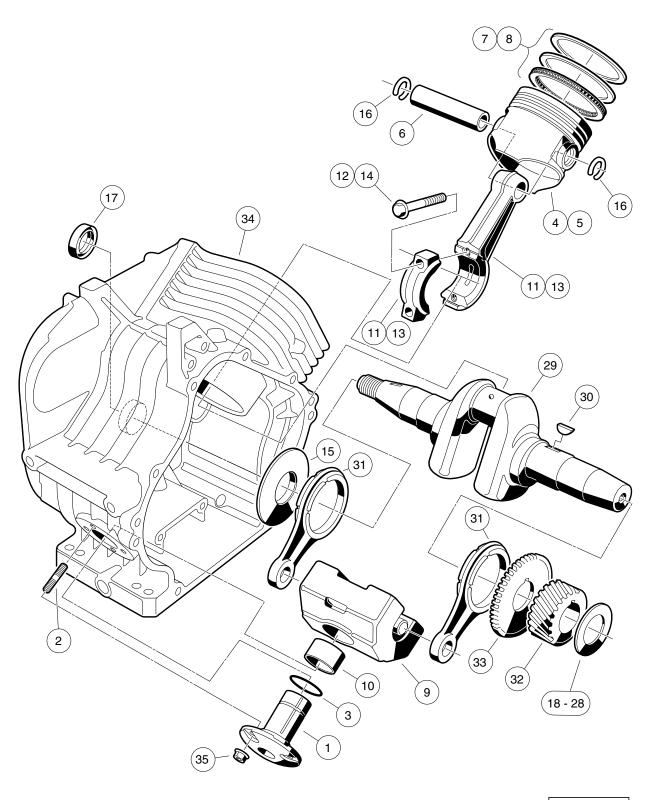









FE350 ENGINE (AS26) - CRANKCASE AND CRANKSHAFT

	PART NO.	DESCRIPTION
		1 2 3 4
1	1016470	Shaft, Guide, Counterbalance
2	1016541	Stud, 6x14
3	1016571	O-Ring
4	101744901	Piston, Standard
5	101744902	Piston, 0.50 mm Oversize
6	1017450	Pin, Piston
7	101745101	Ring Set, Standard Piston
8	101745102	Ring Set, Piston, 0.50 mm Oversize
9	1017453	Counterbalance Weight (includes item 10)
10	1017510	Bearing, Plain
11	101745701	Asm, Con. Rod Std (includes item 12)
12	1017512	Bolt
13	101745702	Asm,Con.Rod 0.5mm U/s (includes item 14)
14	1017512	Bolt
15	1017501	Spacer
16	1017502	Snap Ring
17	1017503	Seal, Oil
18	101773301	Shim, Crankshaft, 1.18mm
19	101773302	Shim, Crankshaft, 1.25mm
20	101773303	Shim, Crankshaft, 1.32mm
21	101773304	Shim, Crankshaft, 1.39mm
22	101773305	Shim, Crankshaft, 1.46mm
23	101773306	Shim, Crankshaft, 1.53mm
24	101773307	Shim, Crankshaft, 1.60mm
25	101773308	Shim, Crankshaft, 1.67mm
26	101773309	Shim, Crankshaft, 1.74mm
27	101773310	Shim, Crankshaft, 1.11mm
28	101773311	Shim, Crankshaft, 1.81mm
29	103615801	Crankcase, FE350
30	N/A	Crankshaft, Complete (includes items 31 through 34)
31	1016562	Key
32	1017471	Rod
33	N/A	Gear, Helical
34	N/A	Gear, Spur
J-T	103616201	Nut

 

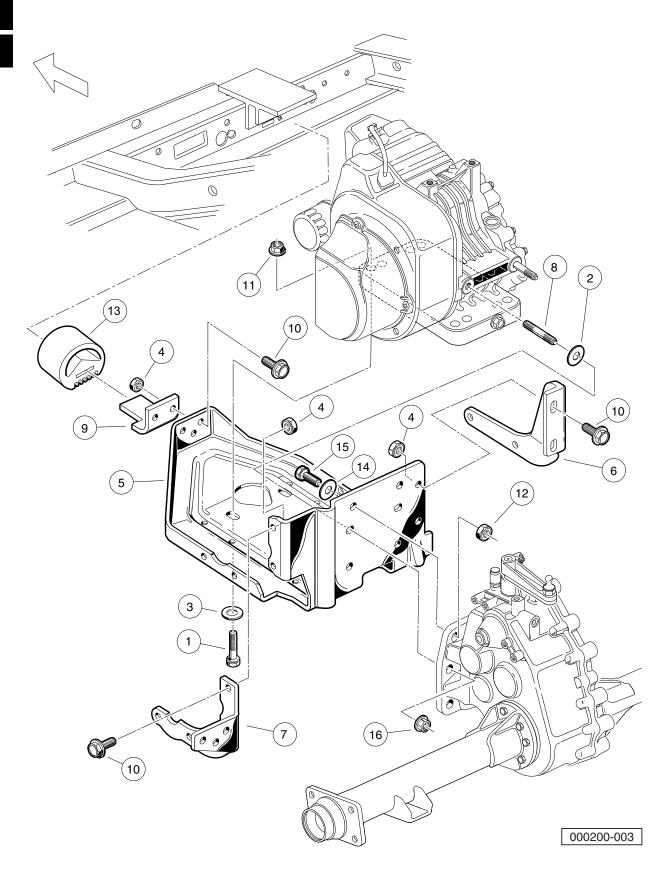







FE350 ENGINE (AS26) – MOUNTING

		1 LJJO LITOITIL (AJZO) – MICOITI	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1010577	Bolt, Hex-Head, 5/16-18 X 1.50	4
2	1011697	Washer, 5/16 Flat	2
3	1012571	Washer, 5/16 Extra Thick Flat	4
4	1013924	Nut, 5/16-24 Hex Head Cone	10
5	101827101	Plate, Engine Mounting	1
6	101832601	Stiffener (PTO Side)	1
7	101832701	Stiffener (Flywheel Side)	1
8	101833101	Stud, M8-1.25 X 50 mm Two-Ended	2
9	101834601	Snubber Bracket	1
10	101884801	Screw, 5/16-24 X 0.875 Grade-8	10
11	101963401	Locknut, 5/16-18 Hex Flange	4
12	102065901	Locknut, 3/8-16 Flanged Dimple	4
13	102540301	Inner Frame Snubber	1
14	334	Washer, 3/8 Type A Flat	4
15	705	Screw, Cap-hex Hd 3/8-16x1.25	4
16	96704416	Nut Flg, M8 X 1.25 Serrated	2

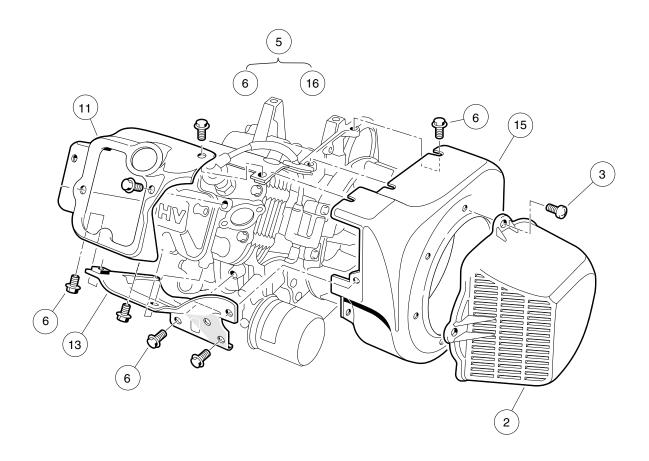

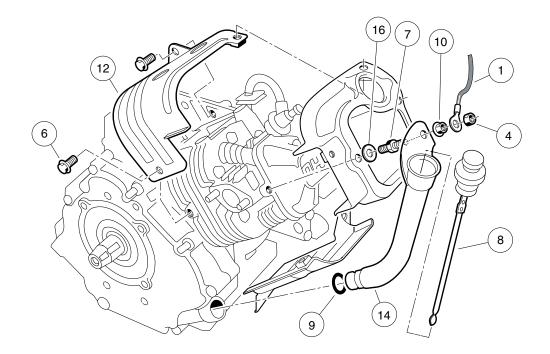



CartPros directs you to the right part using the part



numbers from this manual. Enter the part number into our search box and it will find the part you are looking for. RELEASE) — SHROUDS AND BRACKETS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1015332	Wire Assembly, #10, Uninsulated	1
2	1015649	Shroud, Fan	1
3	1015969	Screw, M6-1.00 X 10mm Pan Hd	4
4	101887601	Locknut, M6-1.00 Nylon Insert	1
5	103386202	Engine, FE350 S27 (includes items 6 through 16)	1
6	1016456	Bolt, Flange Head, M6 x 1 x 12 mm	16
7	1016507	Bolt, Two-Ended	1
8	1016531	Dipstick	1
9	1016539	O-Ring	1
10	1016547	Nut, M6 Flange	1
11	1017474	Shroud, Engine	1
12	1017475	Shroud, Engine	1
13	1017476	Shroud, Engine	1
14	1017486	Tube, Oil Filler	1
15	101916101	Housing, FE350 Fan	1
16	N/A	Washer, 6mm Flat	1





7






https://CartPros.com/f.html

FUEL, INTAKE, AND GOVERNOR SYSTEMS

8



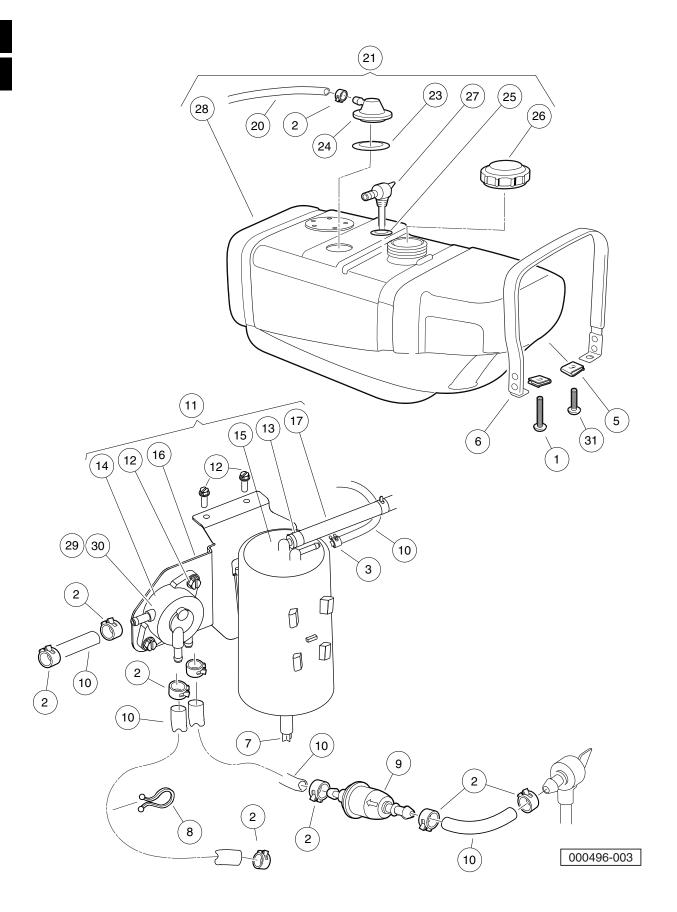






FUEL SYSTEM

1011988 1012649 1013687 1013746 1014116 1014928 101824401 101987701 102003201 102865101 103446501 1012285 1012649 103010101 103372401	DESCRIPTION 1 2 3 4 Screw, 1/4-20 X 2.00 Phillips Truss-Head	1 7 1 2 2 1 1 1 1 1 1 2 2 2 2 2 2 2 2 2
1012649 1013687 1013746 1014116 1014928 101824401 101987701 102003201 102865101 103446501 1012285 1012649 103010101	Screw, 1/4-20 X 2.00 Phillips Truss-Head Clamp, 0.460 Red Hose	7 1 2 2 1 1 1 1 1 1 2
1012649 1013687 1013746 1014116 1014928 101824401 101987701 102003201 102865101 103446501 1012285 1012649 103010101	Clamp, 0.460 Red Hose Clamp, 3/8" Hose (screw type) Clamp, 0.301 ID Hose Nut, 1/4-20 Speed Fuel Strap Assembly Rear Vent Barb Clamp, Plastic Tie Filter, Fuel, 30 Micron Fuel Line (available by the foot) Asm, Carbon Canister (includes items 12 through 20) Screw, 1/4 X 0.625 Hex-Head Clamp, 0.460 Red Hose	7 1 2 2 1 1 1 1 1 1 2
1013687 1013746 1014116 1014928 101824401 101987701 102003201 102865101 103446501 1012285 1012649 103010101	Clamp, 3/8" Hose (screw type) Clamp, 0.301 ID Hose	1 2 2 1 1 1 1 1 1
1013746 1014116 1014928 101824401 101987701 102003201 102865101 103446501 1012285 1012649 103010101	Clamp, 0.301 ID Hose	2 2 1 1 1 1 1 1 2
1014116 1014928 101824401 101987701 102003201 102865101 103446501 1012285 1012649 103010101	Nut, 1/4-20 Speed Fuel Strap Assembly Rear Vent Barb Clamp, Plastic Tie Filter, Fuel, 30 Micron Fuel Line (available by the foot) Asm, Carbon Canister (includes items 12 through 20) Screw, 1/4 X 0.625 Hex-Head Clamp, 0.460 Red Hose	2 1 1 1 1 1 1 2
1014928 101824401 101987701 102003201 102865101 103446501 1012285 1012649 103010101	Fuel Strap Assembly Rear Vent Barb Clamp, Plastic Tie Filter, Fuel, 30 Micron Fuel Line (available by the foot) Asm, Carbon Canister (includes items 12 through 20) Screw, 1/4 X 0.625 Hex-Head Clamp, 0.460 Red Hose	1 1 1 1 1 1 2
101824401 101987701 102003201 102865101 103446501 1012285 1012649 103010101	Vent Barb	1 1 1 1 1 2
101987701 102003201 102865101 103446501 1012285 1012649 103010101	Clamp, Plastic Tie Filter, Fuel, 30 Micron Fuel Line (available by the foot) Asm, Carbon Canister (includes items 12 through 20) Screw, 1/4 X 0.625 Hex-Head Clamp, 0.460 Red Hose	1 1 1 1 2
102003201 102865101 103446501 1012285 1012649 103010101	Filter, Fuel, 30 Micron Fuel Line (available by the foot) Asm, Carbon Canister (includes items 12 through 20) Screw, 1/4 X 0.625 Hex-Head Clamp, 0.460 Red Hose	1 1 1 2
102865101 103446501 1012285 1012649 103010101	Fuel Line (available by the foot)	1 1 2
103446501 1012285 1012649 103010101	Asm, Carbon Canister (includes items 12 through 20)	1 2
1012285 1012649 103010101	Screw, 1/4 X 0.625 Hex-Head	2
1012649 103010101	Clamp, 0.460 Red Hose	
103010101		~
	Pump Fuel Impulse Fh	2
103372/01	Turrip, ruei, irripuise, rri	A/R
103372401	Canister, Carbon, Fuel Tank	1
103372801	Bracket, Carbon Canister, Sw	1
103756401	Asm, Vent Line, Evap Canister (includes items 18 and 19)	1
N/A	Hose, Vent, 5/16 ld Bulk	1
N/A	Vent, Barb, 5/16 Dia Hose	1
103896601	Hose, Vent, 1/4 ld, 9 ln	1
103651902	Asm, Tank, Ds Utl Wo/su† Nano (includes items 22 through 28)	1
1015137	Fuel Line (available by the foot)	1
1015139	Insulation Grommet	1
1015143	Vent, Fuel Tank	1
102406701	Bushing, Line, Return	1
103372101	Cap, Fuel Tank, Gas, Ratchet	1
103372302	Fuel Pickup w/Shut-Off Valve, 288mm	1
103776902	Tank, Fuel, Top, Wo/su Nano	1
103781101	Kit, Fuel Pump Retrofit (includes item 30)	1
103010101	Pump, Fuel, Impulse, Fh	1
8248	Screw, 1/4-20 X 0.75 Truss-Head Machine	1
	103756401 N/A N/A 103896601 103651902 1015137 1015139 1015143 102406701 103372101 103372302 103776902 103781101 103010101	103756401 Asm, Vent Line, Evap Canister (includes items 18 and 19) N/A Hose, Vent, 5/16 Id Bulk 103896601 Hose, Vent, 1/4 Id, 9 In 103651902 Asm, Tank, Ds Utl Wo/su† Nano (includes items 22 through 28) 1015137 Fuel Line (available by the foot) 1015139 Insulation Grommet 1015143 Vent, Fuel Tank 102406701 Bushing, Line, Return 103372101 Cap, Fuel Tank, Gas, Ratchet 103776902 Tank, Fuel, Top, Wo/su Nano 103781101 Kit, Fuel Pump Retrofit (includes item 30) 103010101 Pump, Fuel, Impulse, Fh

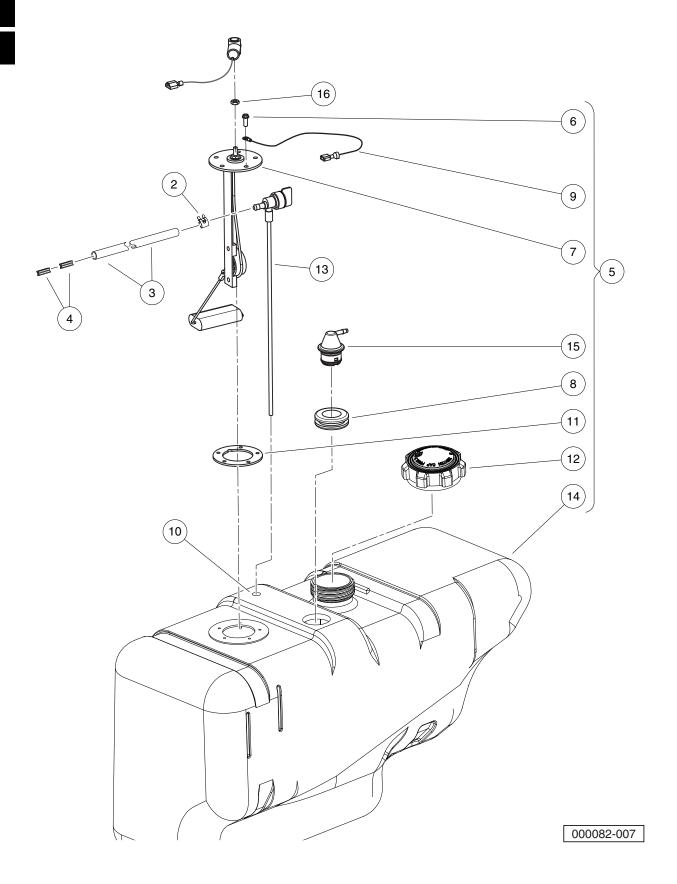






FUEL TANK WITH FUEL LEVEL SENDING UNIT

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1016004	Tank Kit w/Sending Unit (includes items 2 through 16)	1
2	1013746	Clamp, 0.301 ID Hose	2
3	101587703	Hose, Fuel, Vent, 22" Long	1
4	101824401	Vent Barb	2
5	103956601	Asm, Tank, Ds Utl W/su† Nano (includes items 6 through 15)	1
6	1013461	Screw, #10-16 Hex-Head Hi-Lo	5
7	1013462	Sending Unit, Fuel Level *	1
8	1015139	Insulation Grommet	1
9	1015921	Wire Assembly #16 Black	
10	102406701	Bushing, Line, Return	
11	102522001	Gasket, Rubber	1
12	103372101	Cap, Fuel Tank, Gas, Ratchet	
13	103372302	Valve, Fuel, 288mm	1
14	103776901	Tank, Fuel, Top, W/su Nano	1
15	103905201	Asm. Vent, Fuel, 1/4 Inch Od	
16	7473	Locknut, 5/16-18 Nylon Insert	



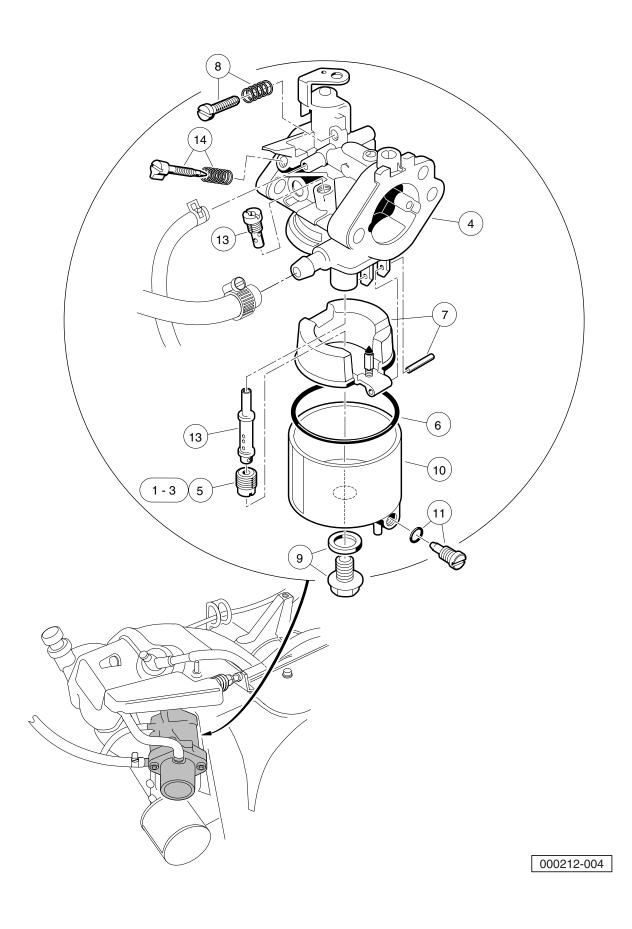








CARBURETOR ASSEMBLY – FE350 (AS26)

ITEM	PART NO.	DESCRIPTION	Q
		1 2 3 4	
1	101642578	Jet, Altitude, # 78	
2	101642580	Jet, Altitude, # 80	
3	101642582	Jet, Altitude, # 82	
4	103524501	Carburetor, Fe350d Hs (includes items 5 through 14)	
5	101642585	Jet, Altitude, # 85	
6	1016437	Gasket, Carburetor Bowl OHV	
7	1016486	Float Assembly	
8	1016501	Screw Assembly	
9	1016585	Bolt	
10	1017461	Chamber Assembly, Float (includes item 12) (includes item 11)	
11	1016499	Screw Assembly	
12	101973101	Jet, #40 Pilot	1
13	101973301	Nozzle, Main	1
14	N/A	Assembly, Pilot Air Screw	



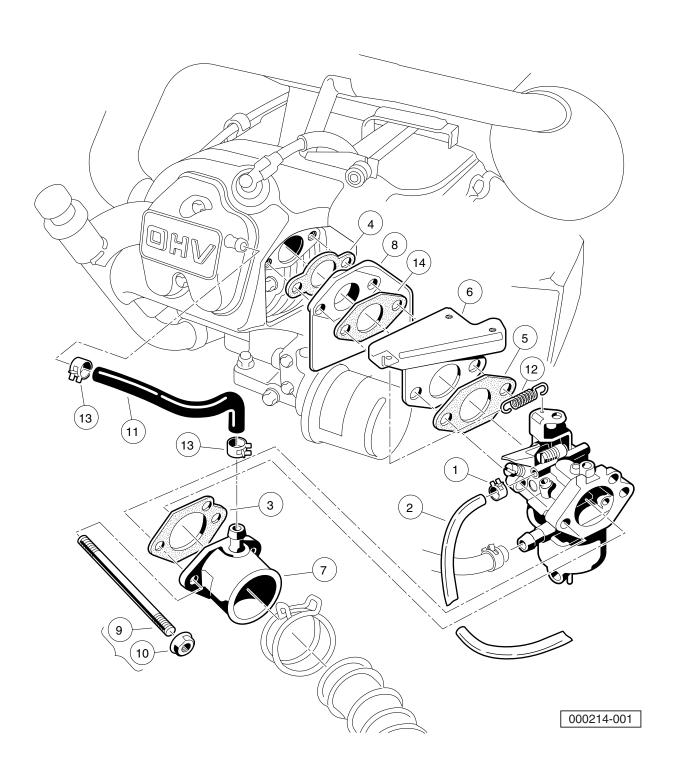






CARBURETOR INSTALLATION – FE350

ITEM	PART NO.	DESCRIPTION	QTY
			Ž.,
1	1012746	1 2 3 4	1
1	1013746	Clamp, 0.301 ID Hose	1
2	1015137	Fuel Line (available by the foot)	
3	1016438	Gasket, Carb To Intake Manifold	
4	1016440	Gasket, Engine to Insulator	
5	1016441	Gasket, Sprg Brkt To Carb OHV	
6	1016444	Bracket, Throttle Spring Return	
7	1016480	Pipe, Intake Manifold	
8	101648102	Insulator, Carburetor	
9	101649002	Stud, M6-1.00 Two-Ended	2
10	1016547	Nut, M6 Flange	
11	1016572	Tube, Crankcase Vent	1
12	1016582	Spring, Throttle Return	1
13	1017466	Clamp	2
14	101973401	Gasket, Insulator To Bracket	1



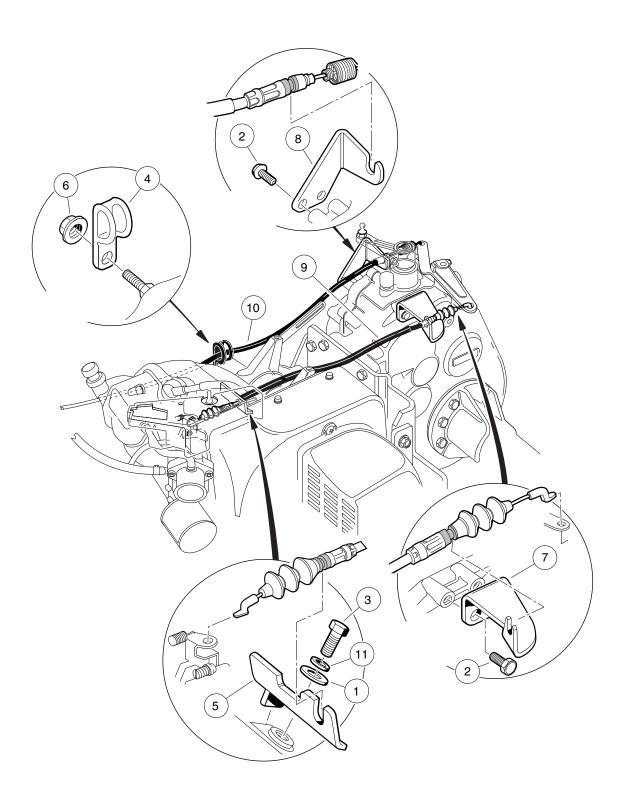








GOVERNOR AND ACCELERATOR CABLES

ГЕМ	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1011697	Washer, 5/16 Flat	. 1
2	1012285	Screw, 1/4 X 0.625 Hex-Head	. 4
3	1012830	Screw, M8-125 X 22 Hex-Head	. 1
4	1013700	Clamp	. 2
5	101584502	Bracket, Governor Cable Snap-In	. 1
6	1016546	Nut	. 2
7	101832202	Bracket, Rear Governor Cable Snap-In	. 1
8	101832302	Bracket, Rear Accelerator Cable Snap-In	
9	102336001	Cable, Governor, Snap-In	. 1
10	102336101	Cable, Accelerator, Snap-In	. 1
11	7174	Lockwasher, 5/16 Split	. 1



8

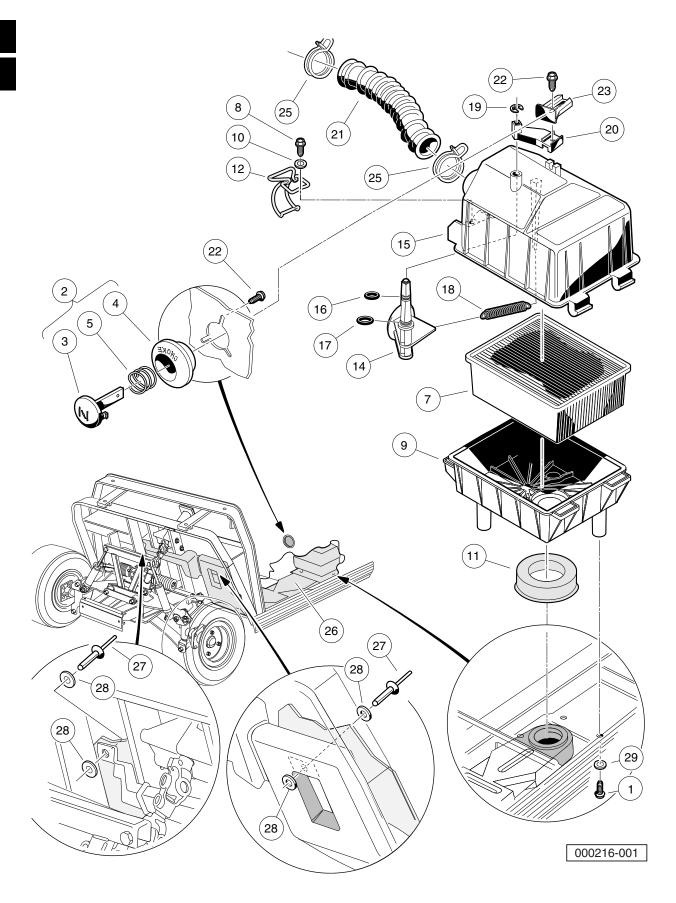







INTAKE DUCT, CHOKE, AND AIR BOX ASSEMBLY

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	1015752	Screw, #12-16 X 0.625 Hi-Lo	3
2	101805701	Button Assembly, Choke (includes items 3 through 5)	1
3	101811401	Lever, Choke	1
4	101811501	Guide, Choke Lever	1
5	101856201	Compression Spring	1
6	101821501	Assembly, Air Box (includes items 7 through 13)	1
7	1015426	Filter, Air	1
8	101804301	Screw, #8 X 0.500, Hex-Head Hi-Lo	2
9	101811901	Bottom, Air Box	1
10	101881701	Washer, #8 Stainless-Steel Flat	2
11	101921501	Seal, Intake	1
12	101925701	Latch, Wireform	2
13	101972801	Top Assy, Air Box (includes items 14 through 20)	1
14	N/A	Valve, Choke	1
15	101811801	Top, Air Box	1
16	N/A	O-Ring, 5/16	1
17	N/A	O-Ring, 3/8	1
18	101812301	Spring, Extension Return	1
19	101813001	Retaining Ring 0.25, Shaft	1
20	101917601	Lever, Choke	1
21	101837101	Hose, Air Intake	1
22	101850301	Screw, #12-16 X 0.50 Washer-Head Hi-Lo	4
23	101917701	Choke Positioner	1
24	N/A	Tape Kit, Air Duct Repair	1
25	101971301	Clamp, 1.58" ID Hose	2
26	103520301	Duct, Air Intake, Ds	1
27	1606	Rivet, 3/16 X .500 Alum Pop	2
28	183	Washer, #10 Type A Flat	4
29	332	Washer, 1/4 Type A Narrow Flat	3





8








EXHAUST SYSTEM

9



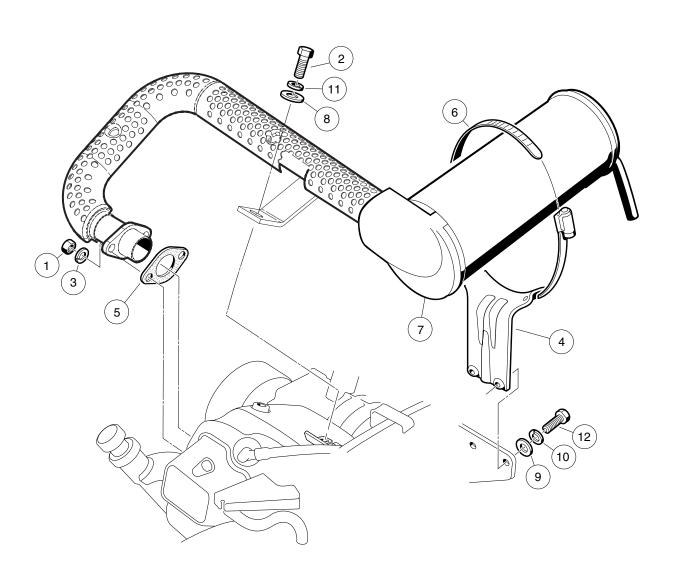







EXHAUST SYSTEM - FE350

PART NO.	DESCRIPTION	QTY
	1 2 3 4	
1012528	Nut, M8-1.25 Hex	2
1012830	Screw, M8-125 X 22 Hex-Head	1
1013734	Lockwasher, 8mm Split	2
1015814		1
1016904	Gasket, Exhaust	1
1017689		1
102585901	Exhaust System, FE350, Precedent	1
1241	Washer, 5/16 Type A Flat	1
332	Washer, 1/4 Type A Narrow Flat	2
451	Lockwasher, 1/4 Split	2
7174	Lockwasher, 5/16 Split	1
7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	2
	1012528 1012830 1013734 1015814 1016904 1017689 102585901 1241 332 451 7174	1 2 3 4 1012528 Nut, M8-1.25 Hex





9








TORQUE CONVERTER

10



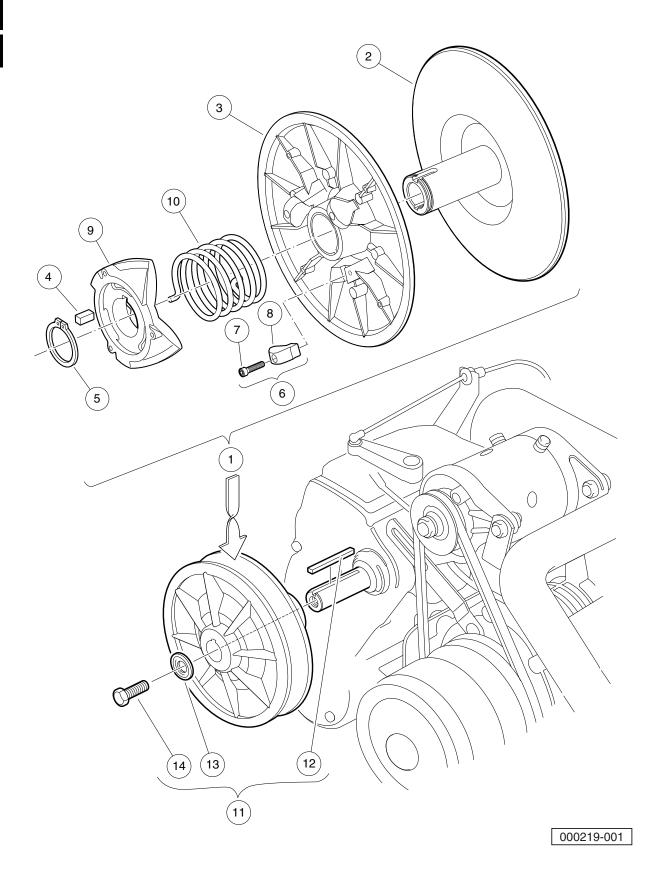







DRIVEN CLUTCH

			DRIVEN CLU	ıCr
ITEM	PART NO.	DESCRIPTION		QTY
		1 2 3 4		
1	101834001	Assembly, Driven Clutch (includes items 2 through 10)		1
2	1014070	Fixed Face Assy, Driven Clutch		1
3	1014072	Movable-Face Assembly with Bushing		1
4	1014078	Key, Driven Clutch		1
5	1014080	Ring, Retaining		1
6	1014454	Kit, Driven Clutch Button (includes items 7 and 8)		1
7	1012836	Screw, #8-32 X 3/4 Socket-Head Cap		3
8	N/A	Button, Drive		3
9	1017686	Cam, Driven Clutch		1
10	101836201	Spring, Driven Clutch, Reversed		1
11	AM10419	Kit, Clutch Repair (includes items 12 through 14)		1
12	101833401	Key, 3/16 Sq X 1.50"		1
13	102155801	Washer, Driven Clutch		1
14	102242101	Screw, 5/16-18 X 3/4 Hex-Head with Patch		1

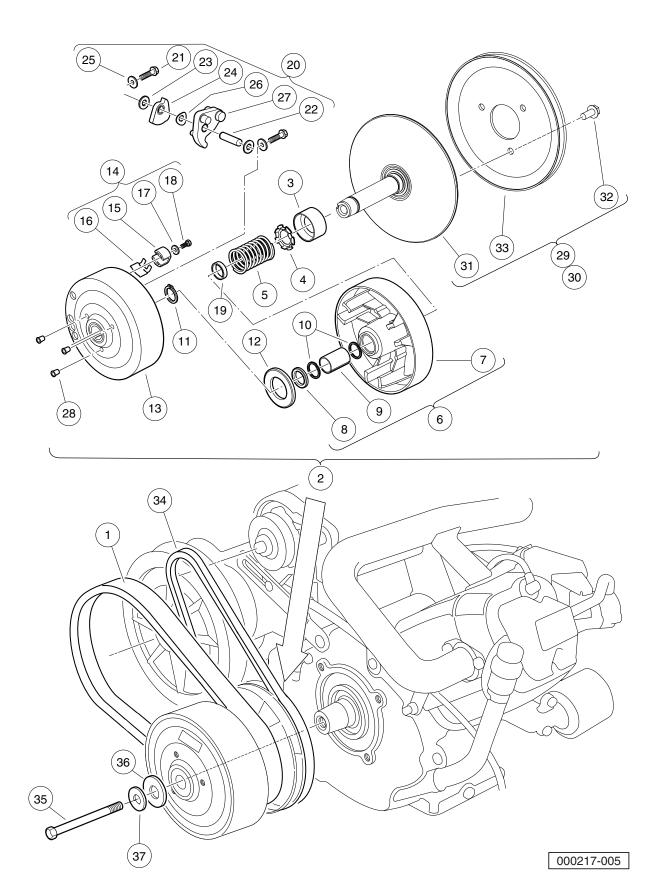




 



DRIVE CLUTCH

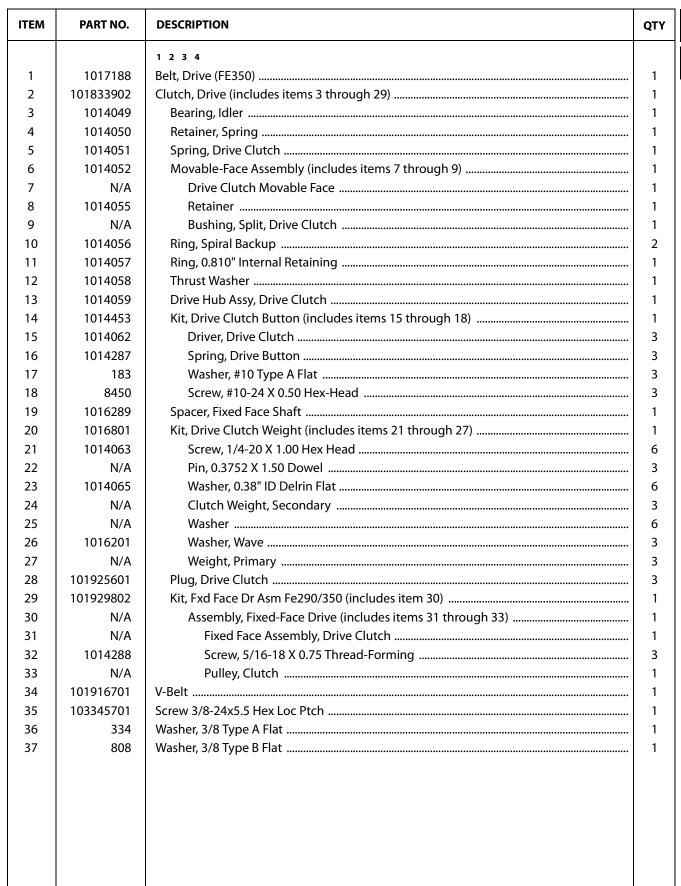



10






GET STARTED

https://CartPros.com/f.html

our search box and it will find the part you are looking for. TRANSAXLE AND FNR SHIFTERGASOLINE VEHICLE

11



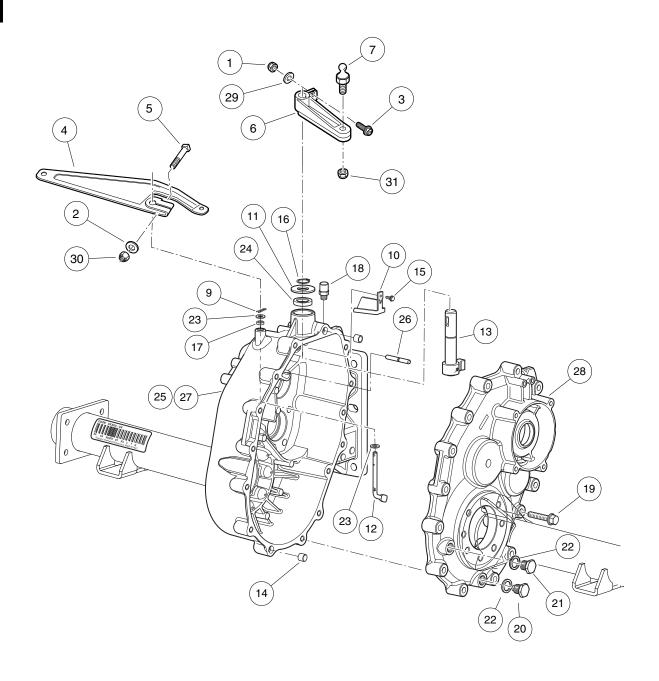








GRAZIANO TRANSAXLE – GEAR CASES AND LEVERS

20 102900101 Drain Plug, Magnetic 21 102900201 Fill Plug 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Pin, Speed Governor 27 N/A Cover, Gear Box (Driver-Side) 28 103882301 Cover, Gear Box (Passenger-Side) 29 183 Washer, #10 Type A Flat 30 8233 Locknut, 1/4-20 Nylon Insert 31 Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube. 103874201 is backwards compatible. However, some service parts are not compatible	ITEM	PART NO.	DESCRIPTION	QTY
1014007			1 2 3 4	
1017082	1	1013061	Locknut, #10-32 Nylon Insert	1
4 101834801 Arm, Governor 5 101886101 Screw, 1/4-20 X 1.00 Square-Head 6 102515401 Lever, Transmission Shift 7 102526201 Stud, Thread, 1/4-28 8 103874201 Transaxle, Gas, 11.77:1, Gtg (includes items 9 through 28) 9 102897801 Pin, Split 10 102897801 Washer, Thrust 12 102897901 Washer, Thrust 12 102899201 Dowel 14 102899101 Dowel 15 102899201 Screw 16 102899401 Breather 17 102899701 Breather 18 102899801 Breather 19 10290001 Screw 20 102900101 Drain Plug, Magnetic 21 102900201 Brill Plug 22 102900301 Seal 23 102900901 Grommet 24 102900901 Grommet 25 103882301 Cover, Gear Box (Priver-Side) 26 N/A N/A 27	2	1014007	Washer, 1/4 Flat	1
5 101886101 Screw, 1/4-20 X 1.00 Square-Head 6 102515401 Lever, Transmission Shift 7 102526201 Stud, Thread, 1/4-28 8 103874201 Transaxle, Gas, 11.77:1, Gtg (includes items 9 through 28) 9 102897401 Pin, Split 10 102897601 Conveyor, Oil 11 102897801 Washer, Thrust 12 102899201 Lever, Speed Governor 13 102899201 Dowel 14 102899901 Screw 15 102899201 Screw 16 102899401 Ring, Snap 17 102899901 Breather 18 102899801 Breather 19 102900001 Drain Plug, Magnetic 21 102900201 Fill Plug 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882301 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26	3	1017082	Screw, #10-32 X 0.75, Hex-Head Machine	1
6 102515401 Lever, Transmission Shift 7 102526201 Stud, Thread, 1/4-28 8 103874201 Transaxle, Gas, 11.77:1, Gtg (includes items 9 through 28) 9 102897401 Pin, Split 10 102897601 Conveyor, Oil 11 102897801 Washer, Thrust 12 102899901 Lever, Speed Governor 13 102899201 Lever, Speed Governor 14 102899101 Dowel 15 102899201 Screw 16 102899401 Ring, Snap 17 102899701 Grommet 18 102899801 Breather 20 102900001 Screw 21 102900001 Screw 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Pin, Speed Governor 27 N/A	4	101834801	Arm, Governor	1
7 102526201 Stud, Thread, 1/4-28	5	101886101	Screw, 1/4-20 X 1.00 Square-Head	1
8 103874201 Transaxle, Gas, 11.77:1, Gtg (includes items 9 through 28) 9 102897401 Pin, Split 10 102897801 Washer, Thrust 12 102897901 Lever, Speed Governor 13 102898201 Unit, Drive Selector 14 102899101 Dowel 15 102899201 Screw 16 102899401 Ring, Snap 17 102899701 Grommet 18 102899801 Breather 20 102900001 Screw 21 102900201 Fill Plug 22 102900201 Fill Plug 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Cover, Gear Box (Driver-Side) 27 N/A Cover, Gear Box (Priver-Side) 28 103882301 Cover, Gear Box (Passenger-Side) 29 183 8233 30 8233 Cover, Gear Box (Passenger-Side) 31 8717	6	102515401	Lever, Transmission Shift	1
9 102897401 Pin, Split 10 102897601 Conveyor, Oil 11 102897801 Washer, Thrust 12 102897901 Lever, Speed Governor 13 102898201 Unit, Drive Selector 14 102899101 Dowel 15 102899201 Screw 16 102899401 Ring, Snap 17 102899701 Grommet 18 102899801 Breather 19 102900001 Screw 20 102900101 Drain Plug, Magnetic 21 102900201 Fill Plug 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Pin, Speed Governor 27 N/A Cover, Gear Box (Driver-Side) 28 103882301 Cover, Gear Box (Passenger-Side) 29 183 8233	7	102526201	Stud, Thread, 1/4-28	1
10 102897601 Conveyor, Oil 11 102897801 Washer, Thrust 12 102897901 Lever, Speed Governor 13 102898201 Unit, Drive Selector 14 102899101 Dowel 15 102899201 Screw 16 102899701 Grommet 17 102899701 Grommet 18 102899801 Breather 19 102900001 Screw 20 102900101 Drain Plug, Magnetic 21 102900201 Fill Plug 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Pin, Speed Governor 27 N/A Cover, Gear Box (Priver-Side) 28 103882301 Cover, Gear Box (Passenger-Side) 29 183 8233 30 8233 Locknut, 1/4-20 Nylon Insert <td>8</td> <td>103874201</td> <td>Transaxle, Gas, 11.77:1, Gtg (includes items 9 through 28)</td> <td>1</td>	8	103874201	Transaxle, Gas, 11.77:1, Gtg (includes items 9 through 28)	1
11 102897801 Washer, Thrust 12 102897901 Lever, Speed Governor 13 102898201 Unit, Drive Selector 14 102899101 Dowel 15 102899201 Screw 16 102899401 Ring, Snap 17 102899701 Grommet 18 102899801 Breather 19 102900001 Screw 20 102900101 Drain Plug, Magnetic 21 102900201 Fill Plug 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Pin, Speed Governor 27 N/A Cover, Gear Box (Priver-Side) 28 103882301 Cover, Gear Box (Passenger-Side) 29 183 Washer, #10 Type A Flat 30 8233 Locknut, 1/4-20 Nylon Insert 31 Note: Graziano transa	9	102897401	Pin, Split	1
12 102897901 Lever, Speed Governor 13 102898201 Unit, Drive Selector 14 102899101 Dowel 15 102899201 Screw 16 102899401 Ring, Snap 17 102899701 Grommet 18 102899801 Breather 19 102900001 Screw 20 102900101 Drain Plug, Magnetic 21 102900201 Fill Plug 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Pin, Speed Governor 27 N/A Cover, Gear Box (Driver-Side) 28 103882301 Cover, Gear Box (Passenger-Side) 29 183 Washer, #10 Type A Flat 30 8233 Locknut, 1/4-20 Nylon Insert 31 8717 Locknut, 1/4-28 Nylon Insert Note: Graziano transaxle compone	10	102897601	Conveyor, Oil	1
13 102898201 Unit, Drive Selector 14 102899101 Dowel 15 102899201 Screw 16 102899401 Ring, Snap 17 102899701 Grommet 18 102899801 Breather 19 102900001 Screw 20 102900101 Drain Plug, Magnetic 21 102900201 Fill Plug 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Pin, Speed Governor 27 N/A Cover, Gear Box (Driver-Side) 28 103882301 Cover, Gear Box (Passenger-Side) 29 183 Washer, #10 Type A Flat 30 8233 Locknut, 1/4-20 Nylon Insert 31 8717 Locknut, 1/4-28 Nylon Insert 31 Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number de	11	102897801	Washer, Thrust	1
14 102899101 Dowel 15 102899201 Screw 16 102899401 Ring, Snap 17 102899701 Grommet 18 102899801 Breather 19 102900001 Screw 20 102900101 Drain Plug, Magnetic 21 102900201 Fill Plug 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Pin, Speed Governor 27 N/A Cover, Gear Box (Prissenger-Side) 28 103882301 Cover, Gear Box (Passenger-Side) 29 183 Washer, #10 Type A Flat 30 8233 Locknut, 1/4-28 Nylon Insert 31 8717 Locknut, 1/4-28 Nylon Insert Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube, 103874201 is backwards compatible. However, some service parts are not compatible <	12	102897901	Lever, Speed Governor	1
15 102899201 Screw 16 102899401 Ring, Snap 17 102899701 Grommet 18 102899801 Breather 19 102900001 Screw 20 102900101 Drain Plug, Magnetic 21 102900201 Fill Plug 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Pin, Speed Governor 27 N/A Cover, Gear Box (Driver-Side) 28 103882301 Cover, Gear Box (Passenger-Side) 29 183 Washer, #10 Type A Flat 30 8233 Locknut, 1/4-20 Nylon Insert 31 8717 Locknut, 1/4-28 Nylon Insert Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube. 103874201 is backwards compatible. However, some service parts are not compatible	13	102898201	Unit, Drive Selector	1
16 102899401 Ring, Snap	14	102899101	Dowel	2
17 102899701 Grommet 18 102899801 Breather 19 102900001 Screw 20 1029001 Drain Plug, Magnetic 21 102900201 Fill Plug 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Pin, Speed Governor 27 N/A Cover, Gear Box (Driver-Side) 28 103882301 Cover, Gear Box (Passenger-Side) 29 183 Washer, #10 Type A Flat 20 Locknut, 1/4-20 Nylon Insert 30 8233 Locknut, 1/4-28 Nylon Insert 31 Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube. 103874201 is backwards compatible. However, some service parts are not compatible	15	102899201	Screw	1
18 102899801 Breather 19 102900001 Screw 20 102900101 Drain Plug, Magnetic 21 102900201 Fill Plug 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Pin, Speed Governor 27 N/A Cover, Gear Box (Driver-Side) 28 103882301 Cover, Gear Box (Passenger-Side) 29 183 Washer, #10 Type A Flat 30 8233 Locknut, 1/4-20 Nylon Insert 31 8717 Locknut, 1/4-28 Nylon Insert Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube. 103874201 is backwards compatible. However, some service parts are not compatible	16	102899401	Ring, Snap	1
19 102900001 Screw 20 102900101 Drain Plug, Magnetic 21 102900201 Fill Plug 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Pin, Speed Governor 27 N/A Cover, Gear Box (Driver-Side) 28 103882301 Cover, Gear Box (Passenger-Side) 29 183 Washer, #10 Type A Flat 30 8233 Locknut, 1/4-20 Nylon Insert 31 8717 Locknut, 1/4-28 Nylon Insert Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube. 103874201 is backwards compatible. However, some service parts are not compatible	17	102899701	Grommet	1
20 102900101 Drain Plug, Magnetic 21 102900201 Fill Plug 22 102900301 Seal 23 102900601 Washer 24 102900901 Grommet 25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27) 26 N/A Pin, Speed Governor 27 N/A Cover, Gear Box (Driver-Side) 28 103882301 Cover, Gear Box (Passenger-Side) 29 183 Washer, #10 Type A Flat 30 8233 Locknut, 1/4-20 Nylon Insert 31 8717 Locknut, 1/4-28 Nylon Insert Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube. 103874201 is backwards compatible. However, some service parts are not compatible	18	102899801	Breather	1
21 102900201 Fill Plug	19	102900001	Screw	15
22 102900301 Seal	20	102900101	Drain Plug, Magnetic	1
23 102900601 Washer	21	102900201	Fill Plug	1
24 102900901 Grommet	22	102900301	Seal	2
25 103882101 Case, Transaxle, W/gov Pin (includes items 26 and 27)	23	102900601	Washer	2
N/A Pin, Speed Governor	24	102900901	Grommet	1
N/A Cover, Gear Box (Driver-Side)	25	103882101	Case, Transaxle, W/gov Pin (includes items 26 and 27)	1
28 103882301 Cover, Gear Box (Passenger-Side)	26	N/A	Pin, Speed Governor	1
29 183 Washer, #10 Type A Flat	27	N/A	Cover, Gear Box (Driver-Side)	1
30 8233 Locknut, 1/4-20 Nylon Insert	28	103882301	Cover, Gear Box (Passenger-Side)	1
Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube. 103874201 is backwards compatible. However, some service parts are not compatible	29	183	Washer, #10 Type A Flat	1
Note: Graziano transaxle component listings span three pages. To identify your transaxle, locate the serial number decal on the axle tube. 103874201 is backwards compatible. However, some service parts are not compatible	30	8233	Locknut, 1/4-20 Nylon Insert	1
your transaxle, locate the serial number decal on the axle tube. 103874201 is backwards compatible. However, some service parts are not compatible	31	8717	Locknut, 1/4-28 Nylon Insert	1
with other transaxies.			your transaxle, locate the serial number decal on the axle tube. 103874201	



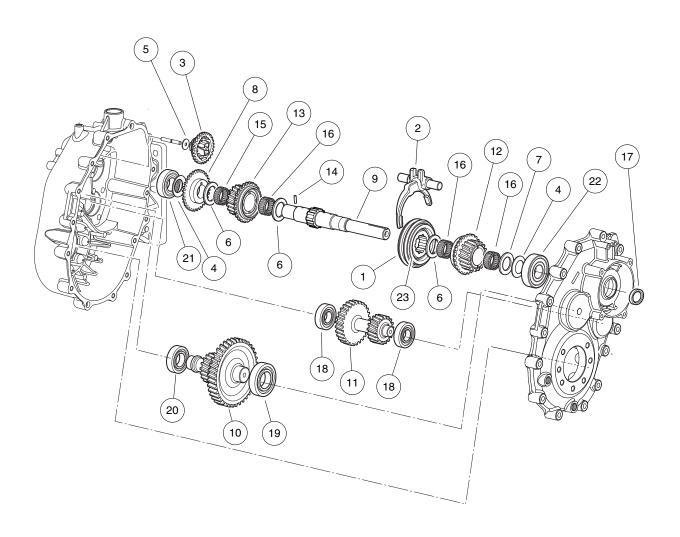




GET STARTED

https://CartPros.com/f.html

REDUCTION



ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102897201	Synchronizer, Complete	1
2	102897301	Fork, Complete	1
3	102897701	Assembly, Speed Governor	1
4	102898001	Washer, Belleville	2
5	102898101	Bearing, Thrust	1
6	102898301	Bearing, Thrust	3
7	102898401	Washer, Thrust	1
8	102898501	Gear, Speed Governor	1
9	102898601	Shaft, Main	1
10	102898701	Shaft, Secondary	1
11	102898801	Shaft, Reverse Gear	1
12	102898901	Gear, Complete, 25t	1
13	102899001	Gear, Complete, 28t	1 1
14 15	102899301 102899501	Pin	1
16	102899501	Cage, Roller	3
17	102899901	Grommet	1
18	102990901	Bearing	2
19	102900501	Bearing, 62 Od X 30 ld X 16	1
20	102900701	Bearing	1
21	102901001	Bearing	1
22	102901101	Bearing	1
23	103882001	Washer, Wave, Trans Synchro	2
		Note: To identify your transaxle, locate the serial number decal on the axle tube.	

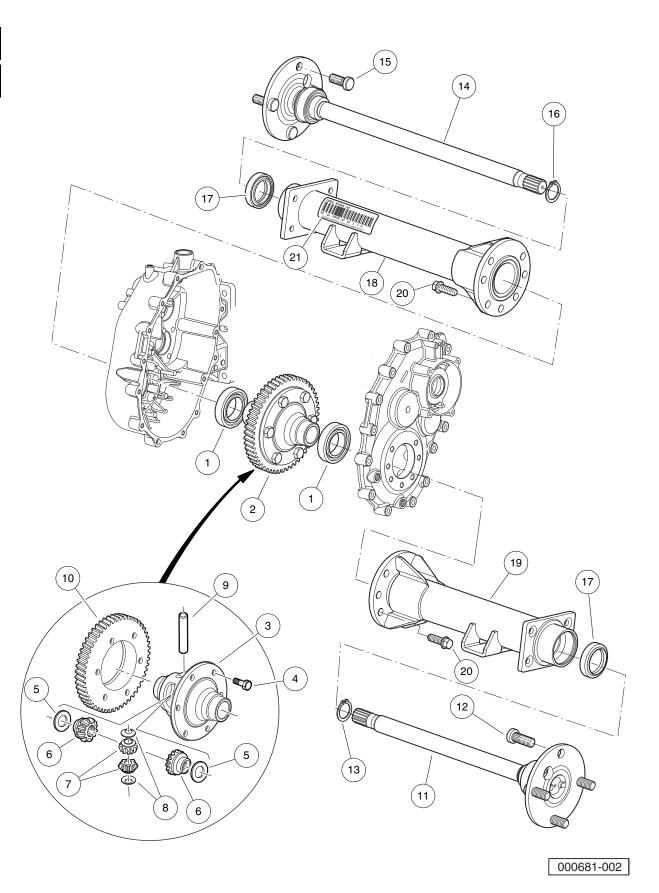






GRAZIANO TRANSAXLE - DIFFERENTIAL AND AXLES

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102900801	Bearing, 68 Od X 40 ld X 15	. 2
2	102902001	Assembly, Differential (includes items 3 through 10)	. 1
3	102901201	Box, Differential	. 1
4	102901301	Screw, M10 X 25	. 6
5	102901401	Ring, Sleeve	. 2
6	102901501	Gear, Sun	. 2
7	102901601	Gear, Planetary	. 2
8	102901701	Ring, Sleeve	. 2
9	102901801	Pin	. 1
10	102901901	Gear	. 1
11	102902101	Shaft, Axle, Short, Complete (Passenger-Side) (includes items 12 and 13)	. 1
12	102902301	Bolt, Stud	
13	102902401	Snap Ring	
14	102902201	Shaft, Axle, Long, Complete (Driver-Side) (includes items 15 and 16)	
15	102902301	Bolt, Stud	
16	102902401	Snap Ring	
17	102902501	Seal, Lip	
18	102902601	Axle Tube, (Driver-Side)	
19	102902701	Axle Tube, (Passenger-Side)	
20	102902801	Screw, M10 X 30	
21	N/A	Tag, Serial	
		tube.	



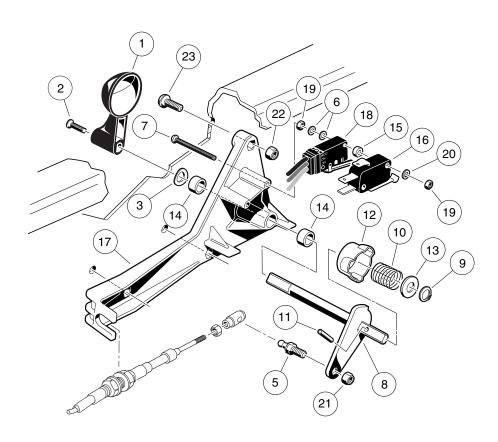








FORWARD/REVERSE SHIFTER ASSEMBLY – GASOLINE VEHICLES



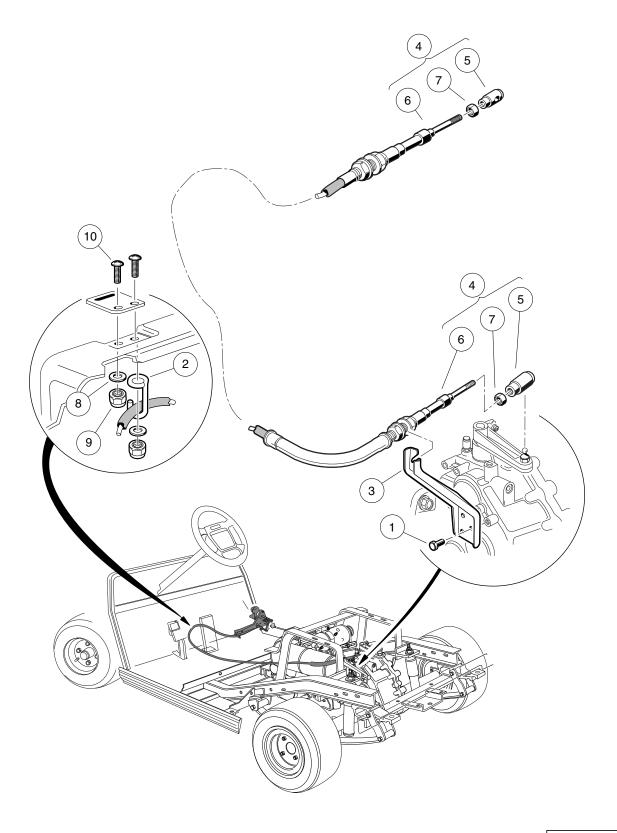








FORWARD/REVERSE SHIFTER CABLE – GASOLINE VEHICLES

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1012285	Screw, 1/4 X 0.625 Hex-Head	3
2	101855801	Cable Retainer	
3	101922601	Bracket, Shifter	
4	101951501	FNR Shifter Cable (includes items 5 through 7)	1
5	1012333	Joint, #10-32 Ball	
6	103379501	Cable, Transmission Shifter Ds	
7	7893	Nut, #10-32 Hex	2
8	332	Washer, 1/4 Type A Narrow Flat	
9	8233	Locknut, 1/4-20 Nylon Insert	
10	8251	Screw, 1/4-20 X 1.0 Truss-Head Machine	
ı			



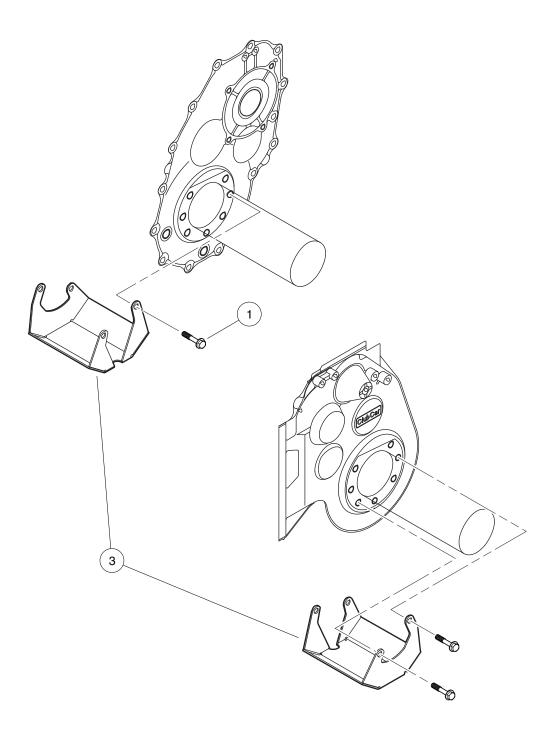







DIFFERENTIAL GUARD

ITEM	PART NO.	DESCRIPTION	QTY	
1 2 3	101926901 101932902 N/A	1 2 3 4 Screw, M8-1.25 X 40mm Hex-Head Diff Guard Unitized Kit (Includes Instructions) (includes item 3) Guard, Unitized Differential	4 1 1	





11





GET STARTED

https://CartPros.com/f.html

our search box and it will find the part you are looking for. ELECTRICAL SYSTEM — ELECTRIC VEHICLES


12

Ξ




12

E

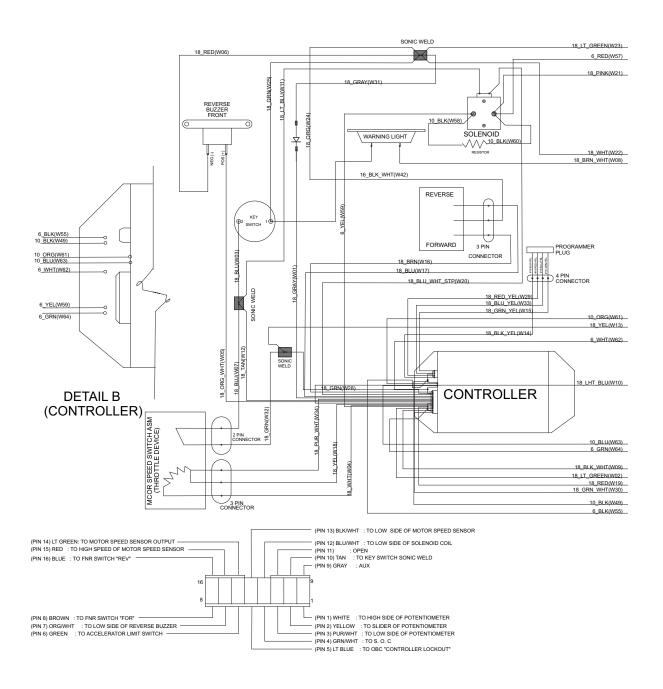



E

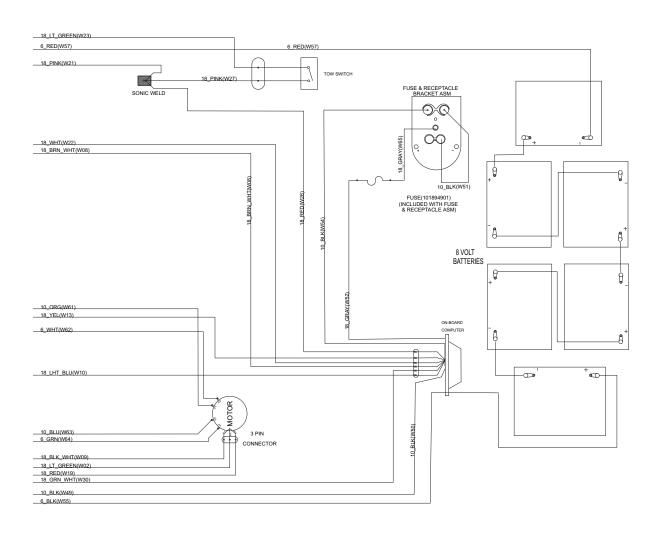



12


See previous two pages for illustration.





WIRING

		V'	Driini	
ITEM	PART NO.	DESCRIPTION	QTY	12
1	103689601	1 2 3 4 Wire Harness Elec Ds 6x8v	1	
•	103003001			E

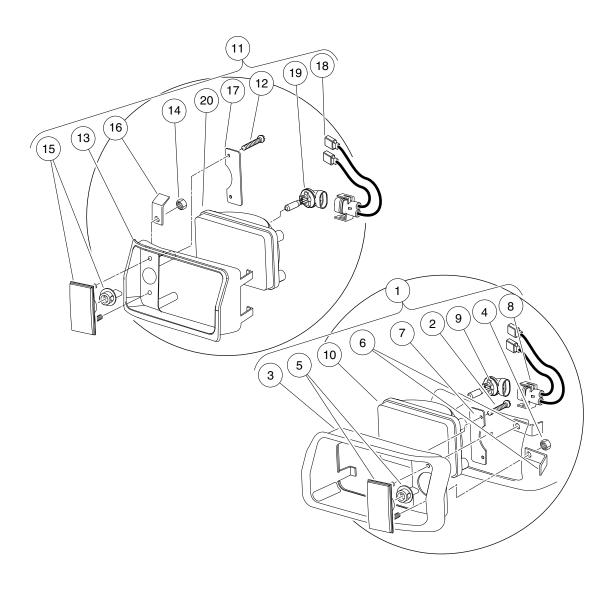








HEADLIGHTS

		IILAULI	
ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	101988001	Headlight Assembly, Driver-Side Single Beam (includes items 2 through 10)	1
2	1013461	Screw, #10-16 Hex-Head Hi-Lo	2
3	1016880	Headlight Bezel, Left	1
4	1017	Nut, #10-24 Stainless-Steel Hex Machine	2
5	1017062	Turn Signal Lens Assy	1
6	1017064	Mounting Bracket	2
7	1017065	Retainer, Headlight	1
8	101987901	Connector Harness Assembly, Headlight	
9	101988101	Bulb, Headlight	1
10	101988201	Lens, Headlight	1
11	101988002	Headlight Assy, Passenger-Side Single Beam (includes items 12 through 20)	1
12	1013461	Screw, #10-16 Hex-Head Hi-Lo	2
13	1016879	Headlight Bezel, Right	1
14	1017	Nut, #10-24 Stainless-Steel Hex Machine	2
15	1017062	Turn Signal Lens Assy	
16	1017064	Mounting Bracket	
17	1017065	Retainer, Headlight	
18	101987901	Connector Harness Assembly, Headlight	
19	101988101	Bulb, Headlight	
20	101988201	Lens, Headlight	

12

E

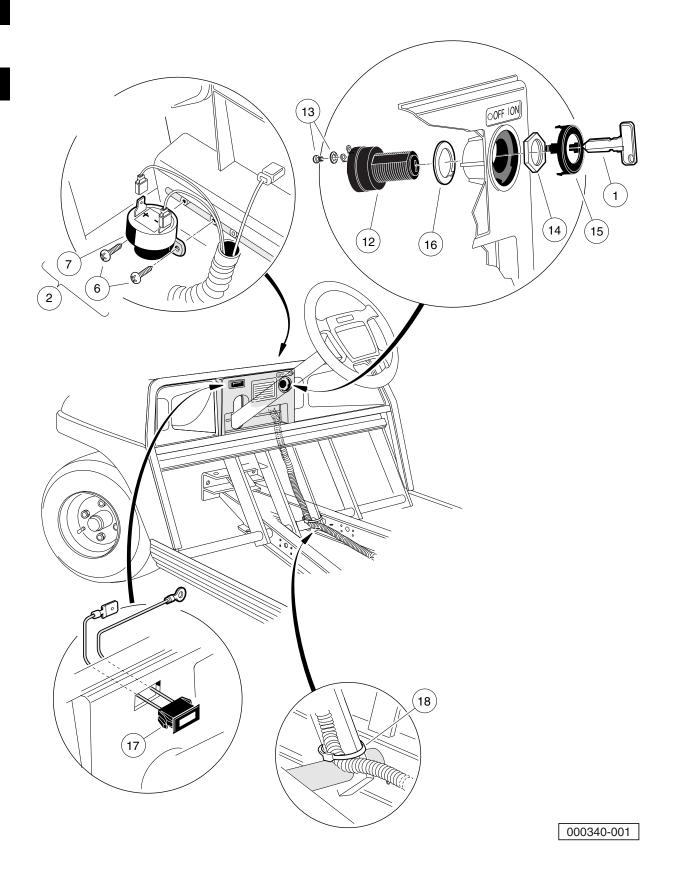





INSTRUMENT PANEL COMPONENTS


ITEM	PART NO.	DESCRIPTION	Q
		1 2 3 4	
1	1012505	Keys (set of 2)	
2	1016859	Kit, Reverse Buzzer (includes items 3 through 11)	
3	1011229	Locknut, #6-32 Whiz	
4	1012431	Washer, #4 Flat	:
5	1015720	Screw, #6-32 X 1/2 Hex Washer-Head	
6	1016849	Screw, #4-24 X 0.33 Pan-Head Machine	
7	1016851	Buzzer, Reverse (9-48 VDC)	
8	1016857	Wire Assembly Black #18	
9	8056	Screw, #4-40 X 0.75 Round-Head Machine	:
10	8057	Nut, #4-40 Hex Machine	
11	8058	Lockwasher, #4 Split	
12	101826201	Key Switch, On/Off	
13	101830601	Screw and Washer Assembly	
14	101830701	Nut, Key Switch	
15	101834502	Cap, Black Key Switch	
16	101851101	Washer, Key Switch	
17	101935501	Light, Battery (Amber)	
18	8990	Tie Wrap, 8" Nylon	

12

E

12

E

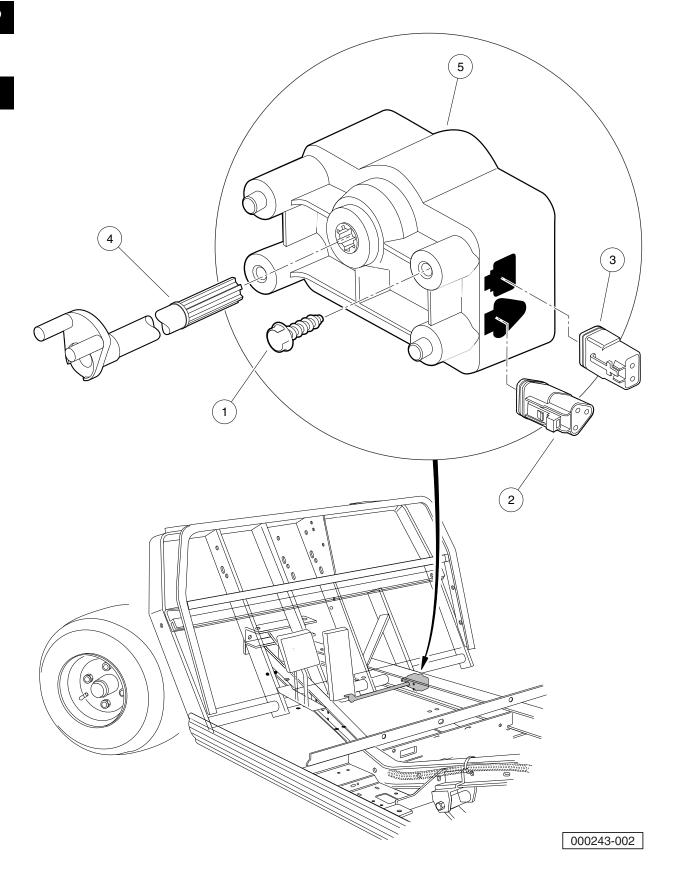








MOTOR CONTROLLER OUTPUT REGULATOR (MCOR)

	• •	IOTOR CONTROLLER OUTPUT REGULATOR (MIC	,	
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	1015752	Screw, #12-16 X 0.625 Hi-Lo	2	
2	101920101	Kit, 3-Pin Wedge Lock		
3	101936801	Kit, 2-Pin Wedge Lock	1	
4	102101001	Bar, Drive, Cast	1	
5	102101001	MCOR		
3	102101101	MCON	'	

12

E

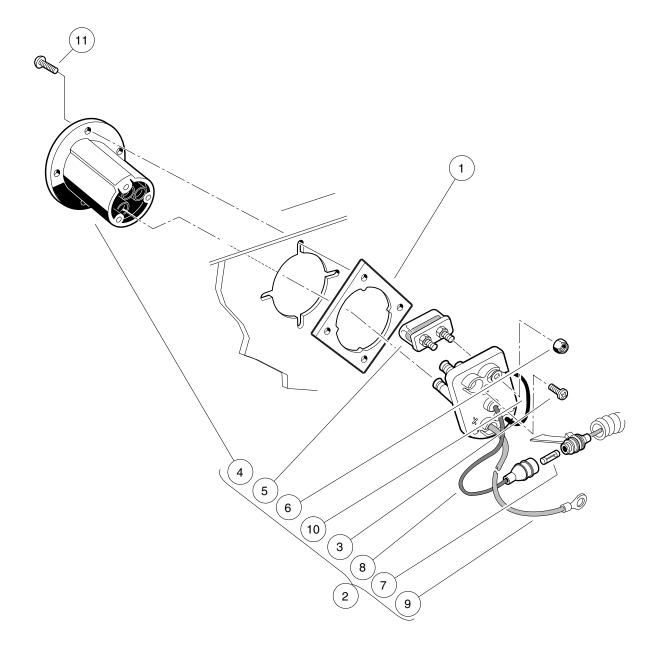








BATTERY CHARGER RECEPTACLE

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	101801001	Plate, Receptacle Backing	1
2	101802101	Fuse and Receptacle Assembly (includes items 3 through 10)	1
3	1017705	Screw, #8 X 5/8 Phillips Pan-Head Type AB	3
4	101796501	Receptacle	1
5	101796801	Fuse Assembly (includes item 6)	1
6	1013061	Locknut, #10-32 Nylon Insert	2
7	101894901	Fuse, 3/8-Amp	1
8	N/A	Wire Assembly, Sense Lead, Gray	1
9	N/A	Wire Assembly, #10 Red	1
10	N/A	Wire Assembly, #10 Black	1
11	101832001	Screw, #7-19 X 0.625 Phillips Pan-Head Tap	4

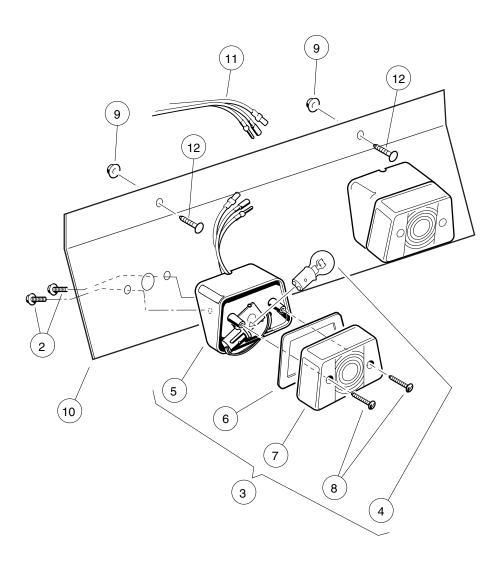








TAILLIGHTS

ITEM	PART NO.	DESCRIPTION	QTY
		1 2 3 4	
1	102852501	Kit, Tail Lights (includes items 2 through 12)	. 1
2	1015752	Screw, #12-16 X 0.625 Hi-Lo	. 4
3	1016717	Light Assembly, Stop/Taillight (includes items 4 through 8)	. 2
4	1011582	Taillight Bulb	. 1
5	N/A	Housing, Taillight	. 1
6	N/A	Gasket, Taillight	. 1
7	N/A	Lens, Taillight	. 1
8	N/A	Screw, Taillight Lens	. 2
9	101835601	Locknut, 1/4-20 Hex Whiz	. 2
10	102909901	Support, Tail Light	. 1
11	102911601	Asm, Wire Harness	. 1
12	7847	Screw, 1/4-20 X 0.75 Hex-Head Cap	. 2
		Note: Taillights are optional for Carryall 242 and XRT 800 vehicles.	

12

Ε

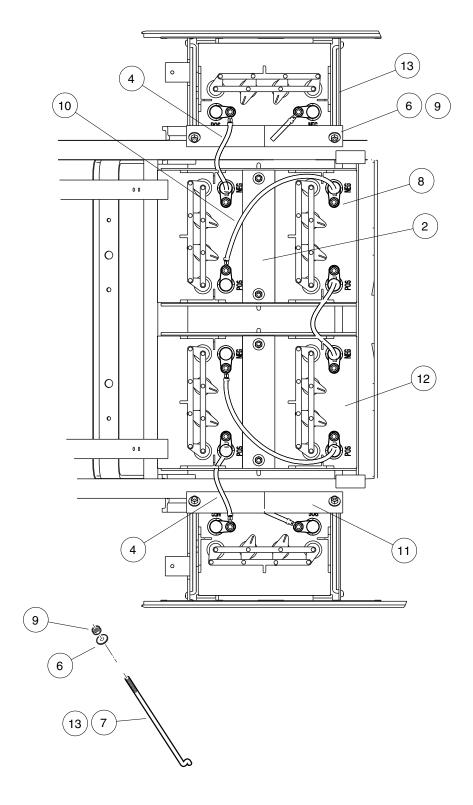

000241-004








BATTERIES – 6 X 8V, ELECTRIC VEHICLE

		DATTEMES - OX OV, ELECTRIC VEH			
ITEM	PART NO.	DESCRIPTION	QTY		
		1 2 3 4			
1	N/A	Instl, 8v Batt Us 48v Elec 6ga (includes items 2 through 13)	1		
2	101090801	Hold-Down, Battery	2		
3	101090802	Hold-Down, Battery	2		
4	1010958	Asm, Wire, #6blk 8in	3		
5	1011578	Washer, 5/16 Type B Flat	4		
6	1011697	Washer, 5/16 Flat	4		
7	1013683	J-Bolt	4		
8	1014304	Nut, 5/16-18 Stainless-Steel Hex	12		
9	1015072	Locknut, 5/16-18 Nylon Insert	8		
10	101795701	Asm, Wire, #6blk 13in	2		
11	103504301	Tee, Batt Ret Ctr Short			
12	103695801	Battery, 8-Volt, US Battery 8VGCXC	6		
13	103696801	J Bolt, Batt Hold Down 12"	4		

DID YOU

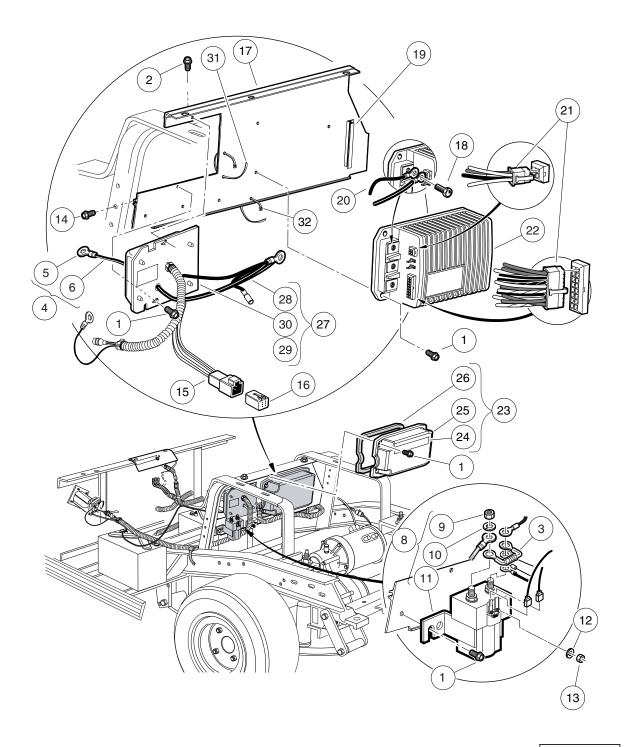

000242-005








OBC, CONTROLLER, AND SOLENOID – ELECTRIC VEHICLE

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	1012285	Screw, 1/4 X 0.625 Hex-Head	9
2	1014288	Screw, 5/16-18 X 0.75 Thread-Forming	2
3	1014947	Resistor Assembly	1
4	101827801	Ground Wire Kit, 48-Volt (includes items 5 through 7)	1
5	101826801	Compression Lug	1
6	N/A	Wire Assembly, Black	1
7	8990	Tie Wrap, 8" Nylon	3
8	101908701	Solenoid, 48-Volt (includes items 9 through 13)	1
9	1012528	Nut, M8-1.25 Hex	2
10	1013734	Lockwasher, 8mm Split	2
11	N/A	Solenoid, 48-Volt	1
12	N/A	Washer, Lock	2
13	N/A	Nut	2
14	101910401	Screw, 5/16-18 X 1.25 Thrd Frm	2
15	101932601	Kit, 6-Pin Wedge Lock	1
16	101932701	Kit, 6-Pin Receptacle and Wedge Lock	1
17	101965205	Plate, Component Mounting	1
18	102240501	Bolt, Controller, Terminal	3
19	***	Extrusion, Cover Support	1
20	102263601	Wire Assy, #10 Black	1
21	102266501	Kit, Connector, IQ Controller	1
22	102806201	Controller, IQ, 48-volt	1
23	103316901	Cover Asm - Controller (includes items 24 through 26)	1
24	101931501	Decal, Component Cover	1
25	103316701	Cover - Controller, Deep	1
26	103316801	Gasket - Controller Cover	1
27	103359401	Kit, OBC, DS and Util IQ (includes items 28 through 30)	1
28	103282601	Wire Assembly Black #10	1
29	N/A	Instr Obc Ds Pre 01-28-2007	1
30	103697301	Obc, Iq, A1, #6	1
31	8639	Tie Wrap, 11" Nylon	1
32	8990	Tie Wrap, 8" Nylon	1
		**** Special order item available upon request.	
		special order item available upon request.	

12

KNOV

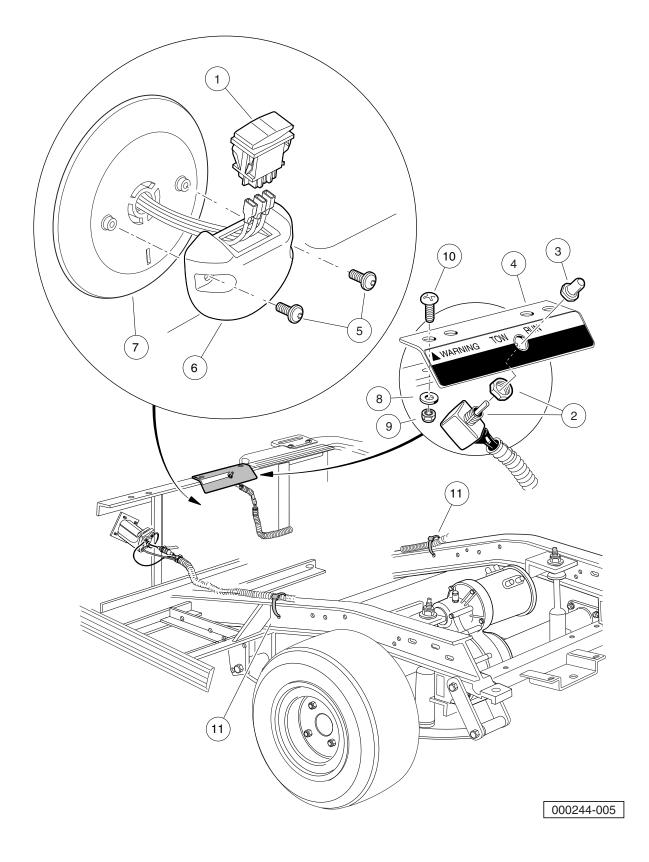







FORWARD/REVERSE SWITCH, TOW/RUN SWITCH

ITEM	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	101856002	Switch, Rocker, Single-Pole	1
2	101908101	Switch Assembly, Tow/Run	1
3	101908401	Boot, Switch	1
4	101922501	Bracket, Tow/Run Switch Mounting	
5	102296920	Screw, M6 Torx Bttn Hd Sems	2
6	102508401	Housing, FNR Electric	1
7	103262701	Bezel Adapter Fnr	
8	332	Washer, 1/4 Type A Narrow Flat	2
9	8233	Locknut, 1/4-20 Nylon Insert	2
10	8248	Screw, 1/4-20 X 0.75 Truss-Head Machine	
11	8990	Tie Wrap, 8" Nylon	1



12

-








ELECTRIC MOTOR

13

3



13

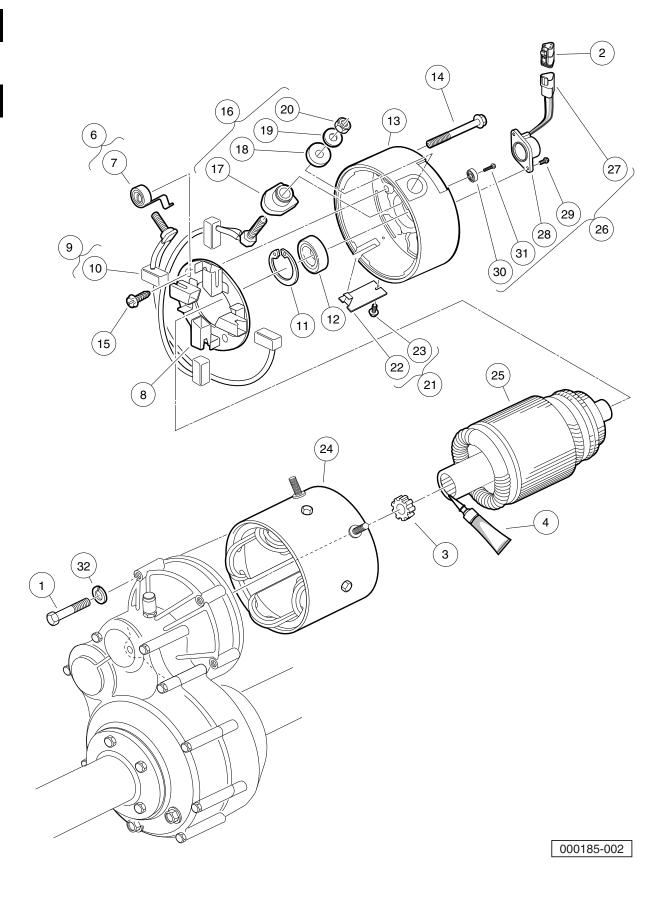





MOTOR (MODEL EJ8-4001A) – ELECTRIC VEHICLE

1 2 3 4		DESCRIPTION	QTY
2 3		1 2 3 4	
3	1014201	Screw, 1/4-20 X 2.25 Hex Cap	3
	101920101	Kit, 3-Pin Wedge Lock	1
4	102235201	Bumper, Drive Unit	1
	102243403	Lubricant, Moly-Teflon (Single-Use Tube)	1
5	103572501	IQ Electric Motor, 48-VDC 3.3 hp (includes items 6 through 26)	1
6	102186001	Spring Kit, Motor Brush (includes item 7)	1
7	N/A	Spring, Brush, S-g	4
8	102186101	Brush Box Assembly	1
9	102186201	Brush Kit, Motor (includes item 10)	1
10	N/A	Assembly, Brush and Terminal	2
11	102186301	Ring, 2.24" Internal Retaining	1
12	102186401	Bearing, Ball	1
13	102186701	End Cap, Motor	1
14	N/A	Screw, 1/4-20 X 2.25 Hex-Head Washer	2
15	102186901	Screw, #8-32 X .5 Hex-Head	2
16	102187101	Hardware Kit, Motor Terminal (includes items 17 through 20)	2
17	N/A	Bushing, Nylon	2
18	N/A	Washer, Nylon Flat	2
19	N/A	Washer, Flat, 5/16 Steel	2
20	N/A	Nut, Brass Hex, 5/16 - 18	2
21	102187201	Plate Kit, Motor Cover (includes items 22 and 23)	1
22	N/A	Assembly, Cover Plate	1
23	N/A	Screw, #8-32 x 0.375, Taptite Thread	1
24	102704701	Frame and Field Assembly	1
25	102704801	Armature Assembly	1
26	102704901	Kit, Speed Sensor (includes items 27 through 31)	1
27	101942301	Kit, 3-Pin Wedge Lock	1
28	N/A	Sensor, Motor Speed, ADC	1
29	N/A	Screw, #8-32, Taptite Thread	2
30	N/A	Magnet, ADC Motor	1
31	N/A	Screw, 1/4-20 x 0.5	1
32	451	Lockwasher, 1/4 Split	3

13



13

:








TRANSAXLE - ELECTRIC VEHICLES

14

F



14

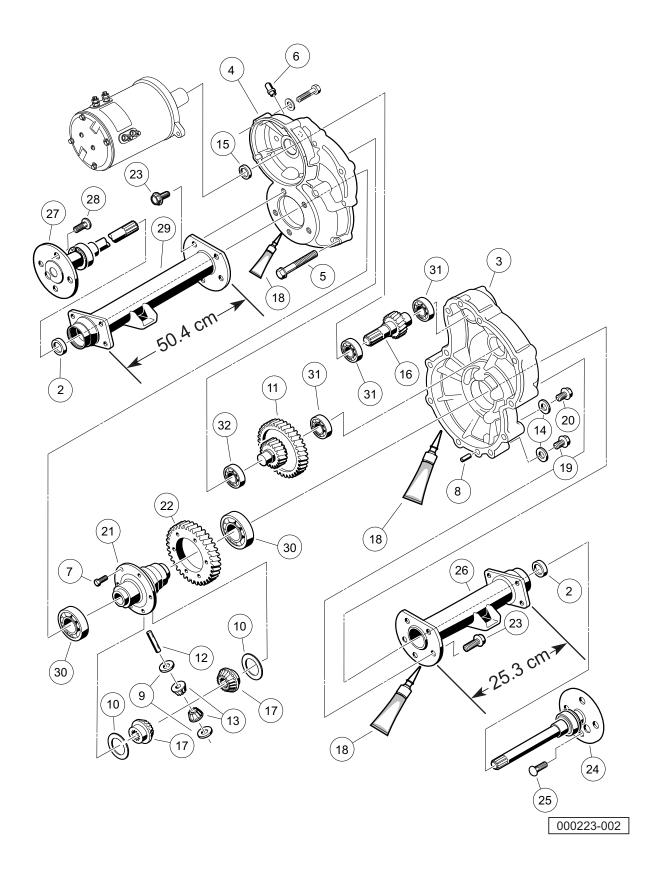






TRANSAXLE – ELECTRIC VEHICLES

	PART NO.	DESCRIPTION	QT
		1 2 3 4	
1	102771701	Transaxle, Electric (includes items 2 through 32)	
2	1013794	Axle Shaft Oil Seal	2
3	101895401	Gear Case, Left-Hand	
4	101895501	Gear Case, Passenger-Side	
5	101897001	Screw, M8-1.25 X 60mm Hex-Head	1
6	101897201	Breather	
7	101897401	Screw, M10-1.25 X 25mm	6
8	101897601	Pin, 11mm OD X 8.5mm ID X 10mm	:
9	101903601	Washer, Thrust	:
10	101903701	Washer, Thrust	:
11	101906901	Intermediate Shaft Assembly	
12	101922101	Pin, 15.99mm X 88.7mm Dowel	
13	101923001	Gear, Differential Idler	:
14	101923201	Gasket	:
15	101923501	Seal, Lip	
16	101923701	Shaft, Input	
17	101923901	Gear, Differential	:
18	101928701	Liquid Gasket (Transaxle case)	
19	101972101	Plug, M14-1.5 X 12mm Magnetic	
20	101972201	Plug, M14-1.5 X 12mm Hex	
21	102356601	Housing, Differential, 6 Bolt	
22	102356801	Gear, Differential Output, 6-Bolt	
23	102357001	Screw, Flg Hd M10 X 1.5 X 30	1
24	102886301	Axle Assembly, Driver-Side (includes item 25)	
25	101922201	Lug Stud	4
26	102886401	Tube, Axle, Driver-Side	
27	102886501	Axle Assembly, Passenger-Side (includes item 28)	
28	101922201	Lug Stud	4
29	102886601	Tube, Axle, Passenger-Side	
30	7330	Inner Axle Tube Bearing	:
31	7335	Bearing	3
32	7336	Bearing	

DID YOU

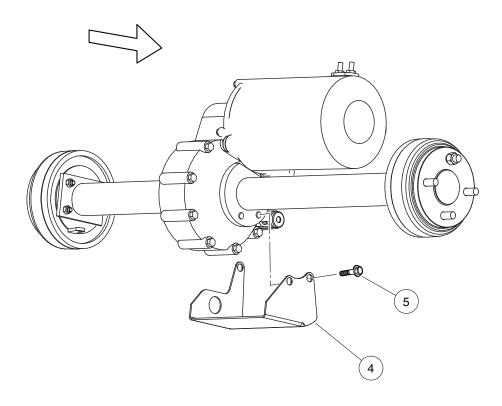

000365-001







DIFFERENTIAL GUARD

		DIFFERENTIAL G	UAND	
ITEM	PART NO.	DESCRIPTION	QTY	
		1 2 3 4		
1	101611402	Differential Guard Kit (includes items 2 through 4)	1	
2	101914001	Spacer, Steel		
3	101936101	Screw, M10-1.50 X 60mm Hex Cap		
4	101978601	Guard, Elect.axle Differential		
5	102357001	Screw, Flg Hd M10 X 1.5 X 30	3	



14







BATTERY CHARGER


15

3







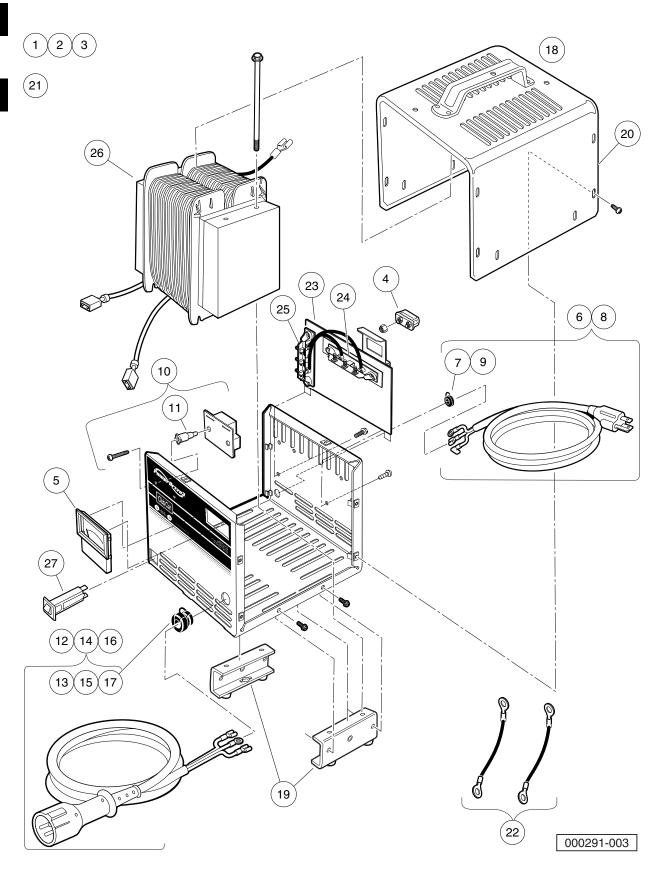






POWERDRIVE 3 BATTERY CHARGER, DOMESTIC

15

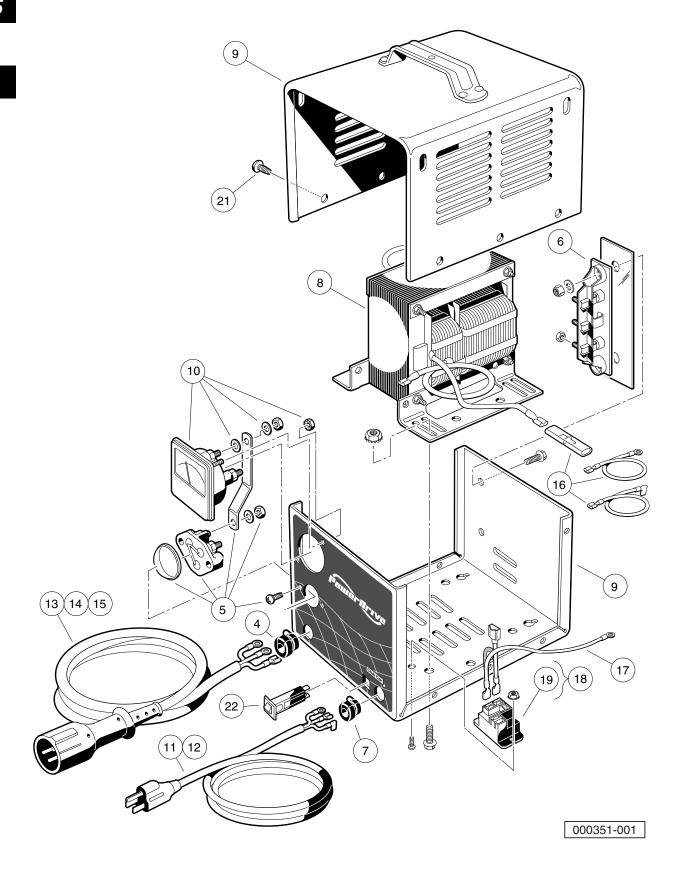






POWERDRIVE BATTERY CHARGER (MODEL 17930), DOMESTIC

1
2 101802202 Charger, PowerDrive, 48V/17A, 12ft DC, 9ft AC Cord Cord 3 101802203 Charger, PowerDrive, 48V/17A, 20ft DC, 9ft AC Cord (includes items 4 through 21) 4 1012098 Bushing, DC Cord 5 1012101 Fuse Assembly 6 1015914 Rectifier with Heatsink Assembly 7 1015917 Bushing, AC Cord 8 101819701 Transformer, Battery Charger 9 101828301 Case Assembly 10 101828501 Ammeter 11 101828801 Cord, AC, 80-Inch (203 cm) 12 101828802 Cord, AC, 108-Inch (274 cm) 13 101828901 Cord, DC, 113-Inch (287 cm) 14 101828902 Cord, DC, 154-Inch (391 cm) 15 101828903 Cord, DC, 250-Inch (635 cm) 16 101831101 Wire Assembly Kit 17 101914401 Assembly, Voltage Suppressor 18 103414901 Kit, Relay, 48v 30a W/instr (includes item 19) 19 7577 Screw, #10 X 0.50 Phillips Pan-Head 20 7577 Screw, #10 X 0.50 Phillips Pan-Head
3 101802203 Charger, PowerDrive, 48V/17A, 20ft DC, 9ft AC Cord (includes items 4 through 21) 4 1012098 Bushing, DC Cord
44 1012098 Bushing, DC Cord 55 1012101 Fuse Assembly 66 1015914 Rectifier with Heatsink Assembly 77 1015917 Bushing, AC Cord 88 101819701 Transformer, Battery Charger 99 101828301 Case Assembly 100 101828501 Ammeter 11 101828801 Cord, AC, 80-Inch (203 cm) 12 101828802 Cord, AC, 108-Inch (274 cm) 13 101828901 Cord, DC, 113-Inch (287 cm) 14 101828902 Cord, DC, 154-Inch (391 cm) 15 101828903 Cord, DC, 250-Inch (635 cm) 10 Wire Assembly Kit 10 101914401 Assembly, Voltage Suppressor 18 103414901 Kit, Relay, 48v 30a W/instr (includes item 19) 19 103397901 Relay, Spst No, 48v 30a, Pmt 20 7577 Screw, #10 X 0.50 Phillips Pan-Head 21 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Level 1 Battery Charger part numbers include one AC and one DC cord.
5 1012101 Fuse Assembly
5 1012101 Fuse Assembly 6 1015914 Rectifier with Heatsink Assembly 7 1015917 Bushing, AC Cord 8 101819701 Transformer, Battery Charger 9 101828301 Case Assembly 10 101828501 Ammeter 11 101828801 Cord, AC, 80-Inch (203 cm) 12 101828802 Cord, AC, 108-Inch (274 cm) 13 101828901 Cord, DC, 113-Inch (287 cm) 14 101828902 Cord, DC, 154-Inch (391 cm) 15 101828903 Cord, DC, 250-Inch (635 cm) 16 101831101 Wire Assembly Kit 17 101914401 Assembly, Voltage Suppressor 18 103414901 Kit, Relay, 48v 30a W/instr (includes item 19) 19 7577 Screw, #10 X 0.50 Phillips Pan-Head 20 7577 Screw, #10 X 0.50 Phillips Pan-Head Note: Level 1 Battery Charger part numbers include one AC and one DC cord.
7 1015917 Bushing, AC Cord
8 101819701 Transformer, Battery Charger 9 101828301 Case Assembly 10 101828501 Ammeter 11 101828801 Cord, AC, 80-Inch (203 cm) 12 101828802 Cord, AC, 108-Inch (274 cm) 13 101828901 Cord, DC, 113-Inch (287 cm) 14 101828902 Cord, DC, 154-Inch (391 cm) 15 101828903 Cord, DC, 250-Inch (635 cm) 16 101831101 Wire Assembly Kit 17 101914401 Assembly, Voltage Suppressor 18 103414901 Kit, Relay, 48v 30a W/instr (includes item 19) 19 103397901 Relay, Spst No, 48v 30a, Pmt 20 7577 Screw, #10 X 0.50 Phillips Pan-Head 21 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Level 1 Battery Charger part numbers include one AC and one DC cord.
8 101819701 Transformer, Battery Charger 9 101828301 Case Assembly 10 101828501 Ammeter 1 101828801 Cord, AC, 80-Inch (203 cm) 2 101828802 Cord, AC, 108-Inch (274 cm) 3 101828901 Cord, DC, 113-Inch (287 cm) 4 101828902 Cord, DC, 154-Inch (391 cm) 5 101828903 Cord, DC, 250-Inch (635 cm) 6 101831101 Wire Assembly Kit 7 101914401 Assembly, Voltage Suppressor 8 103414901 Kit, Relay, 48v 30a W/instr (includes item 19) 9 7577 Screw, #10 X 0.50 Phillips Pan-Head 20 7577 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Level 1 Battery Charger part numbers include one AC and one DC cord.
0 101828501 Ammeter
11 101828801 Cord, AC, 80-Inch (203 cm)
12 101828802 Cord, AC, 108-Inch (274 cm) 13 101828901 Cord, DC, 113-Inch (287 cm) 14 101828902 Cord, DC, 154-Inch (391 cm) 15 101828903 Cord, DC, 250-Inch (635 cm) 16 101831101 Wire Assembly Kit 17 101914401 Assembly, Voltage Suppressor 18 103414901 Kit, Relay, 48v 30a W/instr (includes item 19) 19 7577 Screw, #10 X 0.50 Phillips Pan-Head 20 7577 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Level 1 Battery Charger part numbers include one AC and one DC cord.
13 101828901 Cord, DC, 113-Inch (287 cm) 14 101828902 Cord, DC, 154-Inch (391 cm) 15 101828903 Cord, DC, 250-Inch (635 cm) 16 101831101 Wire Assembly Kit 17 101914401 Assembly, Voltage Suppressor 18 103414901 Kit, Relay, 48v 30a W/instr (includes item 19) 19 103397901 Relay, Spst No, 48v 30a, Pmt 20 7577 Screw, #10 X 0.50 Phillips Pan-Head 21 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Level 1 Battery Charger part numbers include one AC and one DC cord.
14 101828902 Cord, DC, 154-Inch (391 cm) 15 101828903 Cord, DC, 250-Inch (635 cm) 16 101831101 Wire Assembly Kit 17 101914401 Assembly, Voltage Suppressor 18 103414901 Kit, Relay, 48v 30a W/instr (includes item 19) 19 103397901 Relay, Spst No, 48v 30a, Pmt 20 7577 Screw, #10 X 0.50 Phillips Pan-Head 21 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Level 1 Battery Charger part numbers include one AC and one DC cord.
15 101828903 Cord, DC, 250-Inch (635 cm) 16 101831101 Wire Assembly Kit 17 101914401 Assembly, Voltage Suppressor 18 103414901 Kit, Relay, 48v 30a W/instr (includes item 19) 19 103397901 Relay, Spst No, 48v 30a, Pmt 20 7577 Screw, #10 X 0.50 Phillips Pan-Head 21 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Level 1 Battery Charger part numbers include one AC and one DC cord.
16 101831101 Wire Assembly Kit
17 101914401 Assembly, Voltage Suppressor
17 101914401 Assembly, Voltage Suppressor
18 103414901 Kit, Relay, 48v 30a W/instr (includes item 19) 19 103397901 Relay, Spst No, 48v 30a, Pmt 20 7577 Screw, #10 X 0.50 Phillips Pan-Head 21 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Level 1 Battery Charger part numbers include one AC and one DC cord.
19 103397901 Relay, Spst No, 48v 30a, Pmt 20 7577 Screw, #10 X 0.50 Phillips Pan-Head 21 CCX8506 Circuit Breaker, 15-Amp/120-Volt Note: Level 1 Battery Charger part numbers include one AC and one DC cord.
Screw, #10 X 0.50 Phillips Pan-Head
CCX8506 Circuit Breaker, 15-Amp/120-Volt
Note: Level 1 Battery Charger part numbers include one AC and one DC cord.

15

15

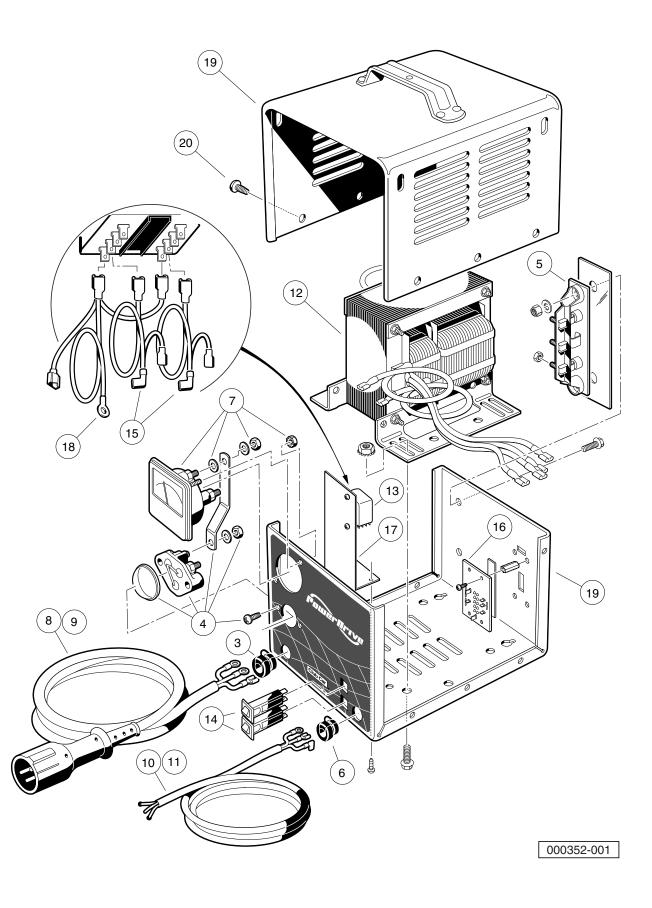








POWERDRIVE BATTERY CHARGER (MODEL 18780), EXPORT

TEM	PART NO.	DESCRIPTION
		1 2 3 4
1	101831503	Battery Charger, 48-Volt DC (8.5-ft DC, 6-ft AC)
2	101831504	Battery Charger, 48-Volt DC (12-ft DC, 9-ft AC) (includes items 3 through 20)
3	1012098	Bushing, DC Cord
4	1012101	Fuse Assembly
5	1015914	Rectifier with Heatsink Assembly
6	1015917	Bushing, AC Cord
7	101828501	Ammeter
8	101828901	Cord, DC, 113-Inch (287 cm)
9	101828902	Cord, DC, 154-Inch (391 cm)
10	101831701	Cord, AC, 80-Inch (203 cm), without Plug
11	101831702	Cord, AC, 118-Inch (300 cm), without Plug
12	101838201	Transformer, Export Battery Charger
13	101838301	Relay, Export Charger
14	101838401	Circuit Breaker
15	101838501	Kit, Wire Assembly
16	101838601	Four-Position Switch
17	101838701	Mounting Bracket, Relay
18	101914401	Assembly, Voltage Suppressor
19	N/A	Case, Charger
20	7577	Screw, #10 X 0.50 Phillips Pan-Head

15

15

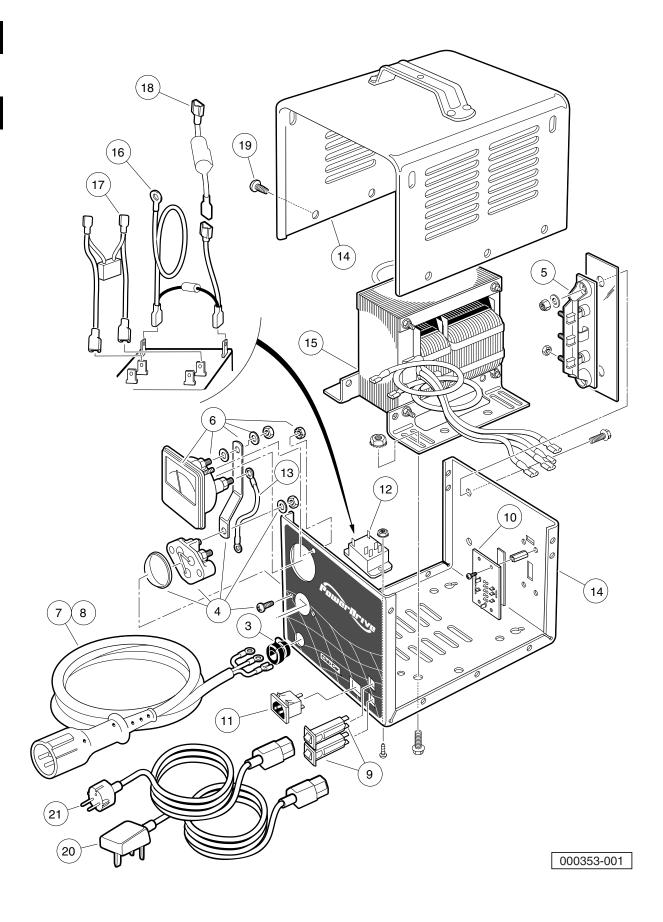





POWERDRIVE BATTERY CHARGER (MODEL 20310), EUROPEAN

i e	1 2 3 4
101956201	Battery Charger, 48-Volt w/ 4-Position Switch (8.5-ft DC)
101956202	Battery Charger, 48-Volt w/ 4-Pos. Switch (12-ft DC) (includes items 3 through 19)
1012098	Bushing, DC Cord
1012101	Fuse Assembly
1015914	Rectifier with Heatsink Assembly
101828901	Cord, DC, 113-Inch (287 cm)
101828902	Cord, DC, 154-Inch (391 cm)
101838401	Circuit Breaker
101838601	Four-Position Switch
0 101973501	Receptacle, AC Cord
1 101976601	Ammeter with Mounting Bracket
2 101987501	Relay
3 N/A	Wire, Jumper
4 N/A	Case, Charger
5 ****	Transformer, European Battery Charger
6 ****	Suppressor, AC Voltage
7 ****	Assembly, Wire
8 ****	Limiter, Current
9 7577	Screw, #10 X 0.50 Phillips Pan-Head
0 101958201	Cord, UK, AC, Battery Charger
1 101958301	Cord, European AC, Battery Charger
	**** Special order item available upon request. Note: Level 1 Battery Charger part numbers include one AC and one DC cord.
	They do not include all of the level 2 cords listed.

15



15

•








MAINTENANCE AND SERVICE TOOLS

16

G





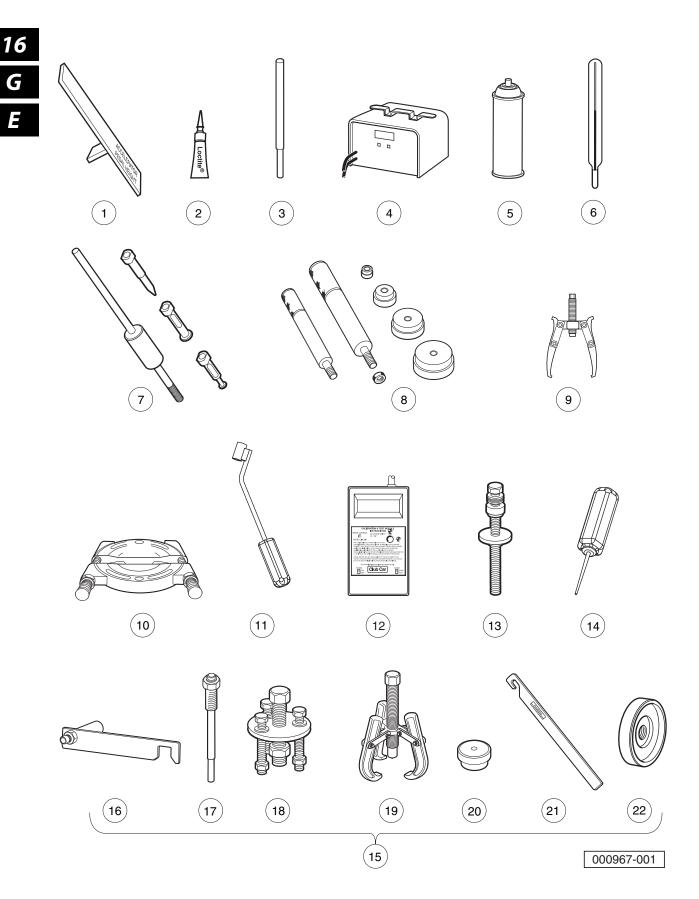







MAINTENANCE AND SERVICE TOOLS – GOLF

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
		The following tool list includes all tools available from Club Car for		
		maintenance and service procedures for gasoline and electric golf cars,		
		both past and present models. Be sure to carefully examine the tool list for		
		applicability to your vehicle before ordering.		
1	101871001	Accelerator Pedal Adjustment Tool	1	1
2	101813202	Adhesive, Guide Ring, 3-Gram Tube		1
3	101641202	Arbor	1	
4	101831901	Battery Discharge Machine, 36/48 Volt		1
5	1014305	Battery Terminal Protector Spray	1	1
6	1011767	Battery Thermometer	1	1
7	1016417	Bearing and Oil Seal Remover Assembly	1	1
8	1016416	Bearing Driver Set	1	1
9	1012811	Bearing Puller	1	1
10	1012812	Bearing Puller Wedge Attachment	1	1
11	102555501	Brake Cable Release Tool	1	1
12	101887101	Calibration Test Module		1
13	101808401	Cam Installation Tool	1	
14	102562401	Charger Bezel Tool		1
15	1014510	Clutch Tool Kit (includes items 16 - 22)	1	
16	1014498	Clutch Alignment Tool (for pre-unitized transaxle		
		vehicles built prior to 1997 model year)	1	
17	1014496	Drive Clutch Puller (for Kawasaki engines only)	1	
18	1014497	Drive Clutch Hub Puller (for Kawasaki engines only)	1	
19	1014508	Driven Clutch Cam Puller (for Kawasaki engines only)	1	
20	1014507	Driven Clutch Puller Plug (for Kawasaki engines only)	1	
21	1015524	Drive Clutch Holder Tool Assembly (for Kawasaki engines only)	1	
22	101809101	Press Weldment (for Kawasaki engines only)	1	
		Please refer to the maintenance and service manual		
		for proper tool application.		






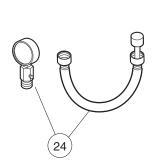

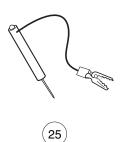  









 




 


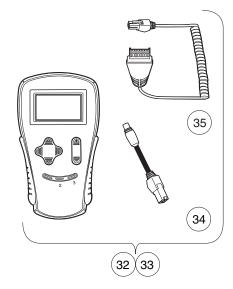











(38)

41

000968-001






MAINTENANCE AND SERVICE TOOLS – GOLF, CONTINUED

PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
			LLEC
	1 2 3 4		
101831801	Communication Display Module		1
101641002	Compression Gauge and Adapter	1	
1011273	Continuity Tester	1	1
1012151	Dry Moly Lubricant	1	1
1016627	Flywheel Puller Kit (for Kawasaki Engines)	1	
1016418	Gear Yoke	1	1
101933101	Governor Shaft Installation Tool (for Kawasaki Engine Vehicles)	1	
1011478	Hydrometer	1	1
1013593	Internal Retaining Ring Pliers	1	1
102248803	IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles)		1
	(includes items 34 and 35)		
102248804	IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles)(includes items 34 and 35)		1
102251501	Adaptor, Cable		1
102241502	IQDM Series 2 Cable		1
102241501	IQDM Series 1 Cable (replacement)		1
101928701	Liquid Gasket (transaxle case)	1	1
102243402	Moly-Teflon Lubricant (4-oz. (113-gram) tube)		1
101997201	Paint, Touch-Up – Beige*	1	1
101997207	Paint, Touch-Up – Black*	1	1
101997212	Paint, Touch-Up – Burgundy*	1	1
101997211	Paint, Touch-Up – Classic Blue (Navy)*	1	1
101997205	Paint, Touch-Up – Dark Gray*	1	1
101997209	Paint, Touch-Up – Dark Green*	1	1
101997204	Paint, Touch-Up – Gray*	1	1
101997203	Paint, Touch-Up – Red*	1	1
101997206	Paint, Touch-Up – Royal Blue (Pacific Blue)*	1	1
101997202	Paint, Touch-Up – White*	1	1
102562301	Paint, Precedent Underbody – Gray	1	1
102587201	Paint Pen, Touch-Up, Precedent Underbody – Black	1	1
	Please refer to the maintenance and service manual for proper tool application.		
	* Item 39 is not for use on Surlyn body material, which is used on Precedent vehicles.		
	1012151 1016627 1016418 101933101 1011478 1013593 102248803 102248804 102251501 102241502 102241501 101928701 101997201 101997201 101997207 101997212 101997211 101997205 101997209 101997204 101997204 101997206 101997206 101997202 102562301	1012151 1016627 Flywheel Puller Kit (for Kawasaki Engines) Gear Yoke Gear Yoke 10133101 1011478 Hydrometer 1013593 Internal Retaining Ring Pliers 102248803 IQ Display Module (IQDM) Kit (IQ System and IQ Plus vehicles) (includes items 34 and 35) IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles) (includes items 34 and 35) IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles) (includes items 34 and 35) IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles) (includes items 34 and 35) IQ Display Module (IQDM-P) Kit (IQ System and IQ Plus vehicles) (includes items 34 and 35) IQDM Series 2 Cable IQDM Series 2 Cable IQDM Series 1 Cable (replacement) IQUESTION IQU	1012151

G

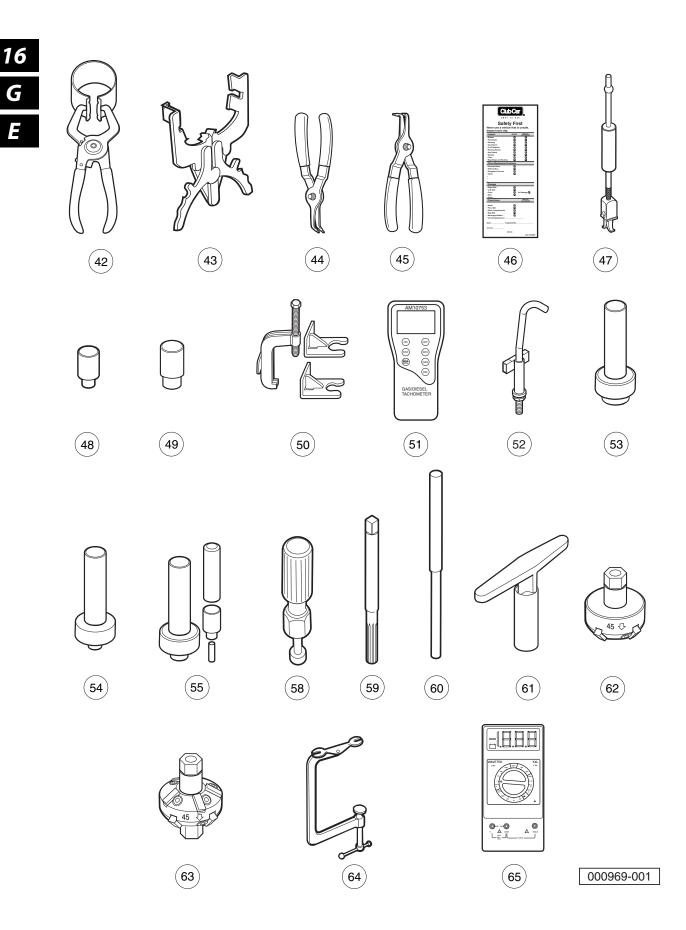





MAINTENANCE AND SERVICE TOOLS – GOLF, CONTINUED

ITEM	PART NO.	DESCRIPTION	QTY GAS	QTY ELEC
		1 2 3 4		
42	1016414	Piston Ring Compressor Kit (FE290, FE350 and FE400 engines)	1	
43	1016415	Piston Ring Pliers (for Kawasaki Engines)	1	
44	1012549	Retaining Ring Pliers, 45° External	1	1
45	1012560	Retaining Ring Pliers, 90° Internal	1	1
46	101823101	Safety First Card (50 per pack)	1	1
47	1012809	Seal Puller	1	1
48	1014264	Steering Column Bearing Press Tool	1	1
49	1014259	Steering Column Retaining Ring Tool	1	1
50	102061201	Steering Wheel Puller Tool	1	1
51	AM10753	Tachometer (includes gasoline engine pick up lead only)	1	
52	102570401	Tool, Tensioning, Starter Generator (For Precedent vehicles)	1	
53	1014162	Transaxle Axle Seal Tool	1	
54	1014161	Transaxle Pinion Seal Tool	1	
55	1014115	Transmission Tool Kit	1	
56	101611003	Tune-Up Kit, DS (for FE290/350 Engines) (includes		
		air filter, spark plug, oil filter, fuel filters) (not shown)	1	
57	AM1220301	Tune-Up Kit, Precedent (for FE290/350 Engines) (includes air		
		filter, spark plug, oil filter, fuel filters) (not shown)	1	
58	1016413	Valve Clearance Adjuster Screw Holder (for FE290 engines only)	1	
59	101641201	Valve Guide Reamer (FE290, FE350, and FE400 only)	1	
60	1016552	Valve Seat Cutter Guide	1	
61	1016551	Valve Seat Cutter T-Wrench	1	
62	1016553	Valve Seat Cutter, 45° (32 mm diameter) (for FE290 engines only)	1	
63	1016554	Valve Seat Cutter, 45°/30° (35 mm diameter)	1	
64	101641101	Valve Spring Compressor	1	
65	1011480	Volt Ohm Meter	1	1
		Please refer to the maintenance and service manual for proper tool application.		








8754 1-13, 4-7, 4-9, 4-11, 5-3, 5-7, 5-9, 5-11,

CartPros directs you to the right part using the part numbers from this manual. Enter the part number into our search box and it will find the part you are looking for. **INDEX**

GET STARTED ___

Part Number and <i>Page</i>	5-13, 5-17, 6-17	1012181 <i>5-17</i>
AM10753 <i>16-7</i>	8755 <i>1-29, 5-11, 5-13, 5-17</i>	1012182 <i>5-17</i>
AM10419 10-3	8861 <i>5-9</i>	1012285 8-3, 8-11, 11-11, 12-19
AM1232301 <i>7-3</i>	8963 1-27	1012295 <i>6-11</i>
CCX8506 15-3, 15-5	8990 5-7, 6-11, 12-9, 12-19, 12-21	1012303 <i>1-29, 5-11, 5-13, 5-17</i>
183 <i>8-13, 10-5, 11-3</i>	1010124 <i>5-11, 5-13</i>	1012304 <i>5-17</i>
304 1-31	1010138 <i>1-31, 5-9</i>	1012333 <i>11-11</i>
320 1-13, 1-29, 1-31	1010145 <i>5-17</i>	1012382 <i>6-5</i>
332 1-17, 1-19, 1-21, 1-25, 1-29, 8-13, 9-3,	1010150 <i>5-11, 5-13</i>	1012412 <i>1-19, 1-21</i>
11-11, 12-21	1010543 <i>1-25</i>	1012431 6-11, 6-13, 11-9, 12-9
334 1-29, 4-9, 4-11, 5-3, 5-7, 7-13, 10-5	1010545 1-31	1012505 6-13, 12-9
451 <i>9-3, 13-3</i>	1010577 <i>7-13</i>	1012528 9-3, 12-19
705 6-17, 7-13	1010805 4-5	1012549 <i>16-7</i>
706 5-11, 5-13	1010829 4-7	1012560 <i>16-7</i>
808 <i>10-5</i>	1010877 4-5	1012571 <i>7-13</i>
1017 6-7, 12-7	1010878 1-29, 4-5	1012594 <i>11-9</i>
1028 4-5	101090801 <i>12-17</i>	1012604 5-3
1032 4-5	101090802 <i>12-17</i>	1012605 <i>5-3</i> 1012649 8-3
1035 4-7	1010921 4-5	
1241 1-17, 1-27, 4-5, 4-7, 4-9, 4-11, 6-11, 6-17,	1010927 <i>4-5</i> 1010932 <i>4-5</i>	1012809 <i>16-7</i> 1012811 <i>16-3</i>
6-19, 9-3	1010932 4-5	1012811 <i>16-3</i> 1012812 <i>16-3</i>
1242 4-7, 6-11, 6-17	1010933 4-3	1012830 <i>6-17</i> , <i>8-11</i> , <i>9-3</i>
1606 1-17, 8-13 1620 1-15	1010954 6-11, 11-9	1012836 10-3
1620 <i>1-15</i> 1624 <i>4-9, 4-11, 5-7</i>	1010958 12-17	1012986 <i>6-13</i>
2402 5-9	1010938 72-77	1012987 11-9
7048 5-15	1010993 1-19, 1-21	101303202 1-23
7173 6-19	1011017 1-17	1013035 <i>5-7</i>
7173 6-19 7174 5-3, 6-17, 8-11, 9-3	1011019 1-15	1013042 5-7, 5-9
7251 1-5	1011084 4-13	1013044 5-7
7310 2-3	1011229 6-13, 12-9	1013051 <i>5-7</i>
7311 <i>1-27</i>	1011273 <i>16-5</i>	1013052 <i>5-7</i>
7330 14-3	1011382 <i>1-15</i>	1013061 11-3, 12-13
7335 14-3	1011402 <i>4-5</i>	1013164 <i>5-17</i>
7336 14-3	1011415 <i>5-17</i>	1013343 <i>1-15</i>
7473 1-5, 1-27, 4-5, 4-7, 4-9, 4-11, 6-11, 6-19,	1011418 <i>4-5</i>	1013344 <i>1-15</i>
8-5	1011478 <i>16-5</i>	1013461 <i>6-7, 8-5, 12-7</i>
7555 <i>5-7</i>	1011480 <i>16-7</i>	1013462 <i>8-5</i>
7577 <i>15-5, 15-7, 15-9</i>	1011553 3-3, 3-7	1013494 <i>1-15</i>
7716 <i>4-5</i>	1011578 <i>1-31, 5-3, 12-17</i>	1013531 <i>4-7</i>
7818 <i>6-11</i>	1011582 <i>6-9, 12-15</i>	1013587 <i>11-9</i>
7847 1-19, 1-21, 1-27, 1-29, 6-9, 9-3, 12-15	1011652 <i>1-25</i>	1013589 <i>6-11, 11-9</i>
7893 6-11, 11-11	1011659 <i>1-17</i>	1013590 <i>11-9</i>
7973 1-15	1011694 <i>4-9, 4-11</i>	1013591 <i>11-9</i>
8056 6-13, 12-9	1011697 <i>5-3, 7-13, 8-11, 12-17</i>	1013593 <i>16-5</i>
8057 6-11, 6-13, 11-9, 12-9	1011700 <i>4-9, 4-11</i>	1013609 <i>6-11</i>
8058 6-11, 6-13, 11-9, 12-9	1011734 <i>4-13</i>	1013683 <i>12-17</i>
8067 5-15	1011767 <i>16-3</i>	1013687 <i>8-3</i>
8233 1-17, 1-19, 1-21, 1-27, 1-29, 4-9, 4-11,	1011779 <i>4-7</i>	1013700 <i>8-11</i>
11-3, 11-9, 11-11, 12-21	101187702 <i>4-5</i>	1013734 <i>9-3, 12-19</i>
8248 8-3, 11-9, 12-21	1011931 <i>1-27, 4-9, 4-11</i>	1013746 <i>8-3</i> , <i>8-5</i> , <i>8-9</i>
8251 1-19, 1-21, 11-11 8450 10-5	1011988 <i>8-3</i>	1013794 <i>14-3</i>
8450 <i>10-5</i> 8639 <i>12-19</i>	1011990 1-13	1013869 4-5
8717 4-9, 4-11, 6-11, 11-3, 11-9	1012098 15-3, 15-5, 15-7, 15-9	1013870 <i>4-5</i>
0,1, 4-2,4-11,0-11,11-3,11-3	1012101 <i>15-5, 15-7, 15-9</i>	1013876 <i>1-31, 4-5</i>

 1012151 *16-5*






1013983	1-11	1014901 <i>5-17</i>	1016387 <i>5-11, 5-13</i>
1014007	4-9, 4-11, 11-3	1014902 <i>5-17</i>	1016389 5-11, 5-13
1014049	10-5	1014928 8-3	1016401 <i>6-11</i>
1014050	10-5	1014947 12-19	101641002 <i>16-5</i>
1014051	10-5	1014948 6-11	101641101 <i>16-7</i>
1014052	10-5	1015064 <i>11-9</i>	101641201 <i>16-7</i>
1014055	10-5	1015072 12-17	101641202 <i>16-3</i>
1014056	10-5	1015137 8-3, 8-9	1016413 <i>16-7</i>
1014057	10-5	1015139 8-3, 8-5	1016414 <i>16-7</i>
1014058	10-5	1015143 8-3	1016415 <i>16-7</i>
1014059	10-5	101524002 <i>6-17</i>	1016416 <i>16-3</i>
1014062	10-5	1015332 <i>6-5, 7-15</i>	1016417 <i>16-3</i>
1014063	10-5	1015345 6-11	1016418 <i>16-5</i>
1014065	6-11, 10-5, 11-9	1015371 6-11	1016423 <i>6-11</i>
1014070	10-3	1015372 6-11	101642578 <i>8-7</i>
1014072	10-3	1015373 6-11	101642580 <i>8-7</i>
1014078	10-3	1015391 <i>1-31</i>	101642582 <i>8-7</i>
1014080	10-3	1015405 6-11	101642585 <i>8-7</i>
1014089	11-9	1015426 <i>8-13</i>	1016429 <i>7-5</i>
1014115	16-7	101547601 <i>3-5</i>	1016432 <i>7-5</i>
1014116	8-3	1015524 <i>16-3</i>	1016436 <i>7-7</i>
1014119	6-5, 6-11	1015583 1-29, 5-11, 5-13, 5-17	1016437 <i>8-7</i>
1014125	5-3	1015597 <i>5-15</i>	1016438 8-9
1014126	5-3	1015649 <i>7-15</i>	1016440 <i>7-7</i> , 8-9
1014145	6-11, 11-9	1015720 <i>6-13, 12-9</i>	1016441 8-9
1014153	4-3	1015737 6-5, 6-11	1016444 8-9
1014161	16-7	1015741 <i>6-11</i>	1016449 <i>7-7</i>
1014162	16-7	1015752 6-9, 6-11, 8-13, 12-11, 12-15	1016450 <i>7-7</i>
1014201	13-3	1015769 <i>6-5</i>	1016451 <i>7-7</i>
1014213	5-3	1015814 <i>9-3</i>	1016452 <i>7-7</i>
1014214	5-3	101584502 <i>8-11</i>	1016453 <i>7-9</i>
1014217	5-3	101587703 <i>8-5</i>	1016454 <i>7-9</i>
1014259	16-7	1015878 <i>6-11</i>	1016455 <i>7-3</i>
1014264	16-7	1015914 <i>15-5, 15-7, 15-9</i>	1016456 <i>7-15</i>
1014276	5-11, 5-13	1015917 <i>15-5, 15-7</i>	1016457 <i>7-5</i>
1014287	10-5	1015920 6-5	1016458 <i>7-7</i>
1014288	5-3, 6-19, 10-5, 12-19	1015921 <i>8-5</i>	1016467 <i>7-5</i>
1014304	12-17	1015932 <i>6-17</i>	1016470 <i>7-11</i>
1014305	16-3	1015969 <i>7-15</i>	1016472 <i>7-9</i>
1014306	1-19, 1-21	1016004 8-5	1016473 <i>7-5</i>
1014375	6-19	1016074 <i>6-17</i>	1016474 <i>7-7</i>
1014453	10-5	101611003 <i>16-7</i>	1016479 <i>7-7</i>
1014454	10-3	101611402 <i>14-5</i>	1016480 8-9
1014496	16-3	1016183 <i>5-3</i>	101648102 <i>8-9</i>
1014497	16-3	1016201 <i>10-5, 11-9</i>	101648203 <i>7-5</i>
1014498	16-3	1016269 5-3	1016483 <i>7-7</i>
1014507	16-3	1016289 <i>10-5</i>	1016486 <i>8-7</i>
1014508	16-3	1016342 <i>11-9</i>	1016489 <i>7-7</i>
1014510	16-3	1016346 5-9	101649002 8-9
10145490	2 <i>5-17</i>	1016349 5-9	1016494 <i>7-9</i>
1014555	5-17	1016350 <i>5-9</i>	1016496 <i>7-9</i>
1014573	5-17	1016351 <i>5-9</i>	1016499 8-7
1014645	1-15	1016353 <i>5-9</i>	1016501 8-7
1014727	11-9	1016384 5-11, 5-13	1016502 <i>7-5</i>
1014807	6-11, 11-9	1016385 <i>5-9</i>	1016506 <i>7-9</i>
1014808	6-11	1016386 5-11, 5-13	1016507 <i>7-15</i>

KNO YOU



GET STARTED https://CartPros.com/f.html

1016510 <i>7-9</i>	1016967 <i>1-5</i>	1017510 <i>7-11</i>
1016517 <i>7-7</i>	1017029 <i>4-5</i>	1017512 <i>7-11</i>
1016518 <i>7-7</i>	1017062 <i>6-7, 12-7</i>	1017513 <i>7-9</i>
1016519 <i>7-7</i>	1017064 <i>6-7, 12-7</i>	1017514 <i>7-9</i>
1016521 <i>7-9</i>	1017065 <i>6-7, 12-7</i>	101751801 <i>7-9</i>
1016531 <i>7-15</i>	1017080 <i>1-5</i>	101751802 <i>7-9</i>
1016535 <i>7-9</i>	1017082 <i>11-3</i>	101751803 <i>7-9</i>
1016537 <i>7-5</i>	1017141 <i>1-19, 1-21</i>	1017686 <i>10-3</i>
1016538 <i>7-9</i>	1017188 <i>10-5</i>	1017689 <i>9-3</i>
1016539 <i>7-15</i>	1017226 <i>5-3</i>	1017705 <i>12-13</i>
1016541 <i>7-11</i>	1017235 <i>5-17</i>	101773301 <i>7-11</i>
1016542 <i>7-7</i>	1017266 <i>5-9</i>	101773302 <i>7-11</i>
1016544 <i>7-3, 7-7, 7-9</i>	1017273 <i>5-5</i>	101773303 <i>7-11</i>
1016545 7-7	1017313 <i>5-3</i>	101773304 <i>7-11</i>
1016546 <i>8-11</i>	1017314 <i>5-3</i>	101773305 <i>7-11</i>
1016547 <i>7-15</i> , 8-9	1017315 <i>5-3</i>	101773306 <i>7-11</i>
1016549 <i>7-7</i>	1017317 <i>5-3</i>	101773307 <i>7-11</i>
1016551 <i>16-7</i>	1017378 <i>4-9, 4-11</i>	101773308 <i>7-11</i>
1016552 <i>16-7</i>	1017380 4-9, 4-11	101773309 <i>7-11</i>
1016553 <i>16-7</i>	1017424 4-9, 4-11	101773310 <i>7-11</i>
1016554 <i>16-7</i>	1017434 <i>7-7</i>	101773311 <i>7-11</i>
1016560 7-7	1017442 <i>7-5</i>	1017774 <i>1-27</i>
1016561 7-3	1017443 <i>7-7</i>	101791101 <i>4-3</i>
1016562 <i>7-3, 7-11</i>	1017445 <i>7-7</i>	101795701 <i>12-17</i>
1016563 7-7	1017448 7-3	101796201 4-9, 4-11
1016564 7-9	101744901 <i>7-11</i>	101796501 <i>12-13</i>
1016566 7-7	101744902 <i>7-11</i>	101796801 <i>12-13</i>
1016569 7-7	1017450 <i>7-11</i>	101801001 <i>12-13</i>
1016570 <i>7-5</i>	101745101 <i>7-11</i>	101802101 <i>12-13</i>
1016571 <i>7-11</i>	101745102 <i>7-11</i>	101802201 <i>15-5</i>
1016572 8-9	1017453 <i>7-11</i>	101802202 <i>15-5</i>
1016576 <i>7-5</i>	1017454 <i>7-7</i>	101802203 <i>15-5</i>
1016581 <i>7-5</i>	1017455 <i>7-</i> 3	101804301 <i>8-13</i>
1016582 8-9	1017456 <i>7-5</i>	101805701 <i>8-13</i>
1016583 7-7	101745701 <i>7-11</i>	101808401 <i>16-3</i>
1016584 <i>7-9</i>	101745702 <i>7-11</i>	101809101 <i>16-3</i>
1016585 <i>8-7</i>	1017458 <i>7-5</i>	101811401 <i>8-13</i>
1016587 <i>7-3</i>	1017460 <i>7-5</i>	101811501 <i>8-13</i>
1016588 7-3	1017461 8-7	101811801 <i>8-13</i>
101660404 <i>1-15</i>	1017463 <i>7-3</i>	101811901 <i>8-13</i>
1016627 <i>16-5</i>	1017466 8-9	101812301 <i>8-13</i>
1016630 <i>6-13</i>	1017471 <i>7-11</i>	101813001 <i>8-13</i>
1016717 <i>6-9, 12-15</i>	1017472 <i>7-9</i>	101813202 <i>16-3</i>
1016801 <i>10-5</i>	1017473 <i>7-7</i>	101815501 <i>4-3</i>
1016849 <i>6-13, 12-9</i>	1017474 <i>7-15</i>	101815502 <i>4-3</i>
1016851 <i>6-13, 12-9</i>	1017475 <i>7-15</i>	101816501 <i>4-3</i>
1016857 <i>6-13, 12-9</i>	1017476 <i>7-15</i>	101816502 <i>4-3</i>
1016859 <i>6-13, 12-9</i>	1017486 <i>7-15</i>	101817401 <i>4-9, 4-11</i>
1016868 <i>1-5</i>	1017487 <i>7-9</i>	101818801 <i>4-9</i>
1016879 <i>6-7, 12-7</i>	1017490 <i>7-3</i>	101819701 <i>15-5</i>
1016880 <i>6-7, 12-7</i>	1017501 <i>7-11</i>	101821501 <i>8-13</i>
1016883 6-17	1017502 <i>7-11</i>	101823101 <i>16-7</i>
1016904 <i>7-7, 9-3</i>	1017503 <i>7-11</i>	101823201 4-3
1016916 <i>1-25</i>	1017504 <i>7-9</i>	101823801 <i>4-3</i>
1016947 <i>11-9</i>	1017507 <i>7-5</i>	101823901 <i>4-3</i>
1016952 <i>1-19, 1-21</i>	1017508 <i>7-9</i>	101824401 8-3, 8-5

 



101825101	3-3, 3-7	101879601	5-7	101928701	14-3, 16-5
101826201	12-9	101879701	5-7	101929802	10-5
101826301	6-13	101879801	5-7	101931501	3-9, 12-19
101826801	12-19	101879901	5-7	101932601	12-19
101827101	7-13	101880001	5-7	101932701	12-19
101827801	12-19	101880101	5-7	101932902	11-13
101828301	15-5	101880201	5-7	101933101	16-5
101828501	15-5, 15- <i>7</i>	101880301	5-7	101935501	12-9
101828801	15-5	101881701	8-13	101936101	14-5
101828802	15-5	101884801	7-13	101936801	12-11
101828901	15-5, 15-7, 15-9	101886101	11-3	101942301	13-3
101828902	15-5, 15-7, 15-9	101887101	16-3	101951501	11-11
101828903	15-5	101887601	7-15	101953101	4-7
101830601	6-13, 12-9	101894901	12-13	101954301	1-17, 1-25
101830701	6-13, 12-9	101895401	14-3	101956201	15-9
101831101	15-5	101895501	14-3	101956202	15-9
101831503	15-7	101897001	14-3	101958201	15-9
101831504	15-7	101897201	14-3	101958301	15-9
101831701	15-7	101897401	14-3	101960101	<i>3-3, 3-7</i>
101831702	15-7	101897601	14-3	101960501	1-23, 3-5, 6-15
101831801	16-5	101898001	6-19	101963401	7-13
101831901	16-3	101900901	6-13	101965205	12-19
101832001	12-13	101903101	5-11, 5-13	101971301	8-13
101832202	8-11	101903601	14-3	101972001	16-5
101832302	8-11	101903701	14-3	101972002	16-5
101832601	7-13	101906901	14-3	101972003	16-5
101832701	7-13	101908101	12-21	101972004	16-5
101833101	7-13	101908401	12-21	101972005	16-5
101833401	10-3	101908601	3-9	101972006	16-5
101833902	10-5	101908701	12-19	101972007	16-5
101834001	10-3	101910401	1-27, 12-19	101972009	16-5
101834502	6-13, 12-9	101912401	4-13	101972011	16-5
101834601	7-13	101914001	14-5	101972012	16-5
101834801	11-3	101914401	15-5, 15-7	101972101	14-3
101835601	1-29, 6-9, 12-15	101915201	3-5	101972201	14-3
101836201	10-3	101916101	7-15	101972801	8-13
101837101		101916301		101973101	
	6-15, 6-17	101916701		101973301	8-7
101838201	15-7	101917601	8-13	101973401	8-9
101838301	15-7	101917701	8-13	101973501	15-9
101838401	15-7, 15-9	101918501	4-5	101976601	15-9
101838501	15-7	101919801	4-9, 4-11	101978601	14-5
101838601	15-7, 15-9	101920101	12-11, 13-3	101979101	11-9
101838701	15-7	101921501	8-13	101984801	5-3
101850301	5-5, 8-13	101922101	14-3	101987501	15-9
101851101	6-13, 12-9	101922201	14-3	101987701	8-3
101855801	1-19, 1-21, 11-11	101922501	12-21	101987901	6-7, 12-7
101856002	12-21	101922601	11-11	101988001	6-7, 12-7
101856102	6-11	101923001	14-3	101988002	6-7, 12-7
101856201	8-13	101923201	14-3	101988101	6-7, 12-7
101861901	4-9, 4-11	101923501	14-3	101988201	6-7, 12-7
101862001	4-11	101923701	14-3	101990703	6-13
101871001	16-3	101923901	14-3	101990801	4-7
101871001	4-5	101925601	10-5	101990001	6-13
101879401	5-7	101925701	8-13	101998215	1-25
101879501	5-7	101926901	11-13	101998501	1-25
1010/3301		.01720701		.01770301	. 23


KNO KNO



GET STARTED

https://CartPros.com/f.html

102003201	8-3	102336001	8-11	102796809	1-19
102022101	4-7	102336101	8-11	102796810	1-19
102022601	5-9	102353201	5-15	102797201	1-29
102022602	5-7, 5-9	102353301	5-15	102806201	12-19
102025801	1-17	102353401	5-15	102815801	2-3
102025901	6-13	102355102	1-13	102815901	2-3
102026001	4-9, 4-11	102355301	6-19	102816201	1-27
102045001	1-17	102356601	14-3	102819101	2-3
102048401	1-17	102356801	14-3	102820301	1-29
102061201	16-7	102357001	14-3, 14-5	102820501	1-29
102065901	1-29, 7-13	102357701	5-15	102821101	1-29
102066201	4-7	102406701	8-3, 8-5	102823201	1-29
102075801	3-3, 3-7	102503224	1-27	102829703	1-13
102101001	12-11	102508401	12-21	102829704	1-13
102101101	12-11	102515401	11-3	102829802	1-13
102155801	10-3	102522001	8-5	102830201	1-7
102158901	4-9, 4-11	102526201	11-3	102830401	1-7, 5-11
102174205	1-25	102540301	7-13	102830501	1-3
102186001	13-3	102544201	1-27	102830701	1-31
102186101	13-3	102555501	16-3	102831901	3-3, 3-9
102186201	13-3	102559901	2-5	102832001	3-3, 3-9
102186301	13-3	102562301	16-5	102833301	3-3, 3-9
102186401	13-3	102562401	16-3	102838401	7-3
102186701	13-3	102564002	5-11, 5-13	102838701	6-15
102186901	13-3	102570401	16-7	102838801	6-15
102187101	13-3	102581201	1-27	102838901	6-15
102187201	13-3	102585901	9-3	102839001	6-15
102221201	1-19, 1-21	102587201	16-5	102839301	6-15
102235201	13-3	102588501	5-17	102840301	1-27
102240501	12-19	102618601	1-3, 1-7	102841101	6-15
102241501	16-5	102684501	5-11, 5-13	102844501	6-15
102241502	16-5	102704701	13-3	102844601	6-15
102242101	1-17, 10-3	102704801	13-3	102844701	6-15
102243402	16-5	102704901	13-3	102850801	3-13
102243403	13-3	102711001	6-15	102850901	3-13
102248803	16-5	102711201	6-11	102852401	1-7
102248804	16-5	102771701	14-3	102852501	6-9, 12-15
102251501	16-5	102777601	1-19, 1-21	102865101	8-3
102263601	12-19	102777602	1-19, 1-21	102886301	14-3
102266501	12-19	102778601	1-17	102886401	14-3
102273701	15-3	102778901	1-31	102886501	14-3
102273801	15-3	102779001	1-31	102886601	14-3
102273901	15-3	102779201	1-31	102897201	11-5
102278001	5-3	102779301	1-31	102897301	11-5
102278801	3-13	102779401	1-31	102897401	11-3
102289001	1-29	102779501	1-31	102897601	11-3
102289002	1-3, 1-7	102779601	1-31	102897701	11-5
102289201	<i>5-7, 5-9</i>	102796101	1-27	102897801	11-3
102289301	1-29	102796301	1-27	102897901	11-3
102296530	1-27	102796302	1-27	102898001	11-5
102296920	12-21	102796801	1-19	102898101	11-5
102298240	1-3, 1-7	102796803	1-19	102898201	11-3
102304801	7-7	102796804	1-19	102898301	11-5
102310701	1-11	102796806	1-19	102898401	11-5
102323101	4-5	102796807	1-19	102898501	11-5
102323201	4-5	102796808	1-19	102898601	11-5

 



102898701	11-5	103316801	12-19	103572501	13-3
102898801	11-5	103316901	12-19	103601501	5- <i>7</i>
102898901	11-5	103317501	1-31	103601601	5-3
102899001	11-5	103332401	6-11	103615601	7-7
102899101	11-3	103332402	6-5	103615701	7-7
102899201	11-3	103345701	10-5	103615801	7-11
102899301	11-5	103347101	6-15	103615901	7-9
102899401	11-3	103347301	6-15	103616201	7-11
102899501	11-5	103347601	6-15	103616301	7-7
102899601	11-5	103347701	6-15	103616401	7-9
102899701	11-3	103347801	6-15	103616501	<i>7-3</i>
102899801	11-3	103347901	6-15	103616601	<i>7-3</i>
102899901	11-5	103351001	5-9	103616701	7-3
102900001	11-3	103354701	5-9	103616801	<i>7-3</i>
102900101	11-3	103359401	12-19	103628701	5-11, 5-13
102900201	11-3	103364101	1-17	103651902	8-3
102900301	11-3	103364201	1-17	103653401	5-7
102900401	11-5	103372101	8-3, 8-5	103653501	5-9
102900501	11-5	103372302	8-3, 8-5	103666102	5-15
102900601	11-3	103372401	8-3	103666202	5-15
102900701	11-5	103372801	8-3	103667102	5-15
102900801	11-7	103377201	4-7	103667202	5-15
102900901	11-3	103377301	4-7	103667302	5-15
102901001	11-5	103379501	11-11	103667402	5-15
102901101	11-5	103380201	4-3	103678502	6-15
102901201	11-7	103380202	4-3	103689601	12-5
102901301	11-7	103386202	7-15	103694501	2-5
102901401	11-7	103395101	1-17	103695801	12-17
102901501	11-7	103397901	15-5	103696801	12-17
102901601	11-7	103414901	15-5	103697301	12-19
102901701	11-7	103428501	15-3	103698901	1-21
102901801	11-7	103428601	15-3	103698903	1-21
102901901	11-7	103428701	15-3	103698904	1-21
102902001	11-7	103429001	15-3	103698906	1-21
102902101	11-7	103429101	15-3	103698907	1-21
102902201	11-7	103429201	15-3	103698908	1-21
102902301	11-7	103429301	15-3	103698909	1-21
102902401	11-7	103429501	15-3	103698910	1-21
102902501	11-7	103429701	15-3	103717001	15-3
102902601	11-7	103434001	15-3	103717002	15-3
102902701	11-7	103439901	15-3	103717003	15-3
102902801	11-7	103446501	8-3	103724502	5-5
102909901	6-9, 12-15	103477901	5-15	103724602	5-5
102911601	6-9, 12-15	103483102	4-3	103756401	8-3
102913101	1-27	103483201	4-3	103776901	8-5
102913102	1-27	103483401	4-3	103776902	8-3
102913601	5-11, 5-13	103483601	4-3	103779601	15-3
103010101	8-3	103483701	4-3	103781101	8-3
103189901	1-31	103496801	6-19	103783001	3-7
103246701	1-25	103502601	5-11, 5-13	103783002	3-3
103246801	1-25	103504301	12-17	103865101	4-9, 4-11
103262701	12-21	103507001	5-11, 5-13	103874201	11-3
103282601	12-19	103513001	15-3	103882001	11-5
103293501	1-31	103517401	15-3	103882101	11-3
103313301	1-17	103520301	8-13	103882301	11-3
103316701	12-19	103524501	8-7	103896601	8-3

KNO YOU

103905201 <i>8-5</i>	brake lever 4-3	ball (motor) 13-3
103935201 <i>5-17</i>	connecting rod 7-11	ball (steering pinion) 5-7
103936601 <i>6-11</i>	cylinder head 7-7	cage roller 11-5
103939201 <i>1-15</i>	delta A-plate 5-9	idler <i>10-5</i>
103953301 <i>6-15</i>	delta shock and gear support 5-9	inner axle tube 14-3
103956601 <i>8-5</i>	drive hub 10-5	lower pinion (steering) 5-7
103961601 <i>3-3, 3-7</i>	driven clutch 10-3	pivot support 4-9, 4-11
103974601 <i>3-11</i>	driven clutch fixed-face 10-3	steering shaft 5-3
103974701 <i>3-11</i>	float 8-7	thrust 5-11, 5-13
103984401 1-9	Forward/Reverse shifter 11-9	bearing and oil seal remover 16-3
103984402 <i>1-9</i>	frame and field (motor) 13-3	bearing driver set 16-3
103984404 1-9	fuel tank vent 8-3	bearing puller 16-3
103984405 1-9	governor 11-5	bearing puller wedge 16-3
103984407 1-9	headlight <i>6-7, 12-7</i>	bearing seat 5-3
103984409 1-9	headlight harness 6-7, 12-7	bed support 1-27
103984410 <i>1-9</i>	idle screw 8-7	bed support stiffener 1-29
103984411 <i>1-9</i>	inner ball joint 5-7	bed, cargo 1-31
103984412 <i>1-9</i>	kingpin <i>5-11, 5-13</i>	bell crank 11-9
96704416 <i>7-13</i>	moveable-face 10-3, 10-5	bell crank and shaft 6-11
	pilot air screw 8-7	bellows 5-7
Α	plug cap 7-3	belt, drive 10-5
absorber, rear shock 5-17	ratchet 4-5	belt, starter/generator 6-17, 10-5
AC cord 15-3, 15-5, 15-7, 15-9	secondary clutch weight 10-5	belt, V 6-17, 10-5
AC cord bushing 15-3	steering shaft 5-3	bezel, headlight <i>6-7, 12-7</i>
AC cord receptacle 15-9	turn signal lens 6-7, 12-7	block, brake-mounting 4-5
accelerator bracket and bearing assembly 4-9,	axle 11-3, 11-7, 14-3	block, fuse 6-11
4-11	axle guard 11-13, 14-5	body kick plate 1-19, 1-21
accelerator cable 8-11	axle shaft oil seal 11-7, 14-3	body, rear 1-19
accelerator capie o //		bolt, J- <i>12-17</i>
accelerator pedal adjustment tool 16-3	axle tube 11-7, 14-3	DOIL, J- 12-17
accelerator pedal adjustment tool 16-3 accelerator pivot rod 4-9, 4-11	axle tube 11-7, 14-3	
accelerator pivot rod 4-9, 4-11		bolt, U- 5-17
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11	В	bolt, U- 5-17 boot, steering column 5-3
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13	B backing plate, brake 4-3	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter	B backing plate, brake 4-3 backrest, gray 1-27	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5	B backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3	B backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13	B backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13	B backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13 air filter 8-13	B backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box,differential 11-7
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air filter 8-13 air filter 8-13 air intake hose 8-13	B backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box,differential 11-7 brace, canopy 1-17
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box,differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box,differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box,differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17 A-plate strap 5-9	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19 8-volt, 8VGCXC 12-17	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box,differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11 adjustable starter/generator 6-17
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13 air filter 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17 A-plate strap 5-9 A-plate, delta 5-9	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19 8-volt, 8VGCXC 12-17 battery charger 15-3, 15-5, 15-7, 15-9	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box,differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11 adjustable starter/generator 6-17 governor cable 8-11
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17 A-plate strap 5-9 A-plate, delta 5-9 arbor 16-3	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19 8-volt, 8VGCXC 12-17 battery charger 15-3, 15-5, 15-7, 15-9 battery charger case 15-3, 15-5, 15-7, 15-9	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box, differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11 adjustable starter/generator 6-17 governor cable 8-11 headlight mounting 6-7, 12-7
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17 A-plate strap 5-9 A-plate, delta 5-9 arbor 16-3 arm	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19 8-volt, 8VGCXC 12-17 battery charger 15-3, 15-5, 15-7, 15-9 battery charger case 15-3, 15-5, 15-7, 15-9 battery charger receptacle 12-13	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box,differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11 adjustable starter/generator 6-17 governor cable 8-11 headlight mounting 6-7, 12-7 muffler mounting 9-3
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17 A-plate strap 5-9 A-plate, delta 5-9 arbor 16-3 arm governor 11-3	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19 8-volt, 8VGCXC 12-17 battery charger 15-3, 15-5, 15-7, 15-9 battery charger receptacle 12-13 battery charger transformer 15-3, 15-5, 15-7,	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box,differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11 adjustable starter/generator 6-17 governor cable 8-11 headlight mounting 6-7, 12-7 muffler mounting 9-3 oil filter mount 7-5
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17 A-plate strap 5-9 A-plate, delta 5-9 arbor 16-3 arm governor 11-3 rocker 7-7	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19 8-volt, 8VGCXC 12-17 battery charger 15-3, 15-5, 15-7, 15-9 battery charger receptacle 12-13 battery charger transformer 15-3, 15-5, 15-7, 15-7, 15-9	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box,differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11 adjustable starter/generator 6-17 governor cable 8-11 headlight mounting 6-7, 12-7 muffler mounting 9-3 oil filter mount 7-5 oil level switch 7-9
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17 A-plate strap 5-9 A-plate, delta 5-9 arbor 16-3 arm governor 11-3 rocker 7-7 armature 13-3	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19 8-volt, 8VGCXC 12-17 battery charger 15-3, 15-5, 15-7, 15-9 battery charger receptacle 12-13 battery charger transformer 15-3, 15-5, 15-7, 15-9 battery charger 15-30	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box, differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11 adjustable starter/generator 6-17 governor cable 8-11 headlight mounting 6-7, 12-7 muffler mounting 9-3 oil filter mount 7-5 oil level switch 7-9 relay mounting 15-7
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17 A-plate strap 5-9 A-plate, delta 5-9 arbor 16-3 arm governor 11-3 rocker 7-7 armature 13-3 assembly	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19 8-volt, 8VGCXC 12-17 battery charger 15-3, 15-5, 15-7, 15-9 battery charger receptacle 12-13 battery charger transformer 15-3, 15-5, 15-7, 15-9 battery clamp 6-19 battery discharge machine 16-3	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box,differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11 adjustable starter/generator 6-17 governor cable 8-11 headlight mounting 6-7, 12-7 muffler mounting 9-3 oil filter mount 7-5 oil level switch 7-9 relay mounting 15-7 shifter 11-11
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17 A-plate strap 5-9 A-plate, delta 5-9 arbor 16-3 arm governor 11-3 rocker 7-7 armature 13-3 assembly accelerator bracket and bearing 4-9, 4-11	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19 8-volt, 8VGCXC 12-17 battery charger 15-3, 15-5, 15-7, 15-9 battery charger receptacle 12-13 battery charger transformer 15-3, 15-5, 15-7, 15-9 battery clamp 6-19 battery discharge machine 16-3 battery hold-down 12-17	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box, differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11 adjustable starter/generator 6-17 governor cable 8-11 headlight mounting 6-7, 12-7 muffler mounting 9-3 oil filter mount 7-5 oil level switch 7-9 relay mounting 15-7 shifter 11-11 shock mounting, dry 5-17
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17 A-plate strap 5-9 A-plate, delta 5-9 arbor 16-3 arm governor 11-3 rocker 7-7 armature 13-3 assembly accelerator bracket and bearing 4-9, 4-11 accelerator pivot rod 4-9, 4-11	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19 8-volt, 8VGCXC 12-17 battery charger 15-3, 15-5, 15-7, 15-9 battery charger receptacle 12-13 battery charger transformer 15-3, 15-5, 15-7, 15-9 battery clamp 6-19 battery discharge machine 16-3 battery hold-down 12-17 battery terminal protector spray 16-3	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box,differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11 adjustable starter/generator 6-17 governor cable 8-11 headlight mounting 6-7, 12-7 muffler mounting 9-3 oil filter mount 7-5 oil level switch 7-9 relay mounting 15-7 shifter 11-11 shock mounting, drv 5-17 shock mounting, pas 5-17
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box top 8-13 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17 A-plate strap 5-9 A-plate, delta 5-9 arbor 16-3 arm governor 11-3 rocker 7-7 armature 13-3 assembly accelerator bracket and bearing 4-9, 4-11 air box 8-13	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19 8-volt, 8VGCXC 12-17 battery charger 15-3, 15-5, 15-7, 15-9 battery charger receptacle 12-13 battery charger transformer 15-3, 15-5, 15-7, 15-9 battery clamp 6-19 battery discharge machine 16-3 battery terminal protector spray 16-3 battery thermometer 16-3	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box, differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11 adjustable starter/generator 6-17 governor cable 8-11 headlight mounting 6-7, 12-7 muffler mounting 9-3 oil filter mount 7-5 oil level switch 7-9 relay mounting 15-7 shifter 11-11 shock mounting, pas 5-17 snubber 7-13
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box 8-13 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17 A-plate strap 5-9 A-plate, delta 5-9 arbor 16-3 arm governor 11-3 rocker 7-7 armature 13-3 assembly accelerator bracket and bearing 4-9, 4-11 air box 8-13 air box top 8-13	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19 8-volt, 8VGCXC 12-17 battery charger 15-3, 15-5, 15-7, 15-9 battery charger receptacle 12-13 battery charger transformer 15-3, 15-5, 15-7, 15-9 battery clamp 6-19 battery discharge machine 16-3 battery terminal protector spray 16-3 battery thermometer 16-3 battery warning light 12-9	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box, differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11 adjustable starter/generator 6-17 governor cable 8-11 headlight mounting 6-7, 12-7 muffler mounting 9-3 oil filter mount 7-5 oil level switch 7-9 relay mounting 15-7 shifter 11-11 shock mounting, drv 5-17 shock mounting, pas 5-17 snubber 7-13 starter/generator mounting 6-17
accelerator pivot rod 4-9, 4-11 accelerator return spring 4-9, 4-11 accelerator rod 4-13 adapter cable (IQDM) 16-5 adhesive, guide ring 16-3 air box top 8-13 air box top 8-13 air filter 8-13 air intake hose 8-13 AM1220301 16-7 ammeter 15-3, 15-5, 15-7, 15-9 angled bumper mount 5-17 A-plate strap 5-9 A-plate, delta 5-9 arbor 16-3 arm governor 11-3 rocker 7-7 armature 13-3 assembly accelerator bracket and bearing 4-9, 4-11 air box 8-13	backing plate, brake 4-3 backrest, gray 1-27 ball bearing 6-15, 7-9 ball joint 4-5, 4-13, 11-11 ball stud 6-11, 11-9 ball, bearing 5-15 ball, steel pressure relief 7-5 bar, drive 12-11 barb, vent 8-3, 8-5 battery (gasoline vehicle) 6-19 8-volt, 8VGCXC 12-17 battery charger 15-3, 15-5, 15-7, 15-9 battery charger receptacle 12-13 battery charger transformer 15-3, 15-5, 15-7, 15-9 battery clamp 6-19 battery discharge machine 16-3 battery terminal protector spray 16-3 battery thermometer 16-3	bolt, U- 5-17 boot, steering column 5-3 boot, switch 12-21 bottom, air box 8-13 box air 8-13 electrical component 6-11 steering gear 5-7 box,differential 11-7 brace, canopy 1-17 brace, seat support cross 1-27 bracket 6-13 accelerator cable 8-11 adjustable starter/generator 6-17 governor cable 8-11 headlight mounting 6-7, 12-7 muffler mounting 9-3 oil filter mount 7-5 oil level switch 7-9 relay mounting 15-7 shifter 11-11 shock mounting, drv 5-17 shock mounting, pas 5-17 snubber 7-13

GET STARTED

throttle spring return 8-9	accelerator 8-11	clevis, upper delta 5-11, 5-13
Tow/Run switch 12-21	brake <i>4-7</i>	cluster, brake 4-3
brake adjusting mechanism 4-3	governor 8-11	clutch alignment tool 16-3
brake backing plate 4-3	IQDM <i>16-5</i>	clutch pulley 10-5
brake cable 4-7	transmission 11-11	clutch repair kit 10-3
brake cable equalizer 4-7	cable retainer 1-19, 1-21, 11-11	clutch tool kit 16-3
brake cable release tool 16-3	cable, cargo bed 1-31	clutch weight 10-5
brake cluster 4-3	calibration test module 16-3	clutch, drive 10-5
brake drum 4-3	cam	clutch, driven 10-3
brake lever 4-3	driven clutch 10-3	collet 7-7
brake mounting block 4-5	electrical component box 6-11	column, steering 5-3
brake pedal 4-5	neutral lockout 11-9	communication display module 16-5
brake pedal pad 4-5	cam installation tool 16-3	component box, electrical 6-11
brake return spring 4-7	cam, neutral lockout 11-9	component mounting plate 12-19
brake self-adjusting mechanism 4-3	camshaft 7-9	compression gauge 16-5
brake shoe 4-3	camshaft shim 7-9	compression lug 12-19
brake spring 4-3	canister, carbon, fuel tank 8-3	compression spring 8-13
breaker, circuit 15-3, 15-5, 15-7, 15-9	canopy brace 1-17	compressor, piston ring 16-7
breather 11-3, 14-3	cap	compressor, valve spring 16-7
brush 13-3	front hub 5-15	computer, onboard 12-19
brush box assembly 13-3	key switch 6-13, 12-9	connecting rod 7-11
brush cover kit, starter/generator 6-15	plug 7-3	connector, speed controller 12-19
brush guard 1-7	cap, fuel, gas, ratchet 8-3, 8-5	continuity tester 16-5
brush guard support 1-7, 5-11	cap, hub, 7 prong 2-5	controller cover 12-19
brush inspection port cover 6-15	carbon canister 8-3	controller cover gasket 12-19
brush rigging 13-3	carburetor 8-7	controller, motor speed
brush spring 6-15, 13-3	carburetor air vent tube 8-5	IQ 12-19
brush spring set 6-15	carburetor gasket 8-9	cord connector 7-9
brush spring, starter/generator 6-15	carburetor gasket 8-9	cord set, DC 15-3
brush terminal, starter/generator 6-15	carburetor insulator 8-9 carburetor mounting gasket 8-9	cord, AC 15-3, 15-5, 15-7, 15-9
bulb, headlight 6-7, 12-7		cord, DC 15-5, 15-7, 15-9
	card, safety first 16-7	
bulb, tail light 6-9, 12-15	cargo bed 1-31	counterbalance guide shaft 7-11
bumper	cargo bed hinge 1-29	counterbalance weight 7-11
cast 1-3	case	cover
drive unit (motor) 13-3	battery charger 15-3, 15-5, 15-7, 15-9	brush inspection port 6-15
front 1-5	gear 14-3	crankcase 7-9
front, kit 1-5	cast bumper 1-3	dust 4-3
jounce <i>5-17</i>	catch, tilt bed 1-31	electrical box 6-11
rubber 1-29, 4-5	charger bezel tool 16-3	oil pump 7-5
side trim 1-11	charger hardware kit 15-3	screw head 1-15
spring return 4-9, 4-11	charger receptacle 12-13	steering column 5-3
bumper mount, angled 5-17	charger, battery, PowerDrive 15-5	cover gasket, controller 12-19
bushing 10-5	charger, battery, PowerDrive 3 15-3	cover plate 13-3
AC cord 15-3	charger, battery, PowerDrive European 15-9	cover, controller 12-19
bronze 5-15	charger, battery, PowerDrive Export 15-7	cover, speed controller 12-19
nylon <i>4-5</i>	choke button 8-13	cowl support 1-17
return line 8-3, 8-5	choke lever 8-13	crank, bell 11-9
spindle 5-15	choke lever guide 8-13	crankcase 7-11
steel 1-29, 5-11, 5-13, 5-17	choke positioner 8-13	crankcase cover 7-9
urethane 1-29, 5-9, 5-11, 5-13, 5-17	choke valve 8-13	crankcase vent tube 8-9
button, choke 8-13	circuit breaker 15-3, 15-5, 15-7, 15-9	crankshaft 7-11
button, drive 10-3	clamp	crankshaft rod 7-11
buzzer, reverse 6-13, 12-9	battery 6-19	crankshaft shim 7-11
	cable retaining 8-11	cross brace, seat support 1-27
C	hose 8-3, 8-5, 8-9, 8-13	C-type stop ring 5-7
cable	muffler hose 9-3	cup, spring 4-9, 4-11



current limiter 15-9

CartPros directs you to the right part using the part numbers from this manual. Enter the part number into our search box and it will find the part you are looking for. **INDEX**

GET STARTED HERE

https://CartPros.com/f.html

cushion, shock absorber 5-17 cutter, valve seat 16-7
cylinder head 7-7
D
dash closeout panel 1-17
dash component 1-15
dash panel 1-15
DC cord 15-5, 15-7, 15-9
DC cord set 15-3
decal
800 3-13
Club Car 3-13
component cover 3-9, 12-19
crush area 3-3, 3-9
crush warning 3-3, 3-9
driver/passenger 3-5
frame ground 3-5
on/off 3-3, 3-7
owner notice 3-3, 3-9
rotating parts 1-23, 3-5, 6-15
Tow/Run switch warning 3-9
trailer hitch 3-3, 3-7
vehicle loading 3-3, 3-7
young driver warning 3-3, 3-7
delta A-plate 5-9
delta A-plate sub-assembly 5-9
delta shock and gear support 5-9
differential drive unit 11-3, 14-3
differential gear 14-3
differential gear case 11-7
differential guard 11-13, 14-5
differential housing 14-3
diode 6-11
dipstick 7-15
drain plug 7-5, 11-3
drain plug gasket 7-5, 11-3
drain plug, rubber 6-15
drive bar 12-11
drive belt 10-5
drive button 10-3
drive clutch 10-5
drive clutch button 10-5
drive clutch fixed-face 10-5
drive clutch holder tool 16-3
drive clutch hub puller 16-3
drive clutch puller 16-3
drive clutch spring 10-5
drive clutch weight 10-5
drive hub 10-5
drive selector shaft 11-3
drive unit bumper 13-3
drive unit guard 11-13, 14-5
driven clutch 10-3
driven clutch button 10-3

driven clutch cam 10-3 driven clutch cam puller 16-3 driven clutch fixed-face assembly 10-3 driven clutch puller plug 16-3 driver, drive clutch 10-5 drum, brake 4-3 dry moly lubricant 16-5 dust cover 4-3
E
-
E-clip 4-7
electrical box cover 6-11 electrical component box 6-11
end cap, motor 13-3
end, tie rod 5-9
engine mounting plate 7-13
engine shroud 7-15
engine, FE350 S27 <i>7-15</i>
equalizer rod 4-7
equalizer, brake cable 4-7
exhaust system 9-3
exhaust valve 7-7
extension, spring latch 1-31
extrusion 12-19
F
-
face, moveable 10-3, 10-5
fan housing 7-15
fan shroud 7-15 fan, flywheel 7-3
fender 1-19, 1-21
field coil housing 6-15
fill plug 11-3
fill plug gasket 11-3
filter
air <i>8-13</i>
fuel 8-3
oil <i>7-5</i>
oil pump 7-5
fitting, thread-forming grease 5-15
fixed-face, drive clutch 10-5 fixed-face, driven clutch 10-3
fixed-face, driven clutch 10-3 float 8-7
flywheel 7-3
flywheel fan <i>7-3</i>
flywheel fan plate 7-3
flywheel puller 16-5
FNR handle 11-9
FNR housing 12-21
FNR shift lever 11-3
FNR shifter base 11-9
foam, seat 1-25
fork, shift 11-5
Forward/Reverse shifter 11-9
frame and field assembly (motor) 13-3

frame and field, starter/generator 6-15
front body support 1-19, 1-21
front bumper 1-5
front bumper kit 1-5
front spring retainer plate 5-11, 5-13
fuel filter 8-3
fuel gauge sending unit 8-5
fuel gauge/hour meter 6-13
fuel line 8-3, 8-9
fuel tank 8-5
fuel tank strap 8-3
fuel tank vent 8-3
fuse 12-13, 15-5, 15-7, 15-9
10-amp <i>6-11</i>
20-amp <i>6-11</i>
3/8-amp <i>12-13</i>
charger 15-3
fuse block 6-11
G
gasket
carburetor 8-9
carburetor mounting 8-7, 8-9
crankcase cover 7-7, 7-9
drain plug 7-5
drain plug 7 5 drain plug,fill plug 11-3
exhaust <i>7-7</i> , <i>9-3</i>
head 7-7
insulator <i>7-7</i> , <i>8-9</i>
liquid 14-3, 16-5
plug <i>14-3</i> rocker case <i>7-7</i>
seat 1-25
sending unit 8-5
taillight 6-9, 12-15
gasket kit, FE350 7-7
gasket, controller cover 12-19
gauge, compression 16-5
gauge, fuel/hour 6-13
gear
25 tooth 11-5
28 tooth 11-5
differential 11-7, 14-3
differential idler 14-3
differential output 14-3
helical <i>7-11</i>
planetary 11-7
speed governor 11-5
spur <i>7-11</i>
sun <i>11-7</i>
gear yoke 16-5
gearcase 14-3
governor 11-5
governor arm 11-3
governor cable 8-11
governor cable bracket 8-11

GET STARTED

https://CartPros.com/f.html

governor shaft installation tool	16-5		
grommet 8-3, 8-5			
grommet, ignition 7-3			
guard, brush 1-7			
guard, differential 11-13, 14-5			
auide			

choke lever 8-13 intake valve 7-7 valve 7-7 valve seat cutter 16-7 guide ring adhesive 16-3

Н handle, FNR 11-9 hardware kit, charger 15-3 harness, wire 6-5, 6-9, 12-15 head gasket 7-7 head, cylinder 7-7 headlight assembly 6-7, 12-7 headlight bulb 6-7, 12-7 headlight harness 6-7, 12-7 headlight retainer 6-7, 12-7 heatsink and rectifier 15-5, 15-7, 15-9 helical gear 7-11 hill brake rod 4-5 hill brake weld assembly 4-5 hinge plate 1-19, 1-21, 1-25 hinge support 1-29 hinge, cargo bed 1-29 hold-down, battery 12-17 hose fuel 8-3 vent 8-3 hose, air intake 8-13 hour meter/fuel gauge 6-13 housing 2-pin 12-11 3-pin 12-11, 13-3 6-pin 12-19 differential 14-3 fan 7-15 field coil 6-15 hub 5-15

hub cap 2-5, 5-15

hydrometer 16-5

hub cap, 7 prong 2-5

idle screw assembly idler bearing 10-5 idler gear, differential 14-3 ignition coil 7-3 inner frame snubber 7-13 input shaft 14-3 instrument panel 1-15

insulator gasket 7-7, 8-9	
insulator, carburetor 8-9	
intake pipe 8-9	
intake valve 7-7	
intermediate shaft 14-3	
internal retaining ring pliers	16-5
IQ display module (IQDM)	16-5
IQ display module (IQDM-P)	16-5

INDEX

J-bolt 12-17

jet, main 8-7 jet, pilot 8-7 joint ball 4-5, 4-13, 11-11 jounce bumper 5-17

K kev

crankshaft 7-3, 7-11 driven clutch 10-3 On/Off 6-13, 12-9 square 10-3 key switch 6-13 key switch cap 6-13, 12-9 key switch, On/Off 12-9 kick plate, body 1-19, 1-21 kingpin 5-11, 5-13 kit 2-pin housing 12-11 3-pin housing 12-11, 13-3 6-pin housing 12-19 accelerator pivot rod 4-9, 4-11 air duct repair tape 8-13 brake cable 4-7 brake pedal 4-5 brake shoe retainer 4-3 clutch repair 10-3 drive clutch button drive clutch weight 10-5 driven clutch button 10-3 front hub replacement 5-15 fuel tank 8-5 hub cap 2-5 IQ display module (IQDM) 16-5

IQ display module (IQDM-P) 16-5

motor brush 13-3

motor brush spring 13-3

motor speed sensor 13-3

neutral lockout cam 11-9

park brake latch 4-5

park brake pedal 4-5

PD3 hardware 15-3

motor terminal hardware 13-3

motor cover plate 13-3

reverse buzzer	6-13, 12	?-9
shock absorber	<i>5-17</i>	
shock absorber o	ushion	5-17
shoe retainer 4	1-3	
tune-up <i>16-7</i>		

latch spring 1-31 latch, air box 8-13 latch, park brake 4-5 lens, headlight 6-7, 12-7 lens, taillight 6-9, 12-15 lever choke 8-13 speed governor 11-3 transmission shift 11-3 light battery warning 12-9 oil 6-13 tail 6-9, 12-15 limit switch 6-11, 11-9 limiter current 15-9 line, fuel 8-3, 8-9 link, rod 1-31 liquid gasket 14-3, 16-5 low oil warning light 6-13 lubricant, dry moly 16-5 lubricant, moly-teflon 13-3, 16-5 lug nut 2-3 lug stud 5-15, 11-7, 14-3 lug, compression 12-19

M

magnet, speed sensor 13-3 main jet 8-7 MCOR 12-11 mechanism, brake adjusting 4-3 meter, volt ohm 16-7 module calibration test 16-3 communication display 16-5 moly-teflon lubricant 16-5 motor 48-volt IQ 13-3 motor brush kit 13-3 motor brush spring kit 13-3 motor bumper 13-3 motor end cap 13-3 motor magnet, speed sensor 13-3 motor speed controller IQ 12-19 motor speed sensor 13-3 motor speed sensor kit 13-3 motor terminal hardware kit 13-3





GET STARTED

https://CartPros.com/f.html

mounting block, brake 4-3	piston /-11	rear spring snackie 3-17
moveable-face 10-3, 10-5	piston pin 7-11	receptacle 12-13
muffler hose clamp 9-3	piston ring 7-11	receptacle backing plate 12-13
	piston ring compressor 16-7	receptacle, AC cord 15-9
N	piston ring pliers 16-7	receptacle, battery charger 12-13
nerf bar 1-13	piston ring set 7-11	rectifier with heatsink 15-5, 15-7, 15-9
neutral lockout cam 11-9	pivot support bearing 4-9, 4-11	regulator, voltage 6-11
non-skid tape 1-13	plate	relay 15-3, 15-5, 15-7, 15-9
nozzle, main 8-7	backing (brake) 4-3	relay mounting bracket 15-7
nut, lug 2-3	body kick 1-19, 1-21	remover, bearing and oil seal 16-3
nut, lug 23	component mounting 12-19	resistor assembly 12-19
0	cover 13-3	retainer
	engine mounting 7-13	accelerator pedal spring 4-9, 4-11
OBC, onboard computer 12-19	flywheel fan 7-3	brake shoe 4-3
oil conveyor 11-3	front spring retainer 5-11, 5-13	cable <i>1-19, 1-21, 11-11</i>
oil filler tube 7-15	hinge 1-19, 1-21, 1-25	headlight <i>6-7, 12-7</i>
oil filter 7-5	oil filter screen 7-9	shock absorber cushion 5-17
oil filter mount bracket 7-5	oil pump 7-5	spring <i>5-17</i>
oil filter screen 7-9	receptacle backing 12-13	spring (drive clutch) 10-5
oil filter screen plate 7-9	spring mounting 5-11, 5-13	valve spring 7-7
oil level sensor 7-9	pliers	retaining ring 5-3
oil level switch bracket 7-9	internal retaining ring 16-5	retaining ring pliers 16-7
oil pump and rotor 7-5	piston ring 16-7	return spring bumper 4-9, 4-11
oil pump cover 7-5	retaining ring 16-7	reverse buzzer 6-13, 12-9
oil pump filter 7-5	plug	rim, wheel 2-3
oil pump plate 7-5	6-pin <i>12-19</i>	ring
oil seal <i>7-7, 7-9, 7-11</i>	drain <i>7-5, 11-3</i>	piston <i>7-11</i>
oil warning light, low 6-13	drive clutch 10-5	•
O-ring <i>7-7, 7-9, 7-11, 7-15</i>		retaining 5-3, 6-11, 10-3, 10-5, 11-9
overload bumper spacer 5-17	driven clutch puller 16-3	snap 5-7, 7-7, 7-11
	fill 11-3	spiral backup 10-5
P	rubber drain 6-15	ring, C-type stop 5-7
pad	spark 7-3	rivet, blind push 1-5
brake pedal 4-5	plug cap 7-3	rock guard 11-13, 14-5
park brake 4-5	positioner, choke 8-13	rocker arm 7-7
wear 1-19, 1-21	press weldment 16-3	rocker case 7-7
paint, touch-up 16-5	protector spray, battery terminal 16-3	rocker case gasket 7-7
paint, underbody (black) 16-5	puller	rocker shaft 7-7
paint, underbody (gray) 16-5	bearing 16-3	rocker switch 12-21
panel	drive clutch 16-3	rod
closeout, dash 1-17	drive clutch hub 16-3	accelerator 4-13
park brake latch 4-5	driven clutch cam 16-3	accelerator pivot 4-9, 4-11
park brake laterr 4.5	flywheel <i>16-5</i>	connecting 7-11
park brake pedal 4-5	seal <i>16-7</i>	crankshaft <i>7-11</i>
park brake spacer 4-5	pulley	equalizer <i>4-7</i>
park brake spacer 4-5 park brake torsion spring 4-5	clutch <i>10-5</i>	hill brake 4-5
pawl 4-5	starter-generator 6-15	link <i>1-31</i>
	v-belt <i>6-15</i>	push <i>7-7</i>
pedal, brake 4-5	pump, fuel, impulse 8-3	
pedal, park brake 4-5	push rod 7-7	S
pilot air screw assembly 8-7		safety first card 16-7
pilot jet 8-7	R	screen, oil filter 7-9
pin	rack guide pressure spring 5-7	screw, valve clearance adjuster 16-7
clevis 4-7	rack, steering 5-7	seal
piston 7-11	ratchet, park brake 4-5	intake <i>8-13</i>
pinion, steering 5-7	reamer, valve guide 16-7	lip 14-3
pipe, intake 8-9	rear body 1-19	oil 7-7, 7-9, 7-11, 11-7, 14-3
	,	S , , , , , , , , , , , , , , , , , ,



GET STARTED HERE

https://CartPros.com/f.html

steering pinion dust 5-7
seal puller 16-7
sealant 14-3
seat
spring 7-7
valve 7-5
seat back, gray 1-27
seat bottom assembly 1-25
seat cover, vinyl 1-25
seat foam 1-25
seat gasket 1-25
seat support 1-27
seat support cross brace 1-27
seat, bearing 5-3
sending unit, fuel gauge 8-5
sensor, motor speed 13-3
sensor, oil level 7-9
shackle, rear spring 5-17
shaft
counterbalance guide 7-11
drive selector 11-3
input <i>14-3</i>
intermediate 14-3
rocker 7-7
steering column 5-3
transmission 11-5
shaft,reverse gear 11-5
shaft,secondary
transmission 11-5
shift fork 11-5
shift lever 11-3
shifter base, FNR 11-9
shifter bracket 11-11
shim, camshaft 7-9
shim, crankshaft 7-11
shock absorber 5-9
shock absorber (rear) 5-17
shock absorber cushion 5-17 shock absorber cushion retainer 5-17
shock mounting bracket, drv 5-17
shock mounting bracket, pas 5-17
shoe retainer kit 4-3
shoe, brake 4-3
shroud 7-15
shroud, engine 7-15
shroud, fan 7-15
side bar 1-13
sleeve
delta A-plate 5-9
park brake rod 4-5
snap ring 5-7, 7-7, 7-11
snubber bracket 7-13
snubber, inner frame 7-13

accelerator pivot rod 4-9, 4-11
overload bumper 5-17
park brake 4-5
spark plug 7-3
speed controller
IQ 12-19
-
speed controller connector 12-19
speed controller cover 12-19
speed sensor 13-3
speed sensor magnet 13-3
speed sensor, motor 13-3
spiral backup ring 10-5
spray, battery terminal protector 16-3
spring 1-31
accelerator return 4-9, 4-11
brake 4-3
brake return 4-7
brush 6-15, 13-3
compression 8-13
drive button 10-5
drive clutch 10-5
driven clutch 10-3
extension 1-31
extension return 8-13
forward/reverse cam 11-9
park brake torsion 4-5
rack guide pressure 5-7
steering shaft compression 5-3
throttle return 8-9
valve 7-7
spring cup 4-9, 4-11
spring mounting plate 5-11, 5-13
spring retainer 5-17
spur gear 7-11
stand-offs, plastic 15-3
starter/generator (bi-rotational) 6-15
starter/generator belt 6-17, 10-5
starter/generator brush cover kit 6-15
starter/generator brush spring 6-15
starter/generator brush terminal 6-15
starter/generator frame and field 6-15
starter/generator pulley 6-15
steel bushing 1-29, 5-11, 5-13, 5-17
steel pressure relief ball 7-5
steering column 5-3
steering column bearing press tool 16-7
steering column bearing press tool 16-7 steering column retaining ring tool 16-7
steering column bearing press tool 16-7 steering column retaining ring tool 16-7 steering gear box 5-7
steering column bearing press tool 16-7 steering column retaining ring tool 16-7 steering gear box 5-7 steering pinion 5-7
steering column bearing press tool $16-7$ steering column retaining ring tool $16-7$ steering gear box $5-7$ steering pinion $5-7$ steering pinion dust seal $5-7$
steering column bearing press tool 16-7 steering column retaining ring tool 16-7 steering gear box 5-7 steering pinion 5-7 steering pinion dust seal 5-7 steering rack 5-7
steering column bearing press tool $16-7$ steering column retaining ring tool $16-7$ steering gear box $5-7$ steering pinion $5-7$ steering pinion dust seal $5-7$
steering column bearing press tool 16-7 steering column retaining ring tool 16-7 steering gear box 5-7 steering pinion 5-7 steering pinion dust seal 5-7 steering rack 5-7
steering column bearing press tool 16-7 steering column retaining ring tool 16-7 steering gear box 5-7 steering pinion 5-7 steering pinion dust seal 5-7 steering rack 5-7 steering shaft assembly 5-3
steering column bearing press tool 16-7 steering column retaining ring tool 16-7 steering gear box 5-7 steering pinion 5-7 steering pinion dust seal 5-7 steering rack 5-7 steering shaft assembly 5-3 steering shaft compression spring 5-3

INDEX

stiffener, flywheel side 7-13
stiffener, PTO side 7-13
strap, A-plate 5-9
strap, fuel tank 8-3
stud <i>7-13</i>
lug 5-15, 11-7, 14-3
stud, ball 6-11, 11-9
support
bed <i>1-27</i>
brush guard 1-7, 5-11
cowl <i>1-17</i>
hinge <i>1-29</i>
latch link 1-31
seat <i>1-27</i>
support yoke (steering) 5-7
support, front body 1-19, 1-21
support, seat 1-27
suppressor, voltage 15-5, 15-7, 15-9
switch
four-position 15-7, 15-9
key <i>6-13, 12-9</i>
limit 6-11, 11-9
rocker <i>12-21</i>
Tow/Run <i>12-21</i>
switch rubber boot 12-21
synchronizer, complete 11-5

Т

12-volt solenoid 6-11
tachometer 16-7
tail light bulb 6-9, 12-15
taillight 6-9, 12-15
taillight gasket 6-9, 12-15
taillight kit 6-9, 12-15
taillight lens 6-9, 12-15
taligate 1-31
tank, fuel 8-5
tape, non-skid 1-13
tappet 7-9
tester, continuity 16-5
thermometer, battery 16-3
thread-forming grease fitting 5-15
throttle return spring 8-9
throttle spring return bracket 8-9
thrust bearing 5-11, 5-13
tie rod end 5-9
tie wrap 5-7, 6-11, 12-9, 12-19, 12-21
tilt bed catch 1-31
tilt latch 1-31
tire 2-3
tool
accelerator pedal adjustment 16-3
belt tensioning, starter/generator 16-7
brake cable release 16-3
cam installation 16-3

charger bezel 16-3



spacer

solenoid, 48-volt 12-19



```
clutch alignment 16-3
   drive clutch holder 16-3
   governor shaft installation 16-5
   steering column bearing press 16-7
   steering column retaining ring
   steering wheel puller 16-7
   transaxle axle seal 16-7
   transaxle pinion seal 16-7
   transmission 16-7
tool kit, clutch 16-3
touch-up paint 16-5
Tow/Run switch 12-21
Tow/Run switch bracket 12-21
transaxle (Electric Vehicle) 14-3
transaxle axle seal tool 16-7
transaxle guard 11-13, 14-5
transaxle pinion seal tool 16-7
transaxle, Gaziano (Gasoline Vehicle) 11-3
transformer, battery charger 15-3, 15-5, 15-7,
    15-9
transmission cable 11-11
transmission secondary shaft 11-5
transmission shaft 11-5
transmission tool 16-7
tube
   axle 11-7, 14-3
   carburetor air vent 8-5
   crankcase vent 8-9
   oil filler 7-15
tune-up kit 16-7
turn signal lens 6-7, 12-7
U
U-bolt 5-17
upper delta clevis 5-11, 5-13
urethane bushing 1-29, 5-9, 5-11, 5-13, 5-17
V
valve
   choke 8-13
   exhaust 7-7
   reed 7-7
valve clearance adjuster screw 16-7
valve guide 7-7
valve guide reamer
                   16-7
valve guide, intake
valve seat 7-5
valve seat cutter 16-7
valve seat cutter guide 16-7
valve seat t-wrench 16-7
```

valve spring 7-7

vent

valve spring compressor 16-7 valve spring retainer 7-7 valve stem 2-3 v-belt 6-17, 10-5

```
fuel tank 8-5
vent barb 8-3, 8-5
Vent, Barb 8-3
volt ohm meter 16-7
voltage regulator 6-11
voltage suppressor 15-5, 15-7, 15-9
W
warning light, low oil 6-13
wear pad 1-19, 1-21
wedge, bearing puller 16-3
weight
  clutch 10-5
  counterbalance 7-11
  secondary clutch 10-5
weldment
  press 16-3
wheel rim 2-3
wire harness 6-5, 6-9, 12-15
wire lead, ignition 7-3
wrap, tie 5-7, 6-11, 12-9, 12-19, 12-21
Υ
yoke, gear 16-5
yoke, support (steering) 5-7
```

INDEX

























